

ULTRA/CLASSIC SORENTO VANITY UNIT

A Sides

- 1) Screw 3 Studs into each side as shown.
- 2) Knock 2 fixing blocks into side as indicated (4 if top is Required)
- 3) Push 3 Dowels into holes as indicated.
- 4) Screw on 2 hinge plates (ensure arrow on hinge plate is pointing to the outside of unit)

B Base/Back Rail/ Back

- 1) Push 1 dowel into each end of the Back Rail.
- 2) Fit 2 Cams into large holes in Back Rail.
- 3) Fit 4 Cams into large holes in Base.
- 4) Knock fixing block into Base.
- 5) Push 2 dowels into each end of Back.
- 6) Lay Sides flat locate and fix Base/Back Rail lock Cams by turning clockwise.
- 7) Position Back onto Dowels.
- 8) Position Fascia & Plinth and fix with 1" screws.
- 9) Position Top (if required) and screw through blocks using 1" screws.
- 10) Fit 4 shelf supports into Sides.

C Doors

- 1) Fit 2 Hinges into each Door and secure with 5/8" screws.
- 2) Attach Doors to Hinge plates and adjust as follows.

Screw A - bring Doors closer or further apart, screw to move Doors backwards or forwards.


Unit Parts

02	Sides
01	Base
01	Plinth
01	Fascia
01	Shelf
01	Back
02	Doors
01	Top
01	Back Rail
01	Instruction Sheet


Parts List

04	Hinges
04	Hinge Plates
06	Cams
06	Studs
06	Dowels
09	Fixing Blocks
02	Handles
02	Handle Bolts
09	1" Screws
08	5/8" Screws
04	Shelf Supports


Fittings Identification

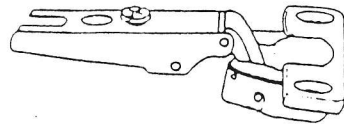

Screw on hinge

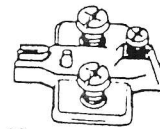

Screw on hinge plate



Connecting bolts



Cam



1" CSK No. 6 screw




1/2" CSK No. 6 screw




Shelf support peg




Door knob fixing bolt 20 mm





Worktop fixing block

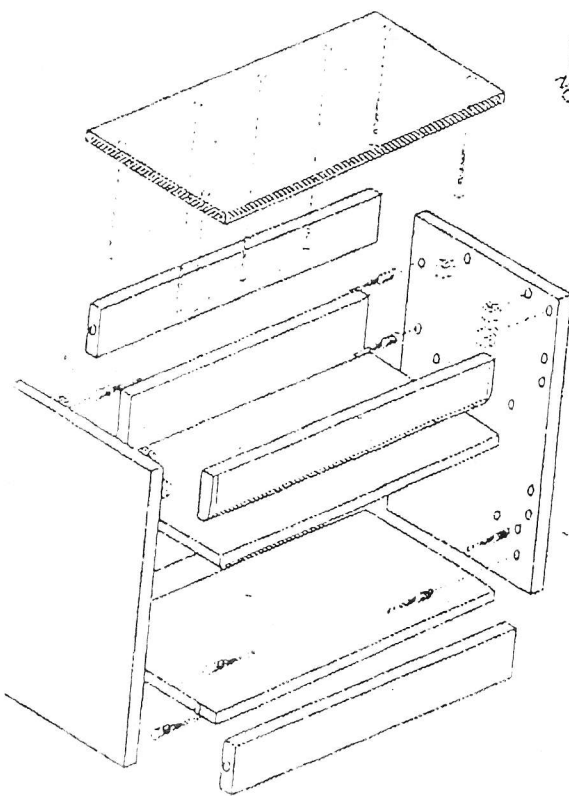

A

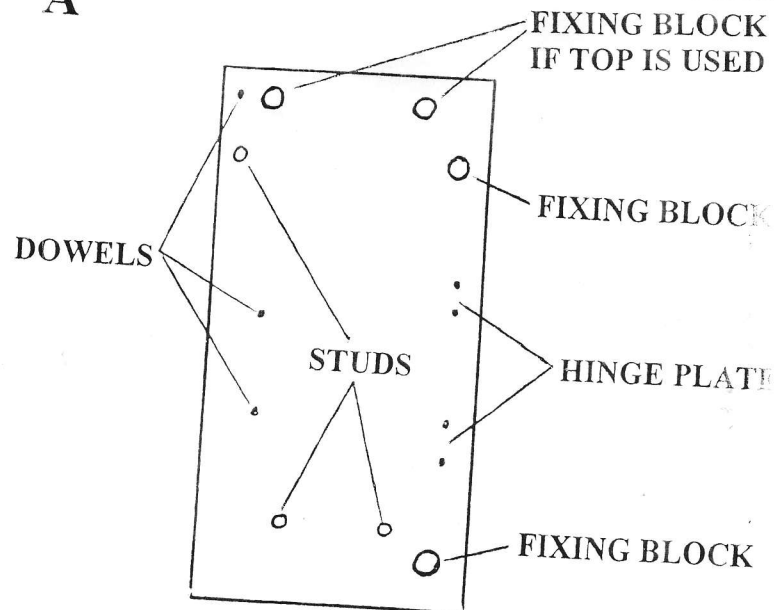

B

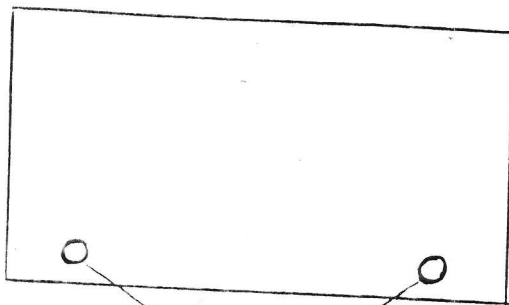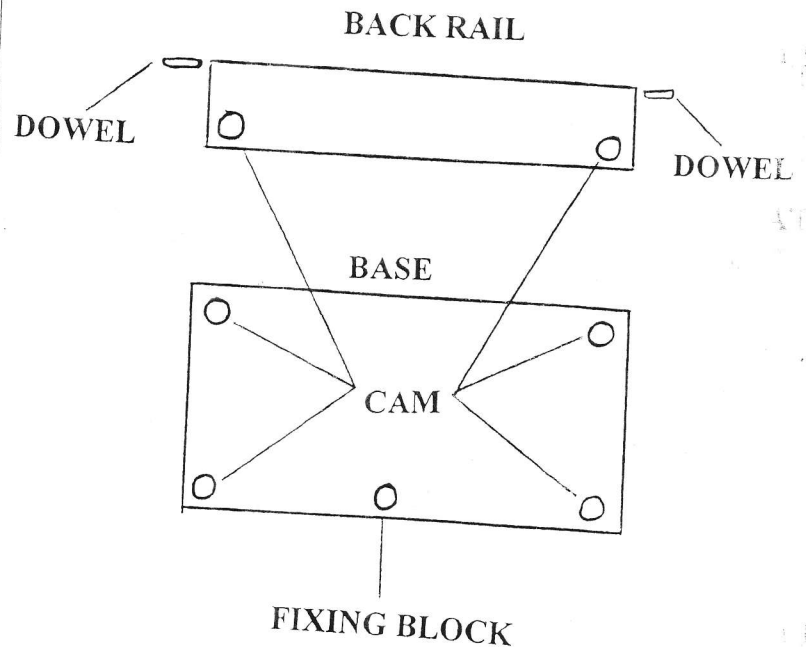

HINGE HOLES