

# ULTRA/CLASSIC SORENTO VANITY UNIT

## A Sides

- 1) Screw 3 Studs into each side as shown.
- 2) Knock 2 fixing blocks into side as indicated (4 if top is Required)
- 3) Push 3 Dowels into holes as indicated.
- 4) Screw on 2 hinge plates (ensure arrow on hinge plate is pointing to the outside of unit)

## B Base/Back Rail/ Back

- 1) Push 1 dowel into each end of the Back Rail.
- 2) Fit 2 Cams into large holes in Back Rail.
- 3) Fit 4 Cams into large holes in Base.
- 4) Knock fixing block into Base.
- 5) Push 2 dowels into each end of Back.
- 6) Lay Sides flat locate and fix Base/Back Rail lock Cams by turning clockwise.
- 7) Position Back onto Dowels.
- 8) Position Fascia & Plinth and fix with 1" screws.
- 9) Position Top (if required) and screw through blocks using 1" screws.
- 10) Fit 4 shelf supports into Sides.

## C Doors

- 1) Fit 2 Hinges into each Door and secure with 5/8" screws.
- 2) Attach Doors to Hinge plates and adjust as follows.

Screw A - bring Doors closer or further apart, screw to move Doors backwards or forwards.


## Unit Parts

02	Sides
01	Base
01	Plinth
01	Fascia
01	Shelf
01	Back
02	Doors
01	Top
01	Back Rail
01	Instruction Sheet


## Parts List

04	Hinges
04	Hinge Plates
06	Cams
06	Studs
06	Dowels
09	Fixing Blocks
02	Handles
02	Handle Bolts
09	1" Screws
08	5/8" Screws
04	Shelf Supports


# Fittings Identification

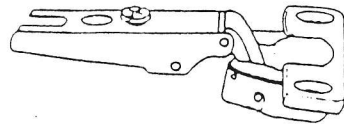

Screw on hinge

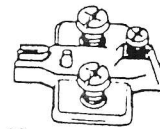

Screw on hinge plate



Connecting bolts



Cam



1" CSK No. 6 screw



1/2" CSK No. 6 screw




Shelf support peg




Door knob fixing bolt 20 mm





Worktop fixing block

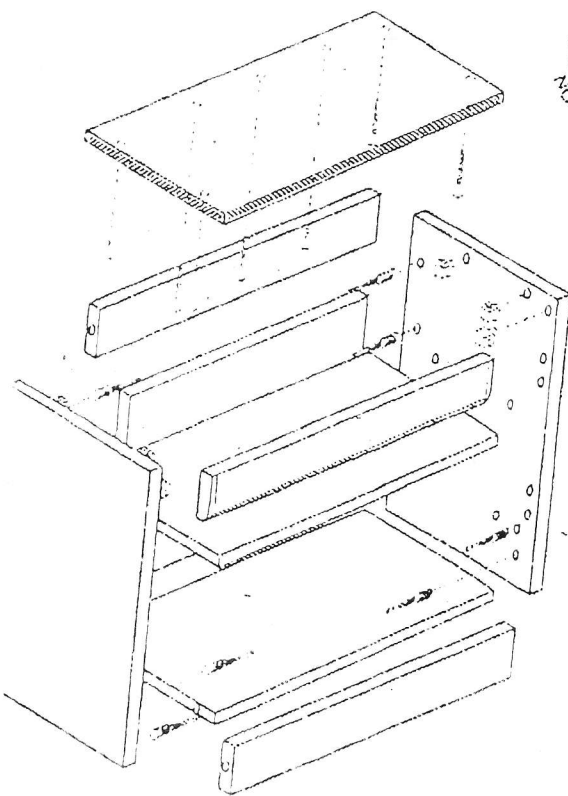

A

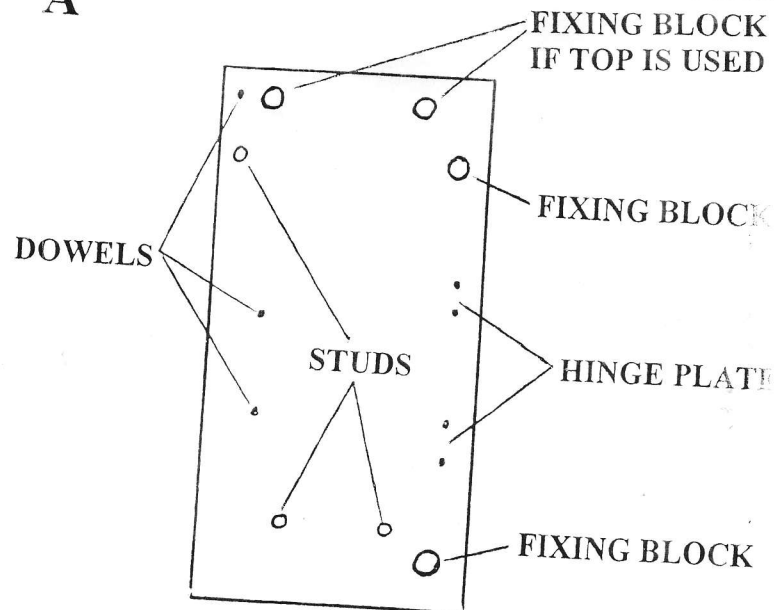

B

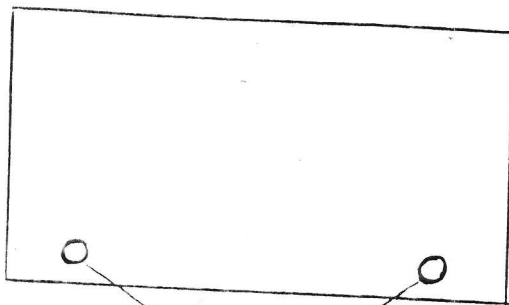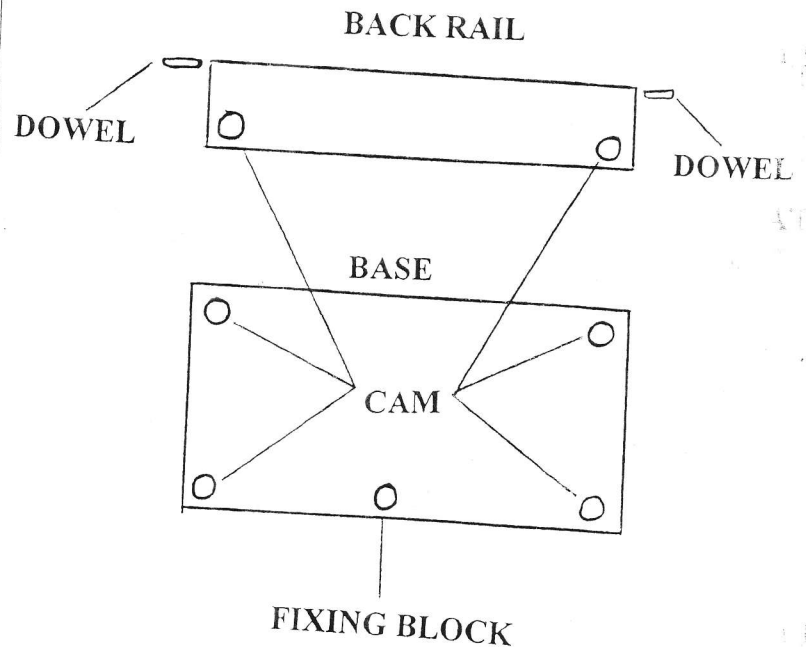

HINGE HOLES