

L-SHAPED SHOWER BATH PANEL

FRONT PANEL FITTINGS


- 12 x STUDS
- 12 x CAMS
- 4 x DOWELS

END PANEL FITTINGS

- 6 x STUDS
- 6 x CAMS

FITTING INSTRUCTIONS

1. SCREW STUDS x 12 INTO TOP AND BOTTOM RAILS AS INDICATED.
2. PUSH DOWELS x 4 INTO TOP AND BOTTOM RAILS AS INDICATED.
3. PUSH CAMS x 12 INTO PANELS x 2, MAKING SURE THE ARROW IS POINTING TO THE OUTSIDE EDGE.
4. POSITION PANELS ONTO BOTTOM RAIL AS INDICATED WITH ROUNDED EDGES AS SHOWN.
5. PUSH REMAINING PANEL INTO PLACE ON DOWELS.
6. TIGHTEN CAMS BY TURNING CLOCKWISE WITH SCREWDRIVER.
7. FIX TOP RAIL TO PANELS BY REPEATING INSTRUCTION NO. 6.
8. IF END PANEL IS REQUIRED FOLLOW THE SAME INSTRUCTIONS FOR ASSEMBLY.

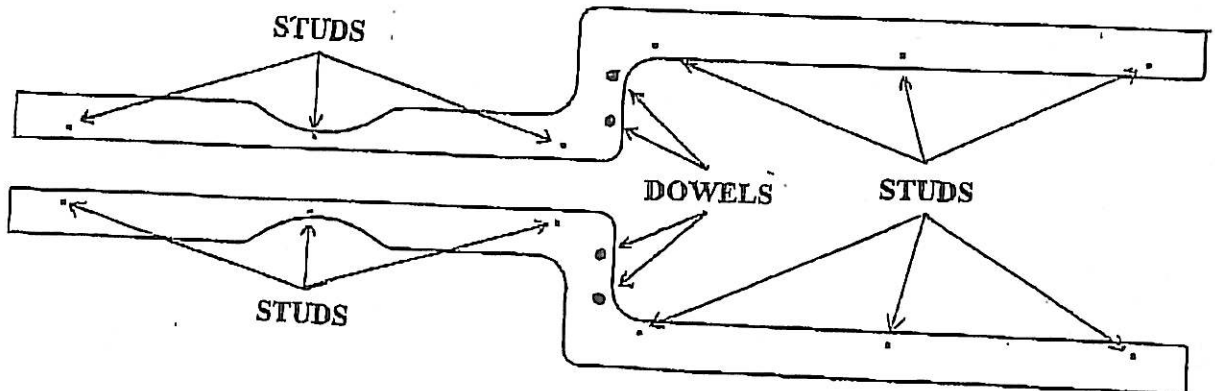

ROUNDED EDGES ON BOTH RAILS MUST BE FACING DOWNWARDS