



49.3226A/49.3227A/49.3228A/49.3229A/49.3231A/49.3232A/  
49.3233A/49.3234A/49.3235A/49.3236A/49.3204A/49.3205A/  
49.3206A/49.3207A/

L

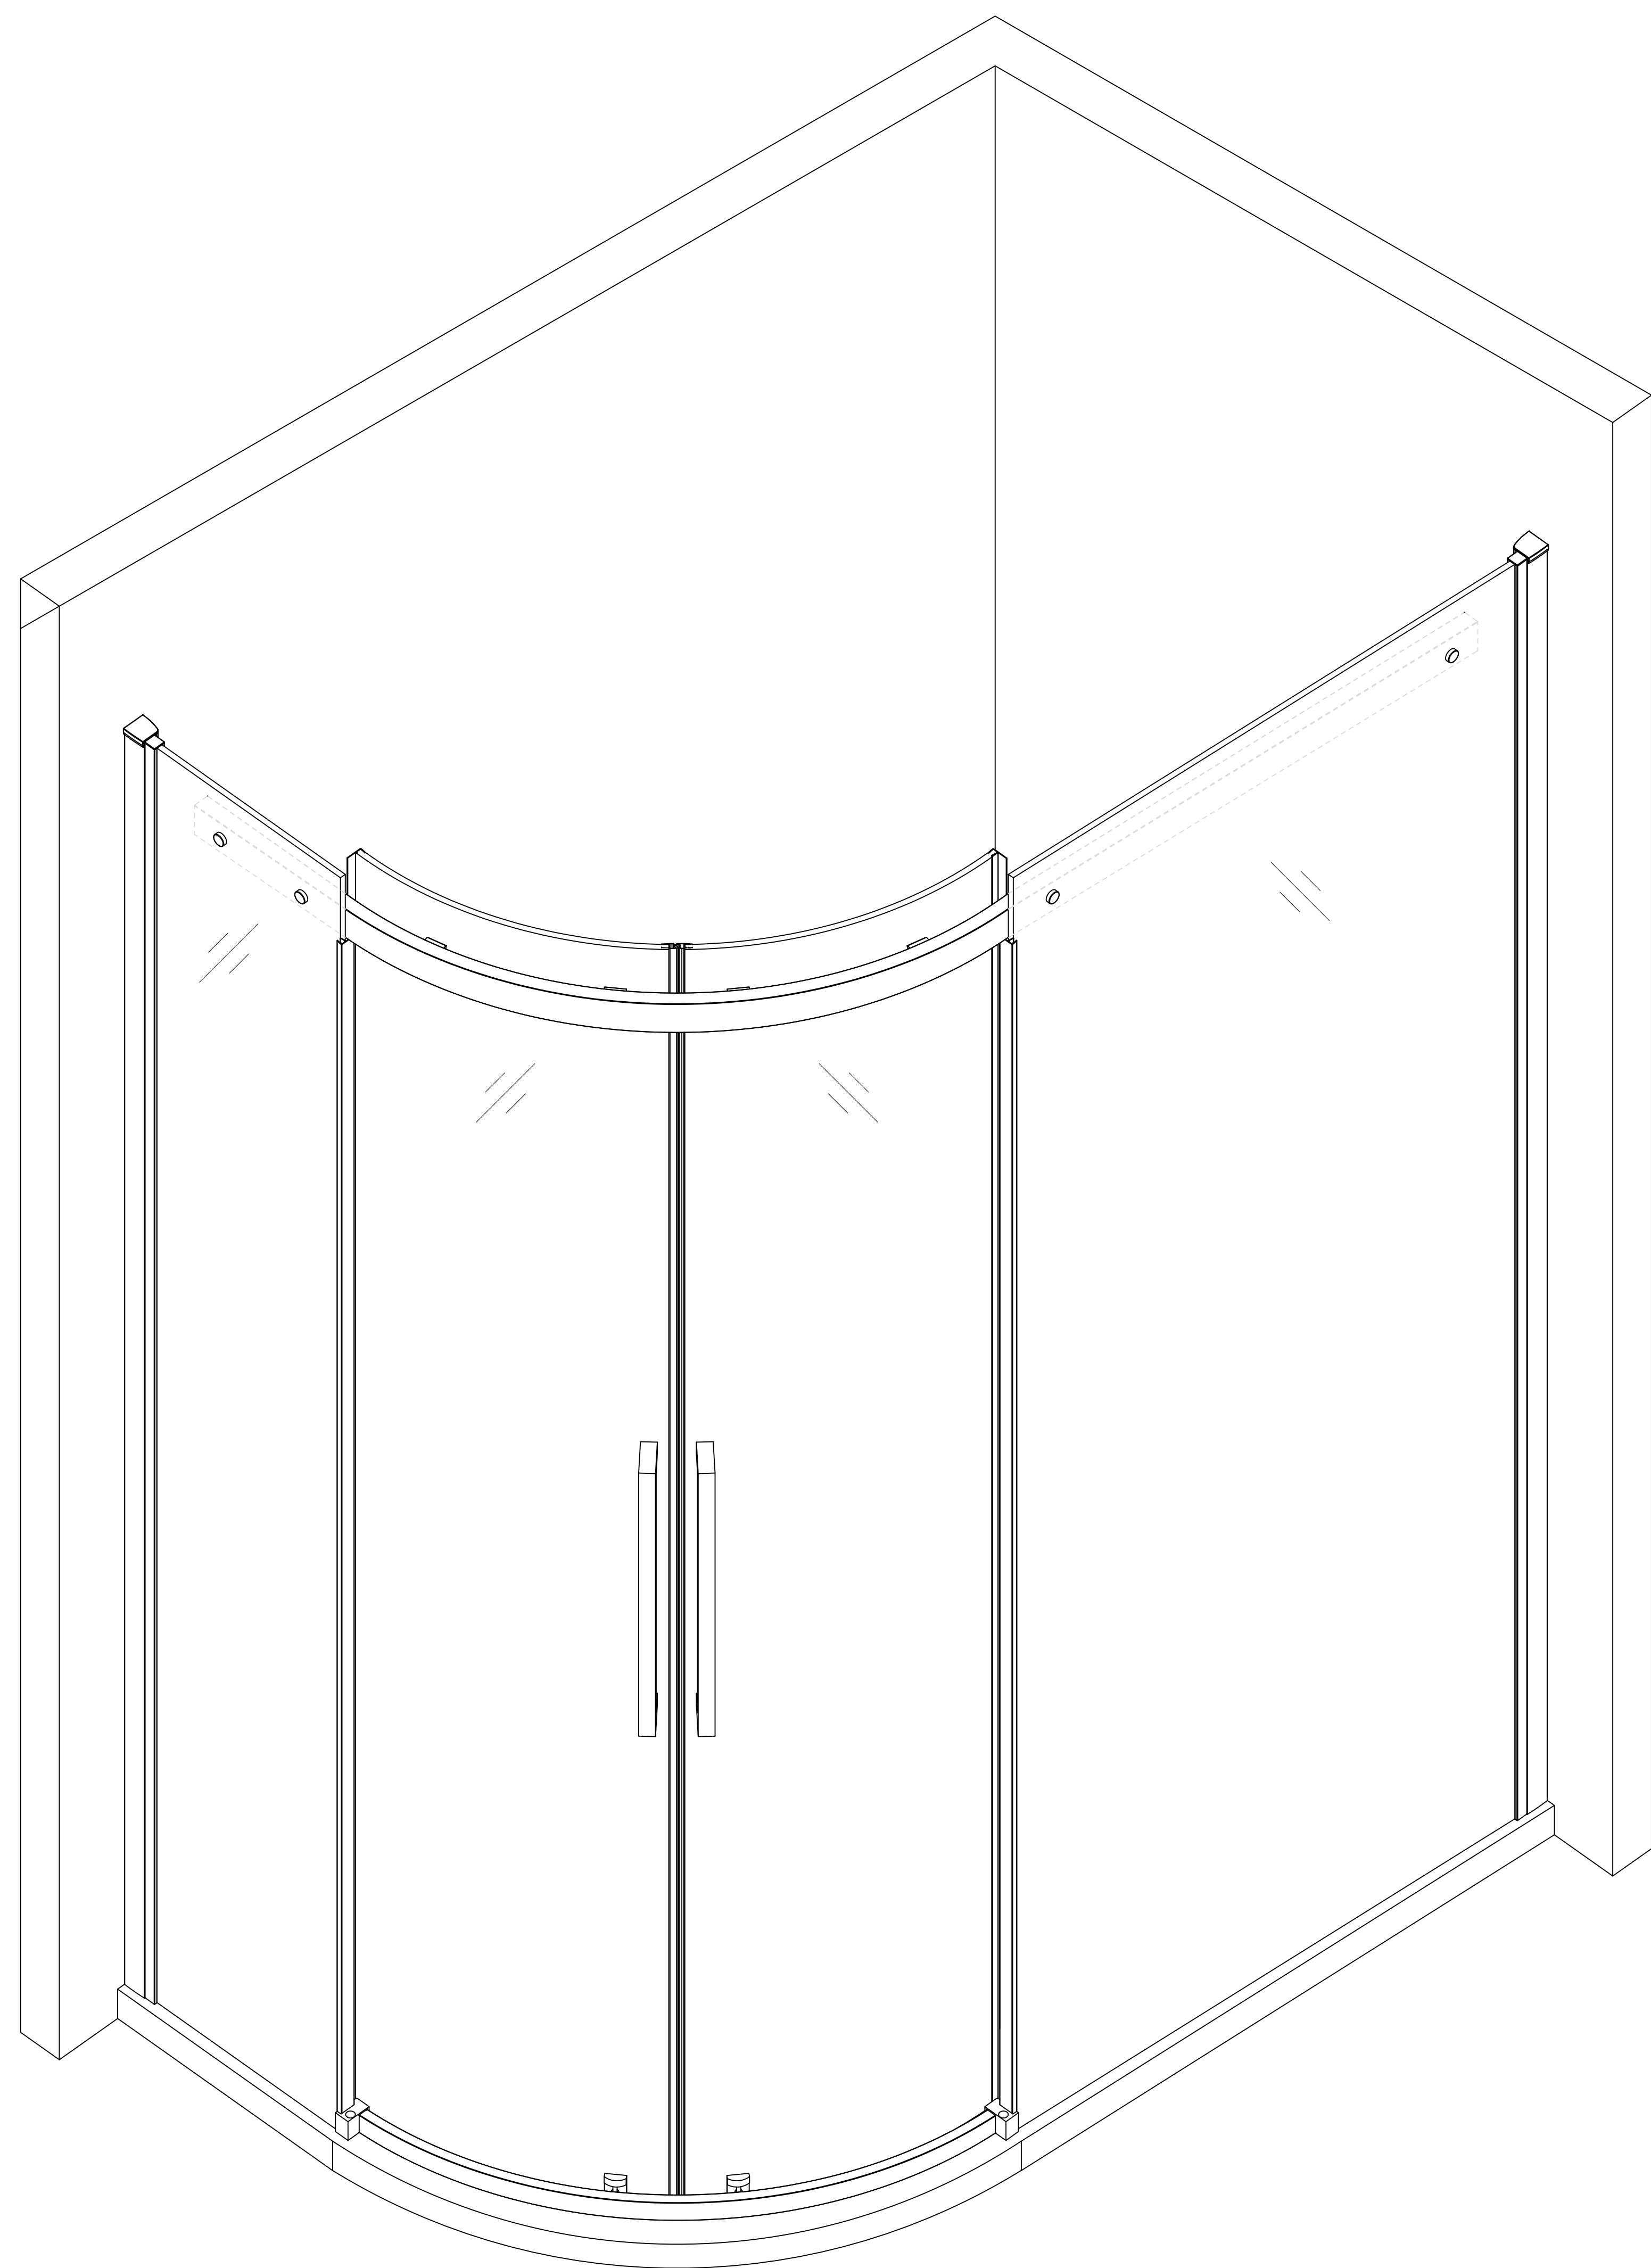




























This product should only be fitted by a fully qualified installer.

R

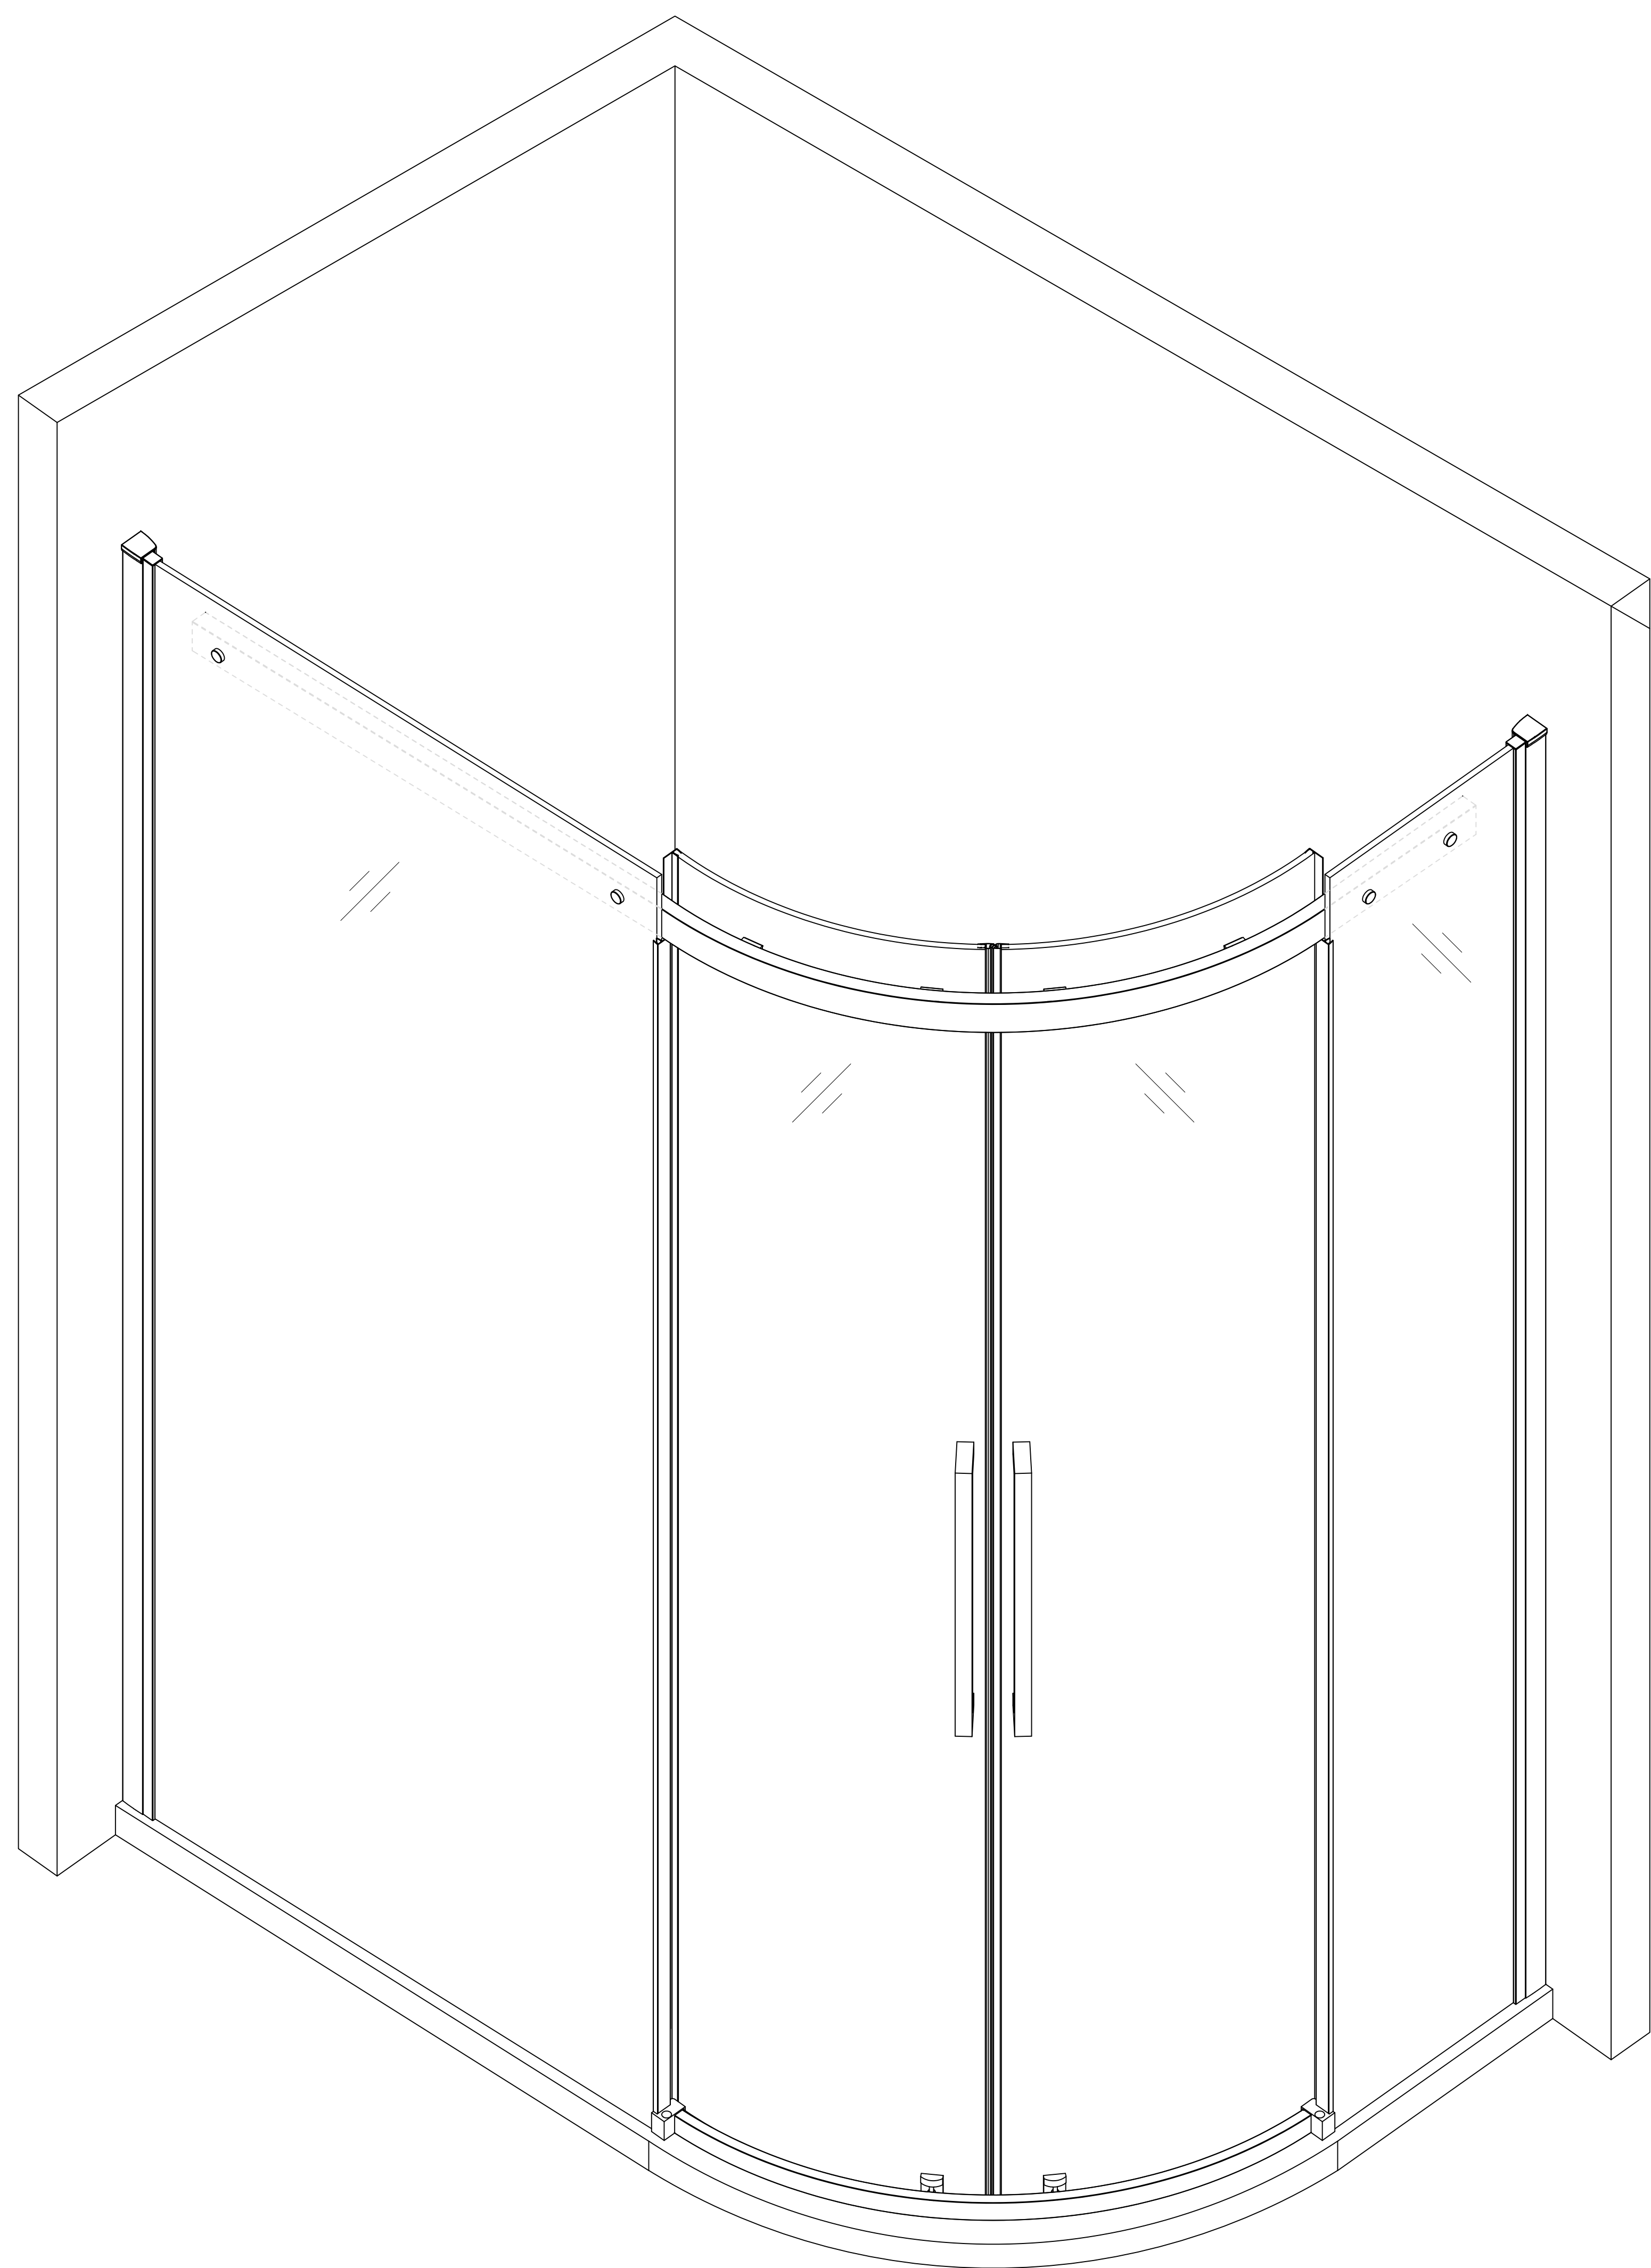


This product should only be fitted by a fully qualified installer.

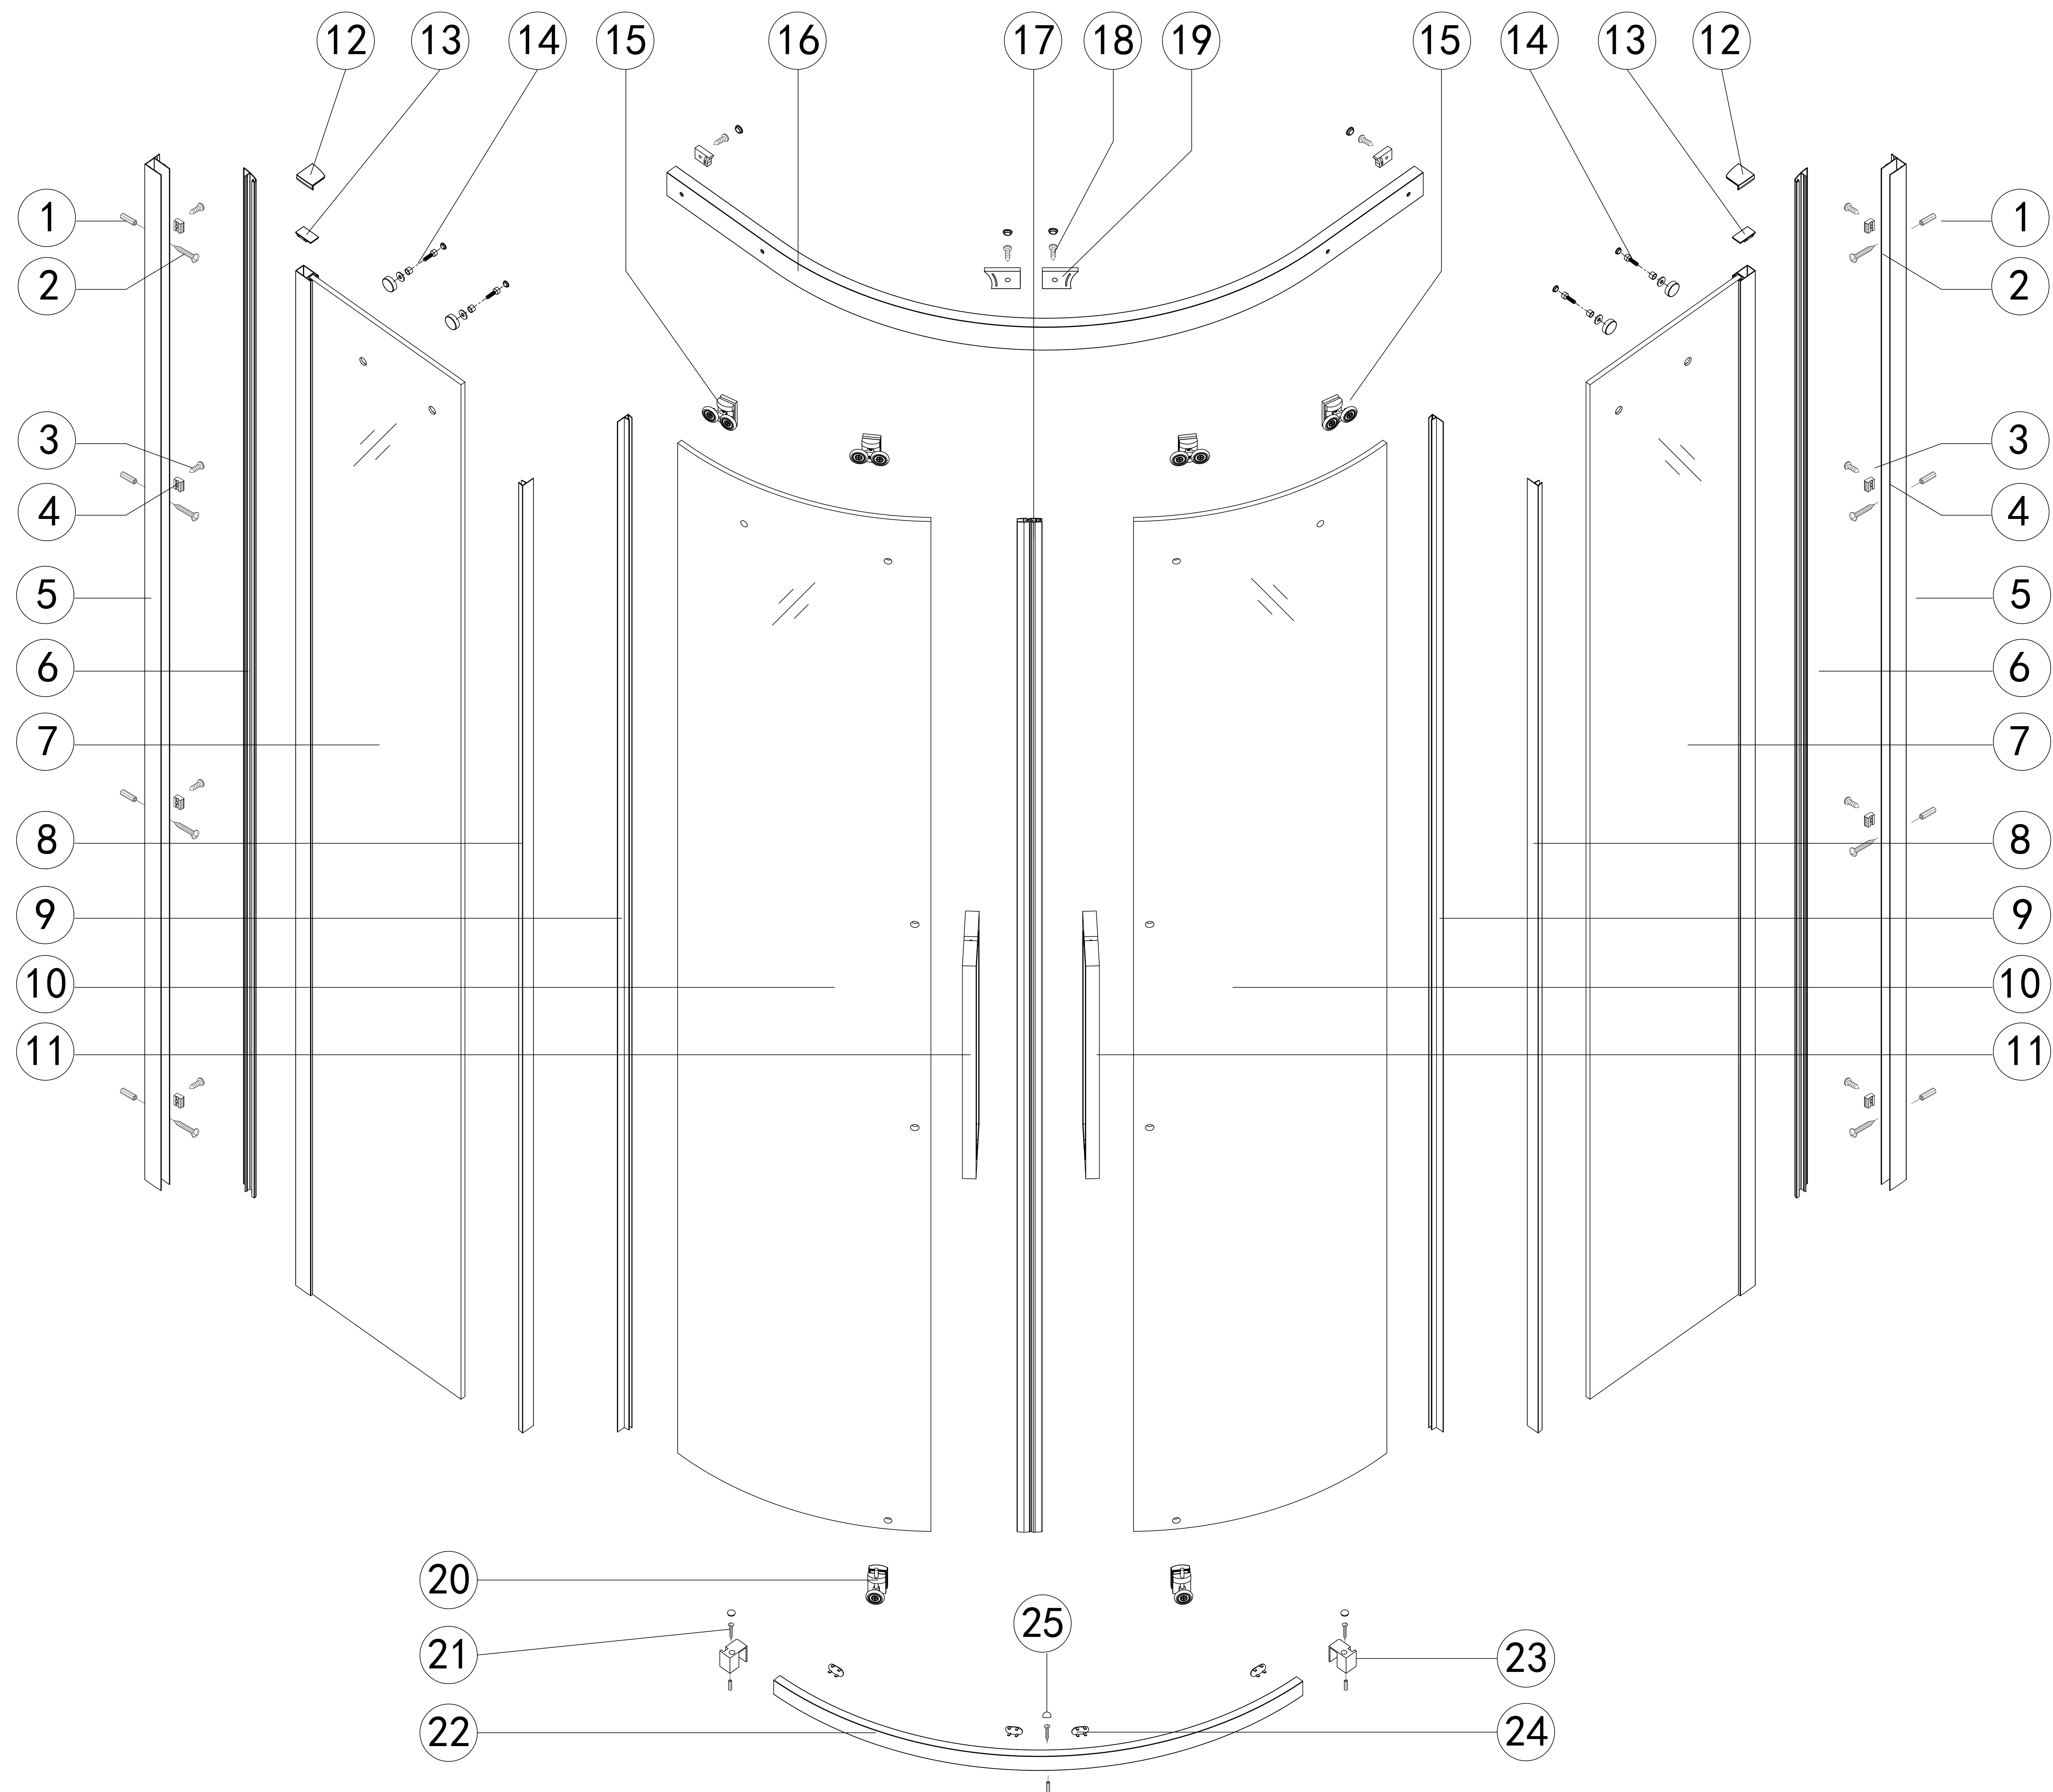

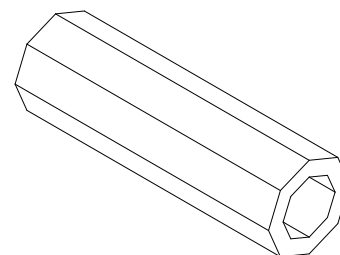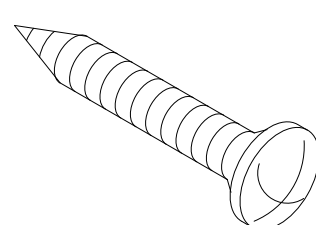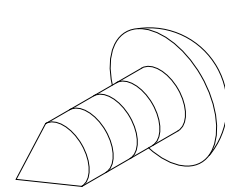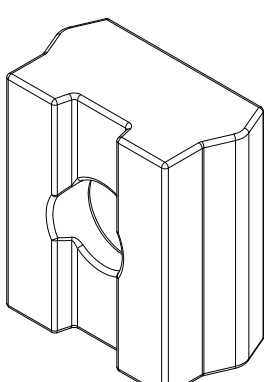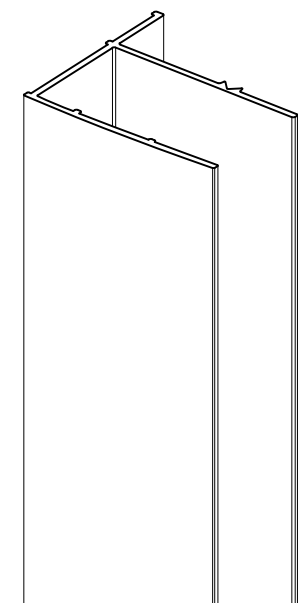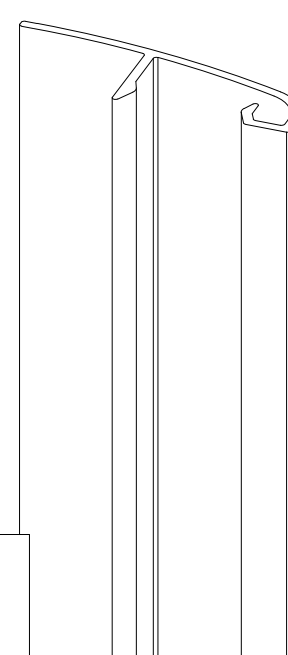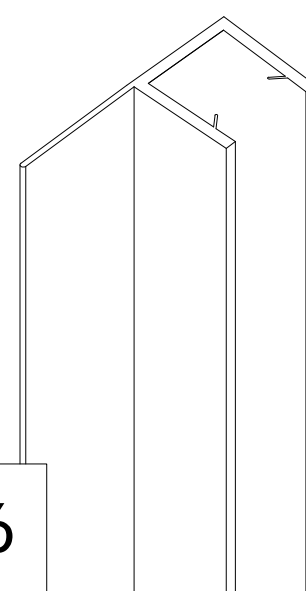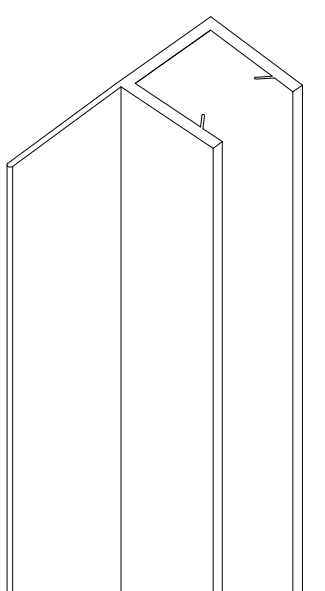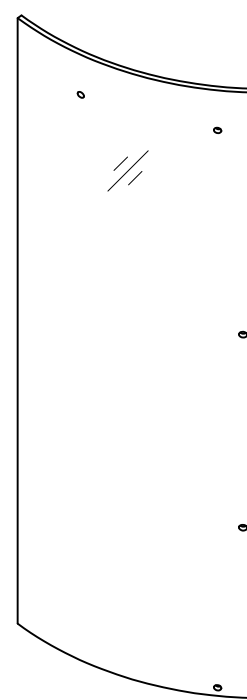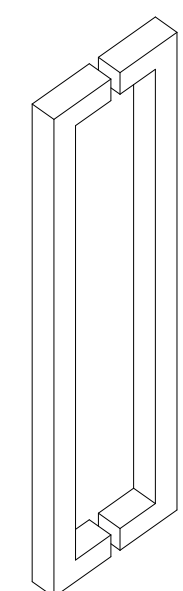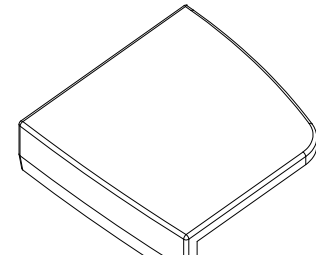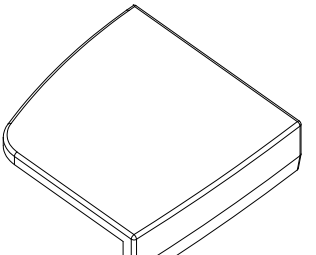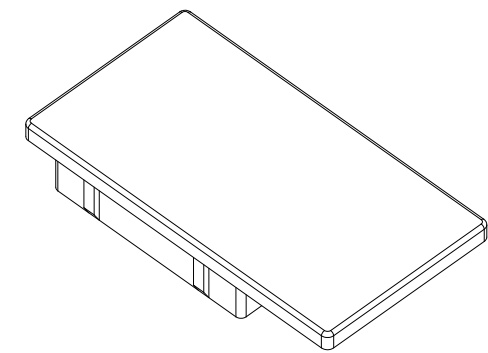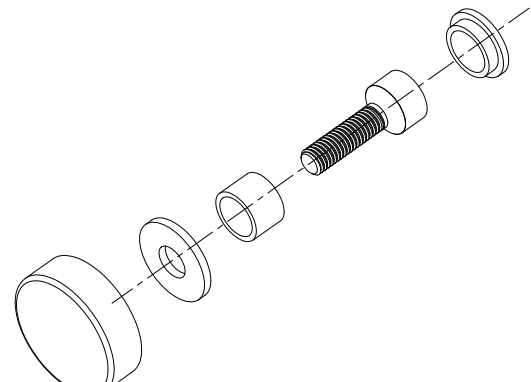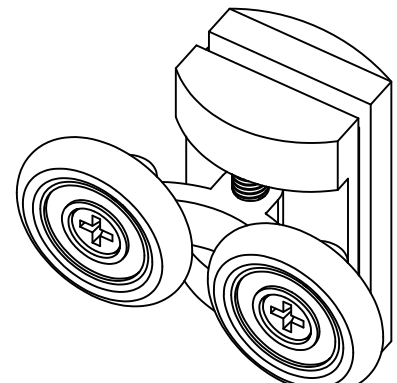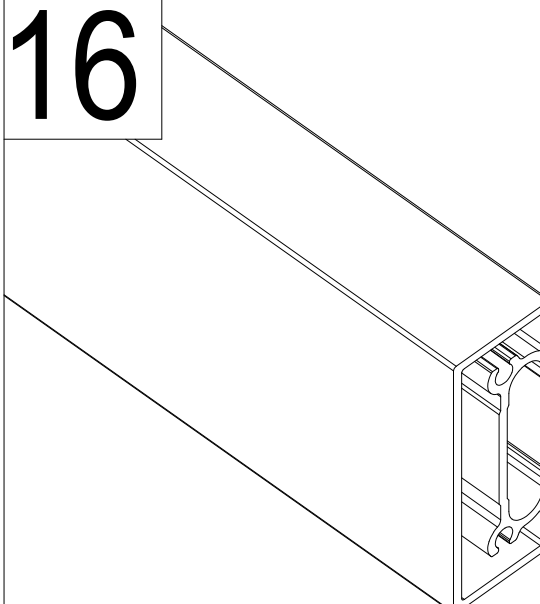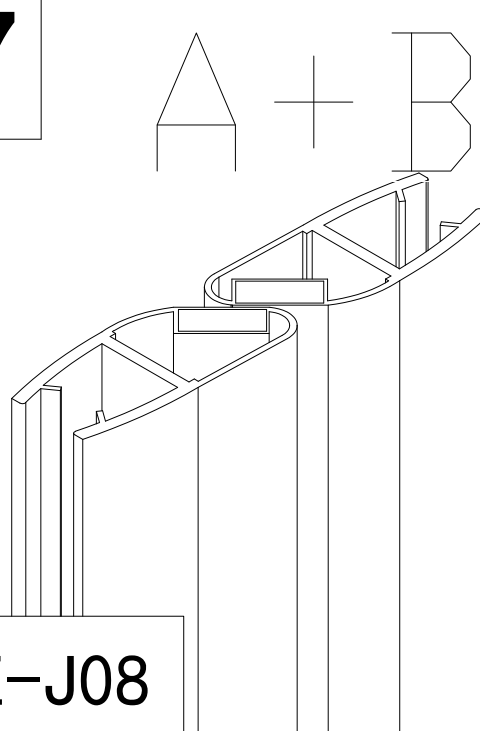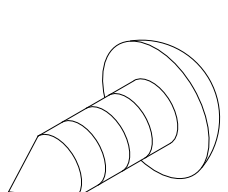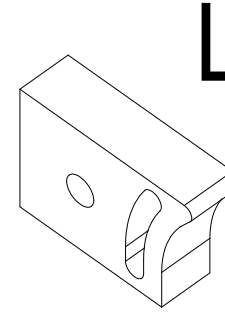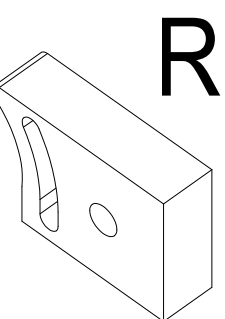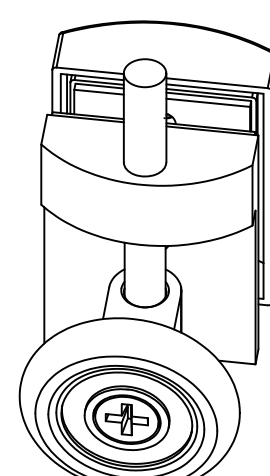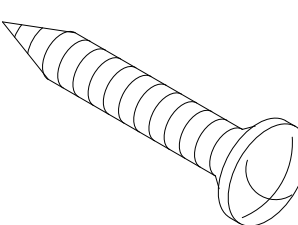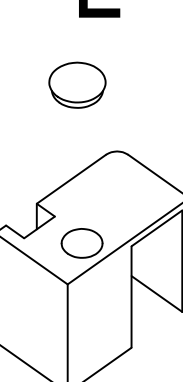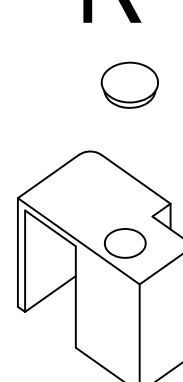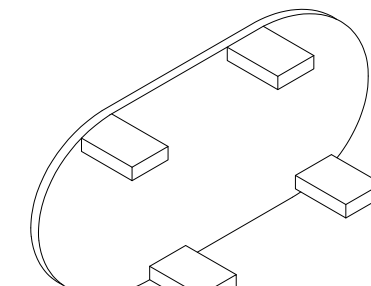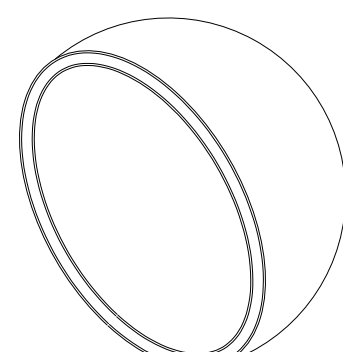
|    |                                                                                                                                                                            |         |       |    |                                                                                   |         |      |    |                                                                                                                                                                             |         |      |    |                                                                                     |           |      |    |                                                                                                                                                                                |         |      |    |                                                                                     |          |      |    |                                                                                     |           |      |        |                                                                                     |         |       |    |                                                                                     |        |      |
|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------|----|-----------------------------------------------------------------------------------|---------|------|----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|------|----|-------------------------------------------------------------------------------------|-----------|------|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|------|----|-------------------------------------------------------------------------------------|----------|------|----|-------------------------------------------------------------------------------------|-----------|------|--------|-------------------------------------------------------------------------------------|---------|-------|----|-------------------------------------------------------------------------------------|--------|------|
| 1  |                                                                                           | D6x30   | 11Pcs | 2  |  | ST4X30  | 9Pcs | 3  |                                                                                            | ST4X12  | 8Pcs | 4  |  | CRF-6Y01  | 8Pcs | 5  |                                                                                             | CWE-B01 | 2Pcs | 6  |  | CWE-B02  | 2Pcs | 7  |  | CWE-J06   | 2Pcs | 8      |  | 1865mm  | 2Pcs  | 9  |  | 1985mm | 2Pcs |
| 10 |                                                                                           | CWE-D05 | 2Pcs  | 11 |  | CWE-S01 | 2Pcs | 12 |  L<br> R | CWE-S01 | 2Pcs | 13 |  | CWE-S03   | 2Pcs | 14 |                                                                                             | CWE-D12 | 4Pcs | 15 |  | CWE-D09  | 4Pcs | 16 |  | CWE-B08-S | 1Pcs | 17     |  | CWE-J08 | 1Pair | 18 |  | ST4X8  | 4Pcs |
| 19 |  L<br> R | CWE-S05 | 4Pcs  | 20 |  | CWE-D10 | 2Pcs | 21 |                                                                                            | ST4X35  | 2Pcs | 22 |  | CWE-B09-S | 1Pcs | 23 |  L<br> R | CWE-D11 | 2Pcs | 24 |  | CRF-6Y05 | 4Pcs | 25 |  | CWE-S07   | 1Pcs | Tools: |                                                                                     |         |       |    |                                                                                     |        |      |

Please report any missing parts or damage to your supplier within 10 working days and before installation.

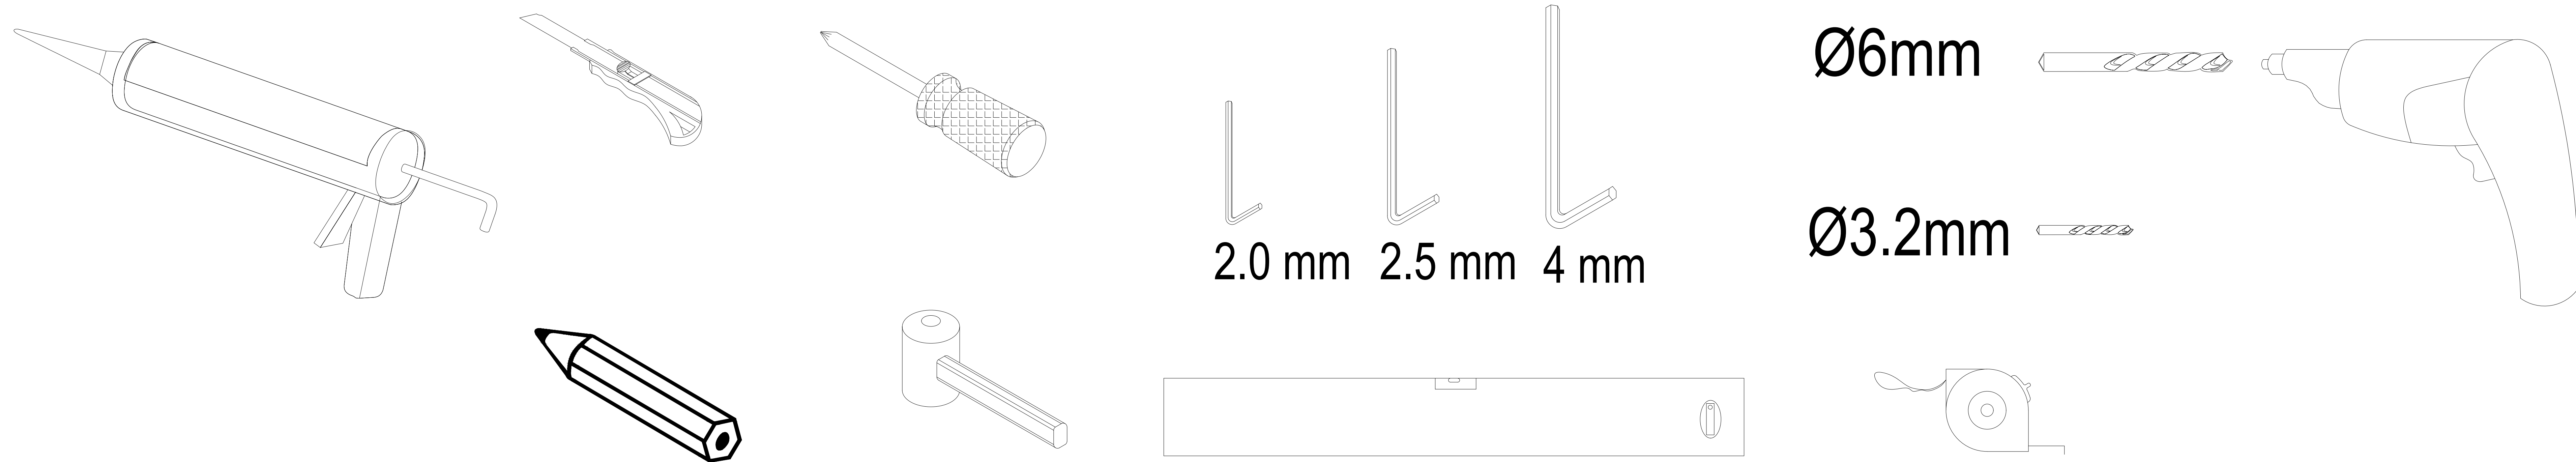


1L

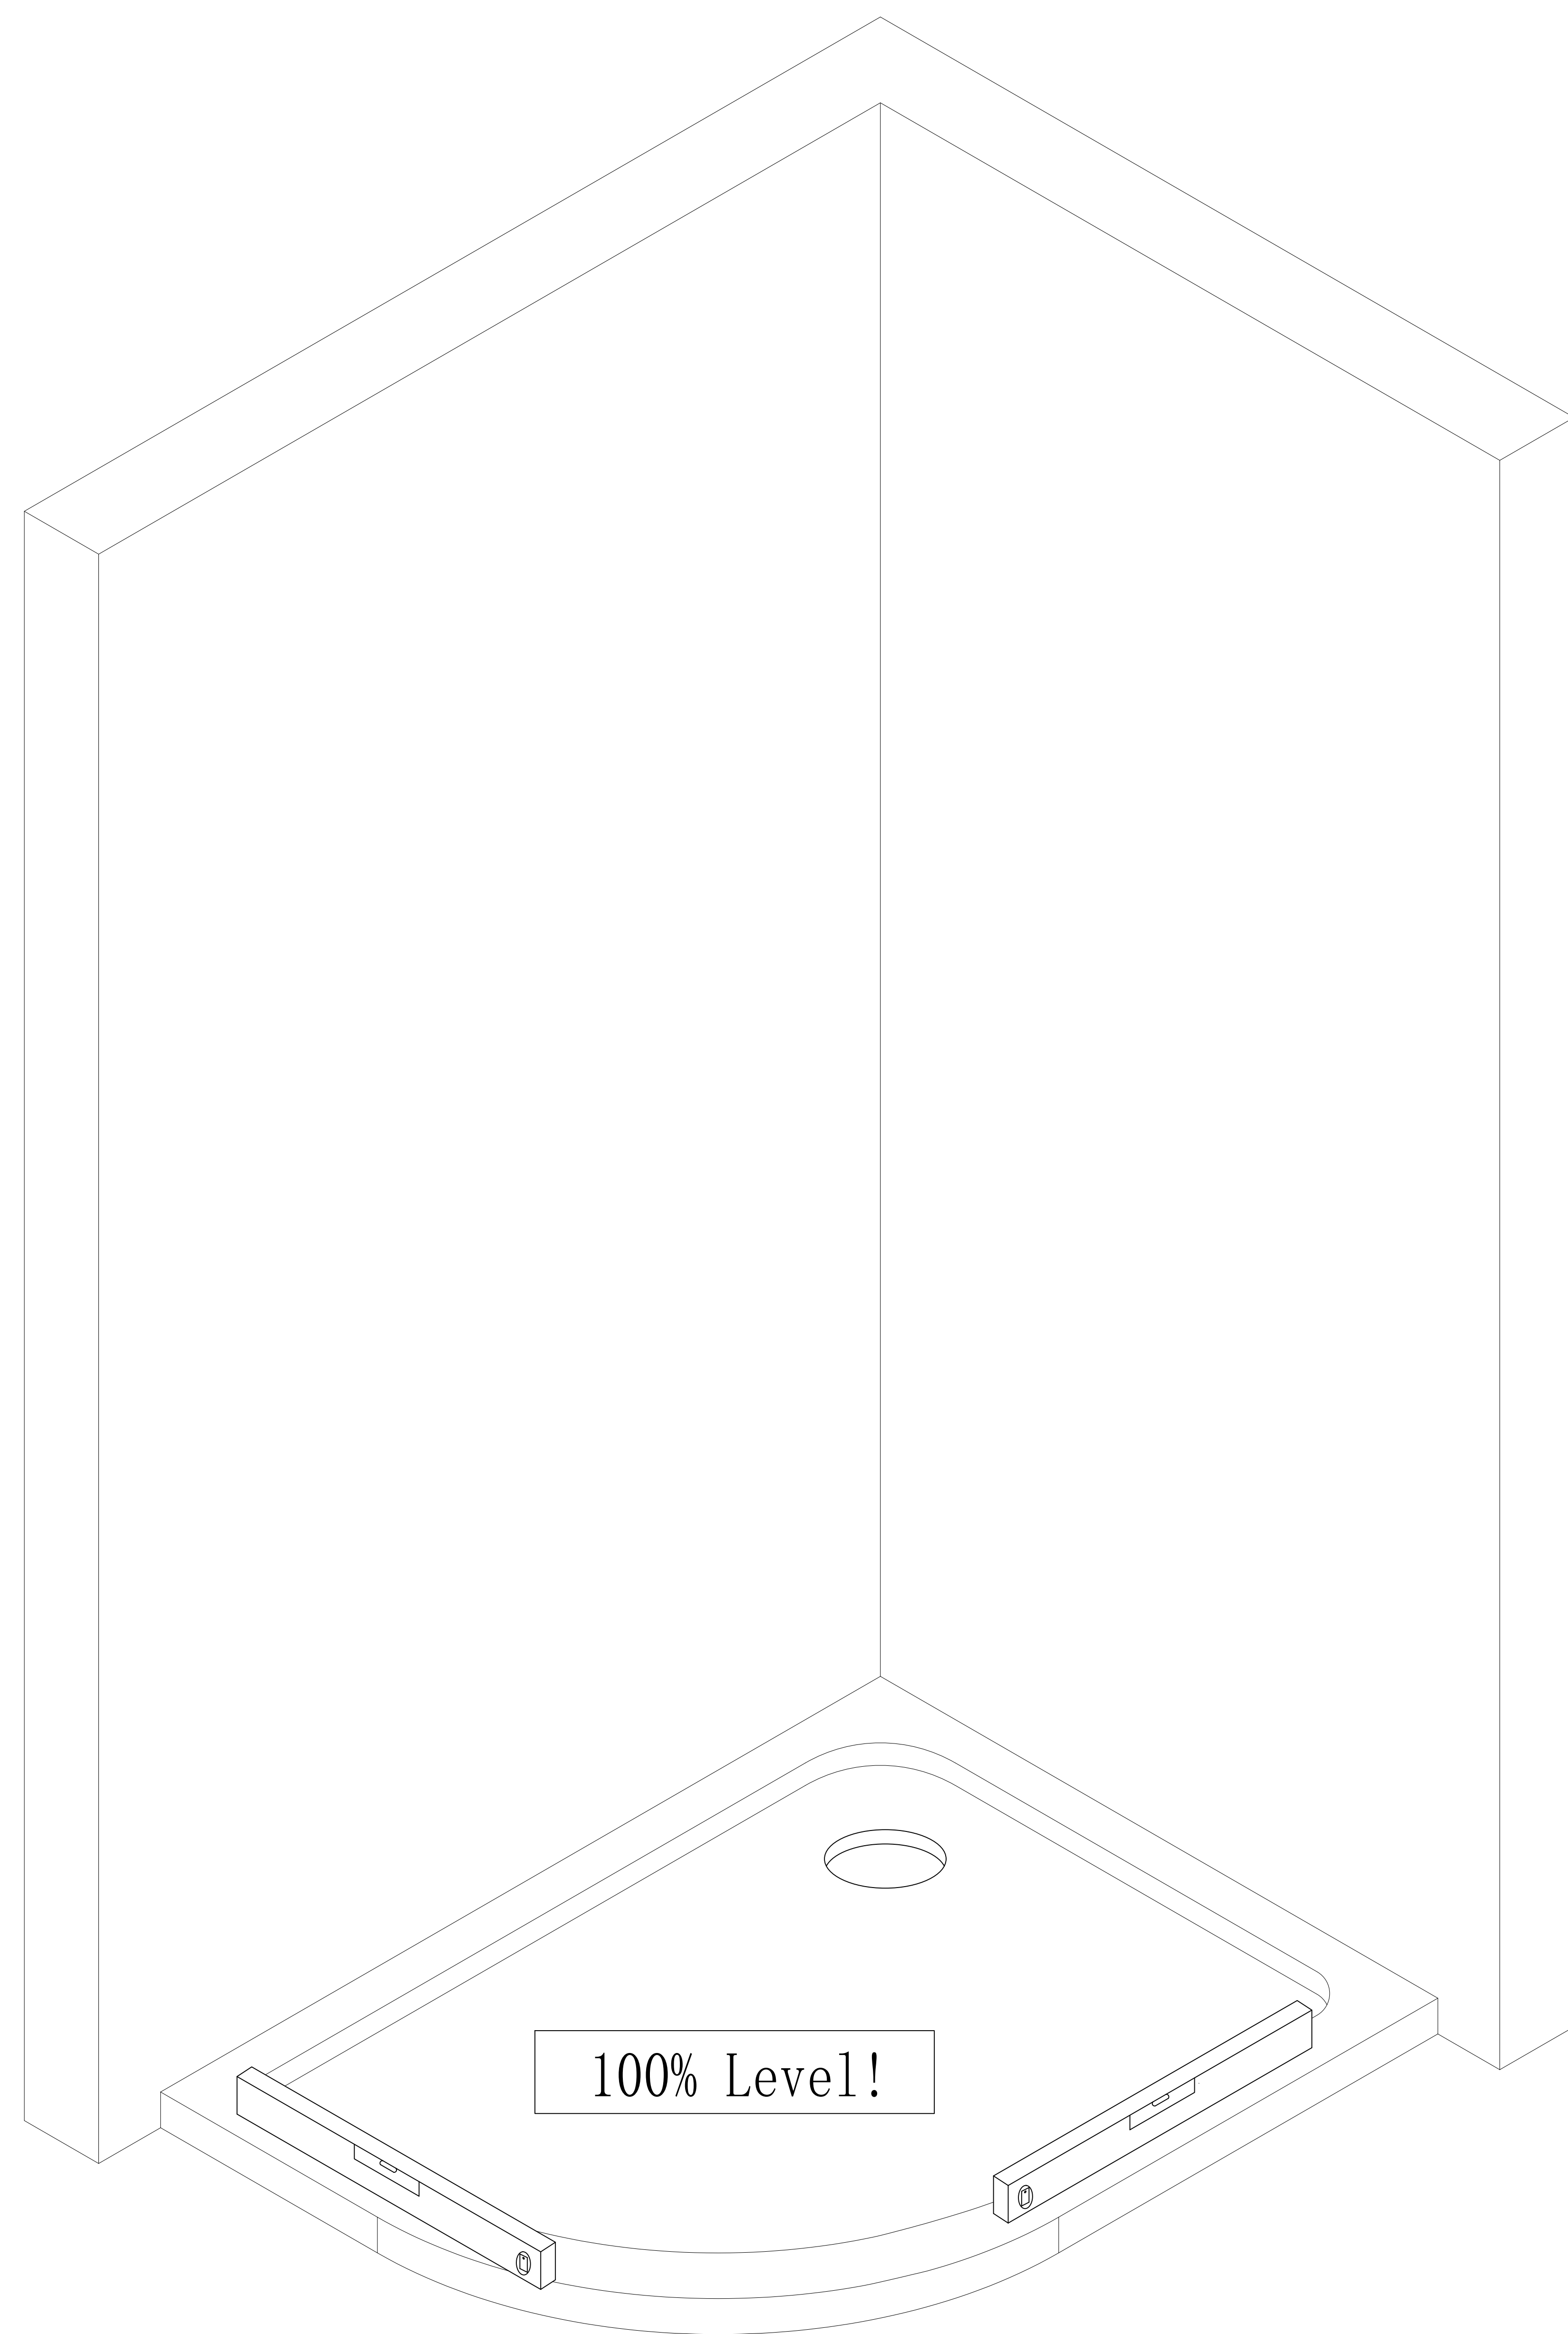


Check tray is level

1R

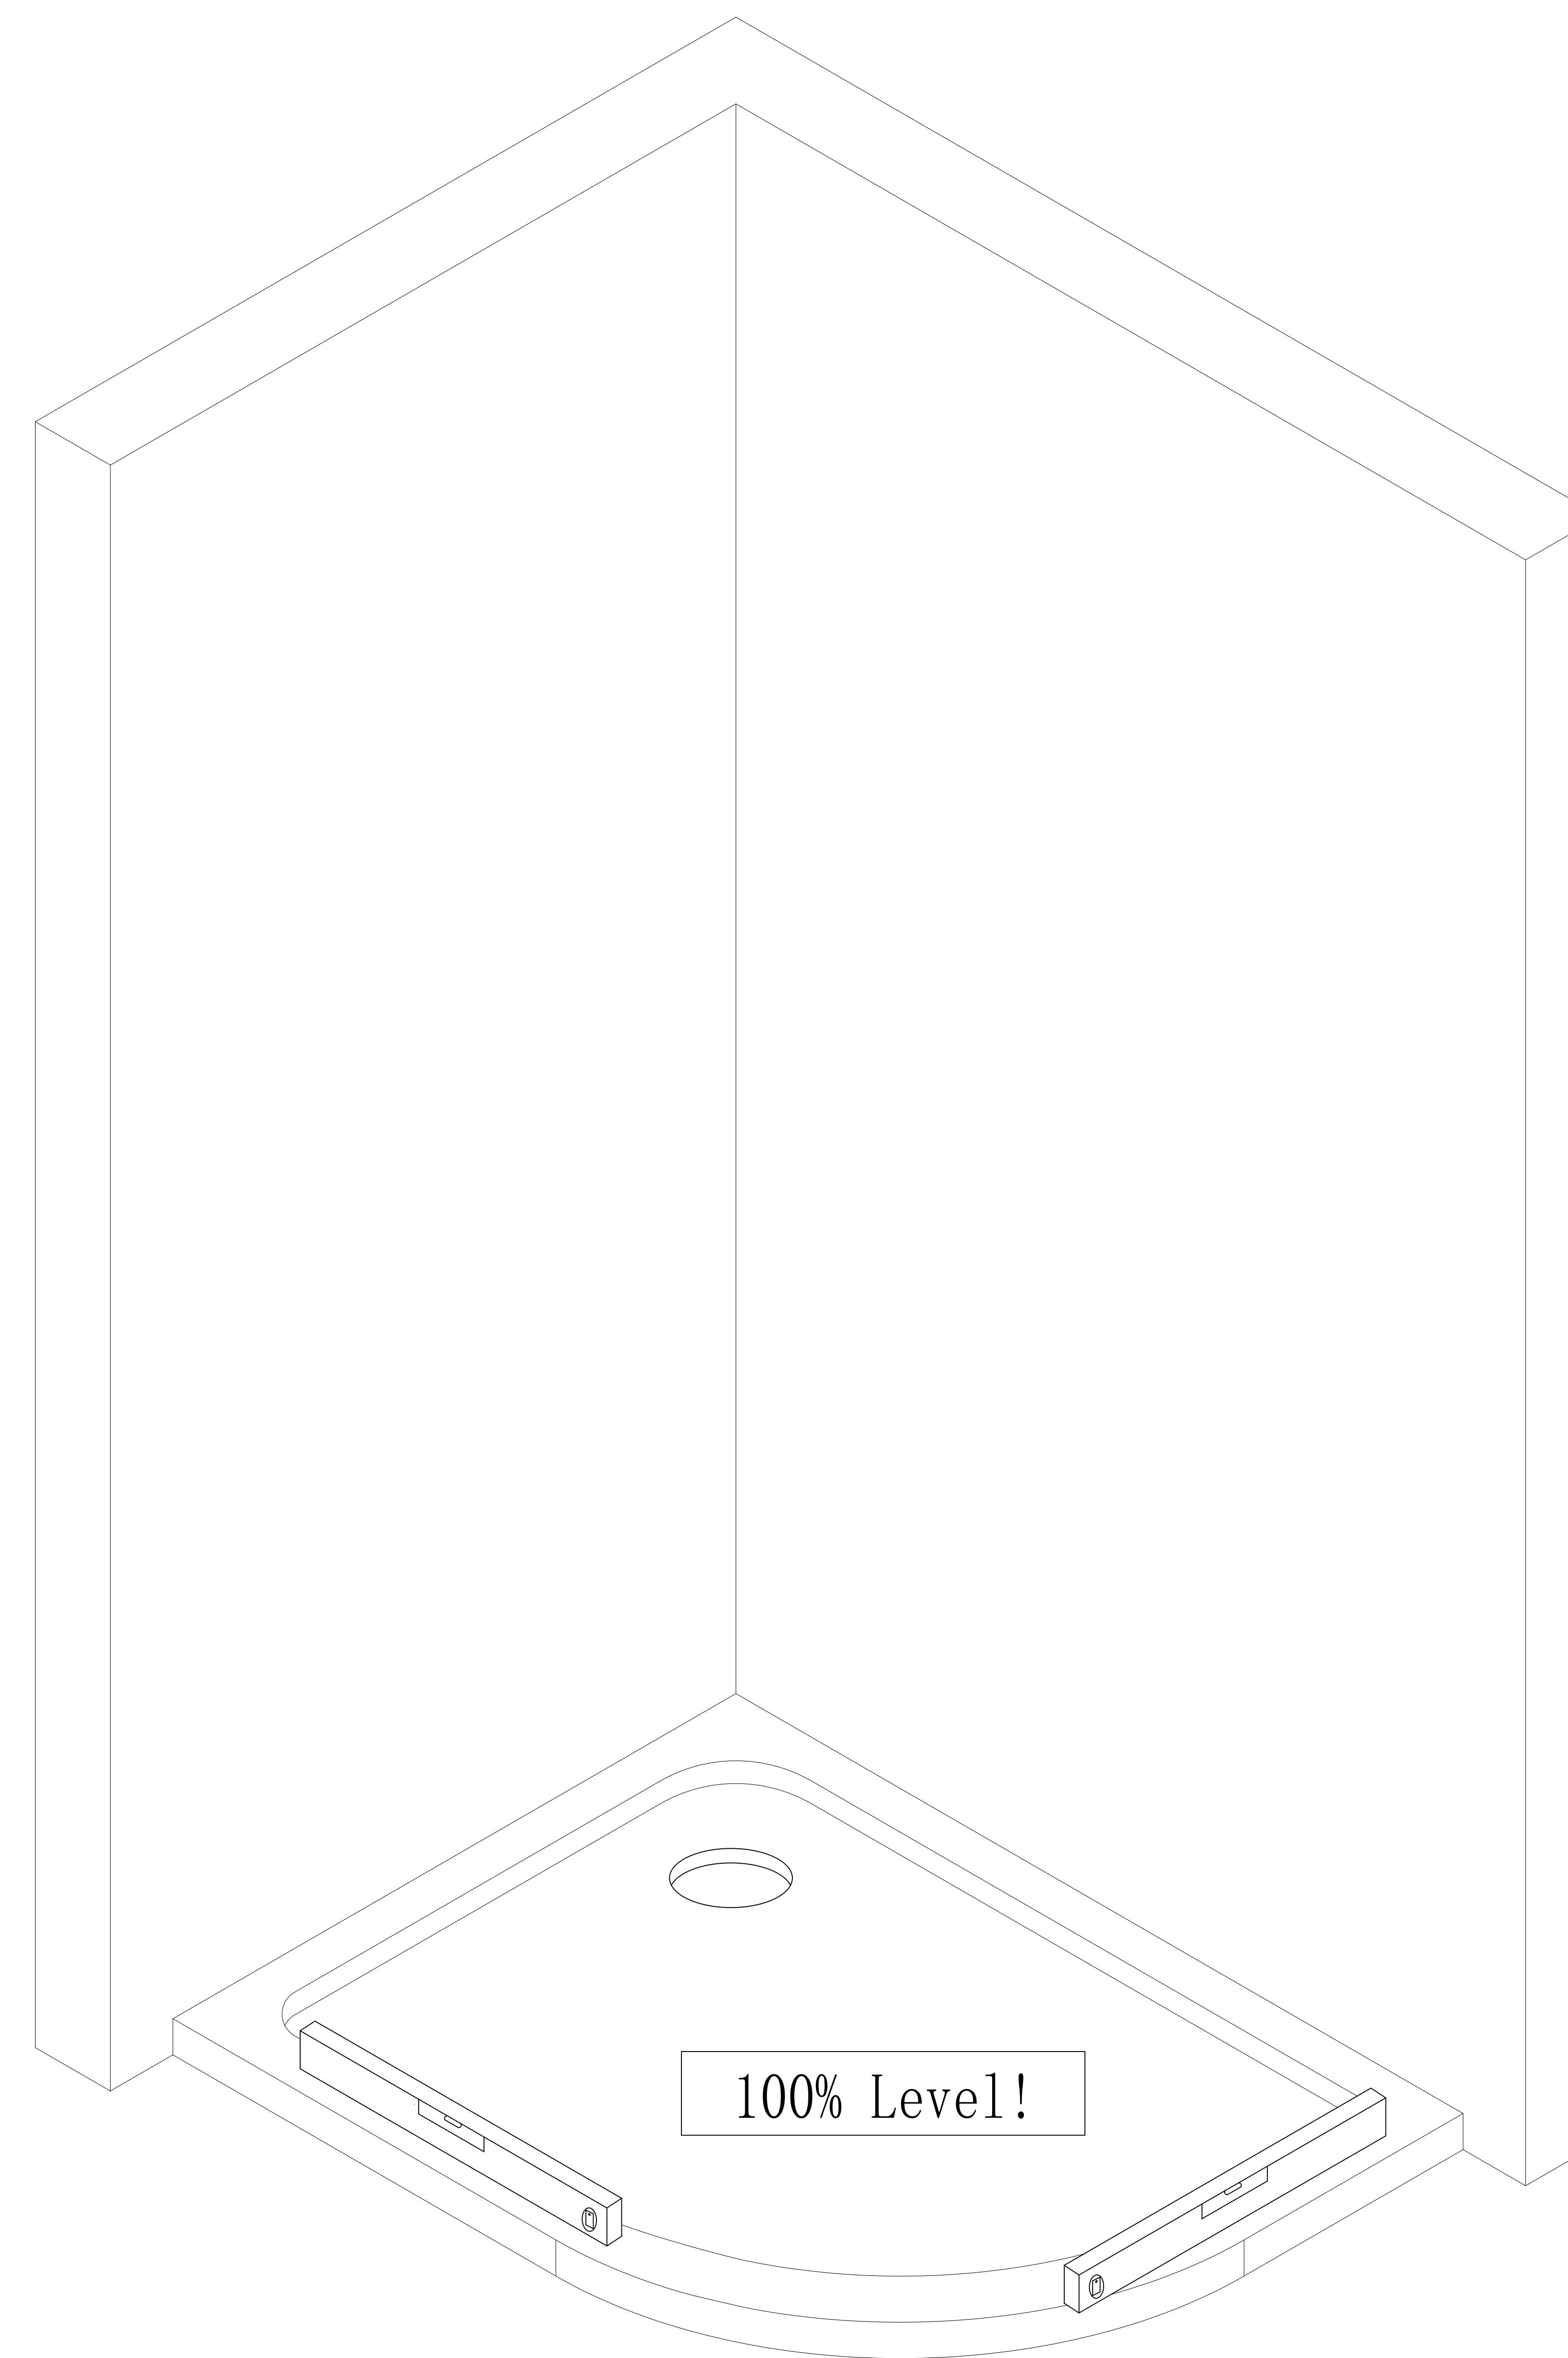


Check tray is level


2L

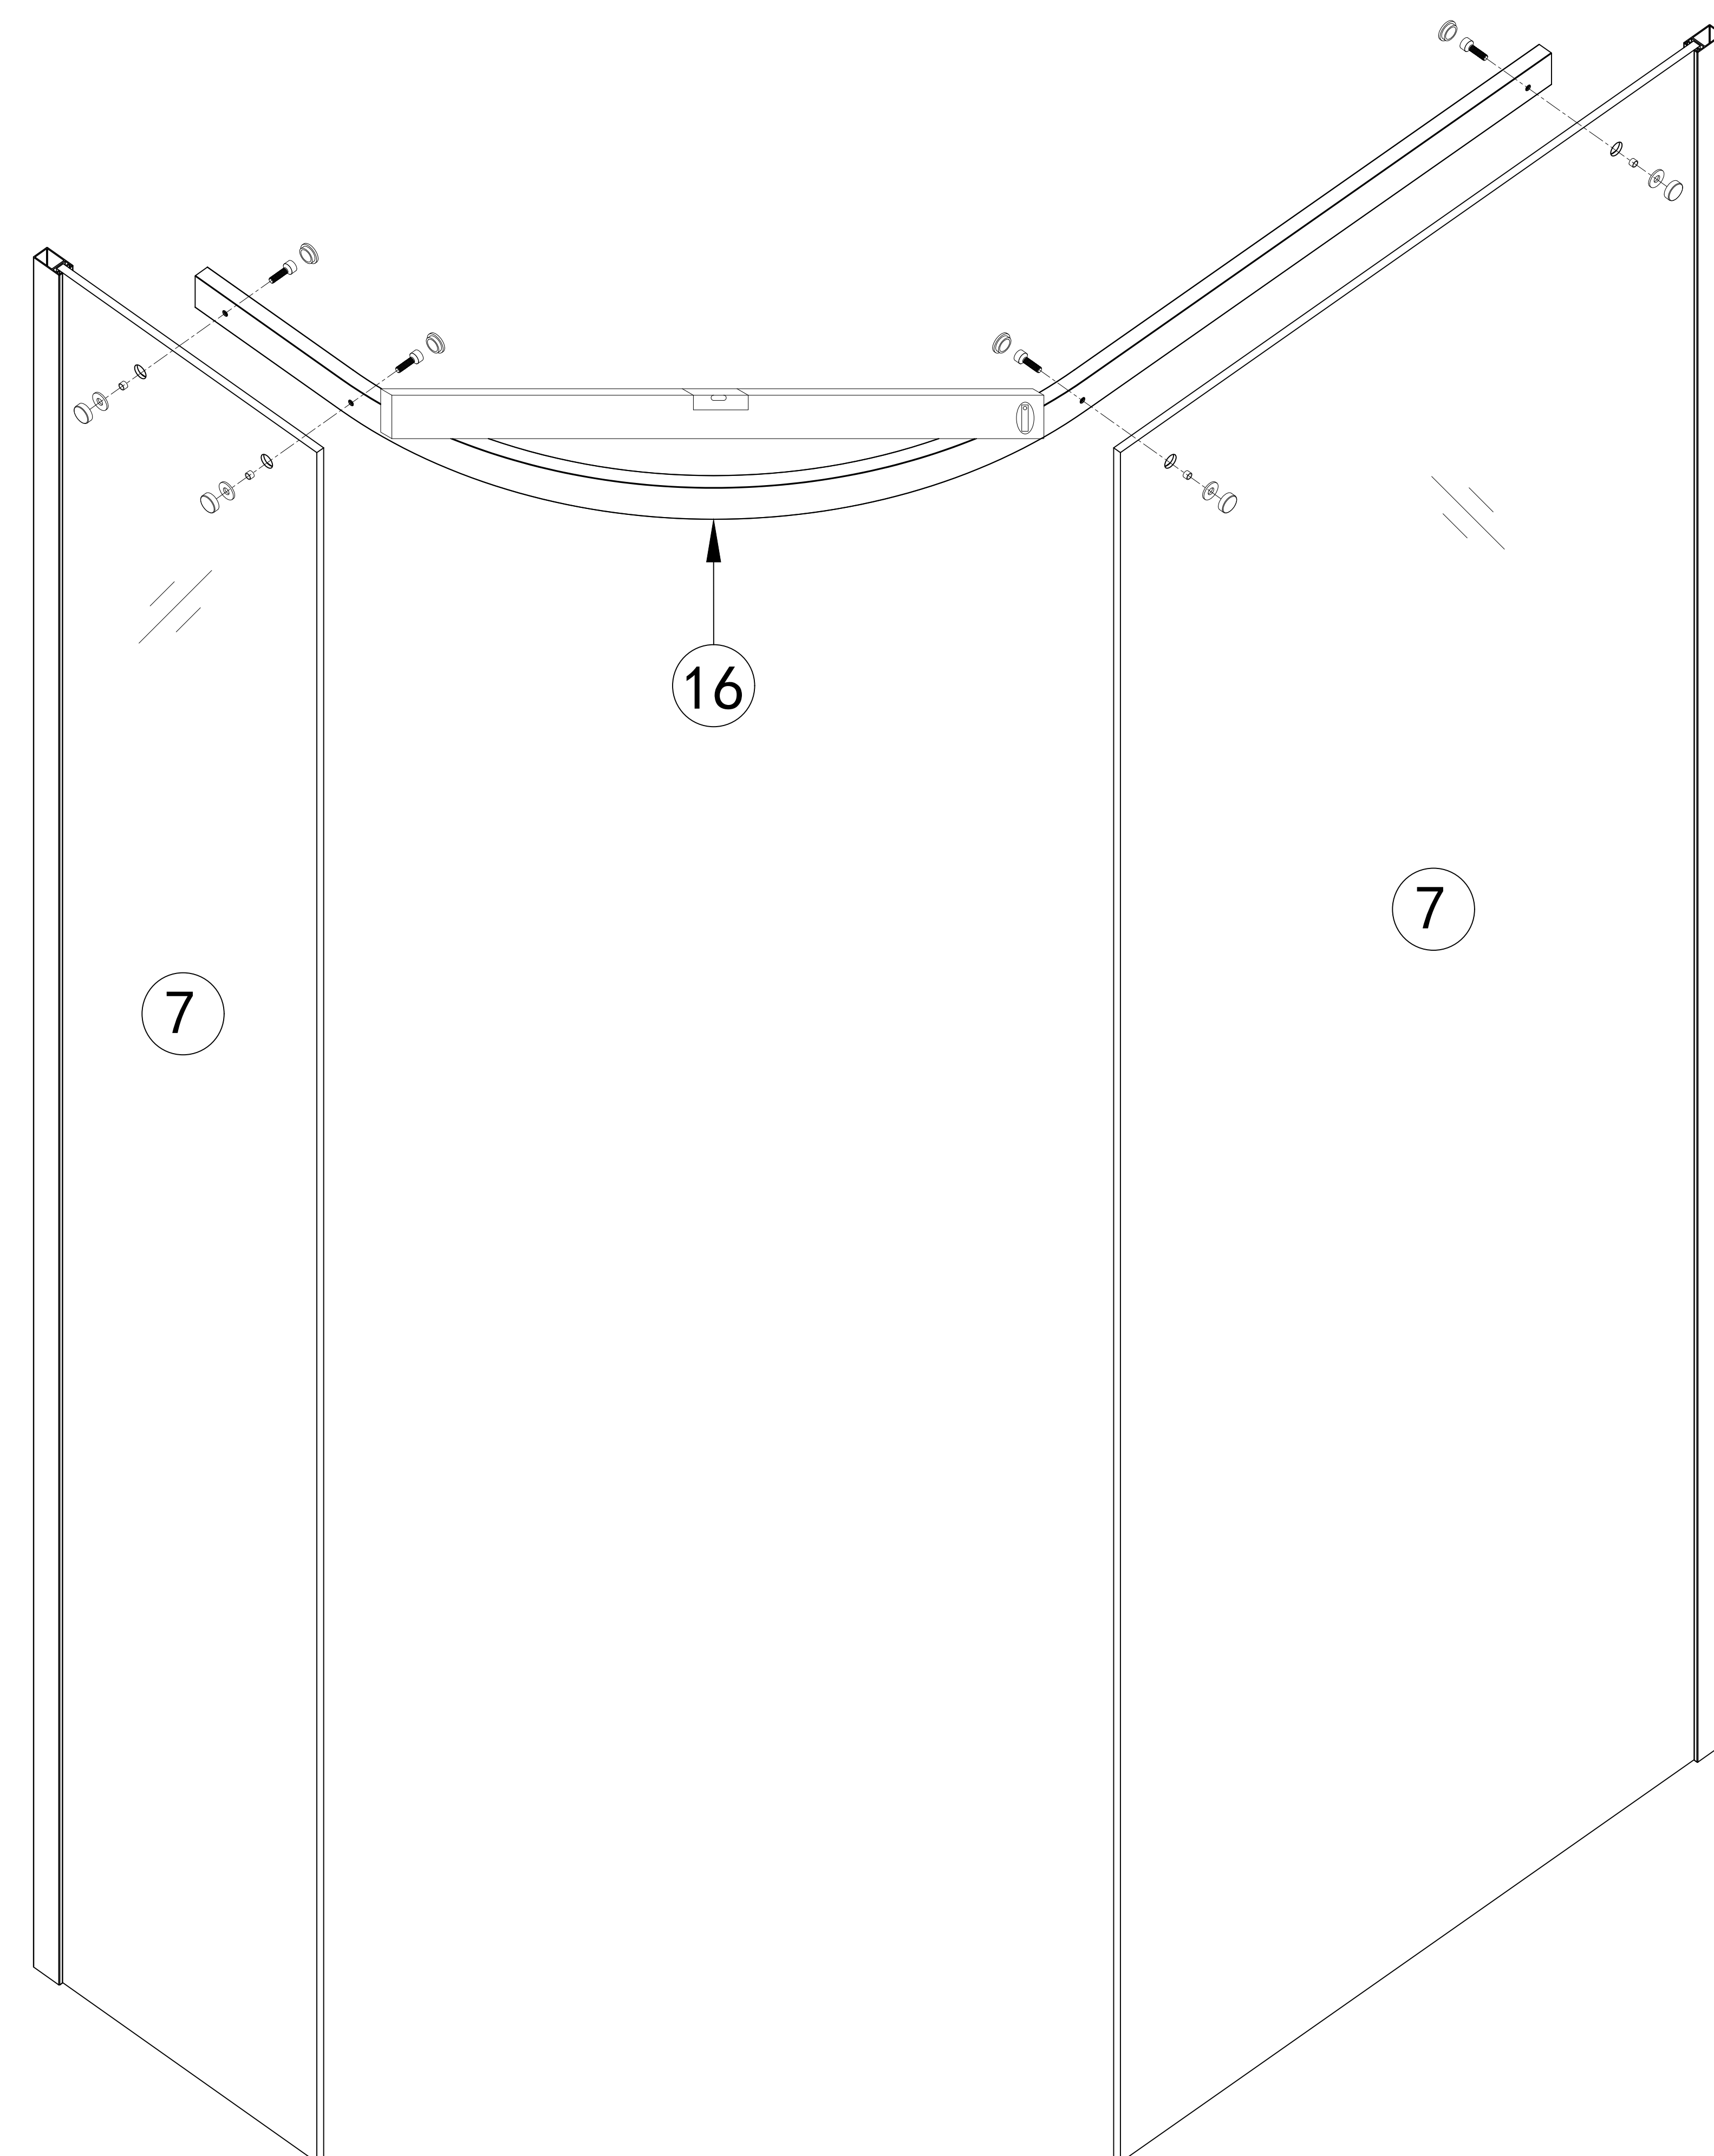

2R

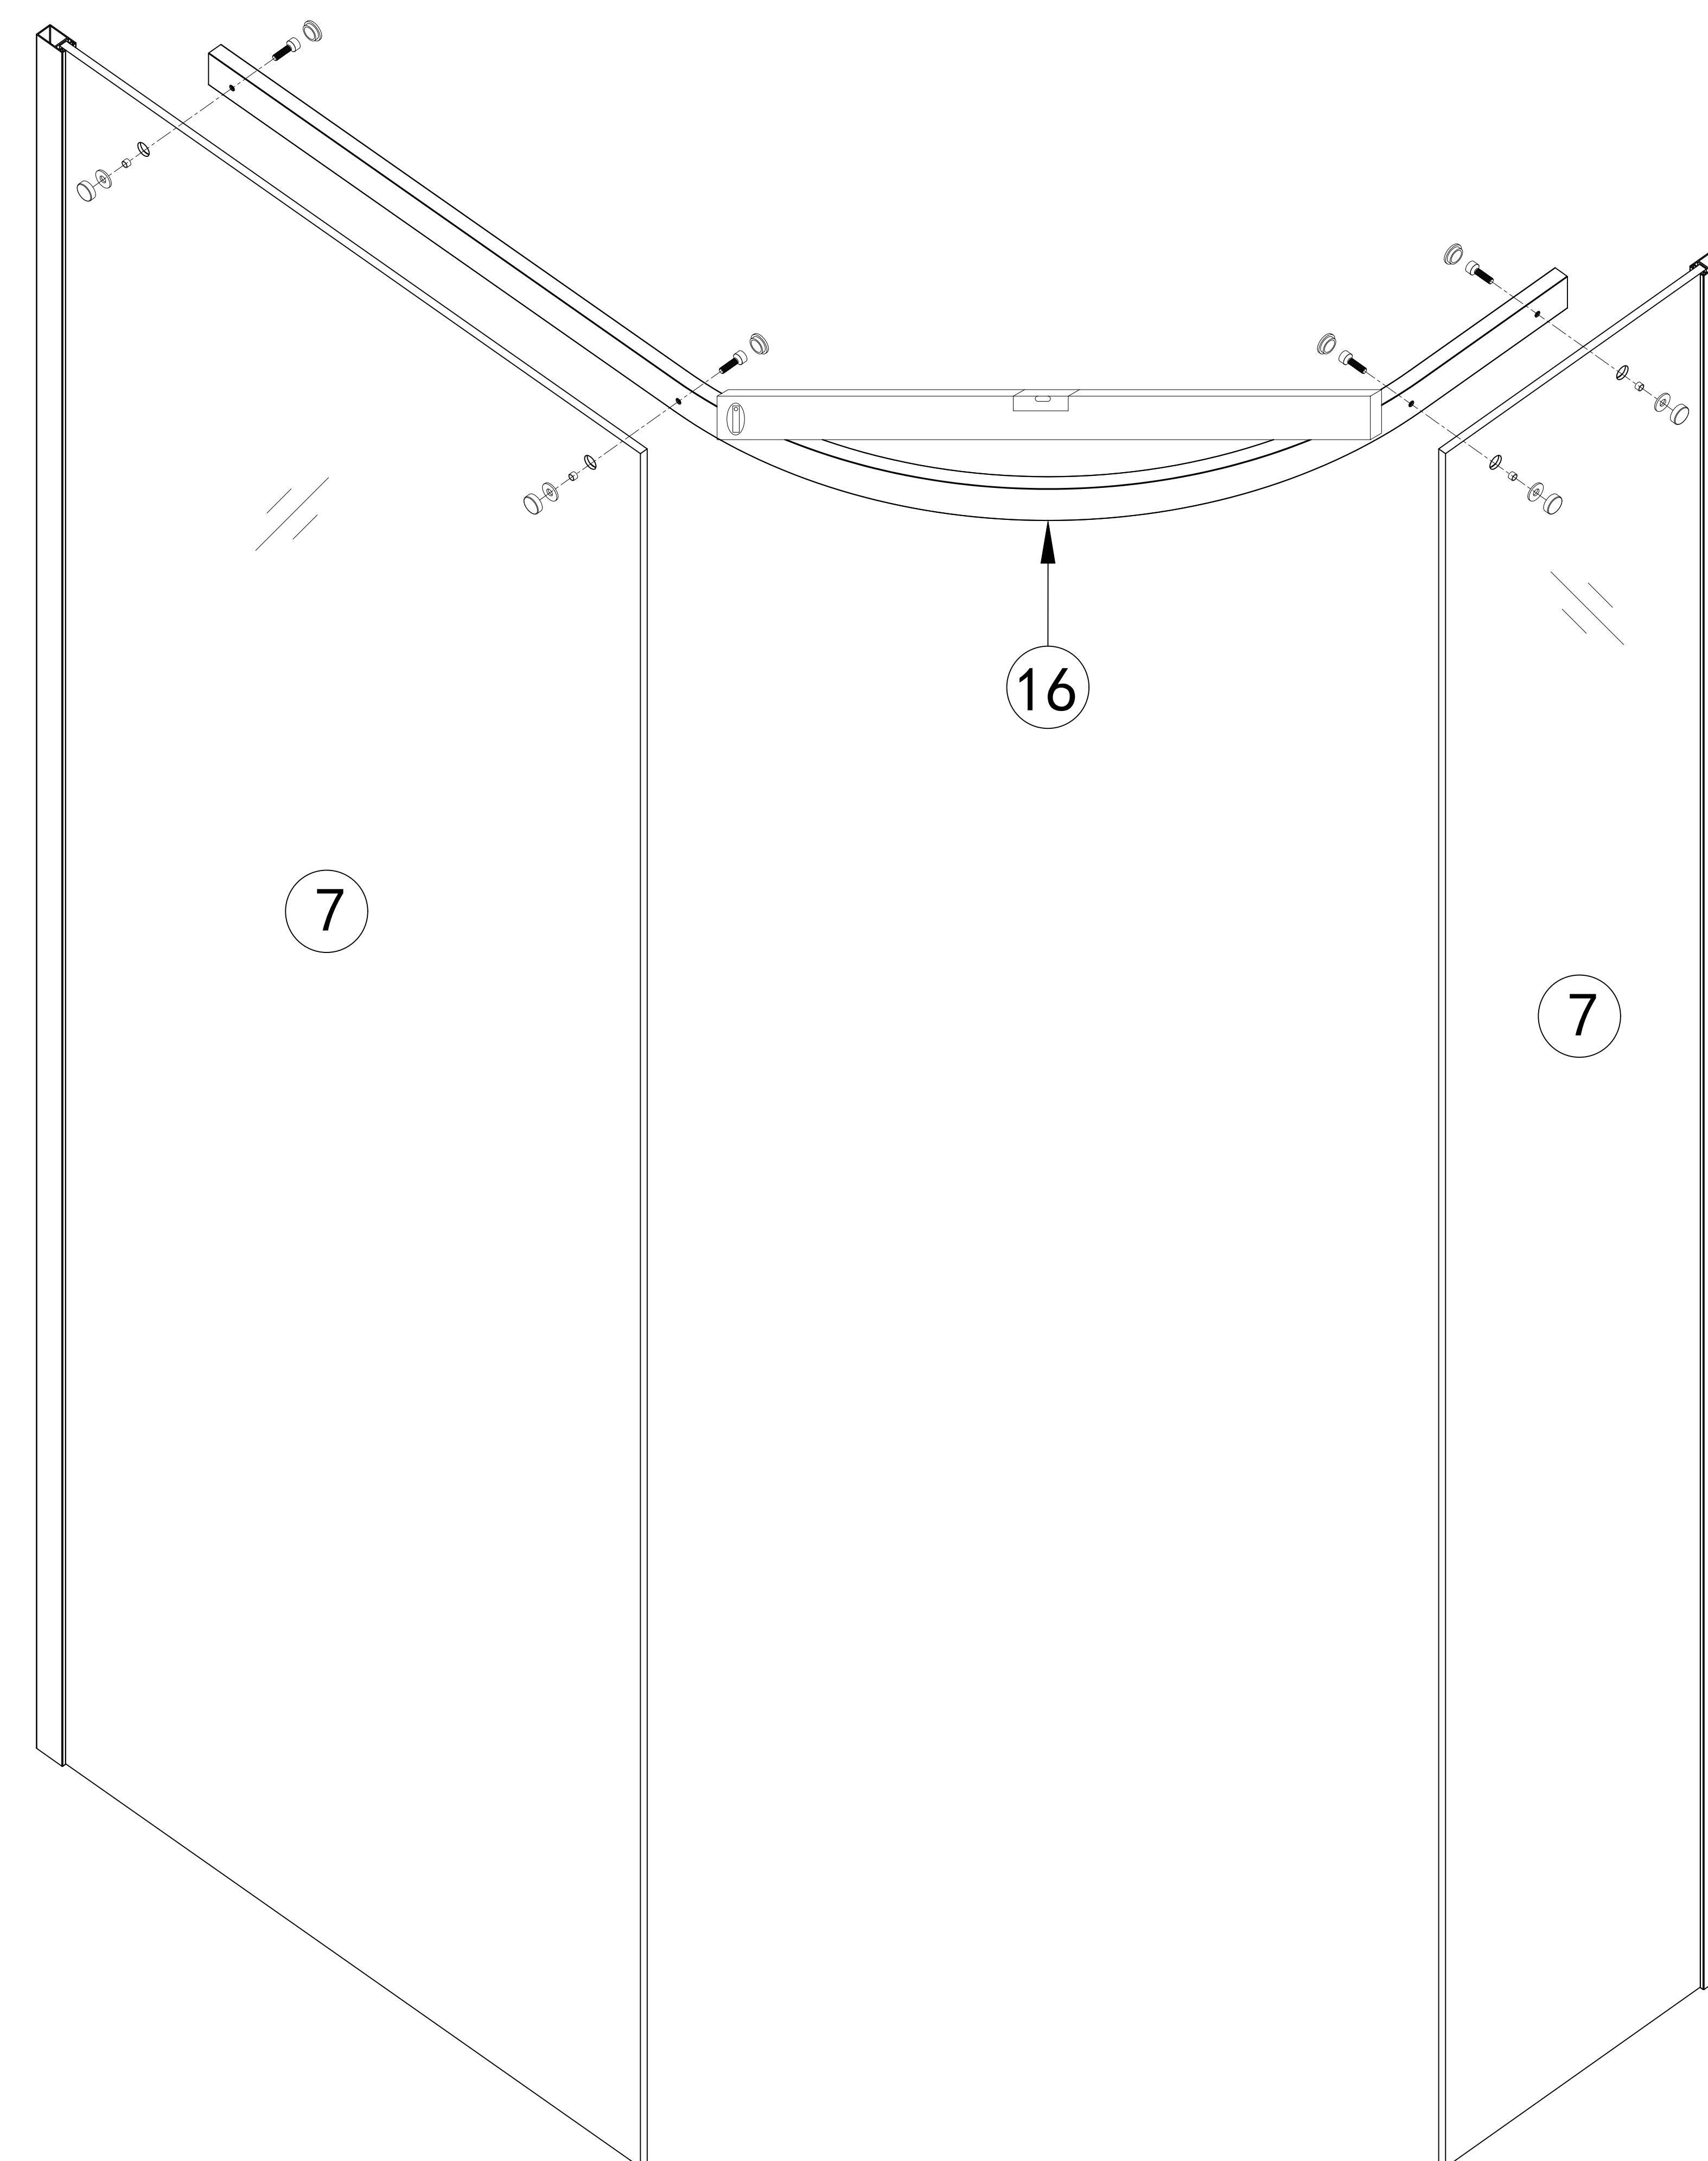

2-1

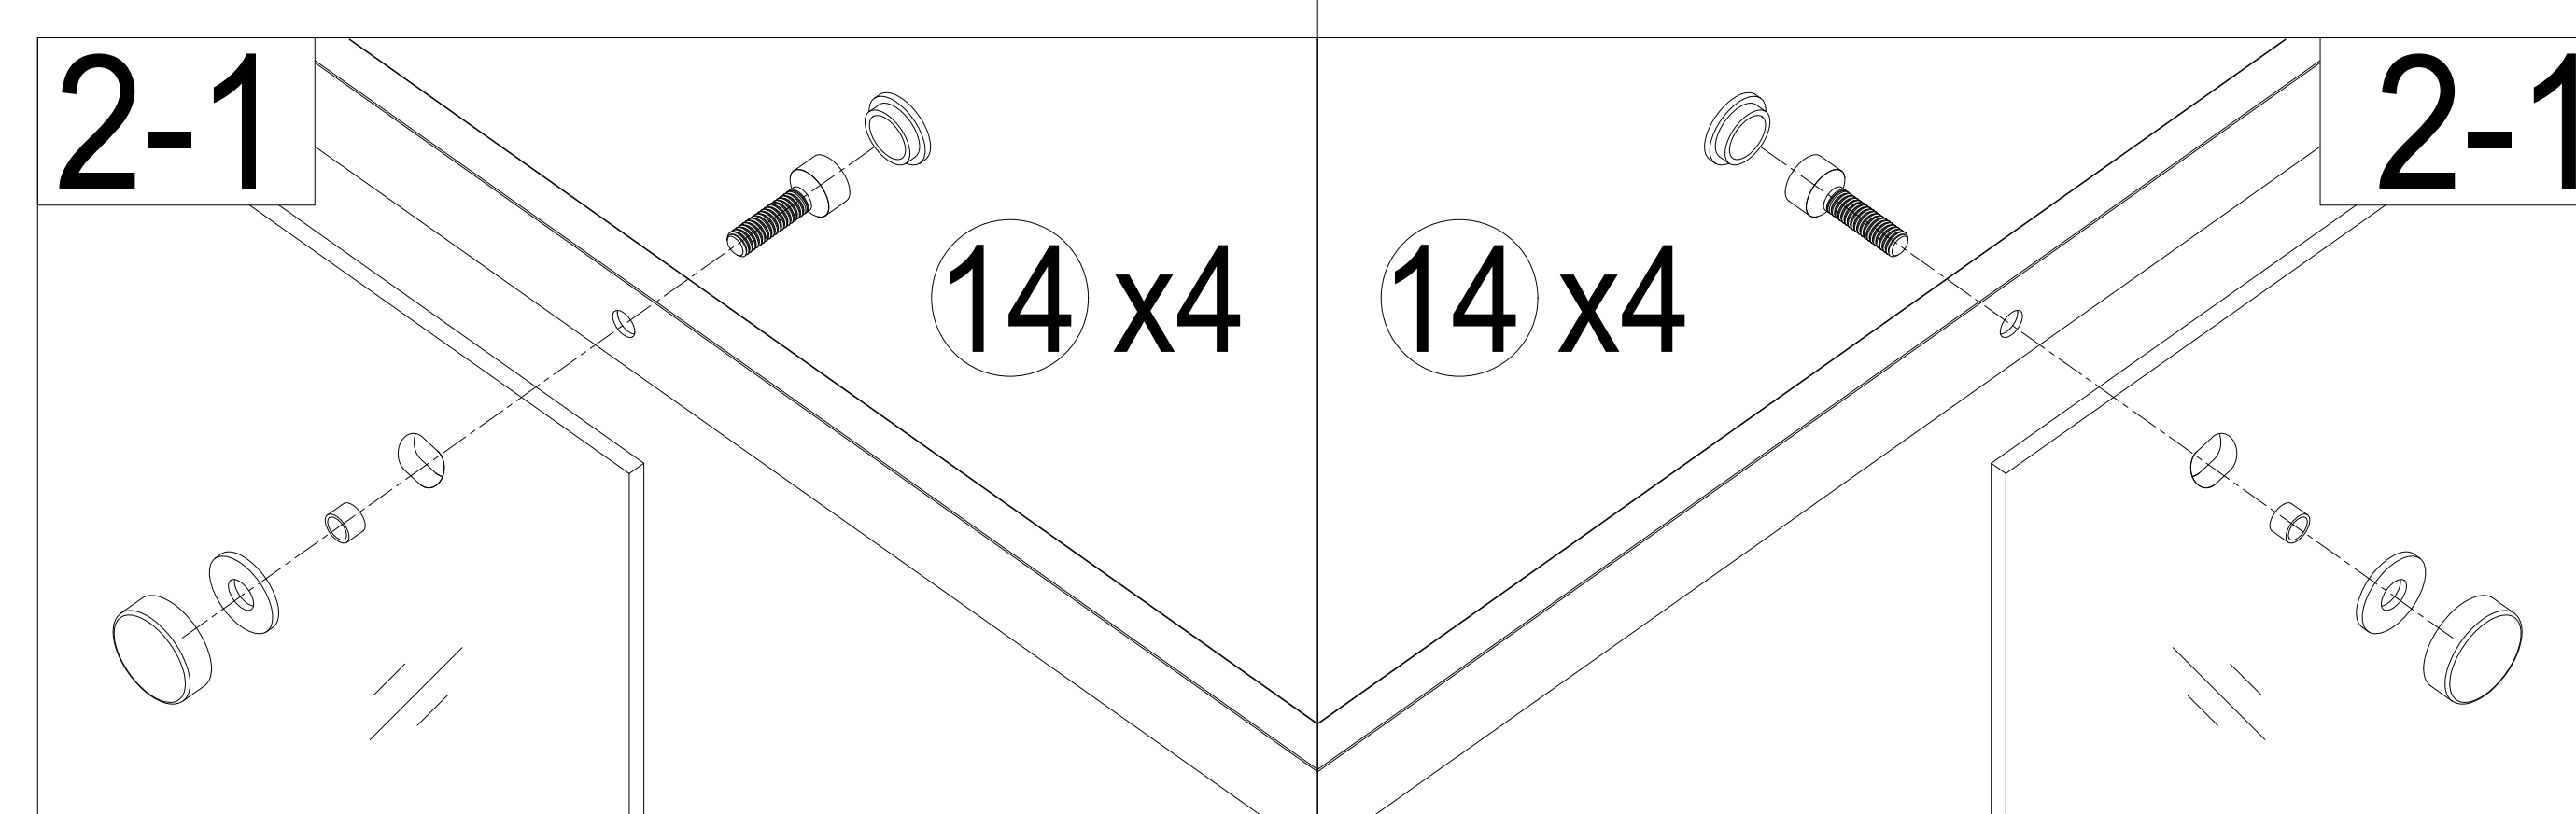

14 x4

14 x4



2-1

Connect top support bar 16 to fixed glass panels 7 with bolts 14.



Connect top support bar 16 to fixed glass panels 7 with bolts 14.

3L


3R

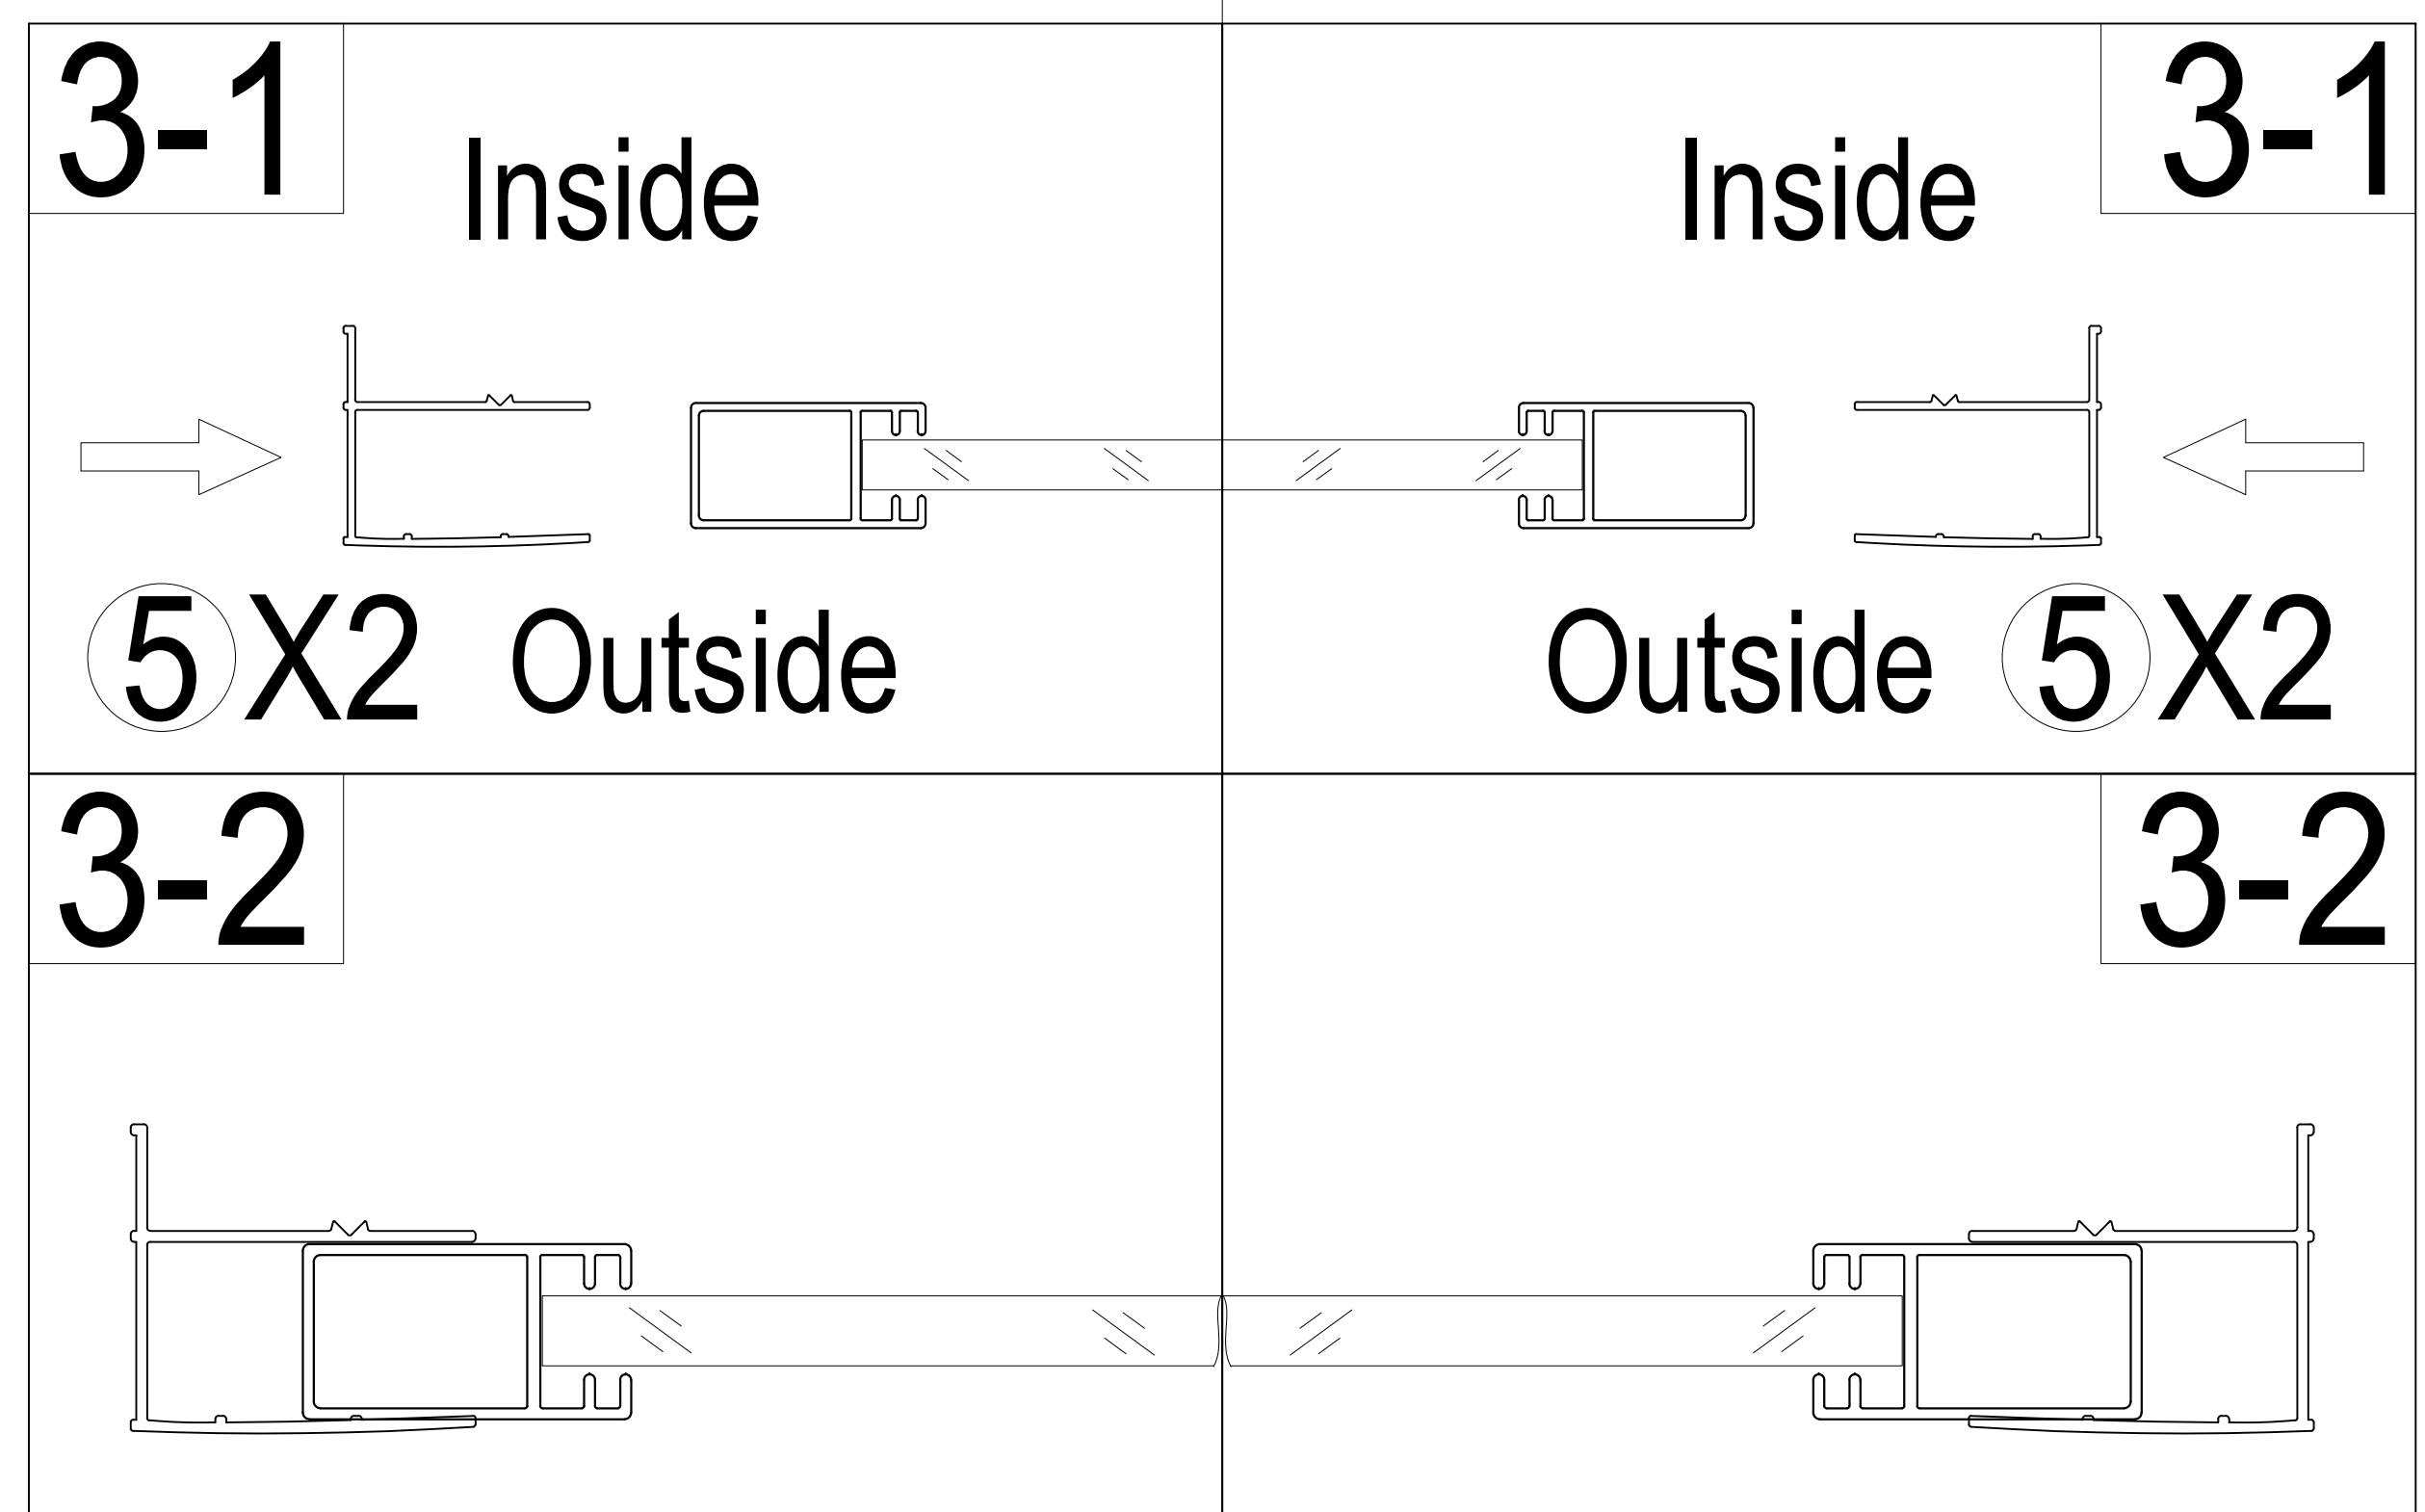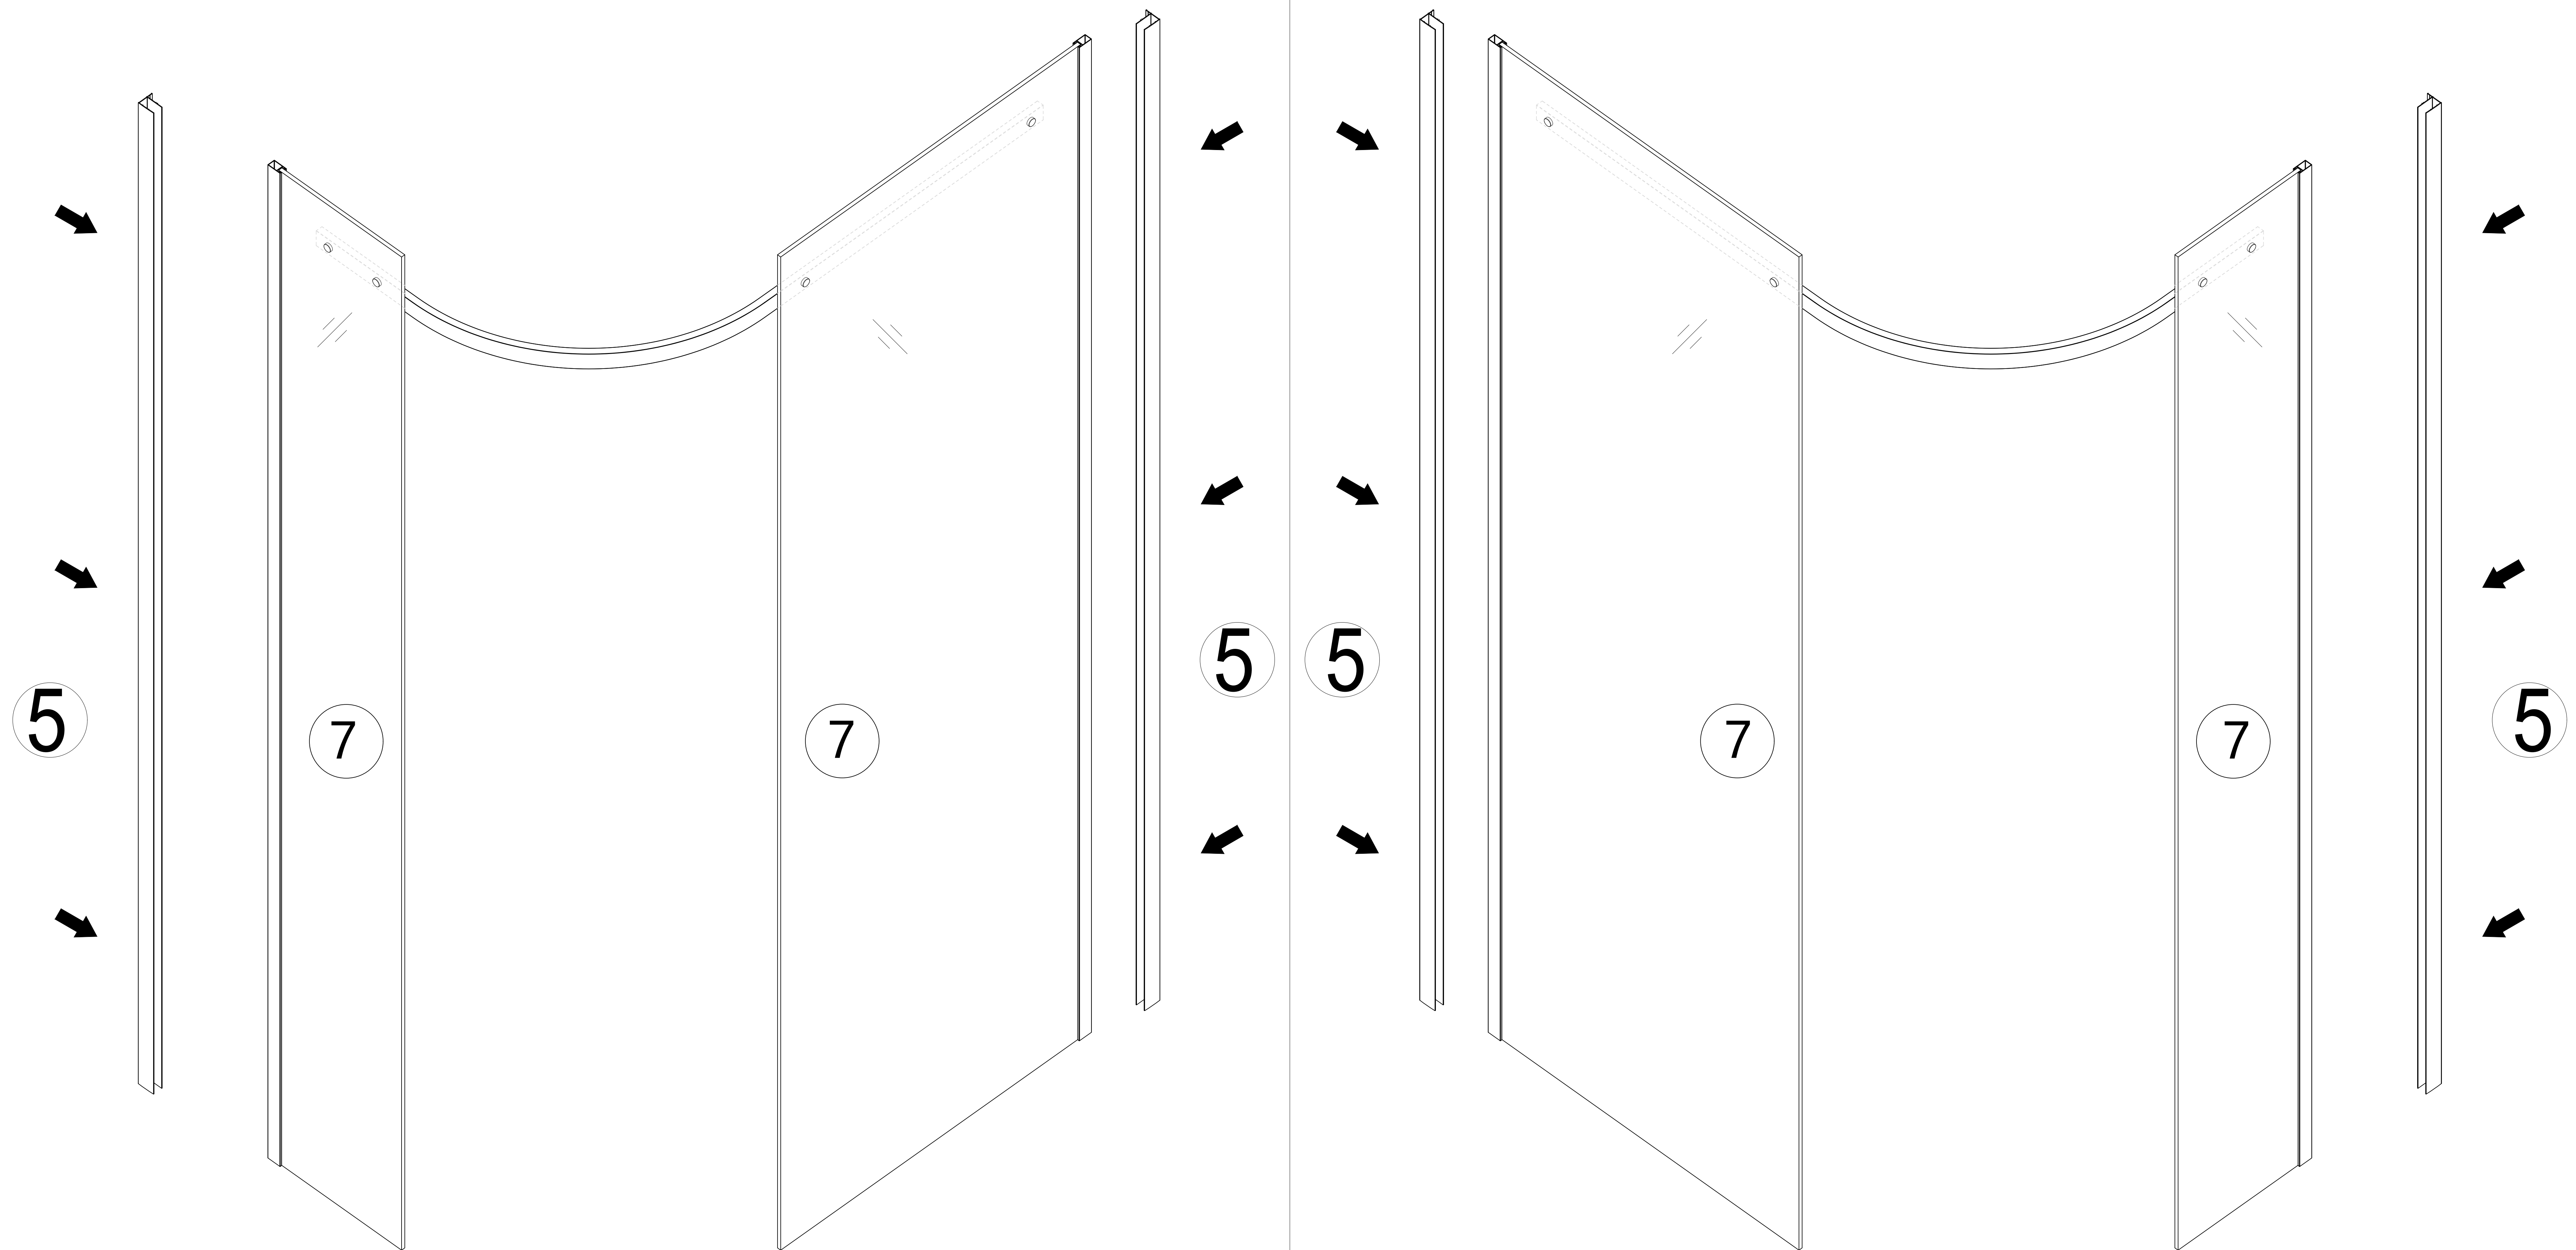

4L

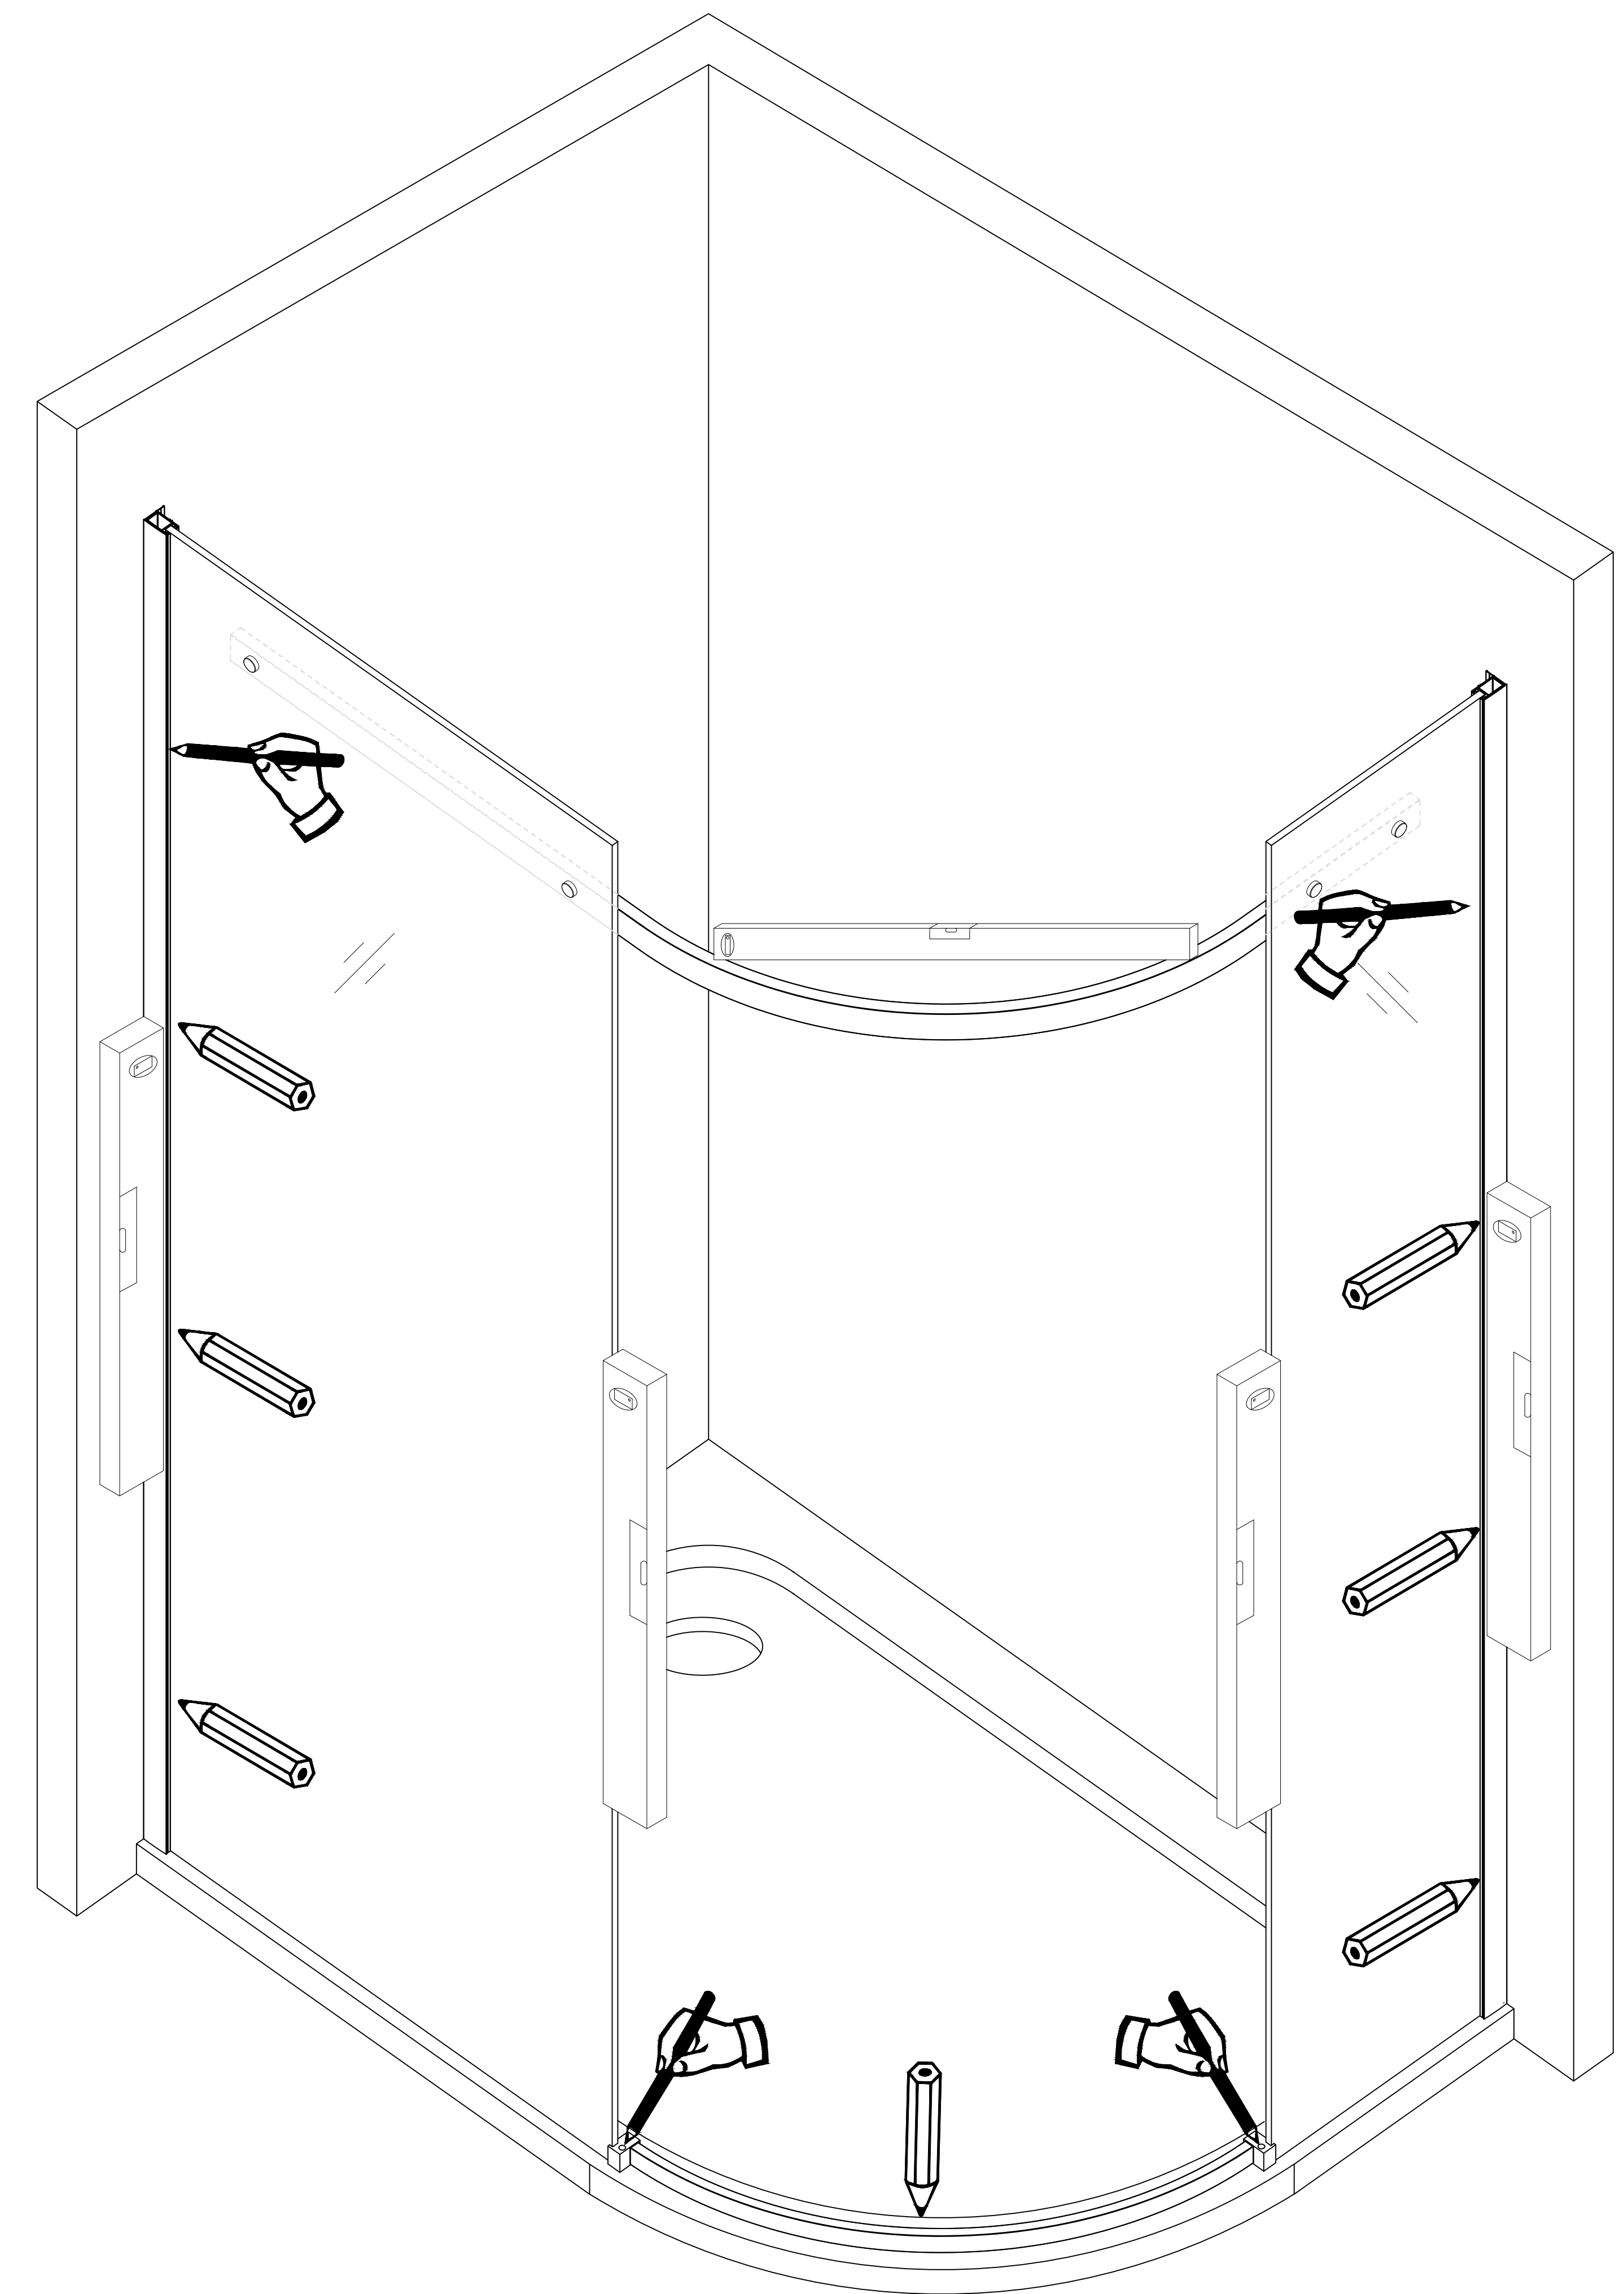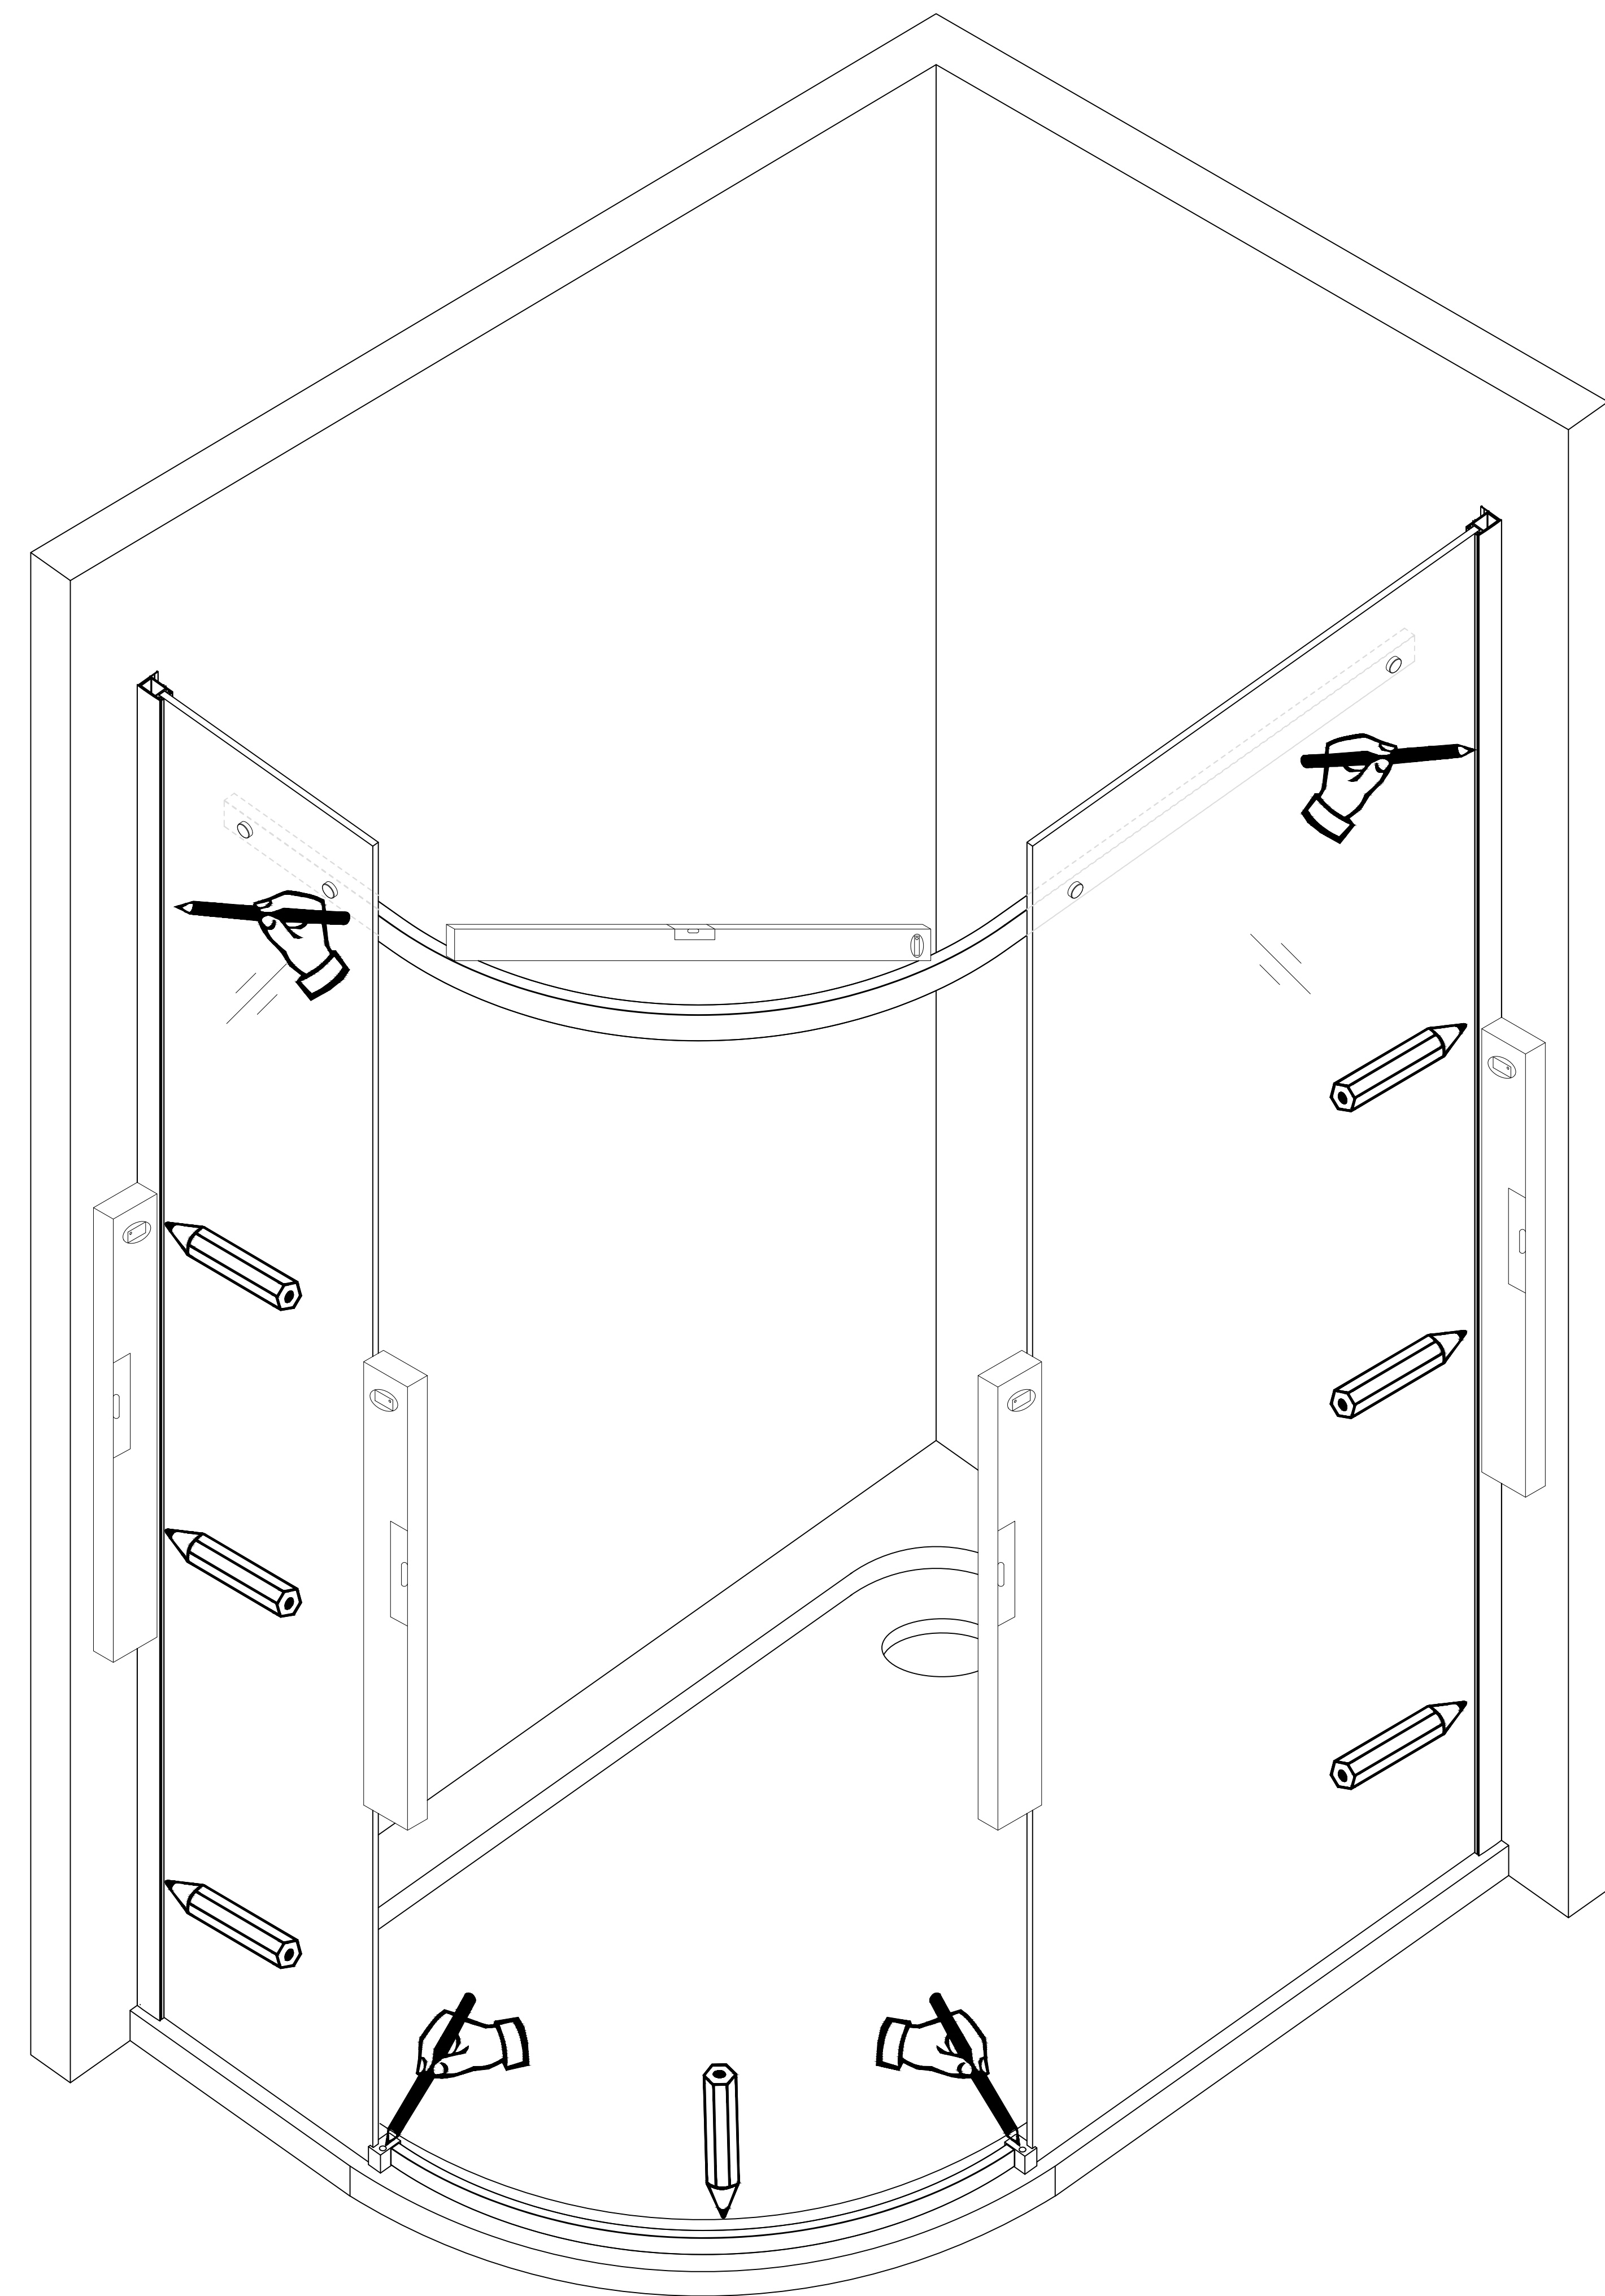



4R

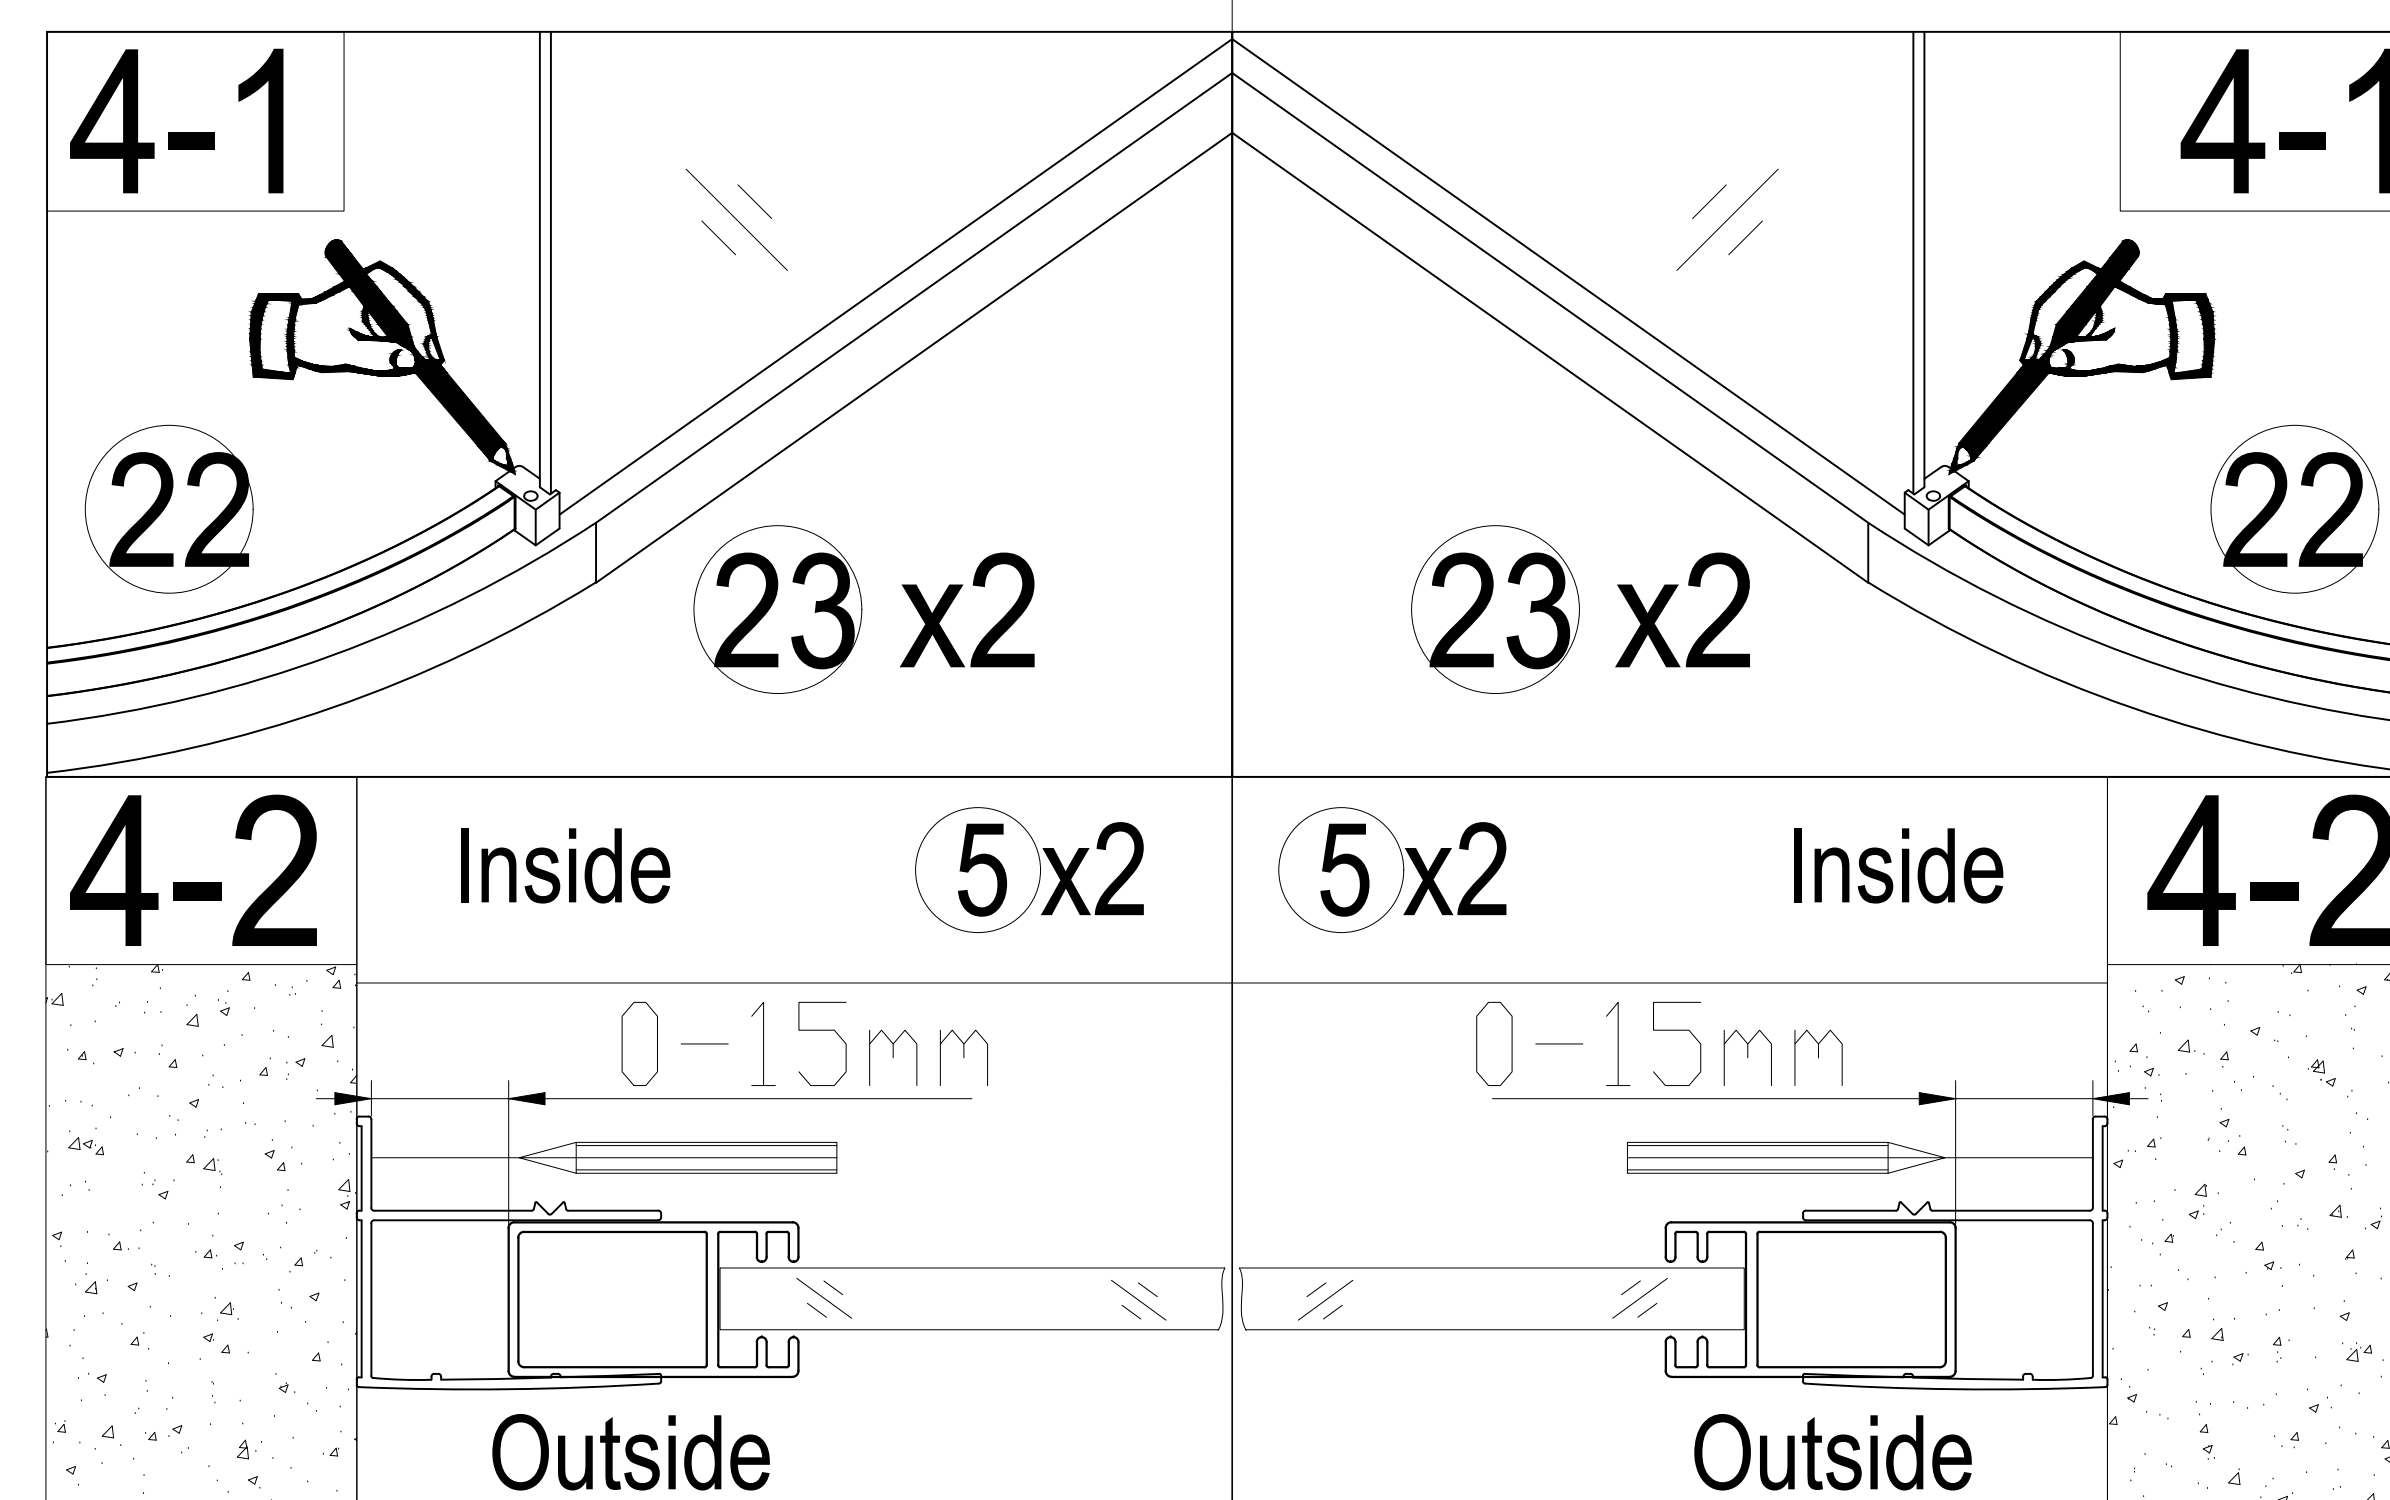


Lift fixed panels with bar attached onto tray for best fit and mark position for wall profiles and bottom rail & rail fixtures

Lift fixed panels with bar attached onto tray for best fit and mark position for wall profiles and bottom rail & rail fixtures

5L

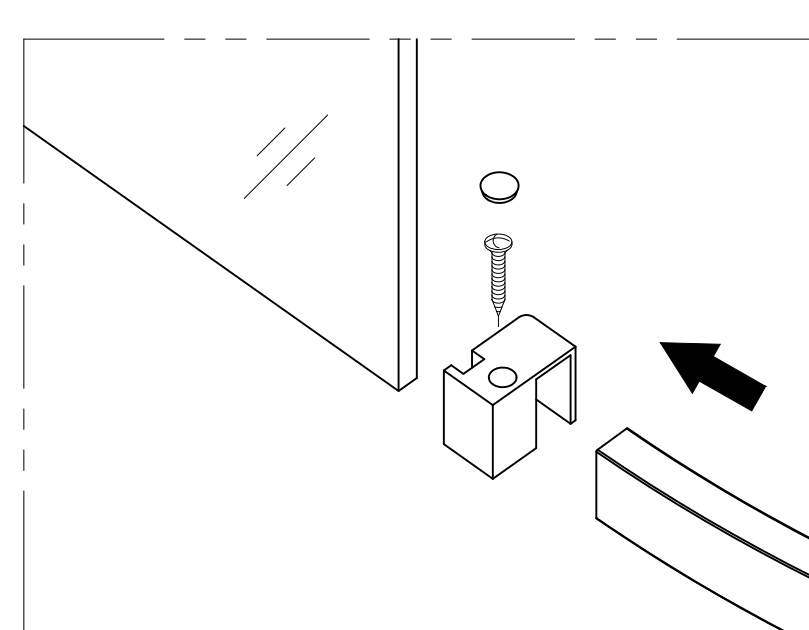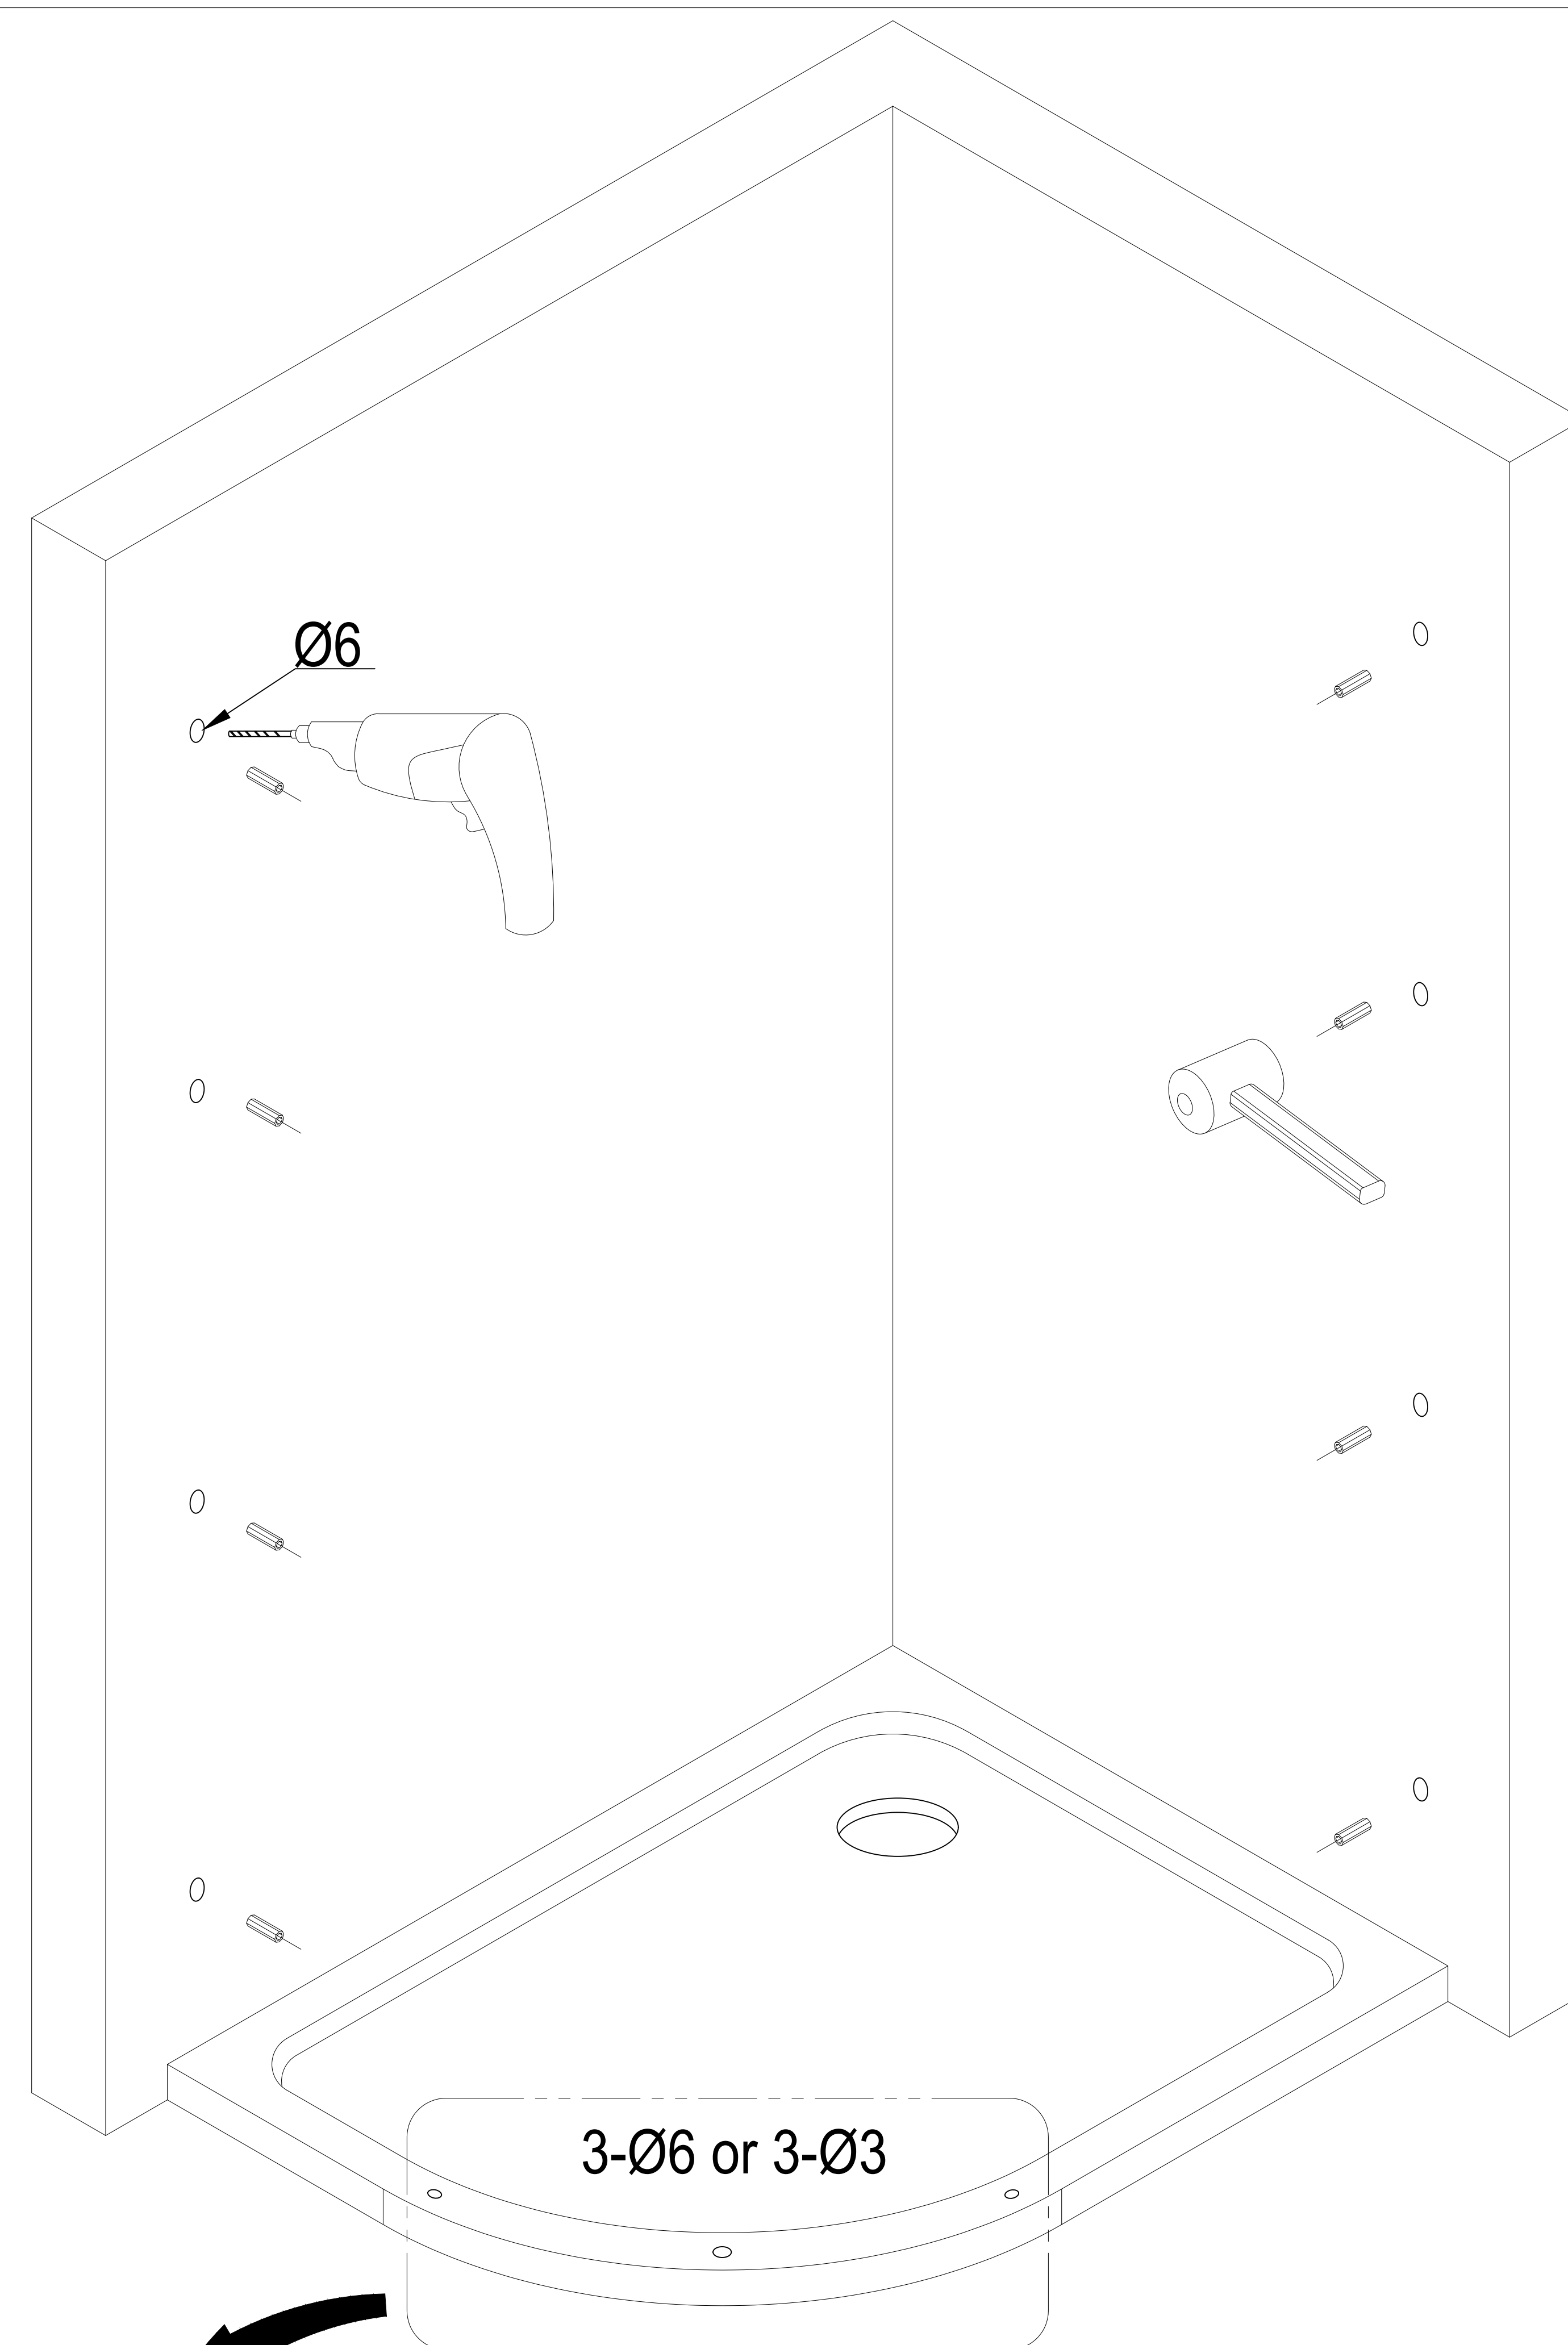


If the shower enclosure installed with a tray, please make holes in the tray with  $\Phi 3\text{mm}$  drill and wall plugs are not required;

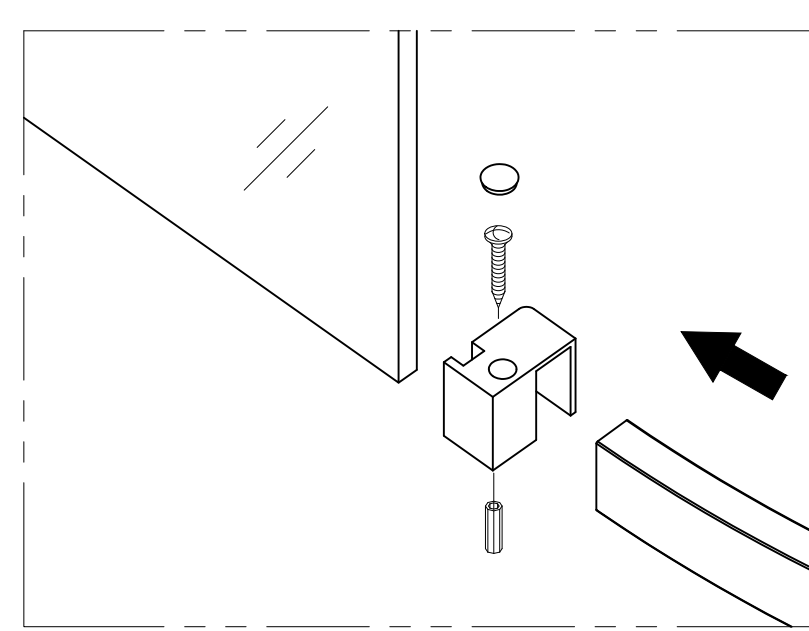

If not, please make holes in the floor with  $\Phi 6\text{mm}$  drill and wall plugs are required;

Installing wall profiles - checking levels


5-1

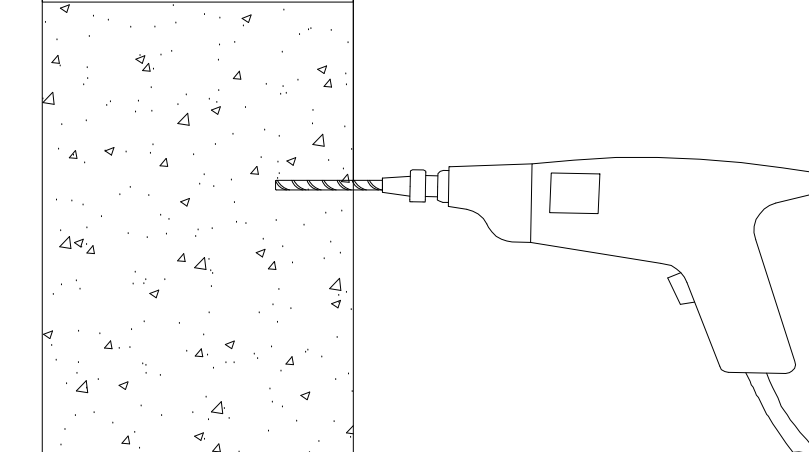

Ø6


Ø6

5-1

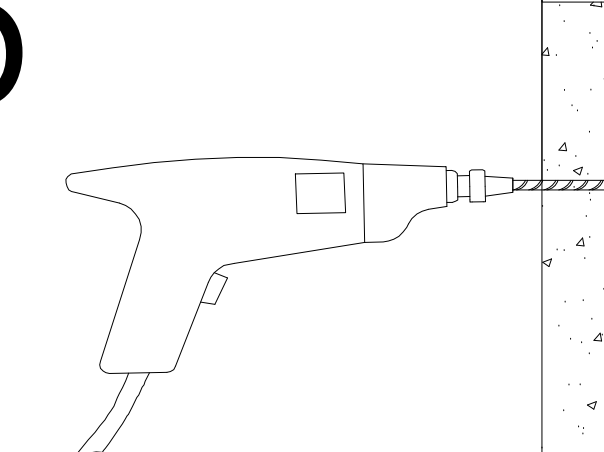


5-2

1x8


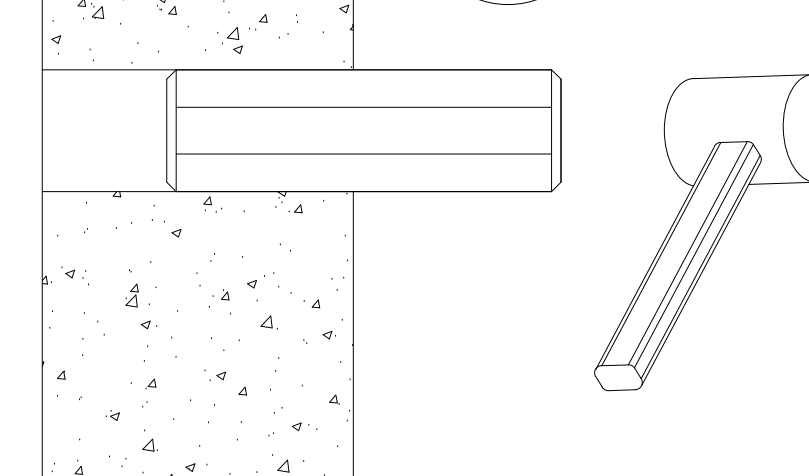


1x8

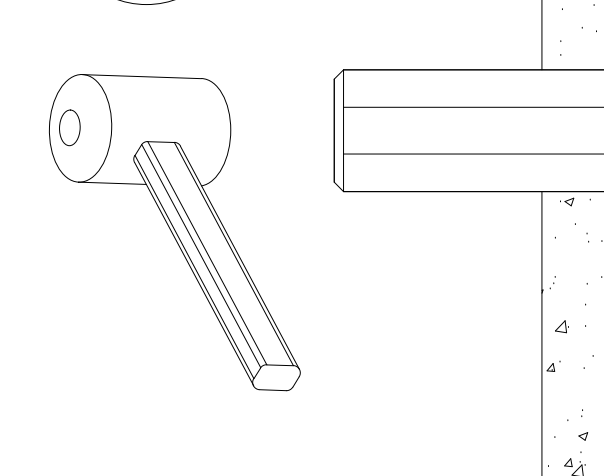


5-2

5R

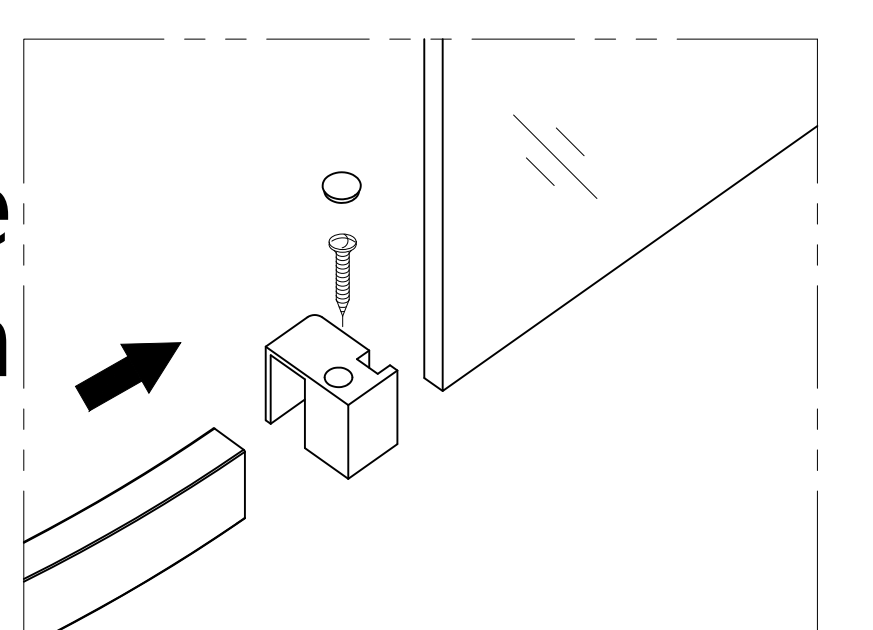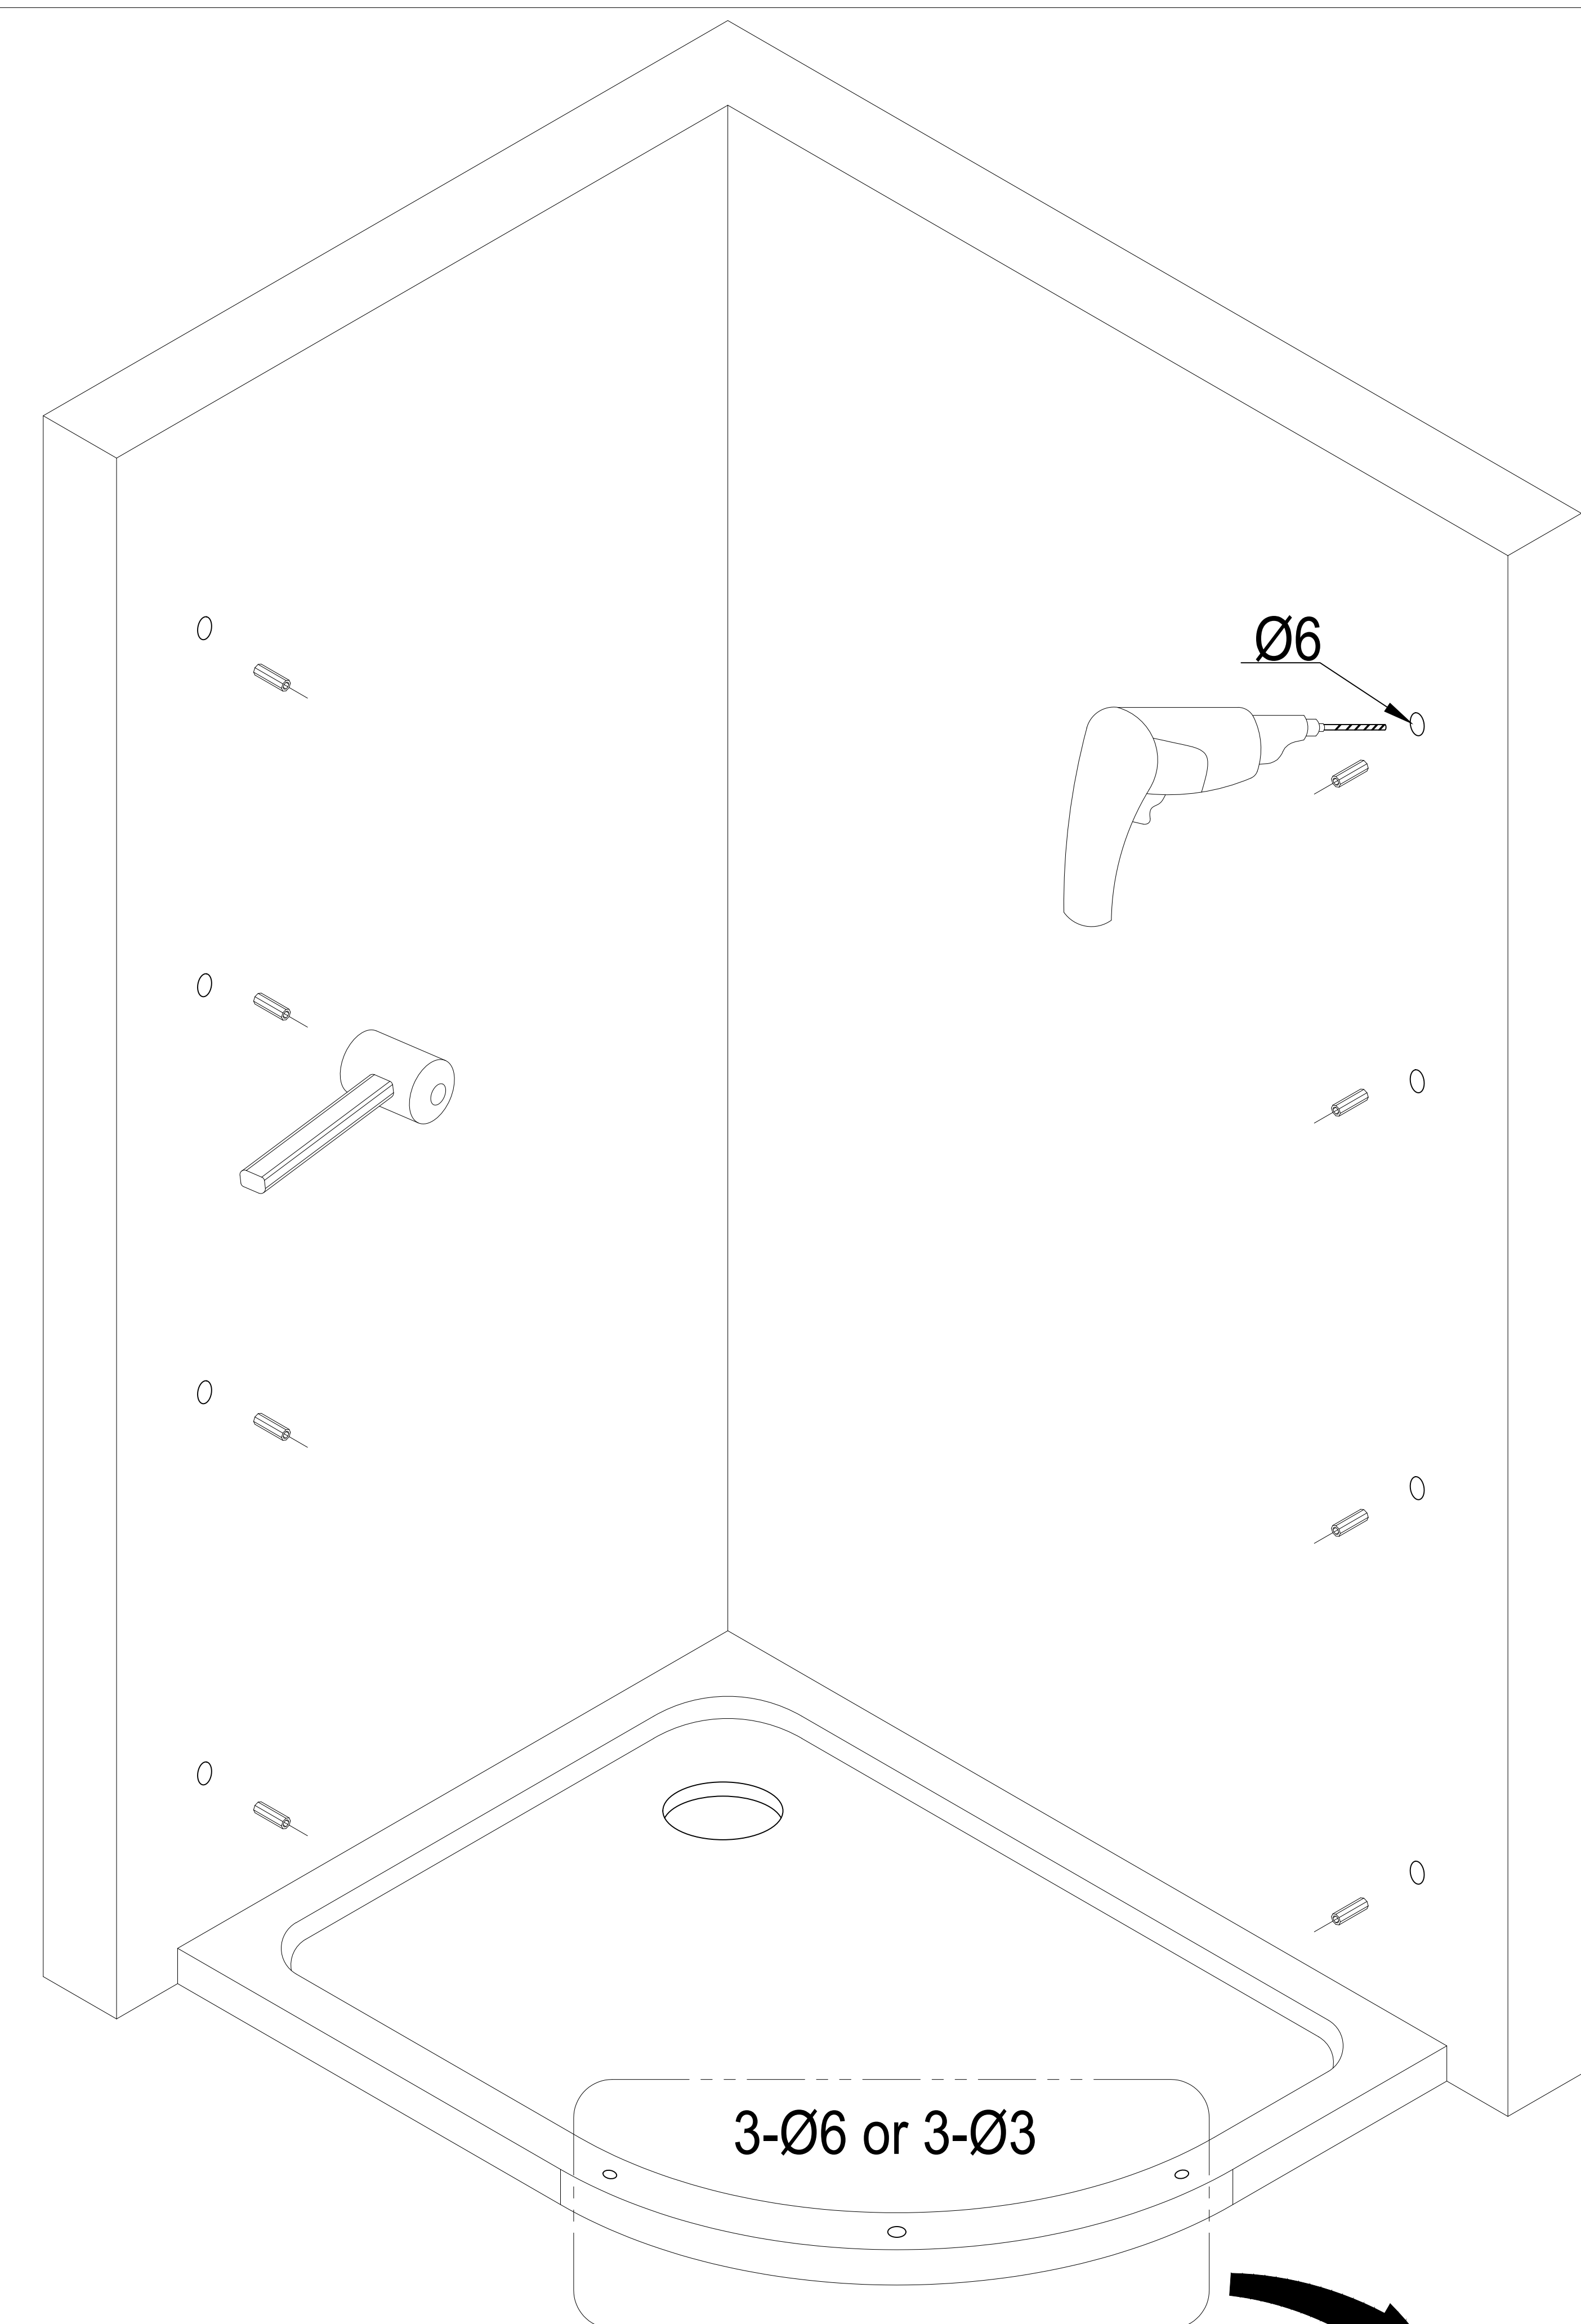


If the shower enclosure installed with a tray, please make holes in the tray with  $\Phi 3\text{mm}$  drill and wall plugs are not required;

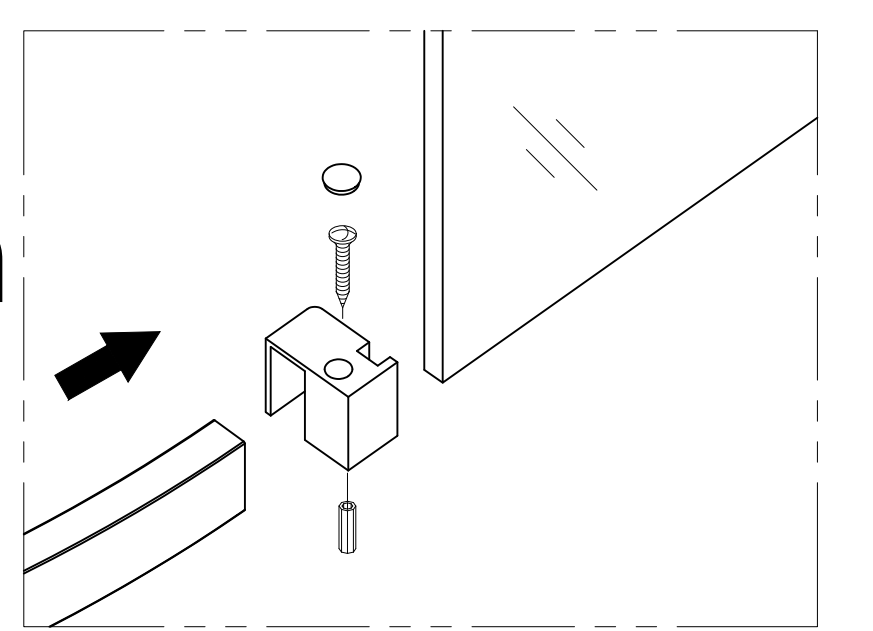


If not, please make holes in the floor with  $\Phi 6\text{mm}$  drill and wall plugs are required;





Installing wall profiles - checking levels

6L


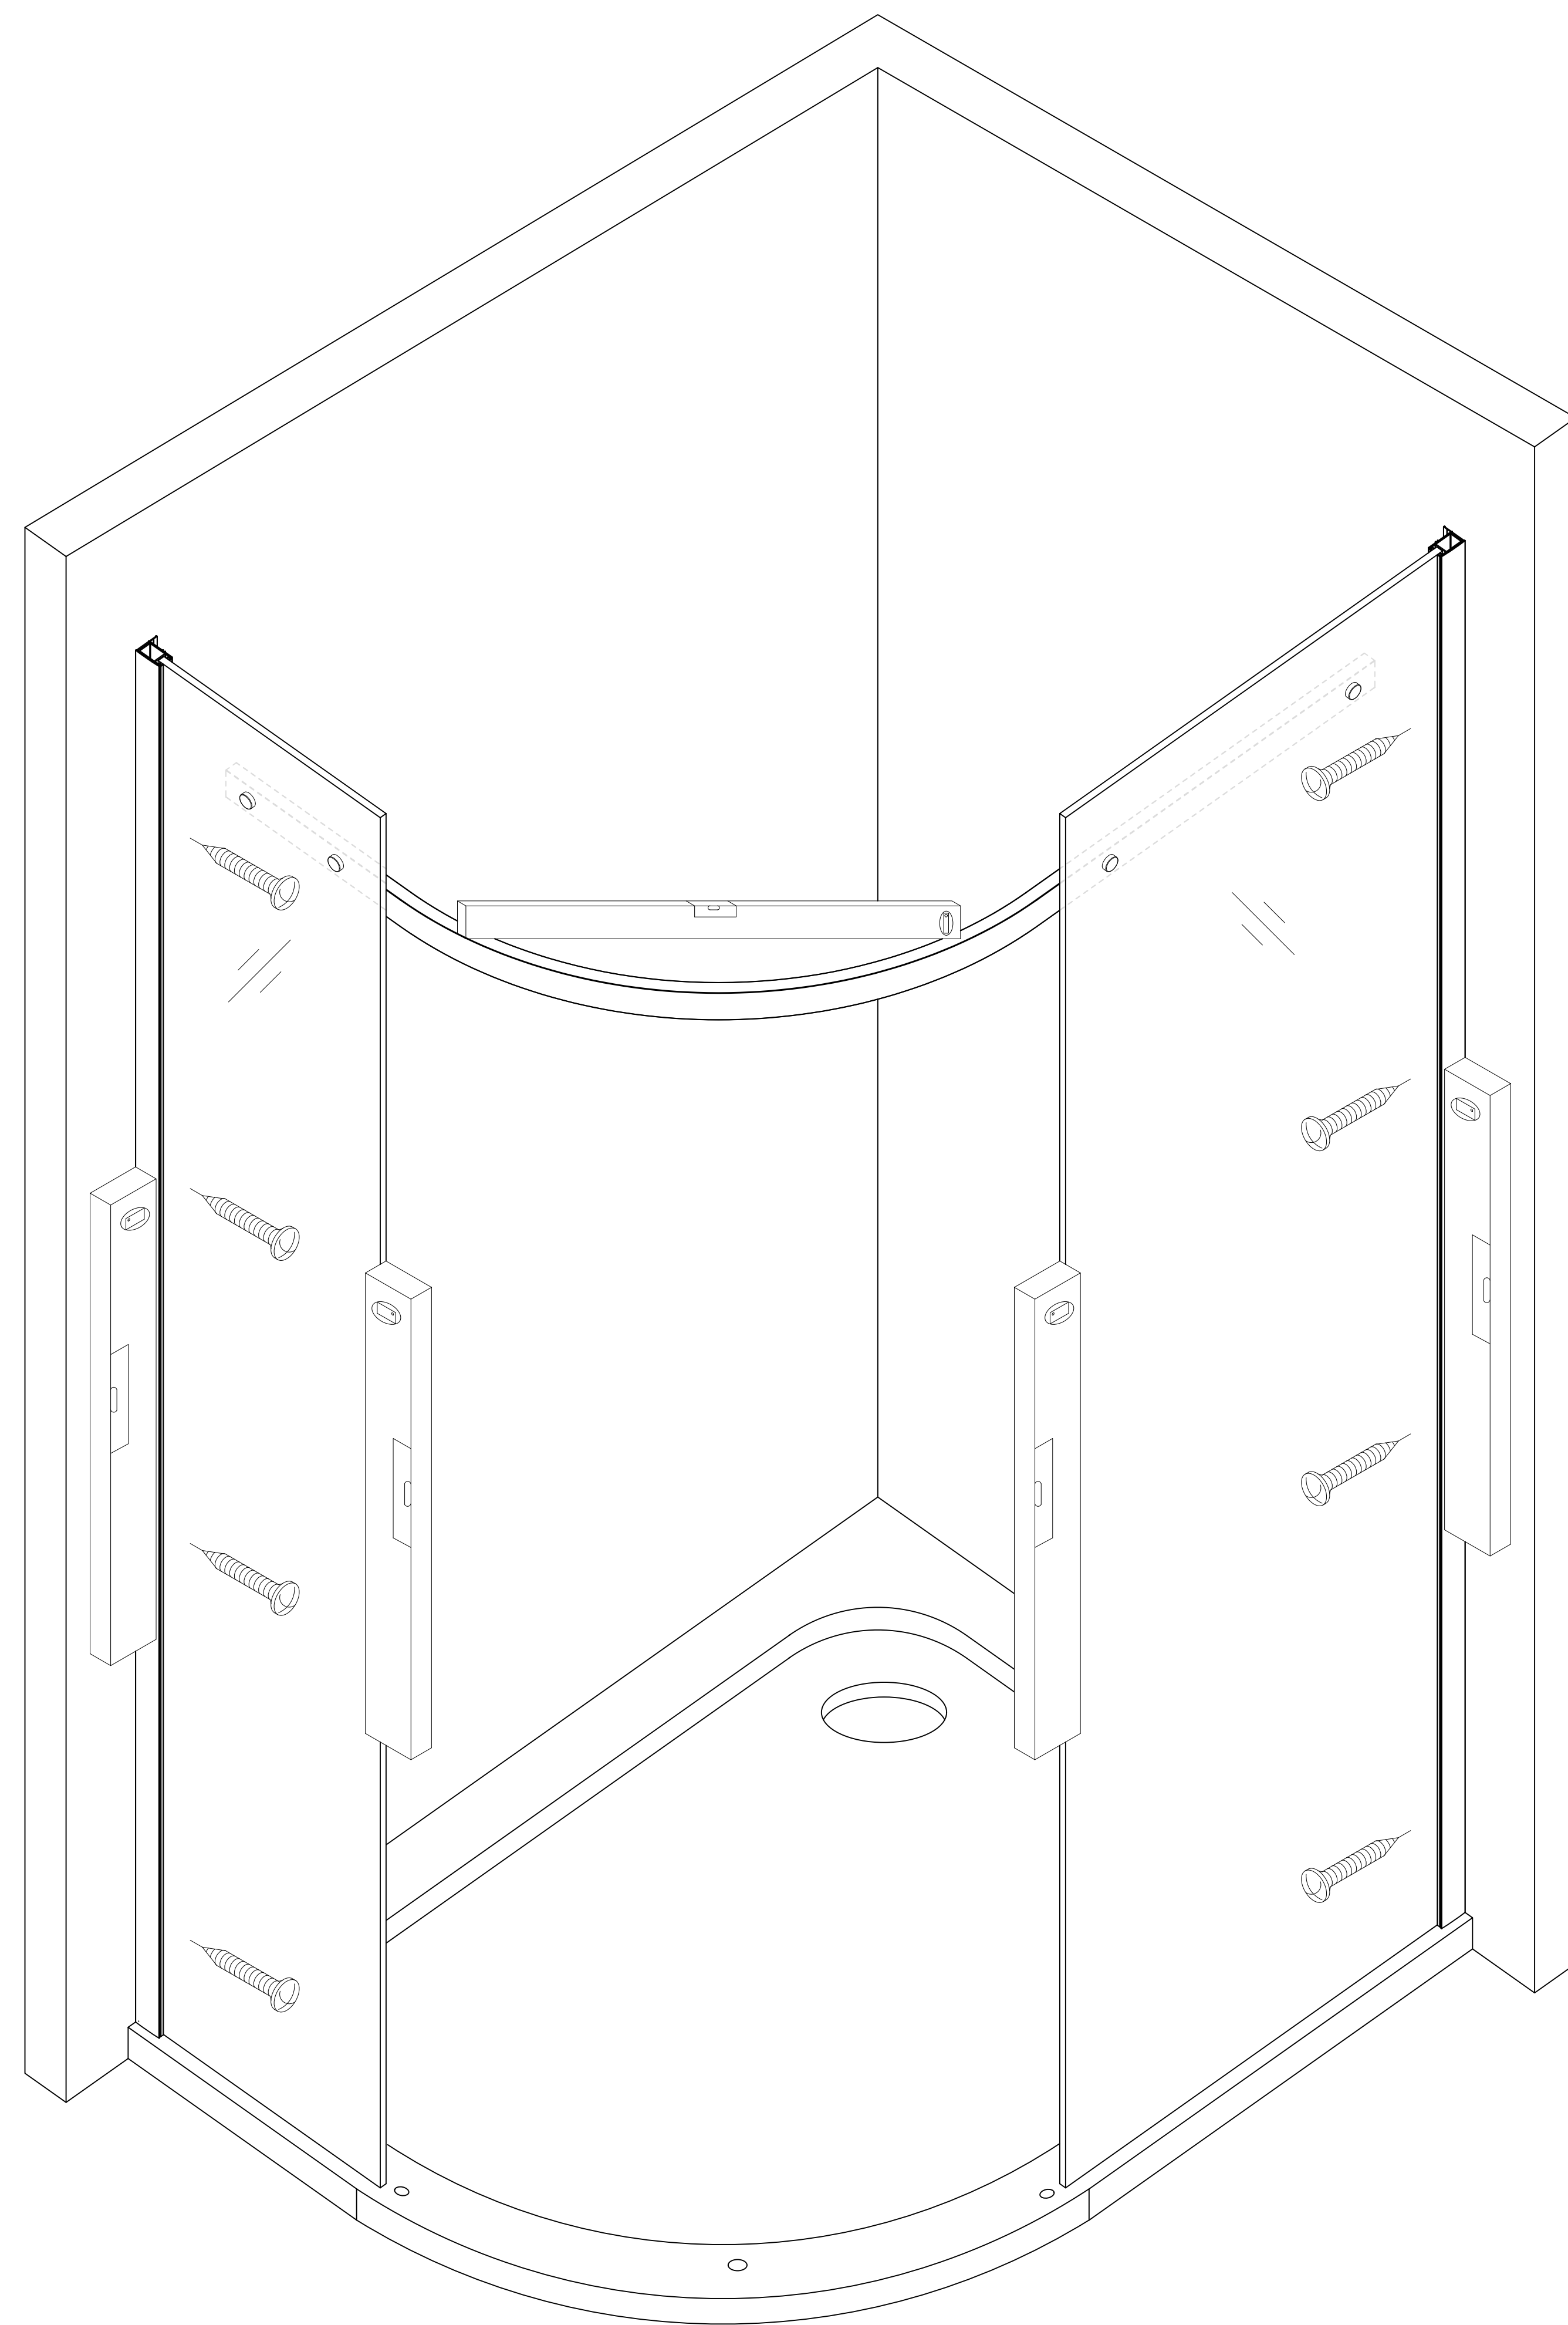


6R

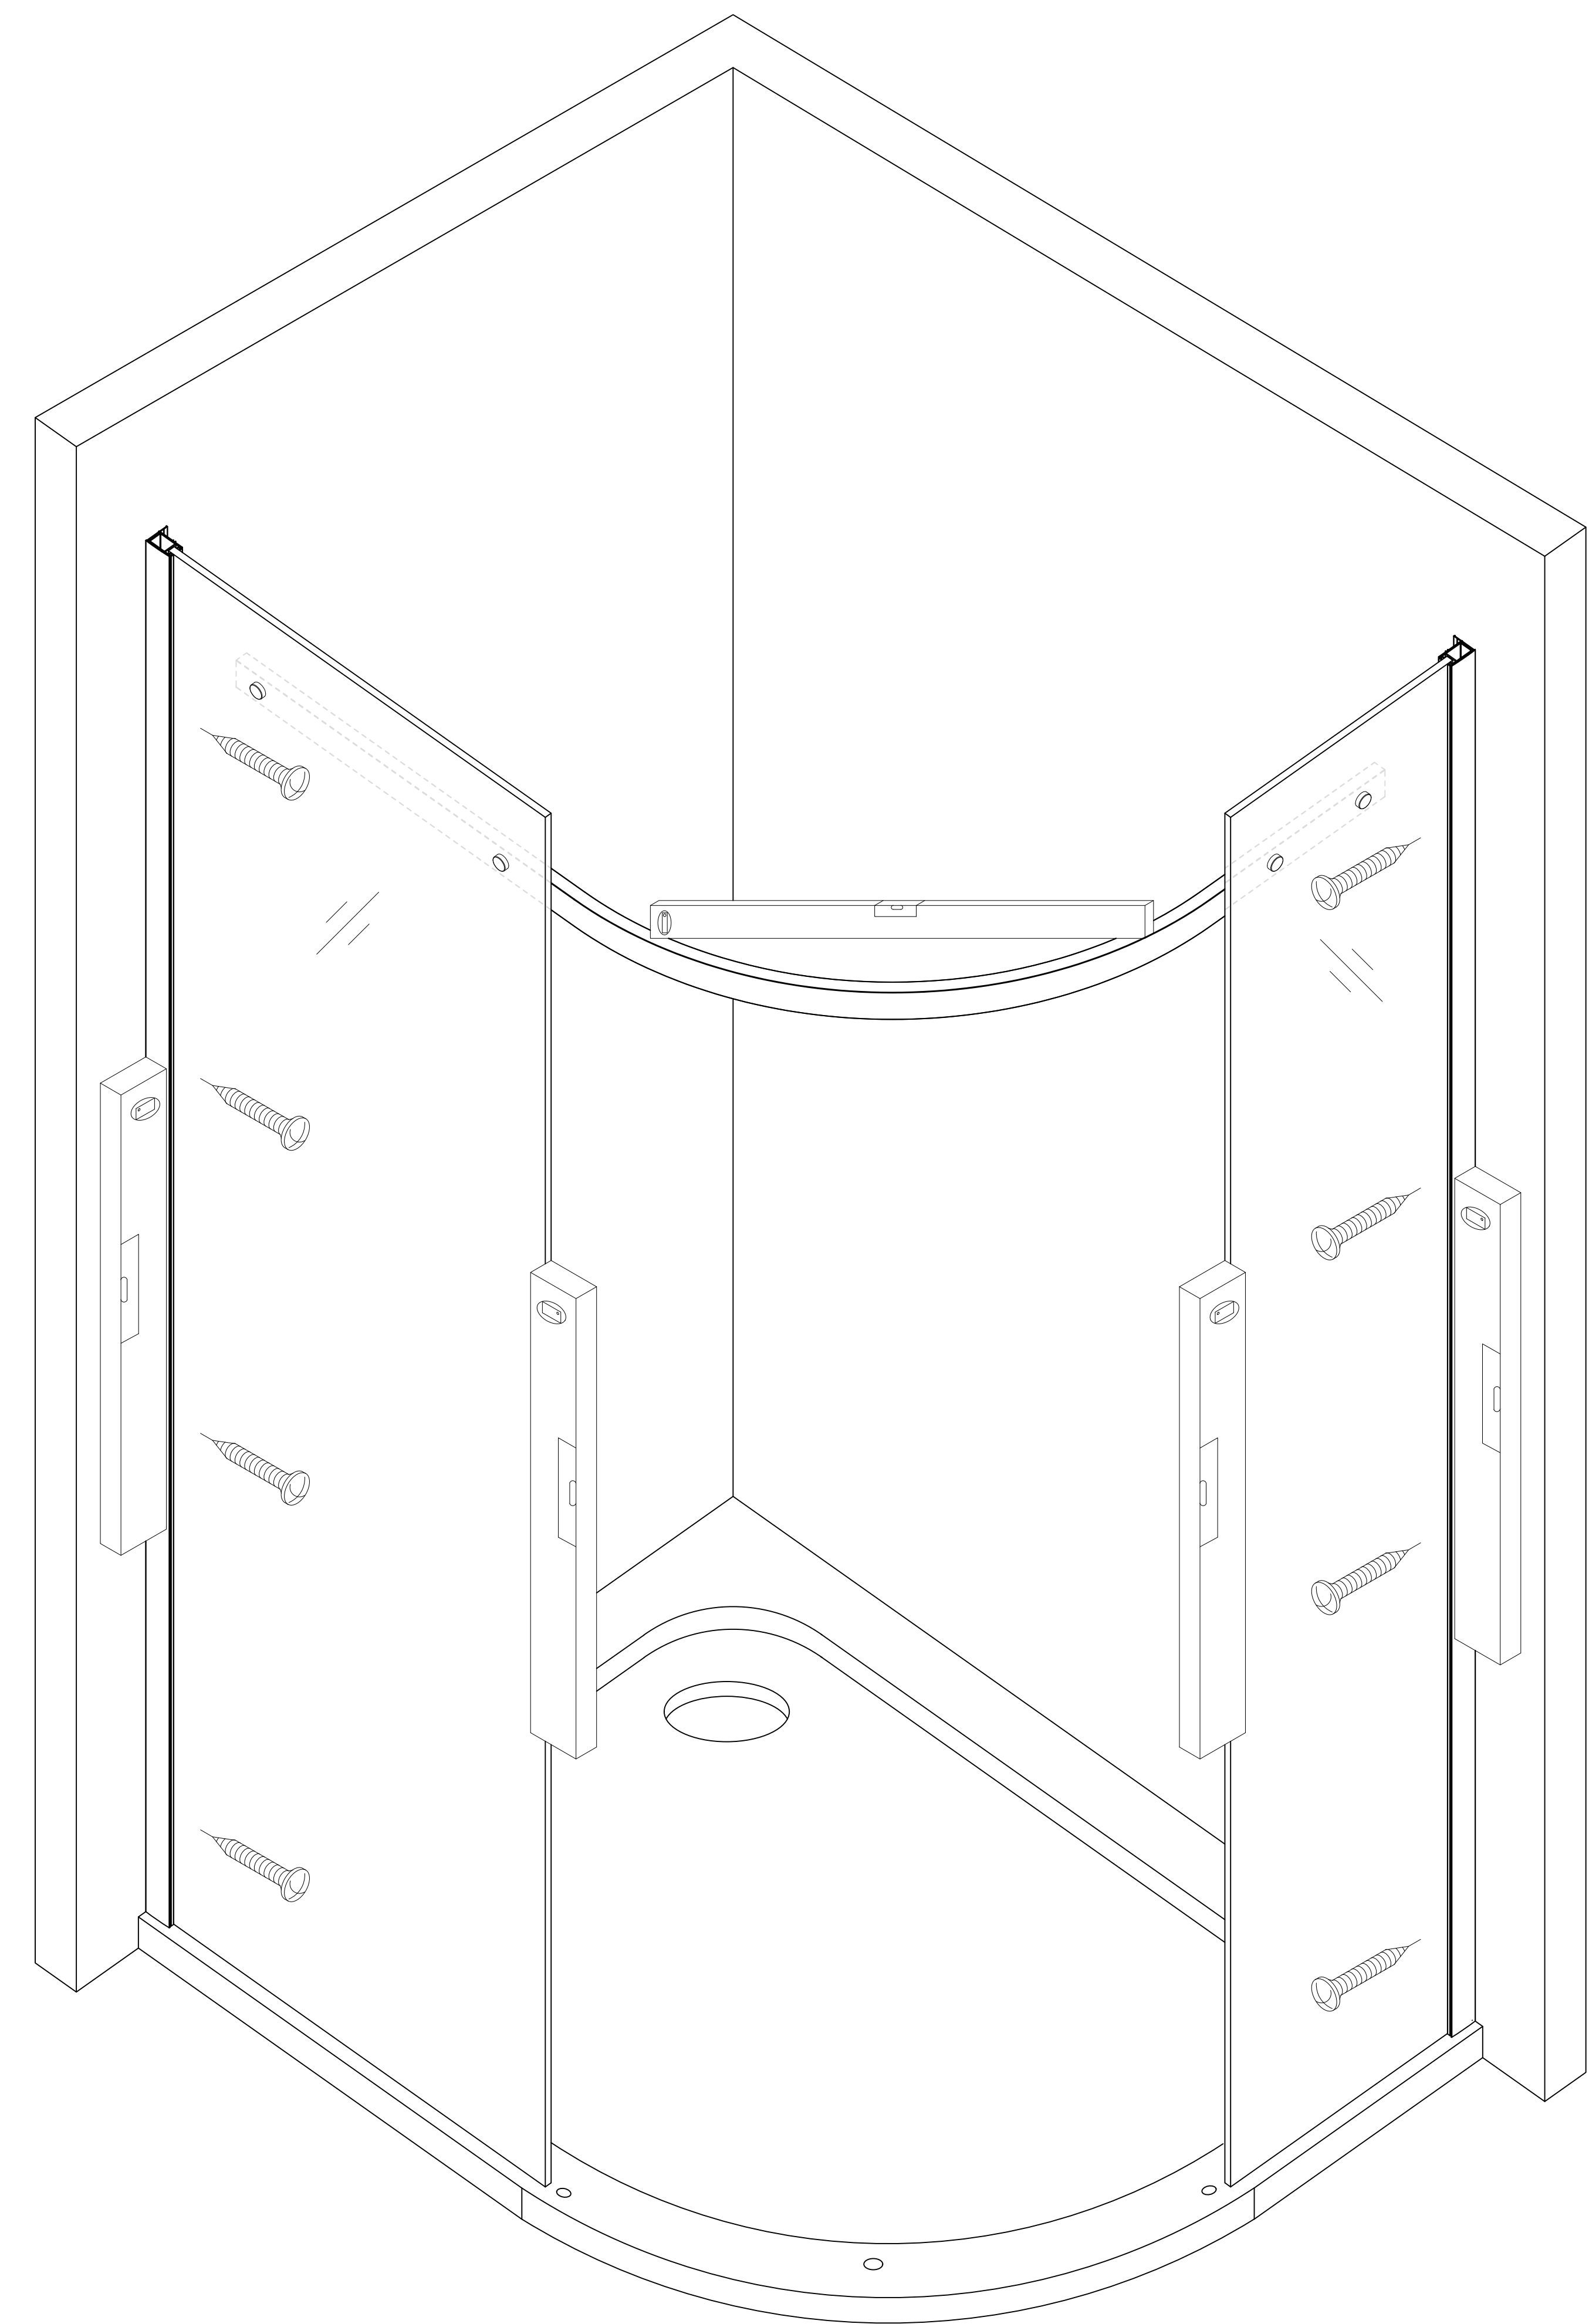

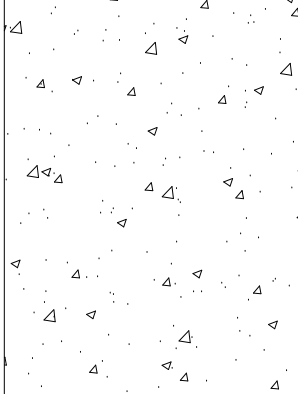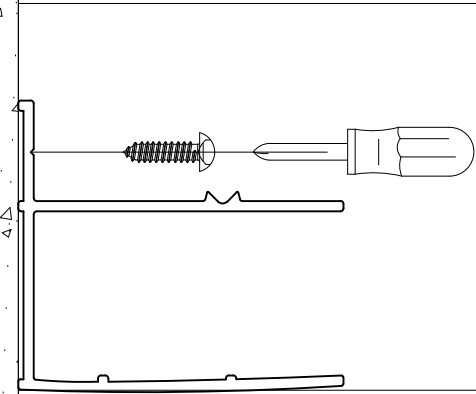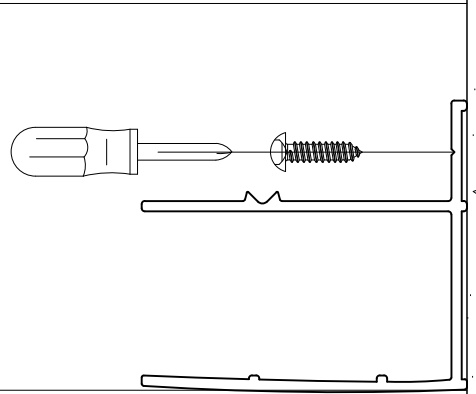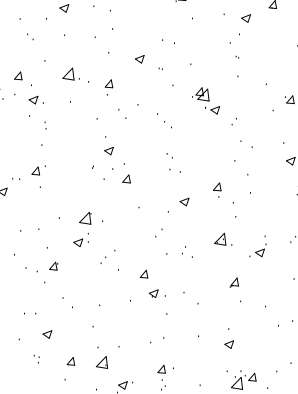
|                                                                                       |                                                                                       |     |     |                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-----|-----|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 6-1                                                                                   | Inside                                                                                | 2x8 | 2x8 | Inside                                                                                | 6-1                                                                                   |
|  |  |     |     |  |  |
| Outside                                                                               | Outside                                                                               |     |     | Outside                                                                               | Outside                                                                               |

7L

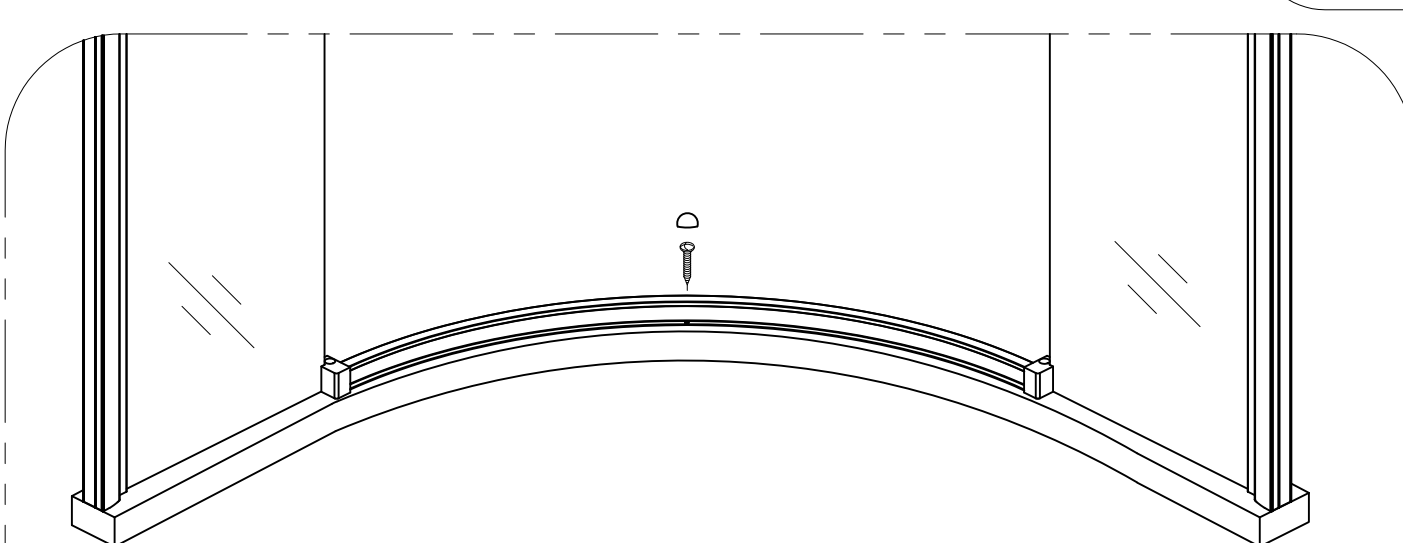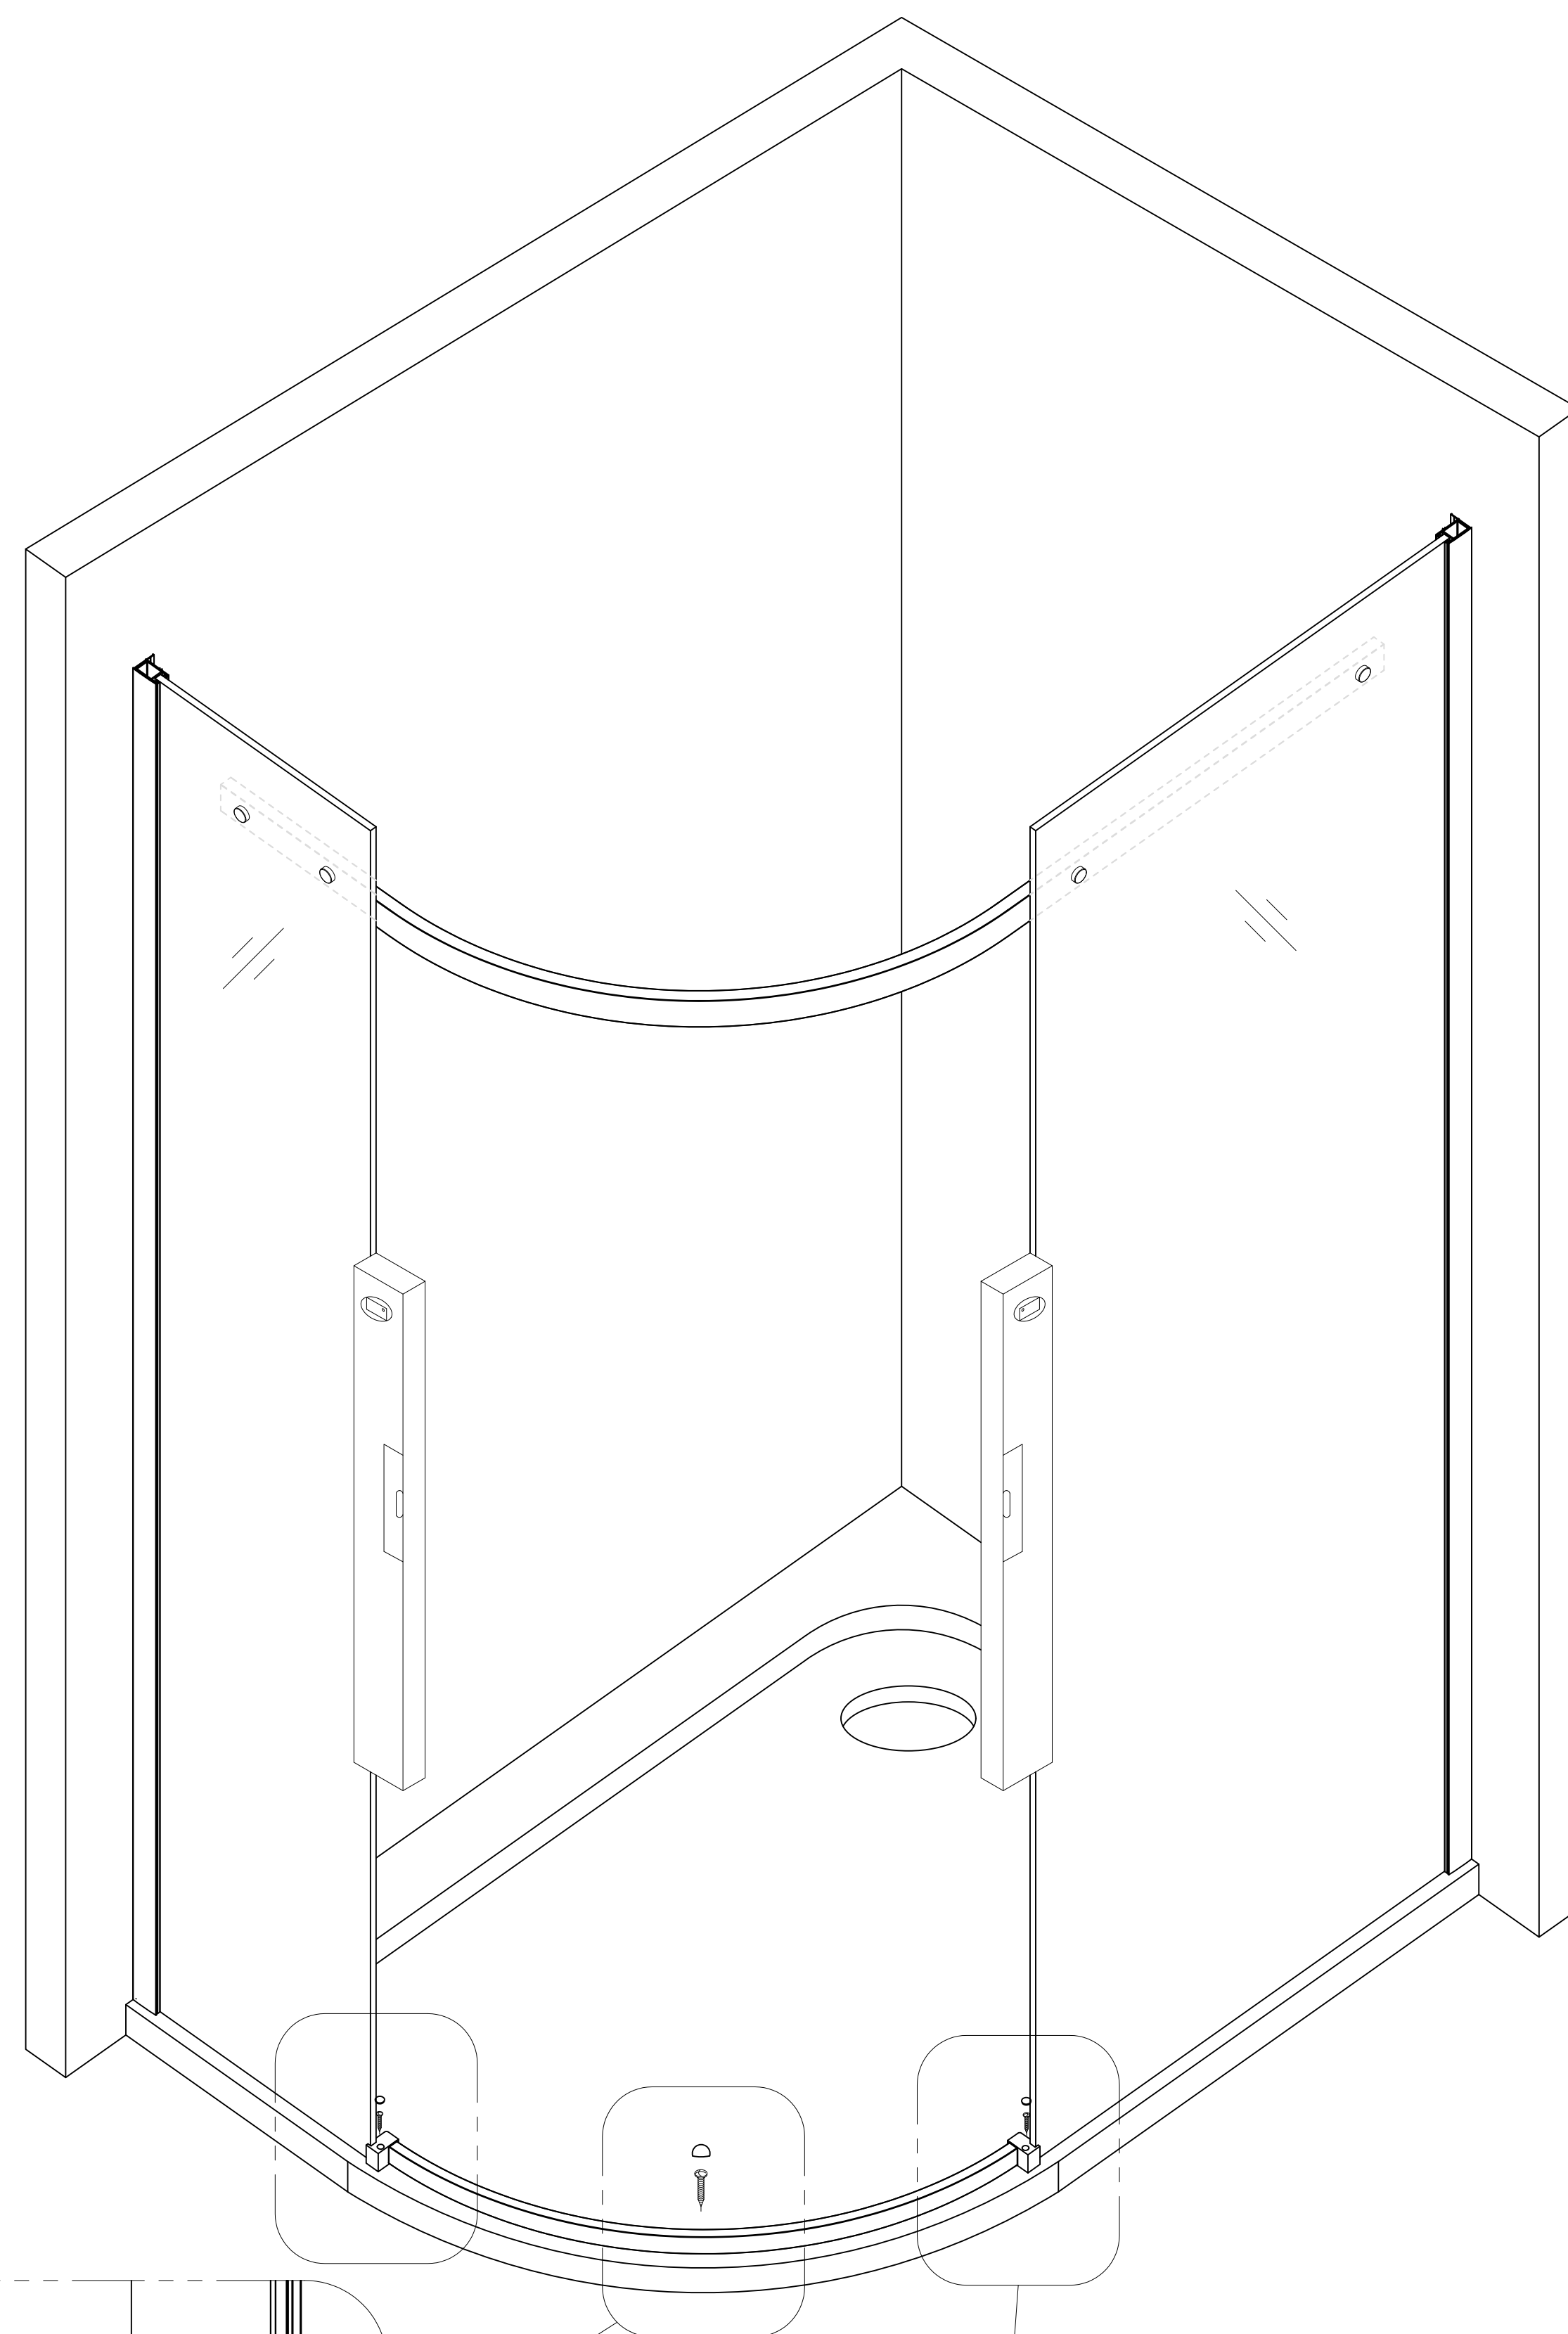


02 x1  
25 x1

If the shower enclosure installed with a tray, please make holes in the tray with  $\Phi 3\text{mm}$  drill and wall plugs are not required;

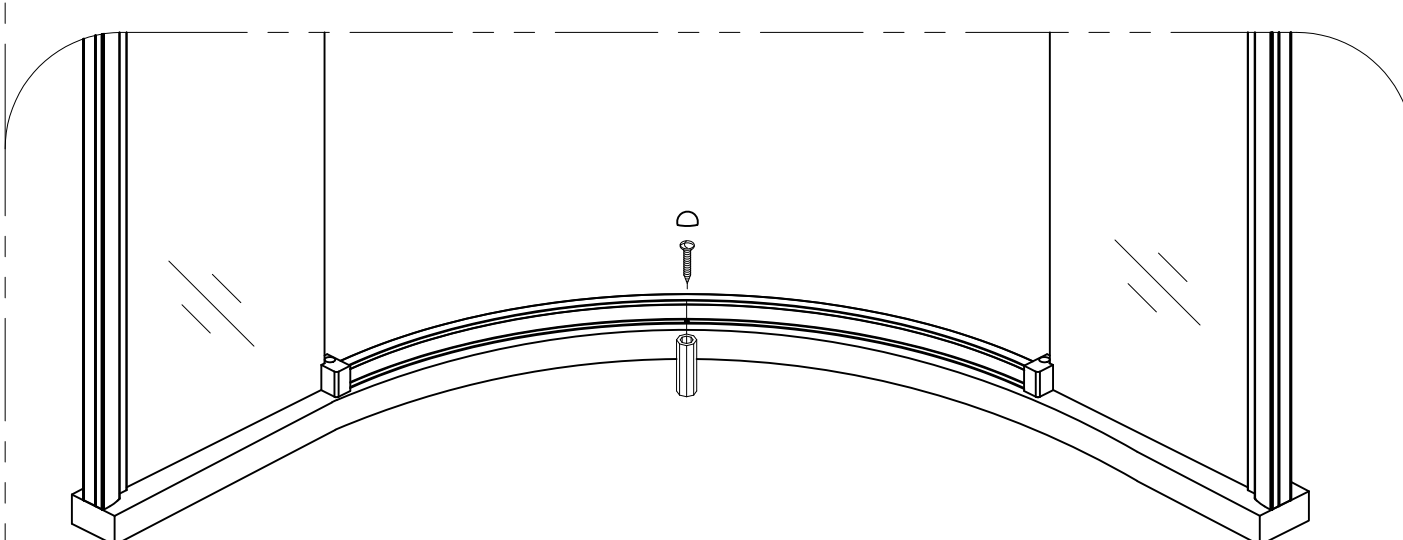


02 x1  
25 x1  
01 x1

If not, please make holes in the floor with  $\Phi 6\text{mm}$  drill and wall plugs are required;

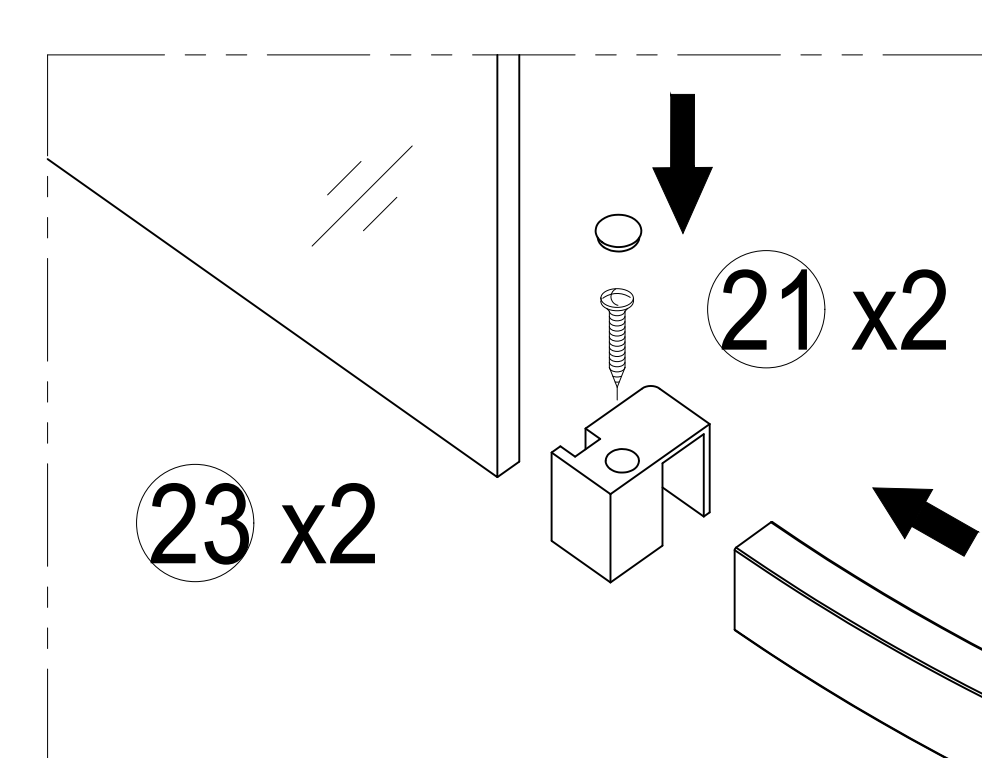

21 x2  
23 x2

If the shower enclosure installed with a tray, please make holes in the tray with  $\Phi 3\text{mm}$  drill and wall plugs are not required;


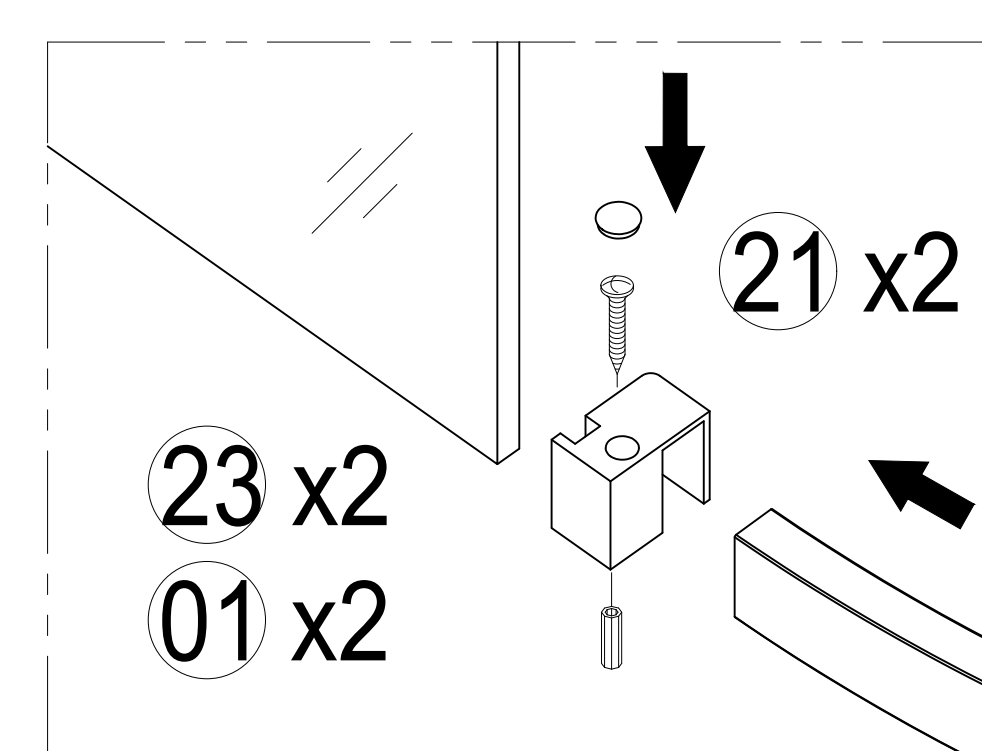


21 x2  
23 x2  
01 x2

If not, please make holes in the floor with  $\Phi 6\text{mm}$  drill and wall plugs are required;


Install panels + frame ensuring fixing for bottom frame are screwed to the tray.

7R

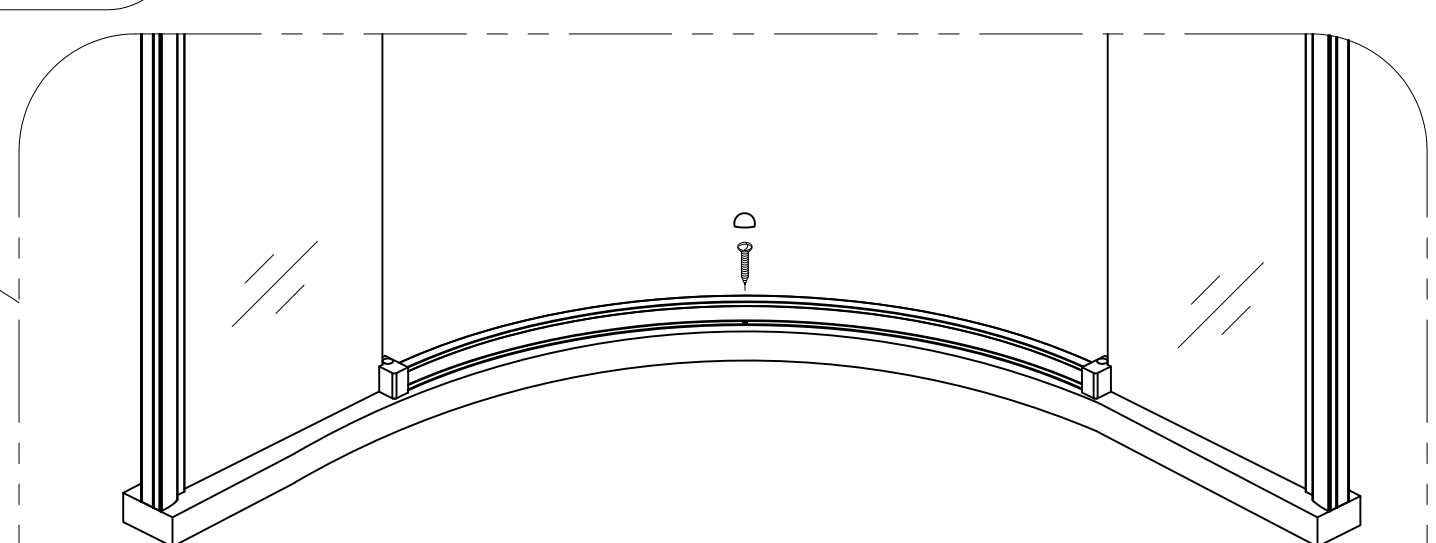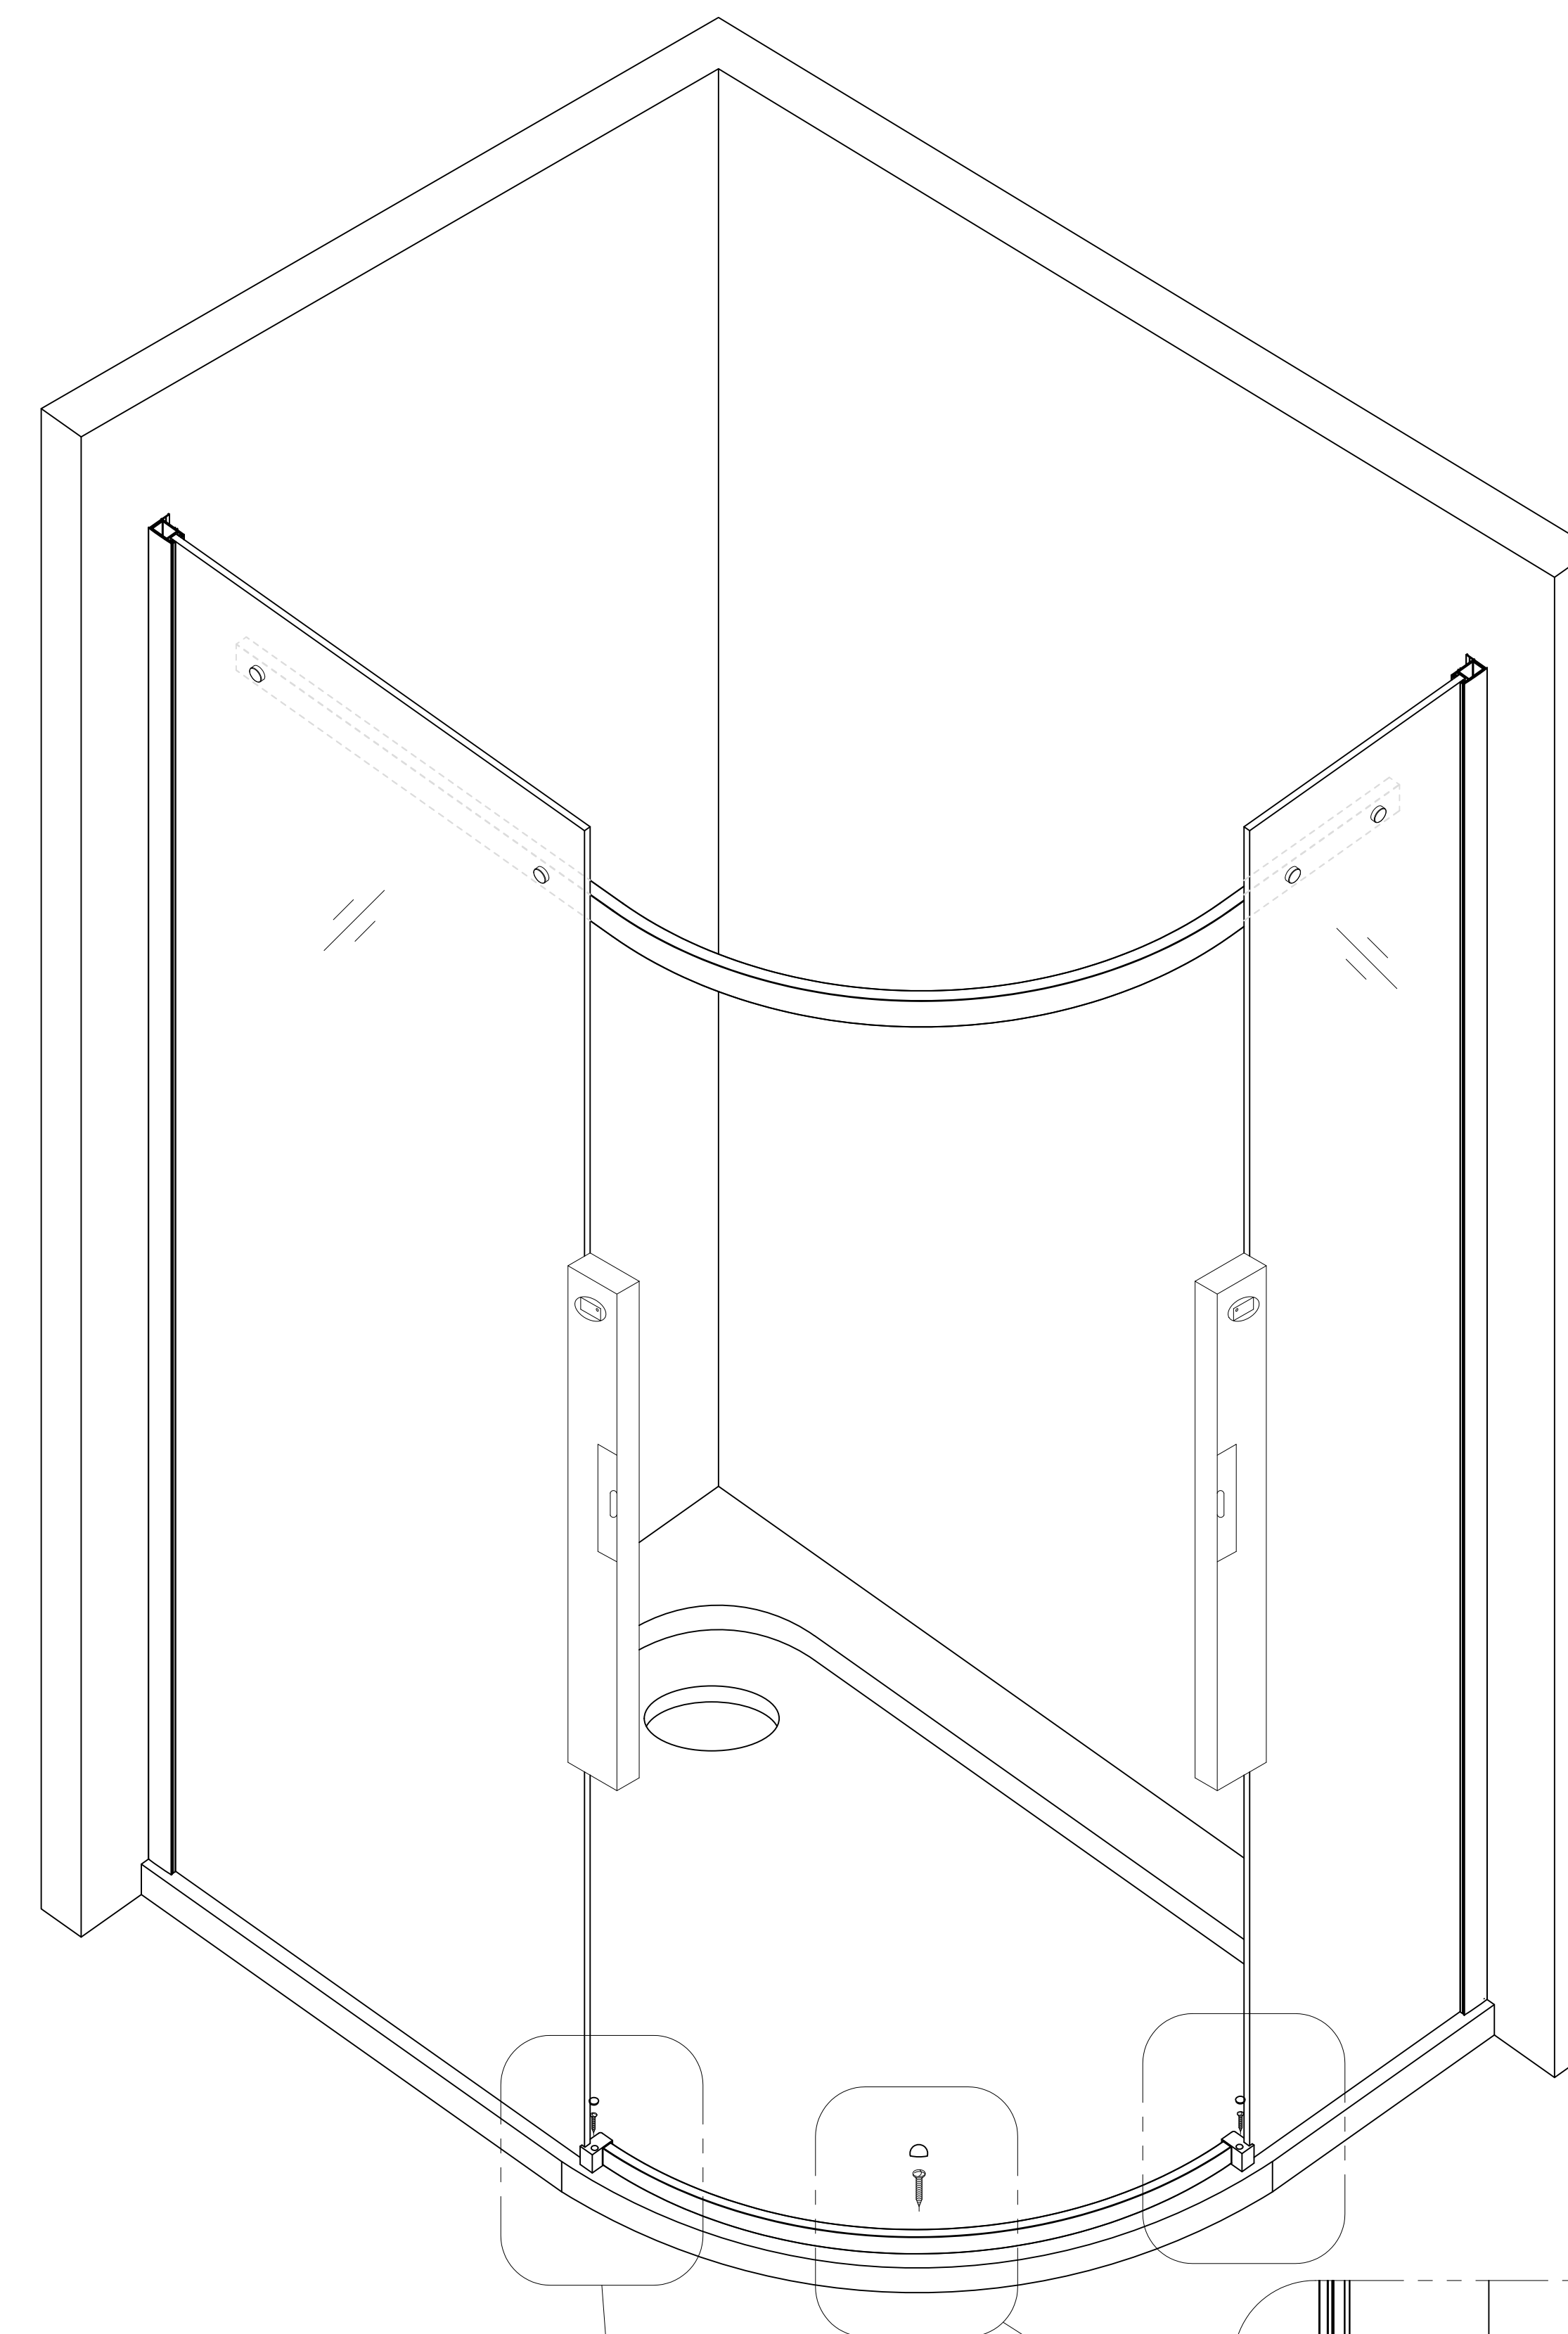


02 x1  
25 x1

If the shower enclosure installed with a tray, please make holes in the tray with  $\Phi 3\text{mm}$  drill and wall plugs are not required;

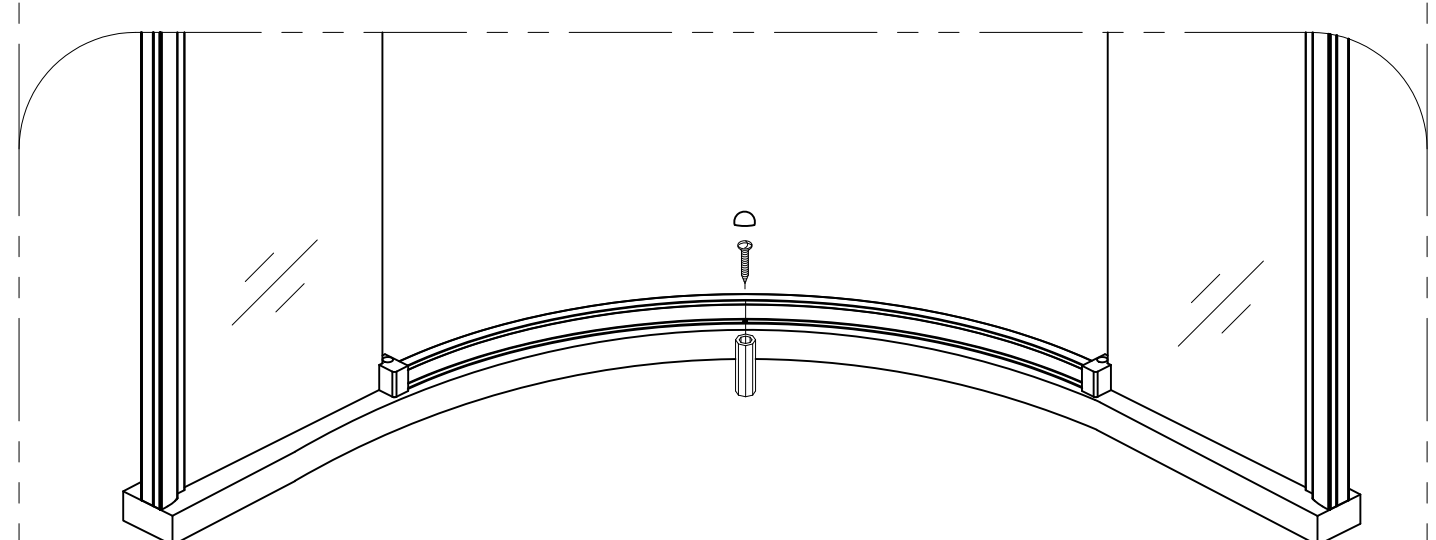


02 x1  
25 x1  
01 x1

If not, please make holes in the floor with  $\Phi 6\text{mm}$  drill and wall plugs are required;

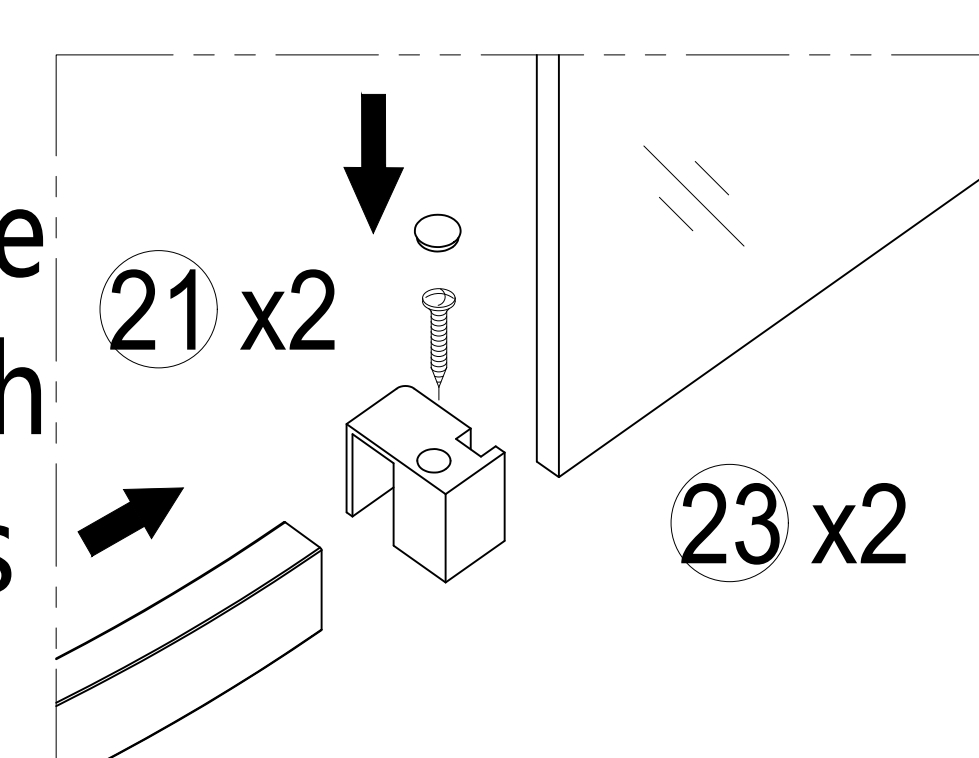

21 x2  
23 x2

If the shower enclosure installed with a tray, please make holes in the tray with  $\Phi 3\text{mm}$  drill and wall plugs are not required;

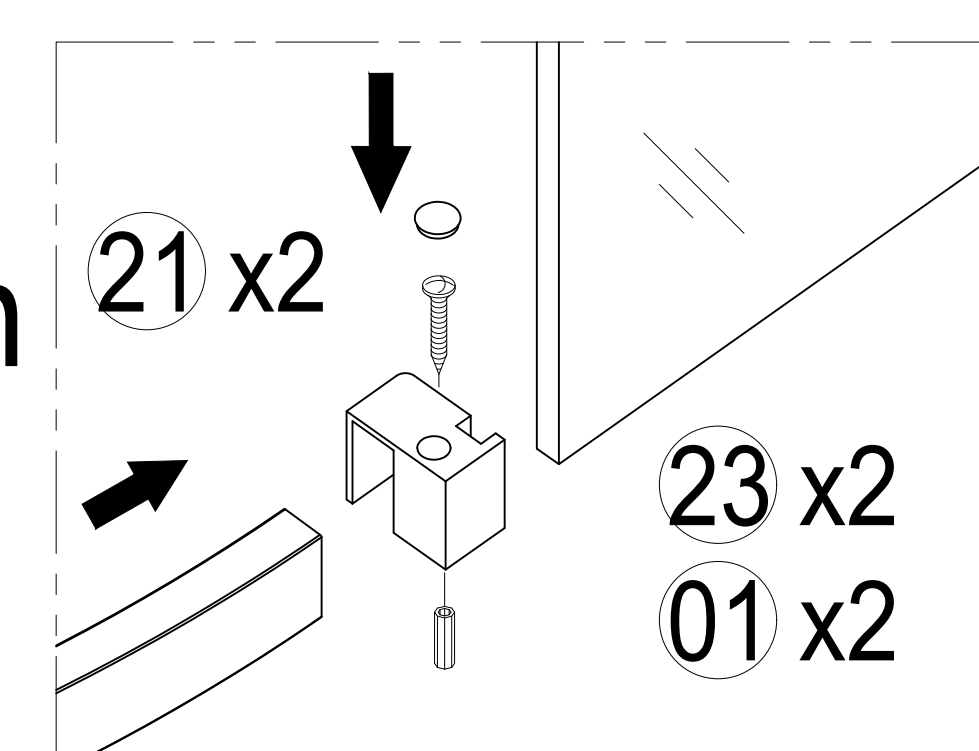

21 x2  
23 x2  
01 x2

If not, please make holes in the floor with  $\Phi 6\text{mm}$  drill and wall plugs are required;


Install panels + frame ensuring fixing for bottom frame are screwed to the tray.

8L

Pls don't fully  
tighten the roller  
screws.

15 x4

This side  
faces  
downward

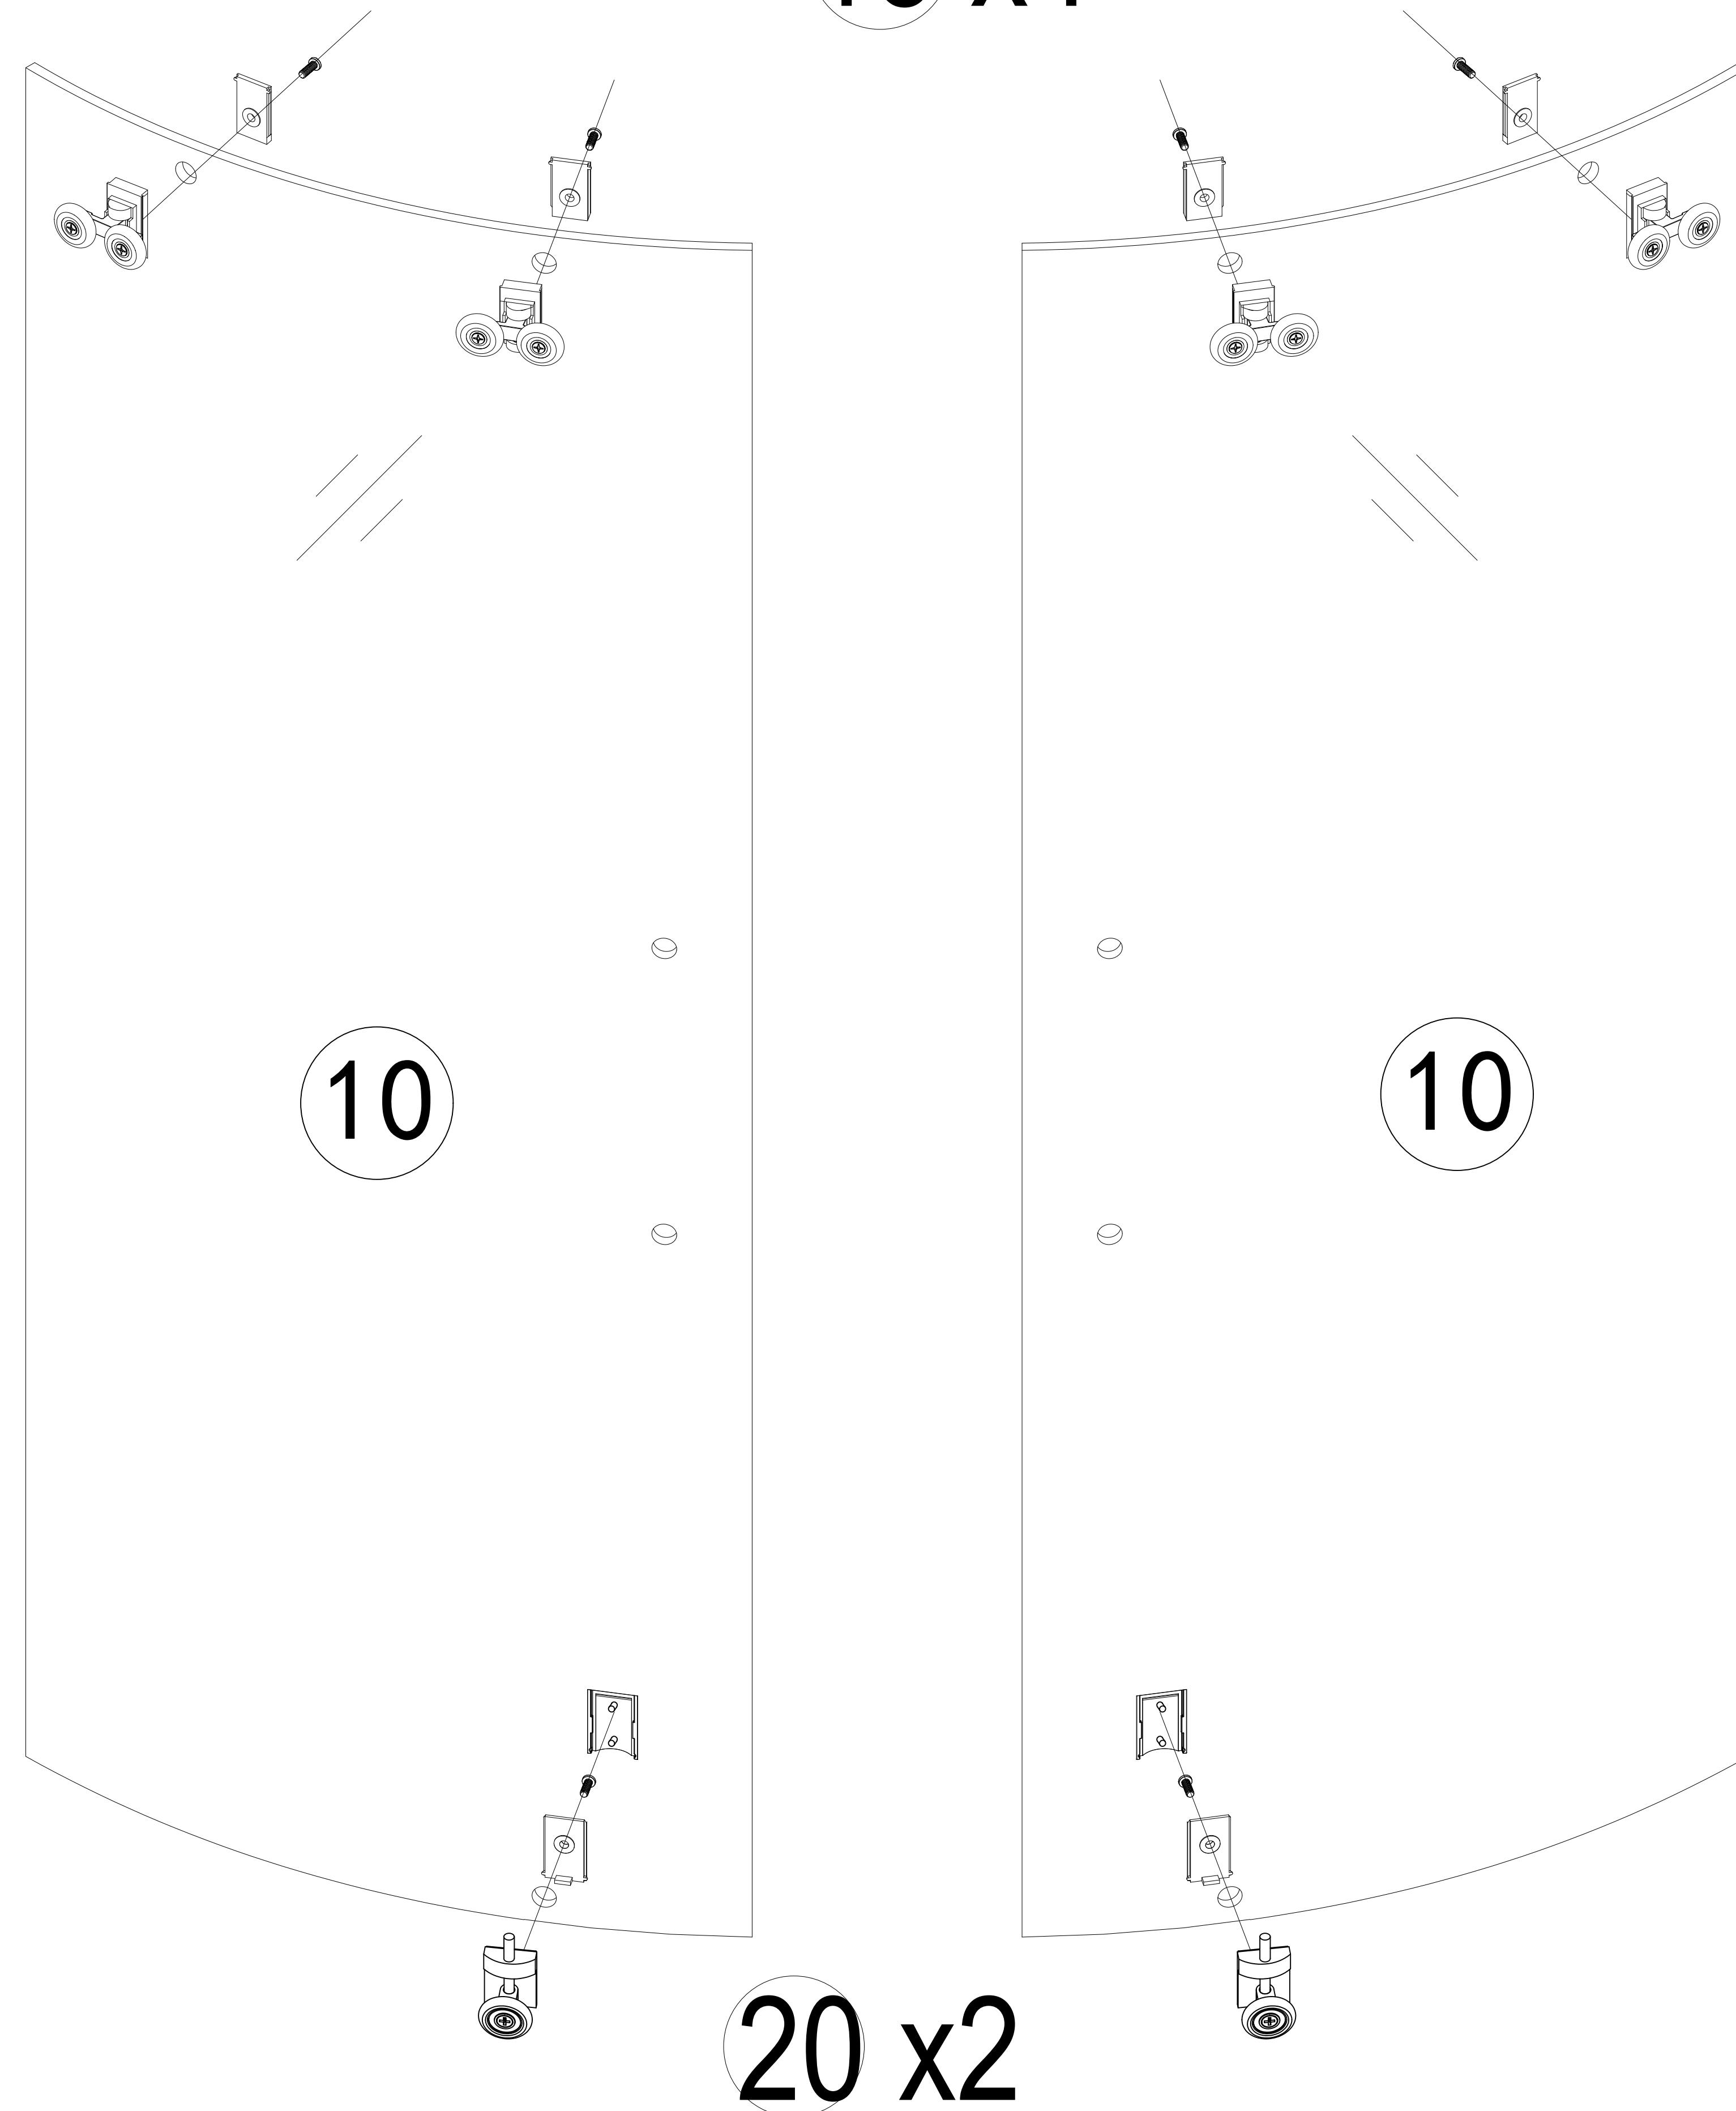


Fit rollers to door

8R

Pls don't fully  
tighten the roller  
screws.


15 x4

This side  
faces  
downward

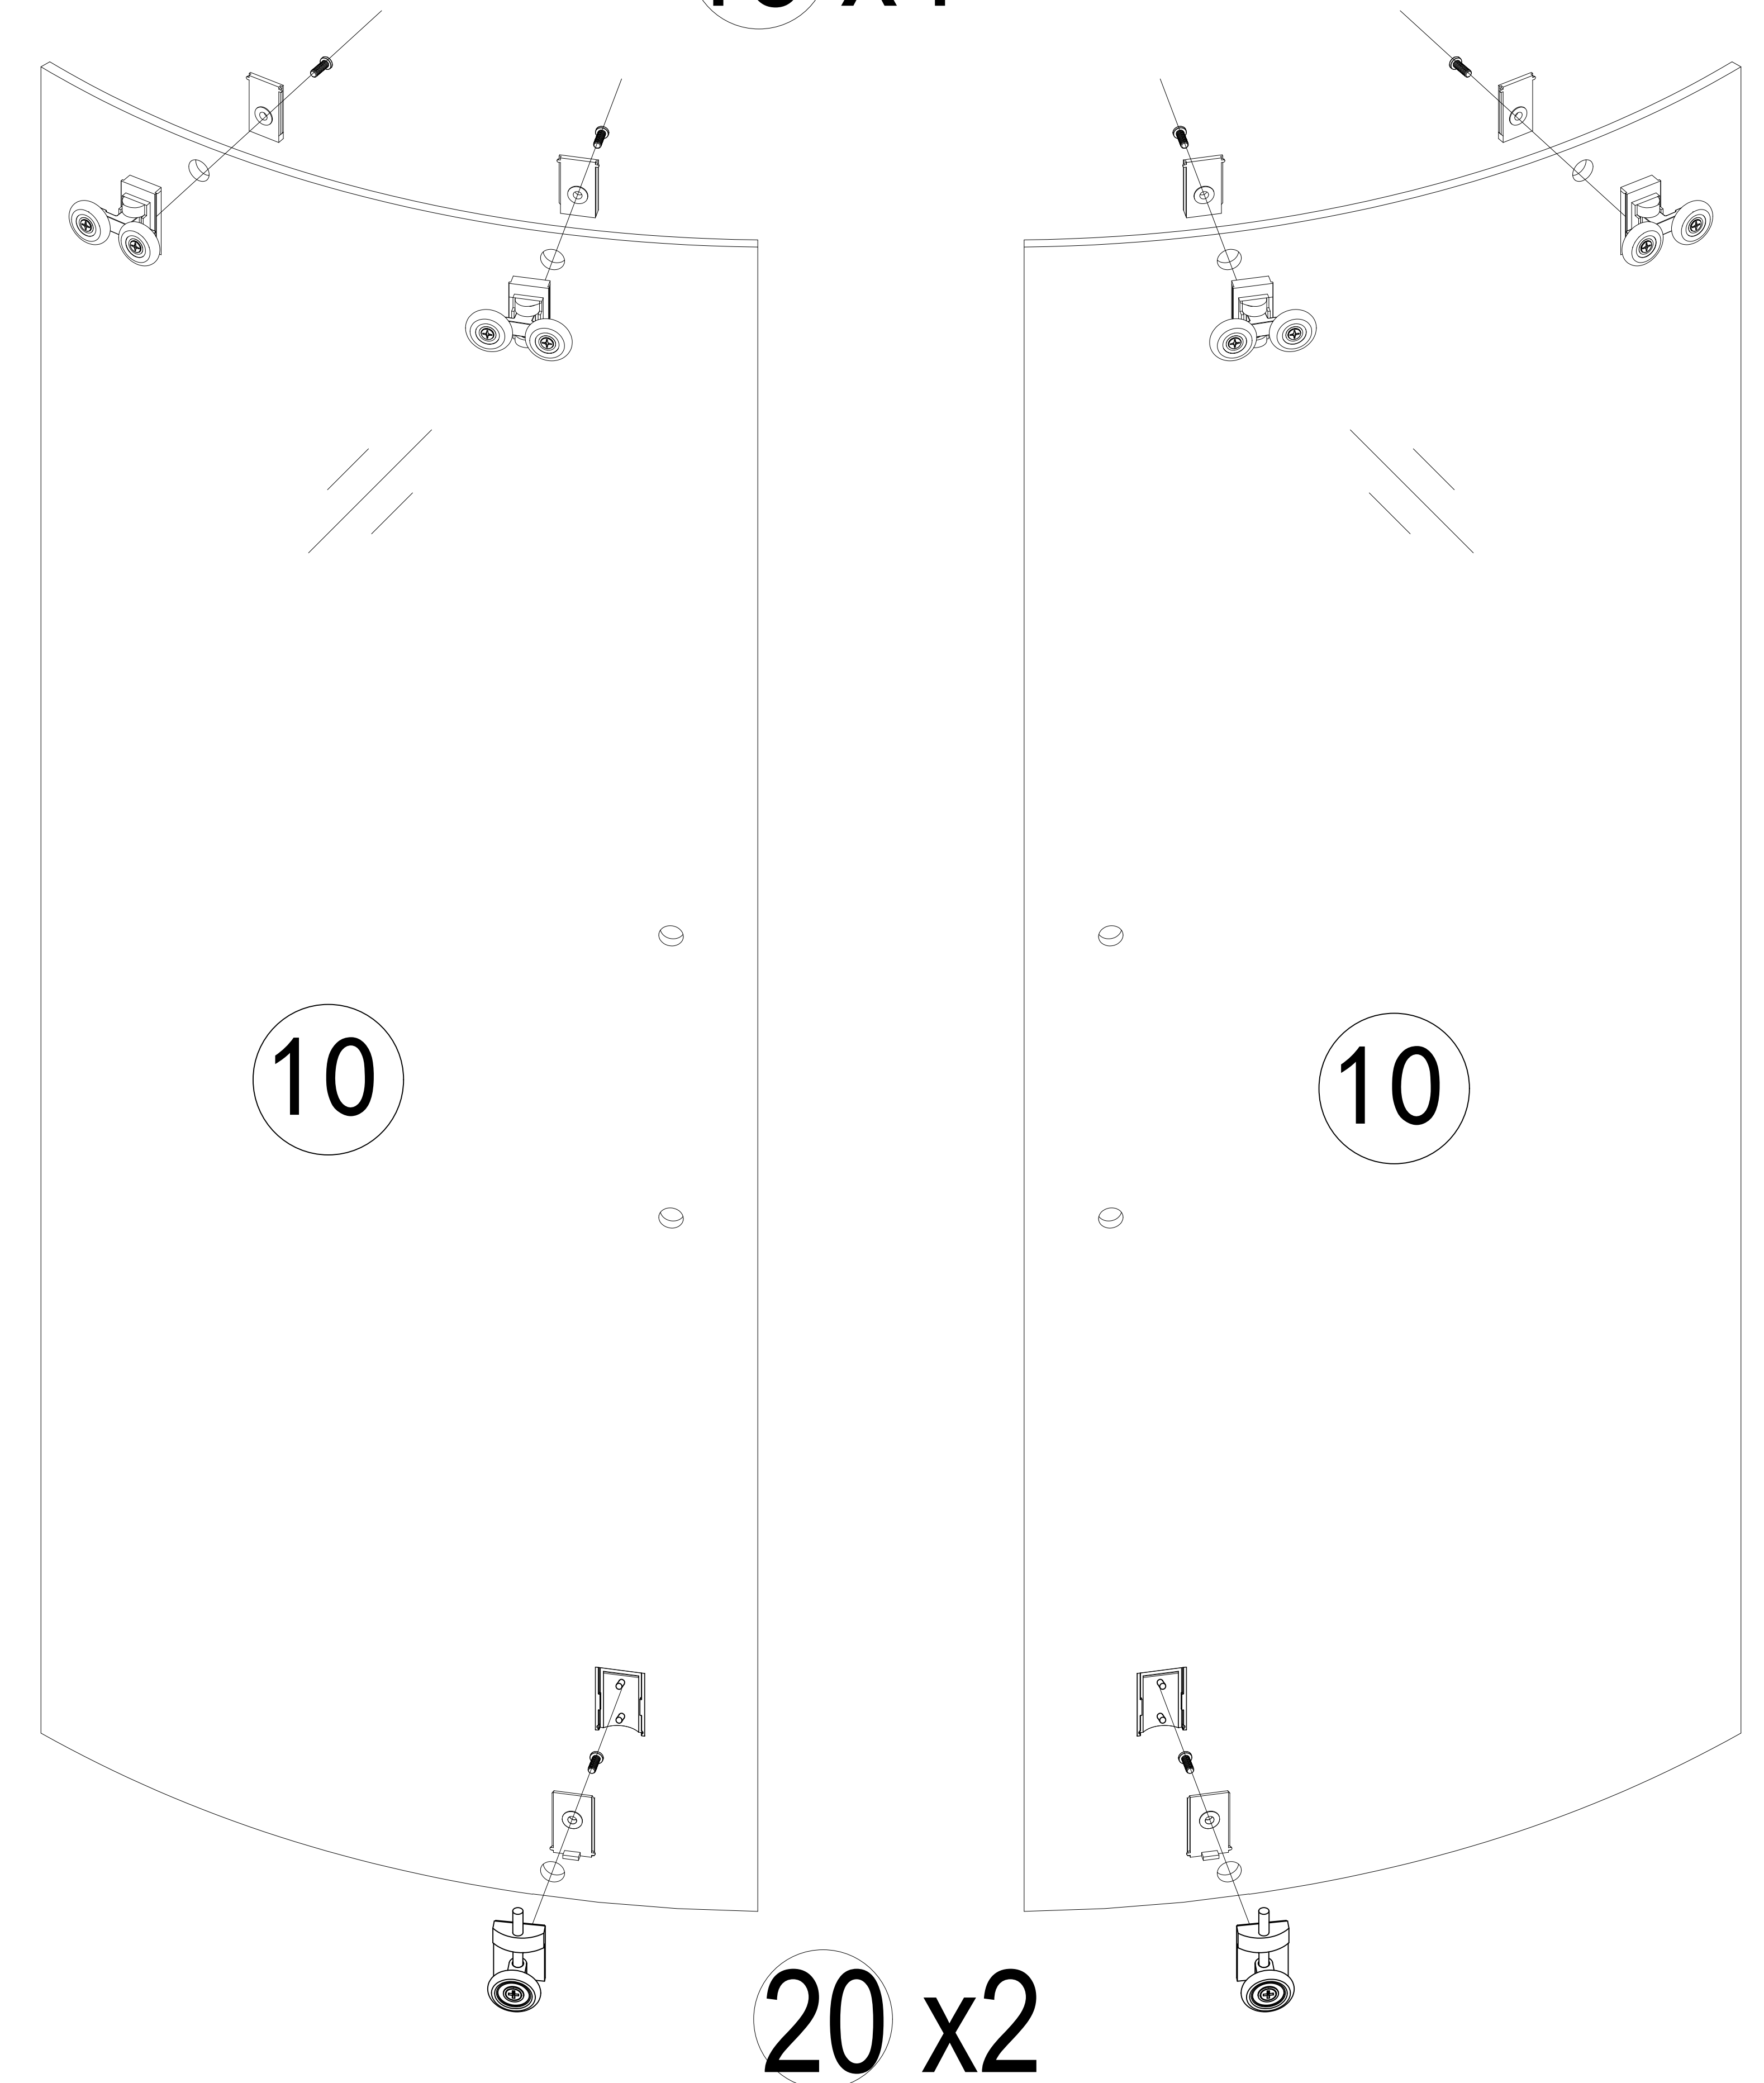


Fit rollers to door


9L

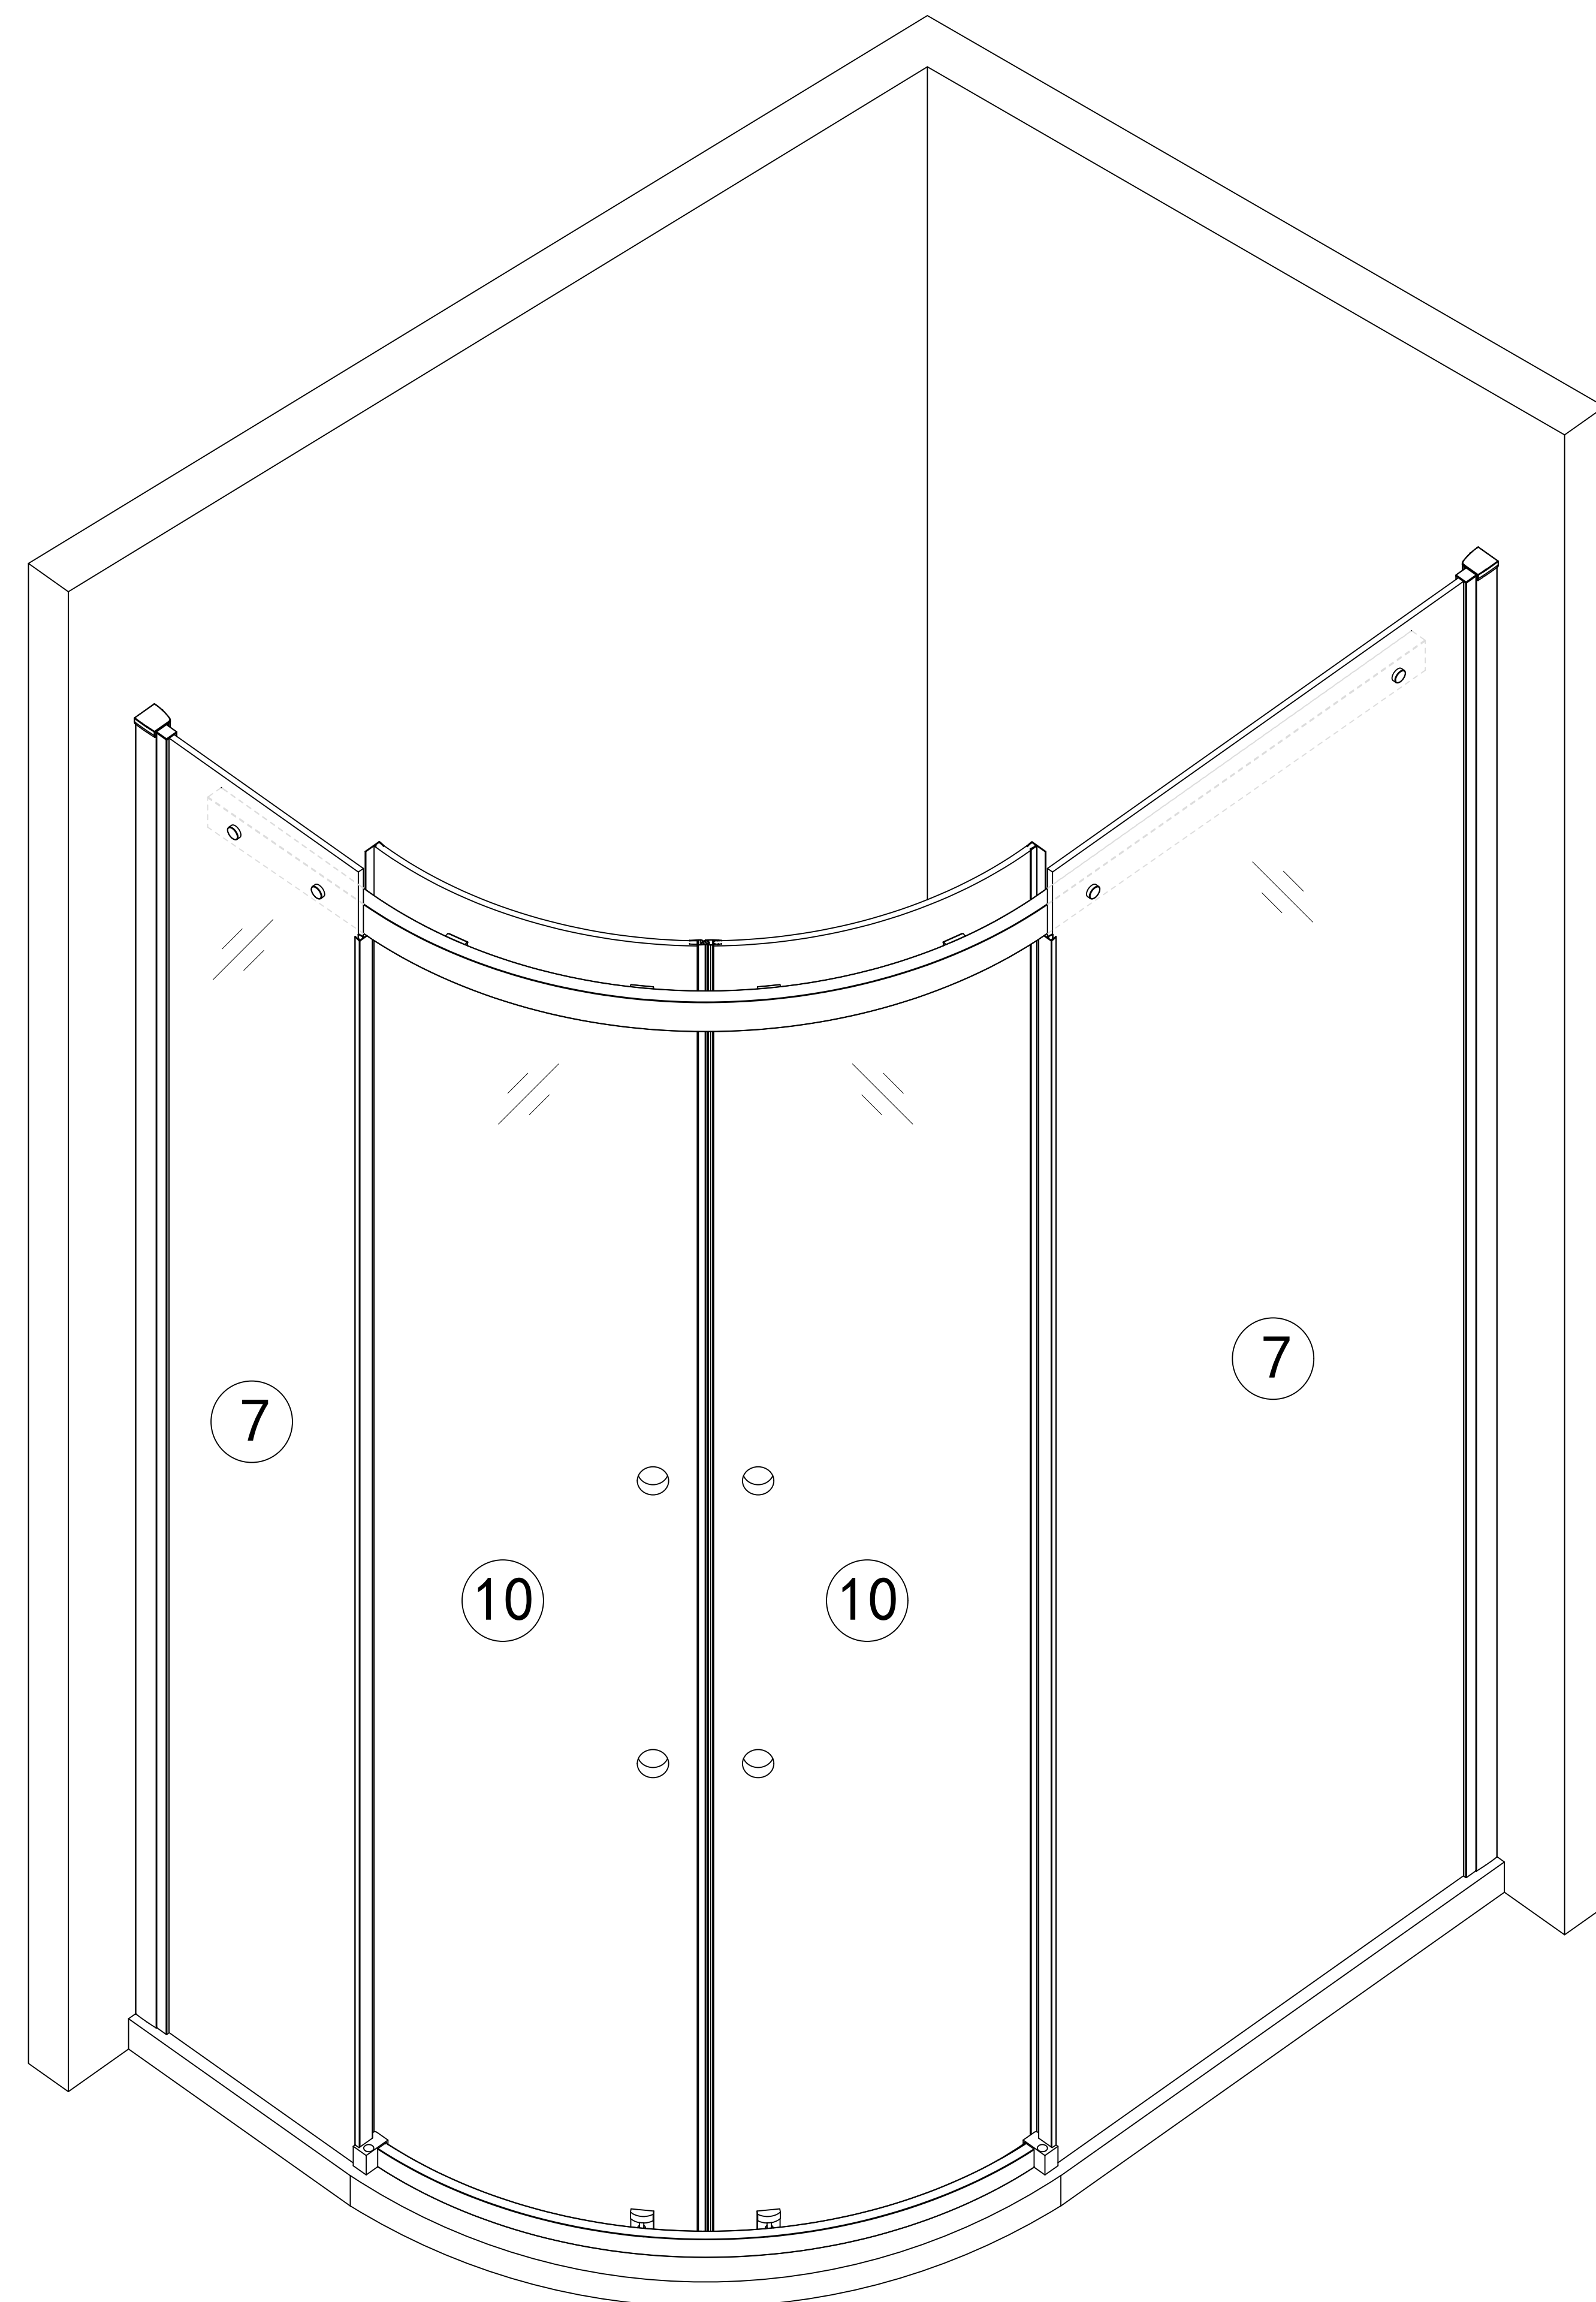


9R

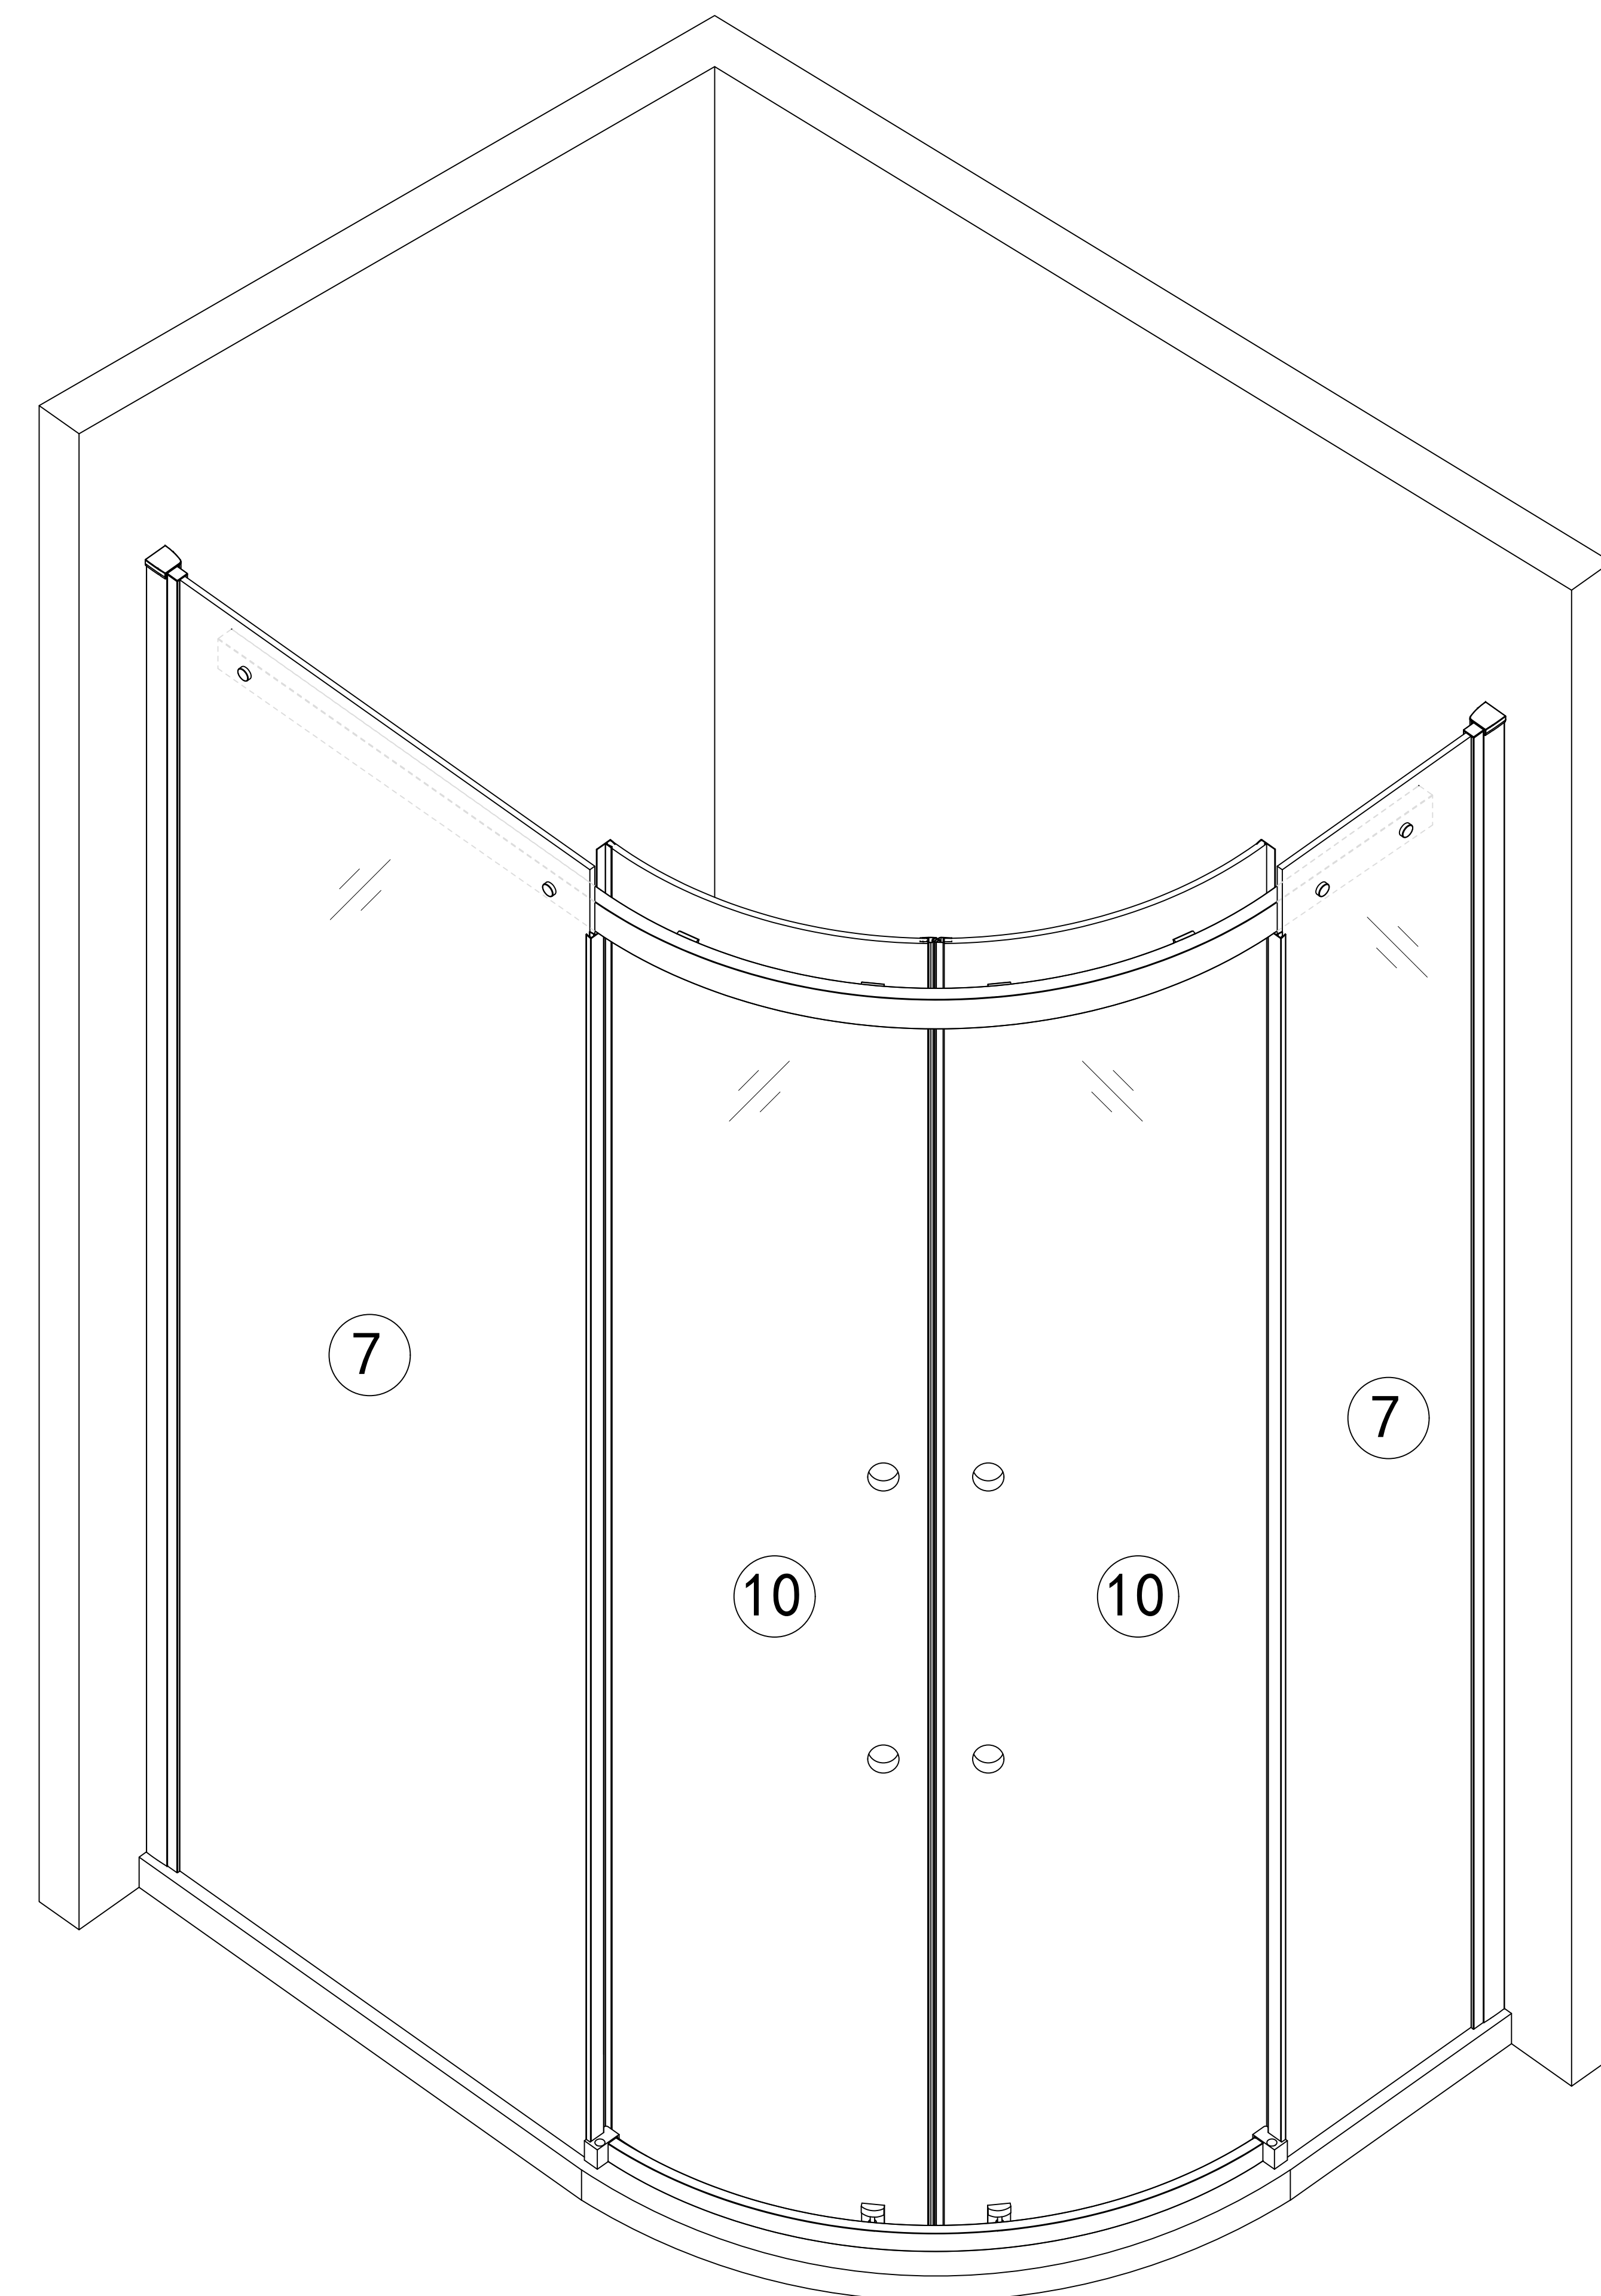


9-1

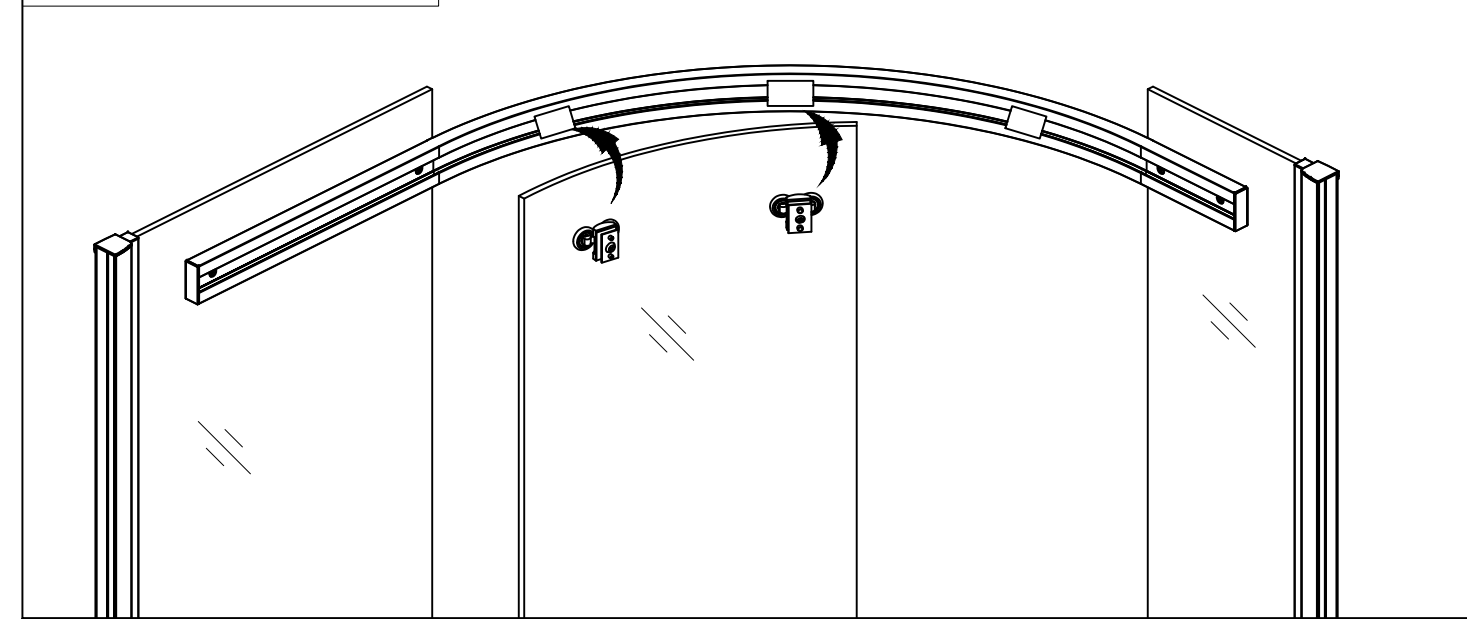

9-2

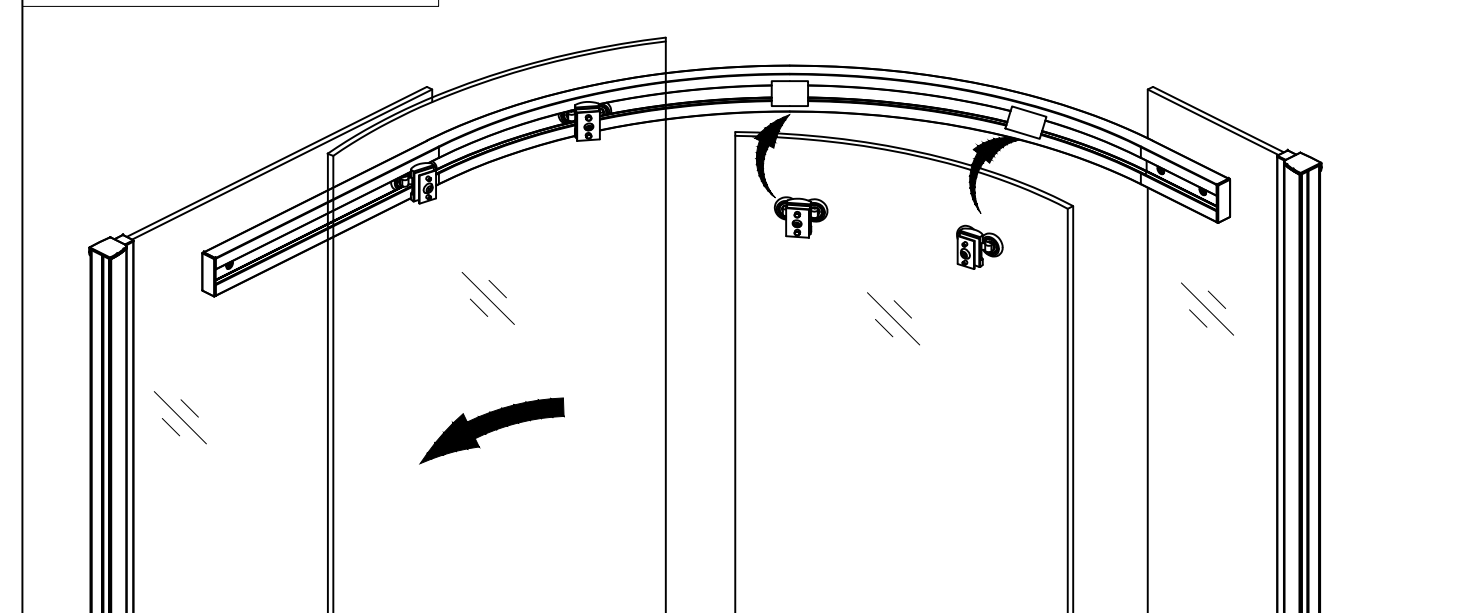


Fit doors onto frame

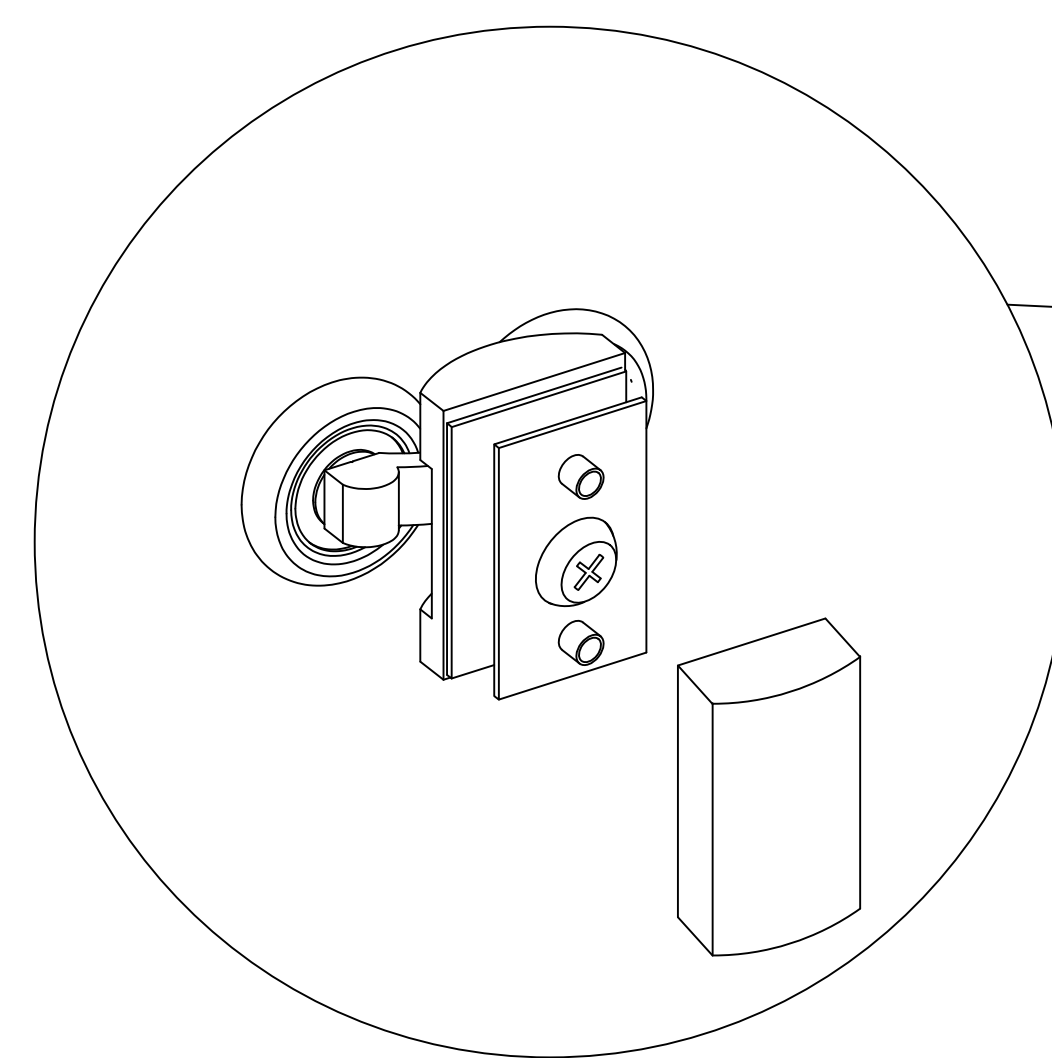


9-3

Pls make sure the rollers are level before well tightened the screws.

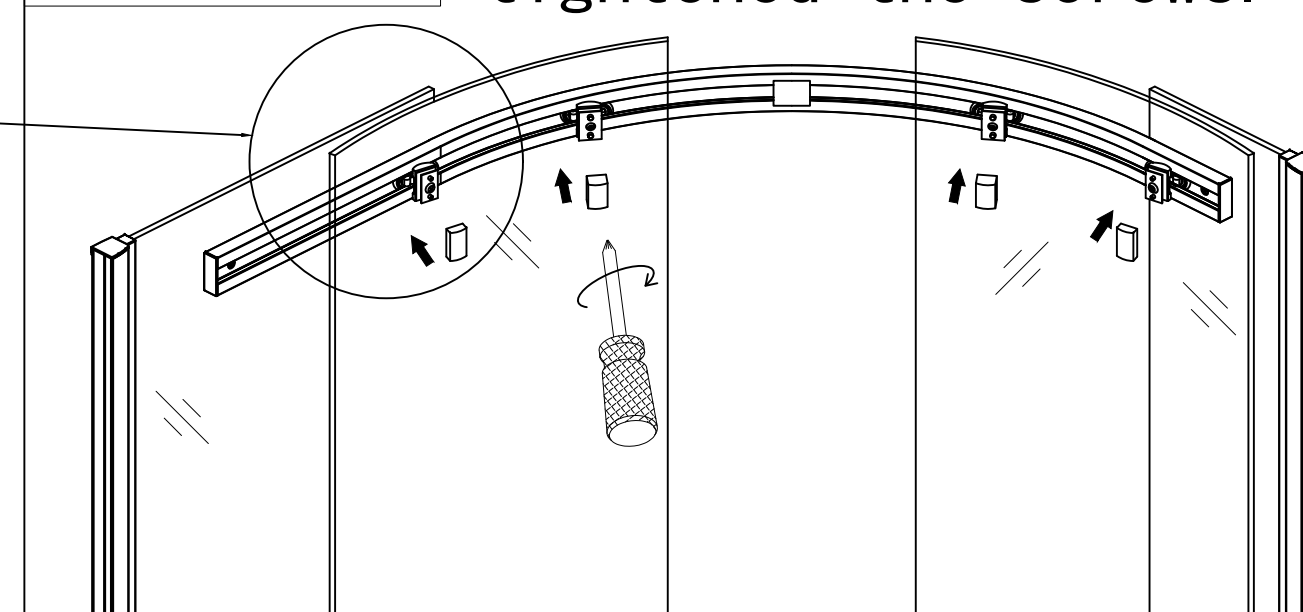

9-4

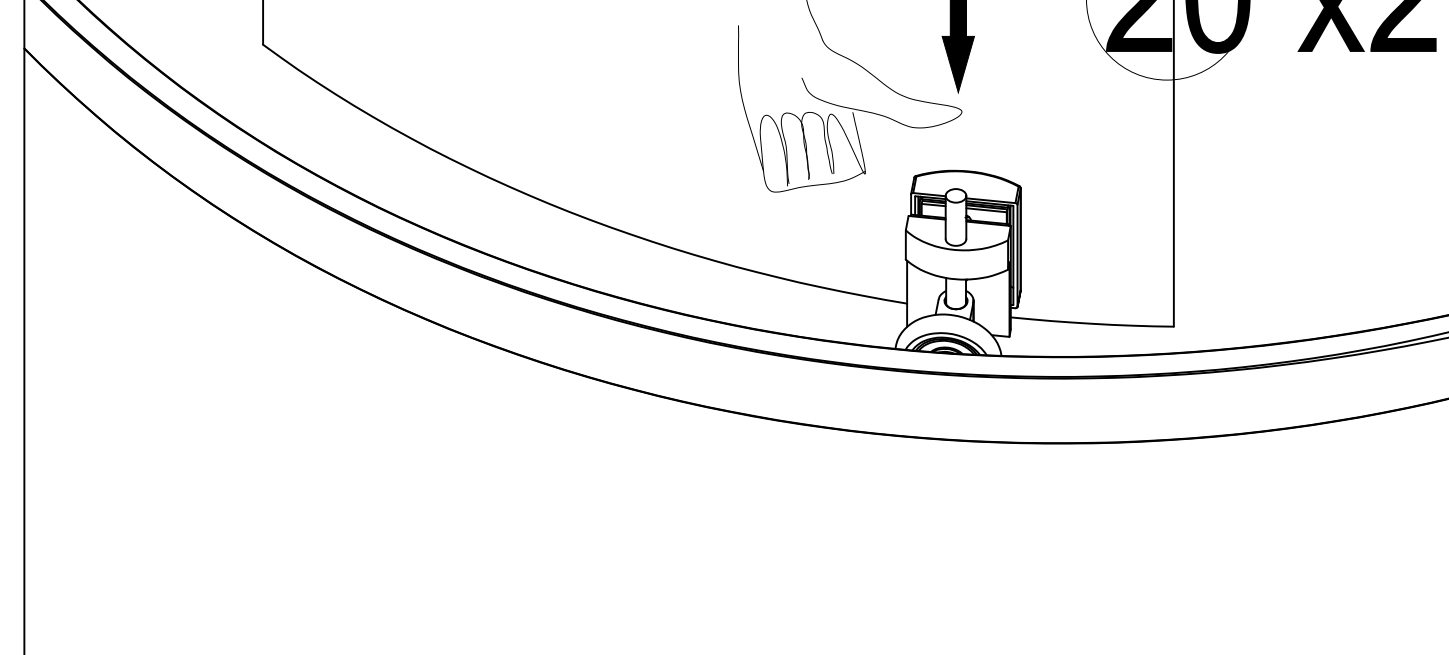


20 x2


20 x2

Pls make sure the rollers are level before well tightened the screws.


9-3

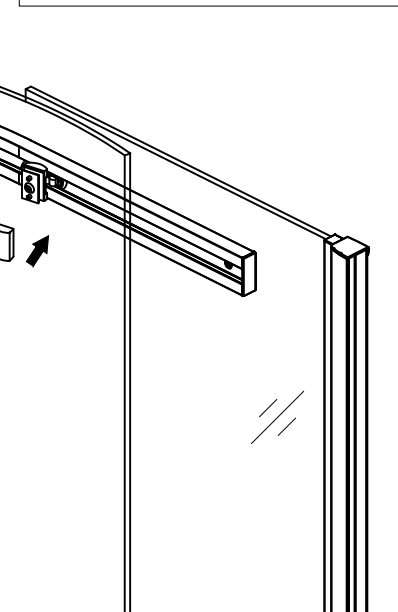


9-4

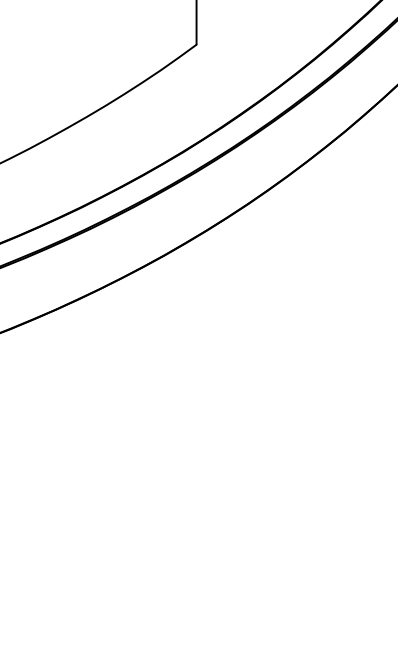

9-1

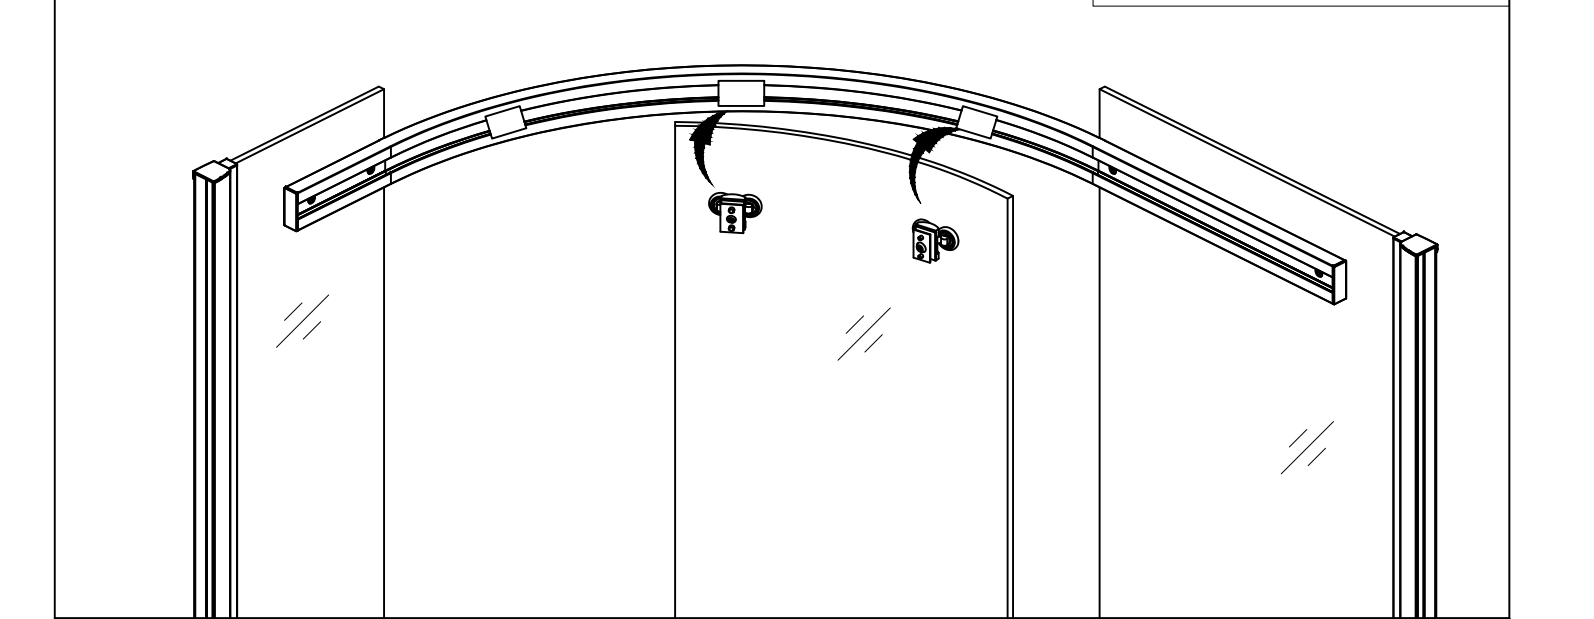




9-2

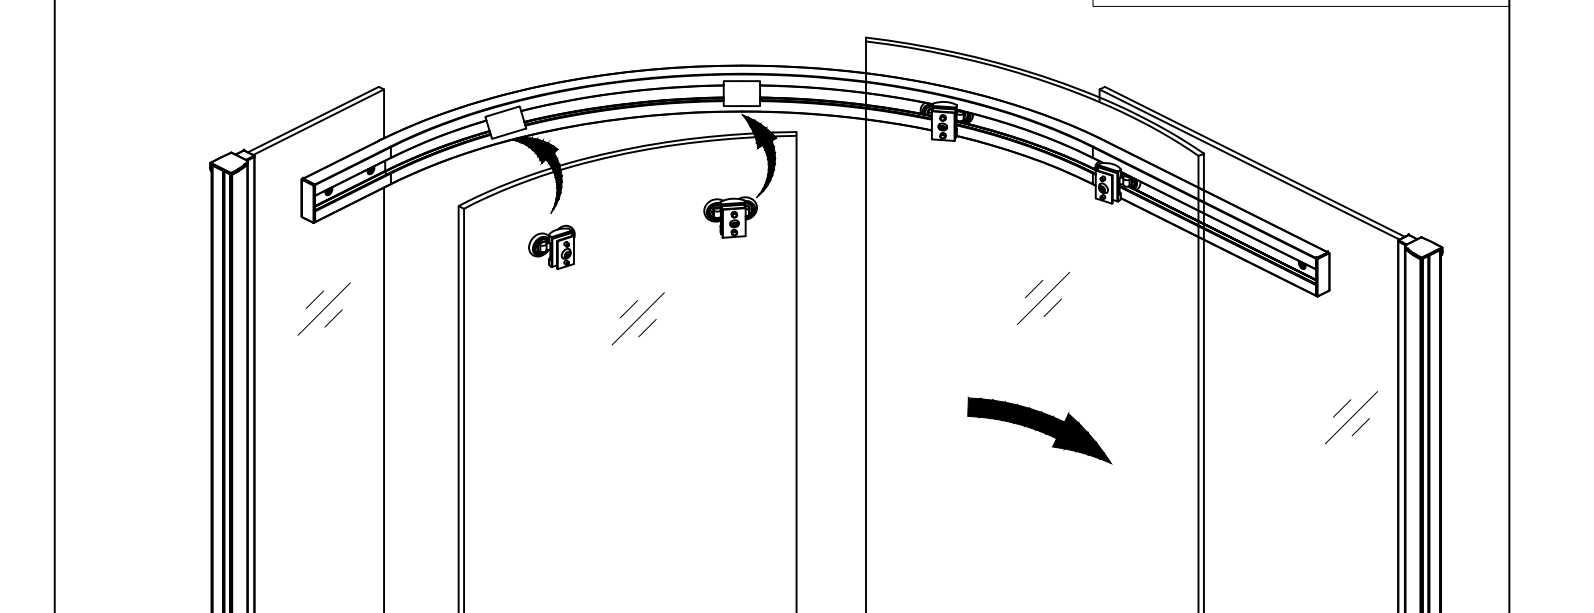

Fit doors onto frame

10L



10R

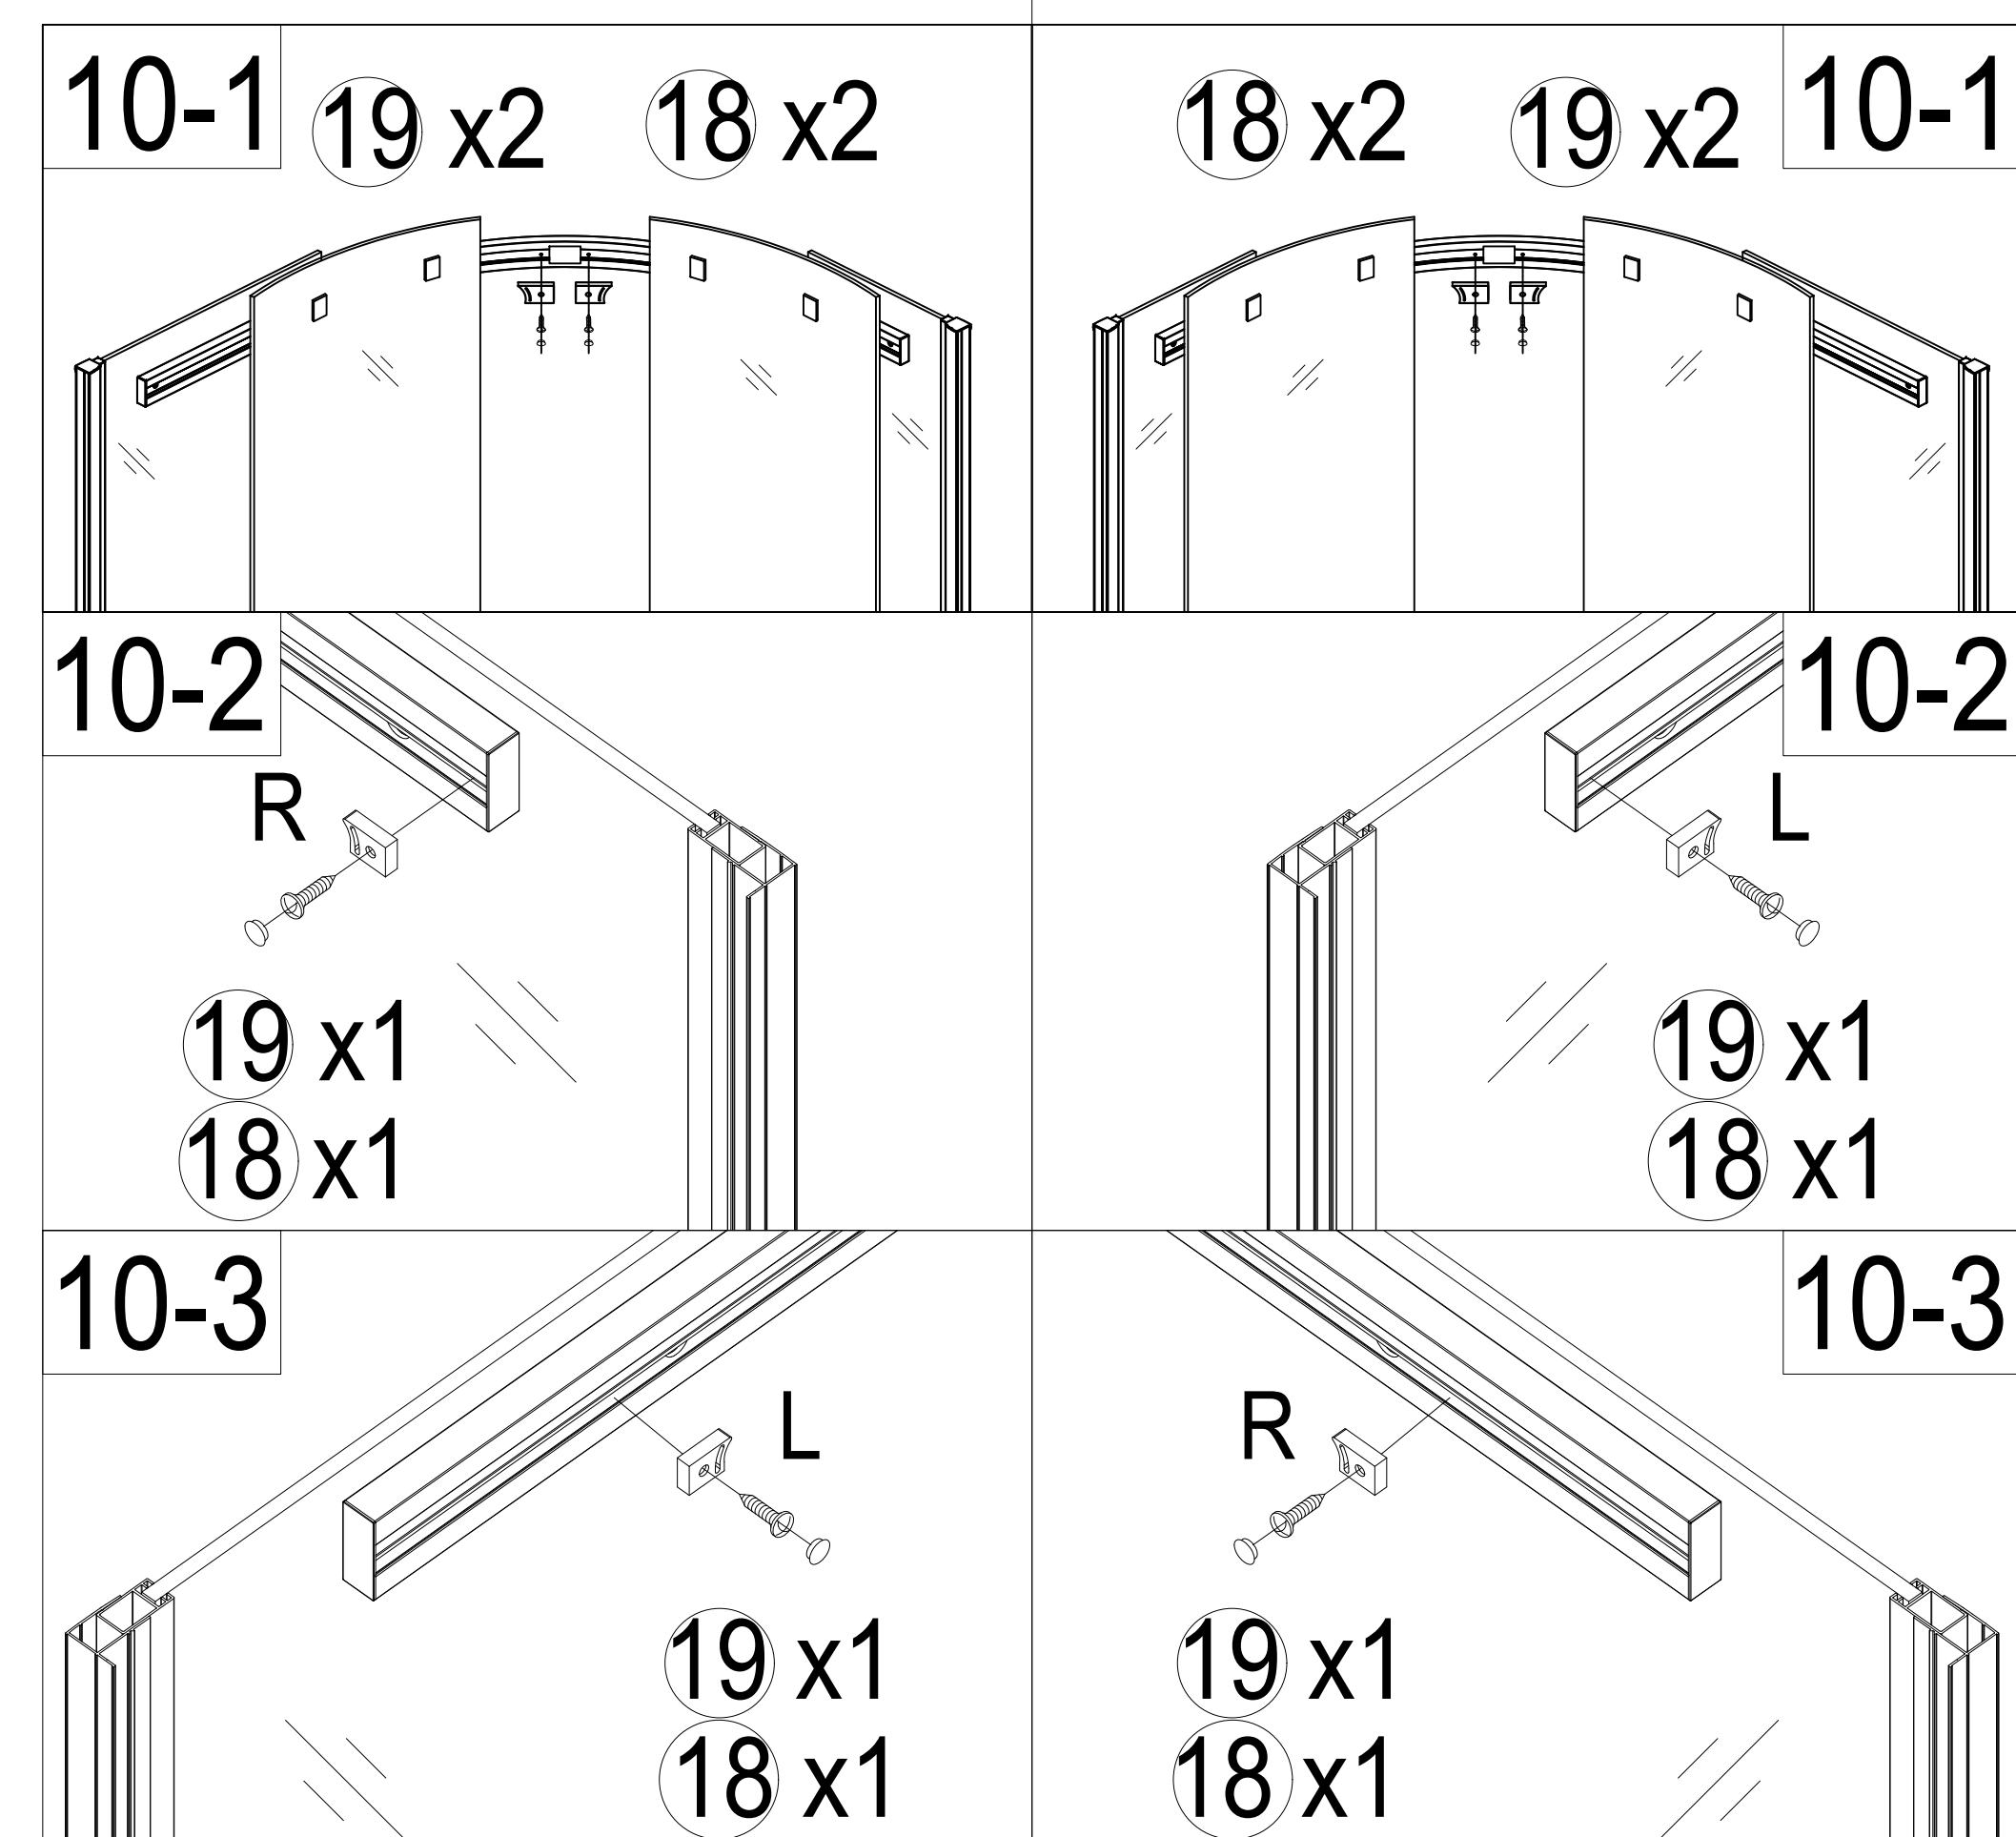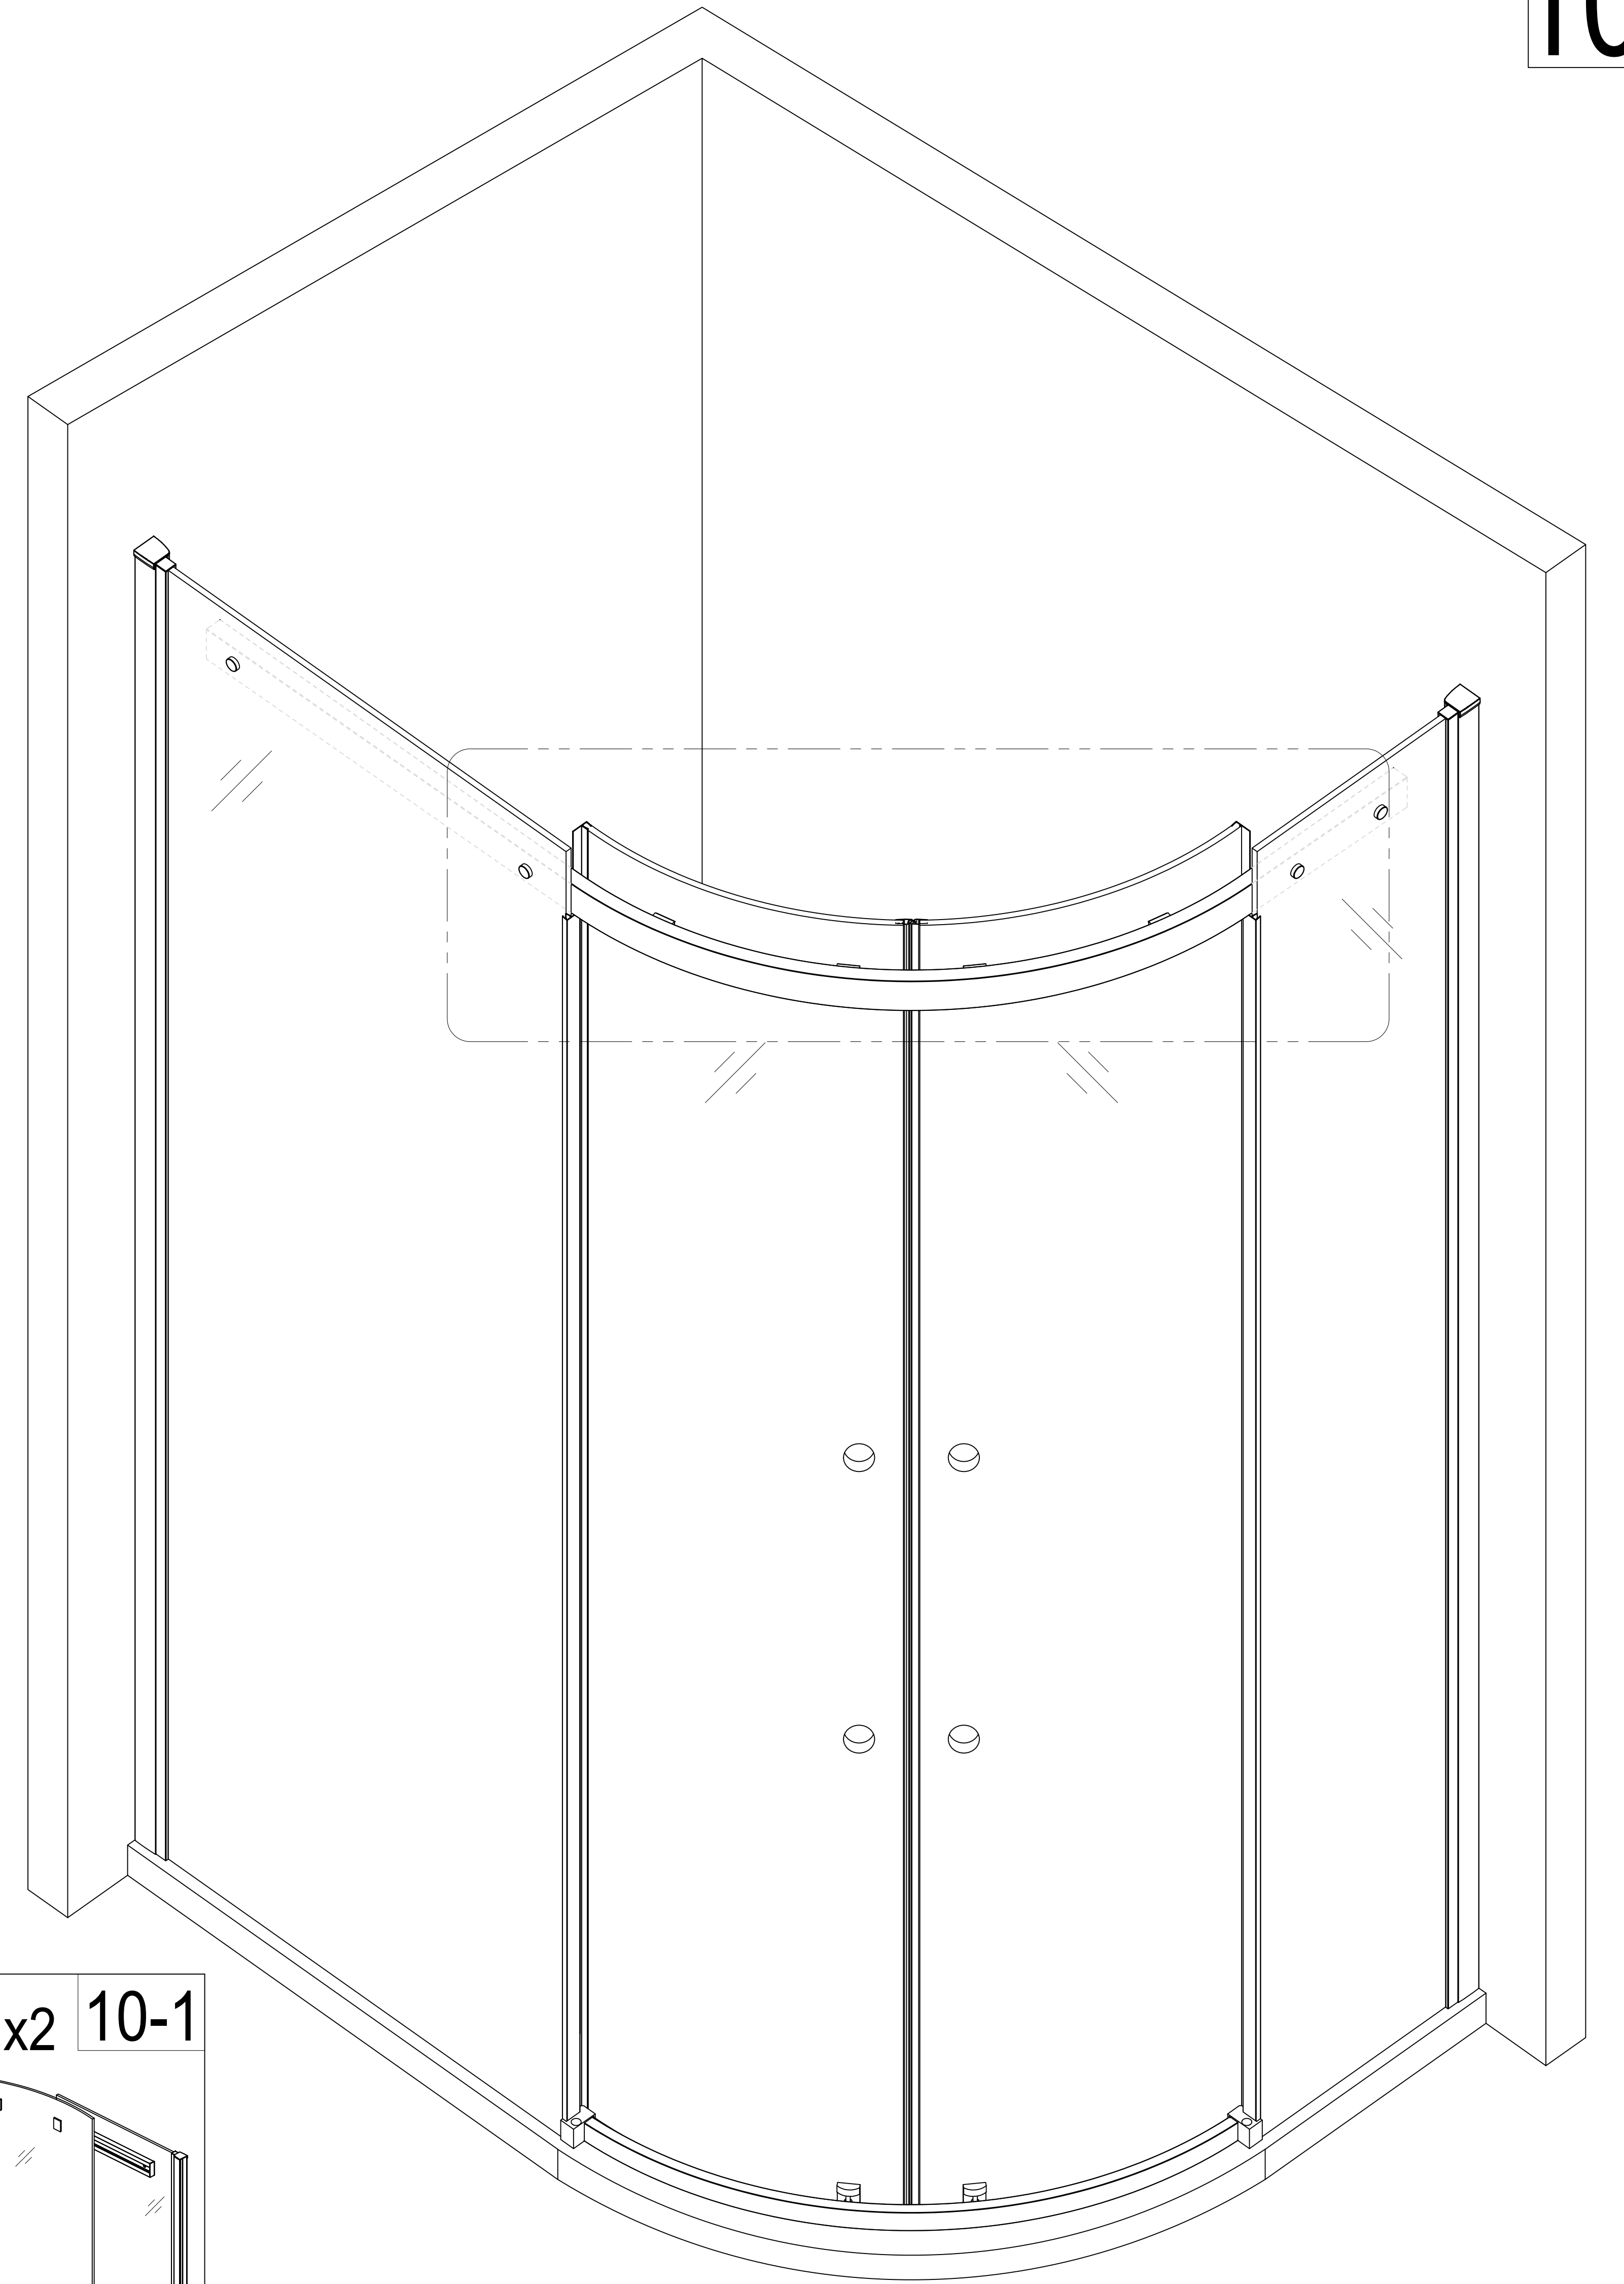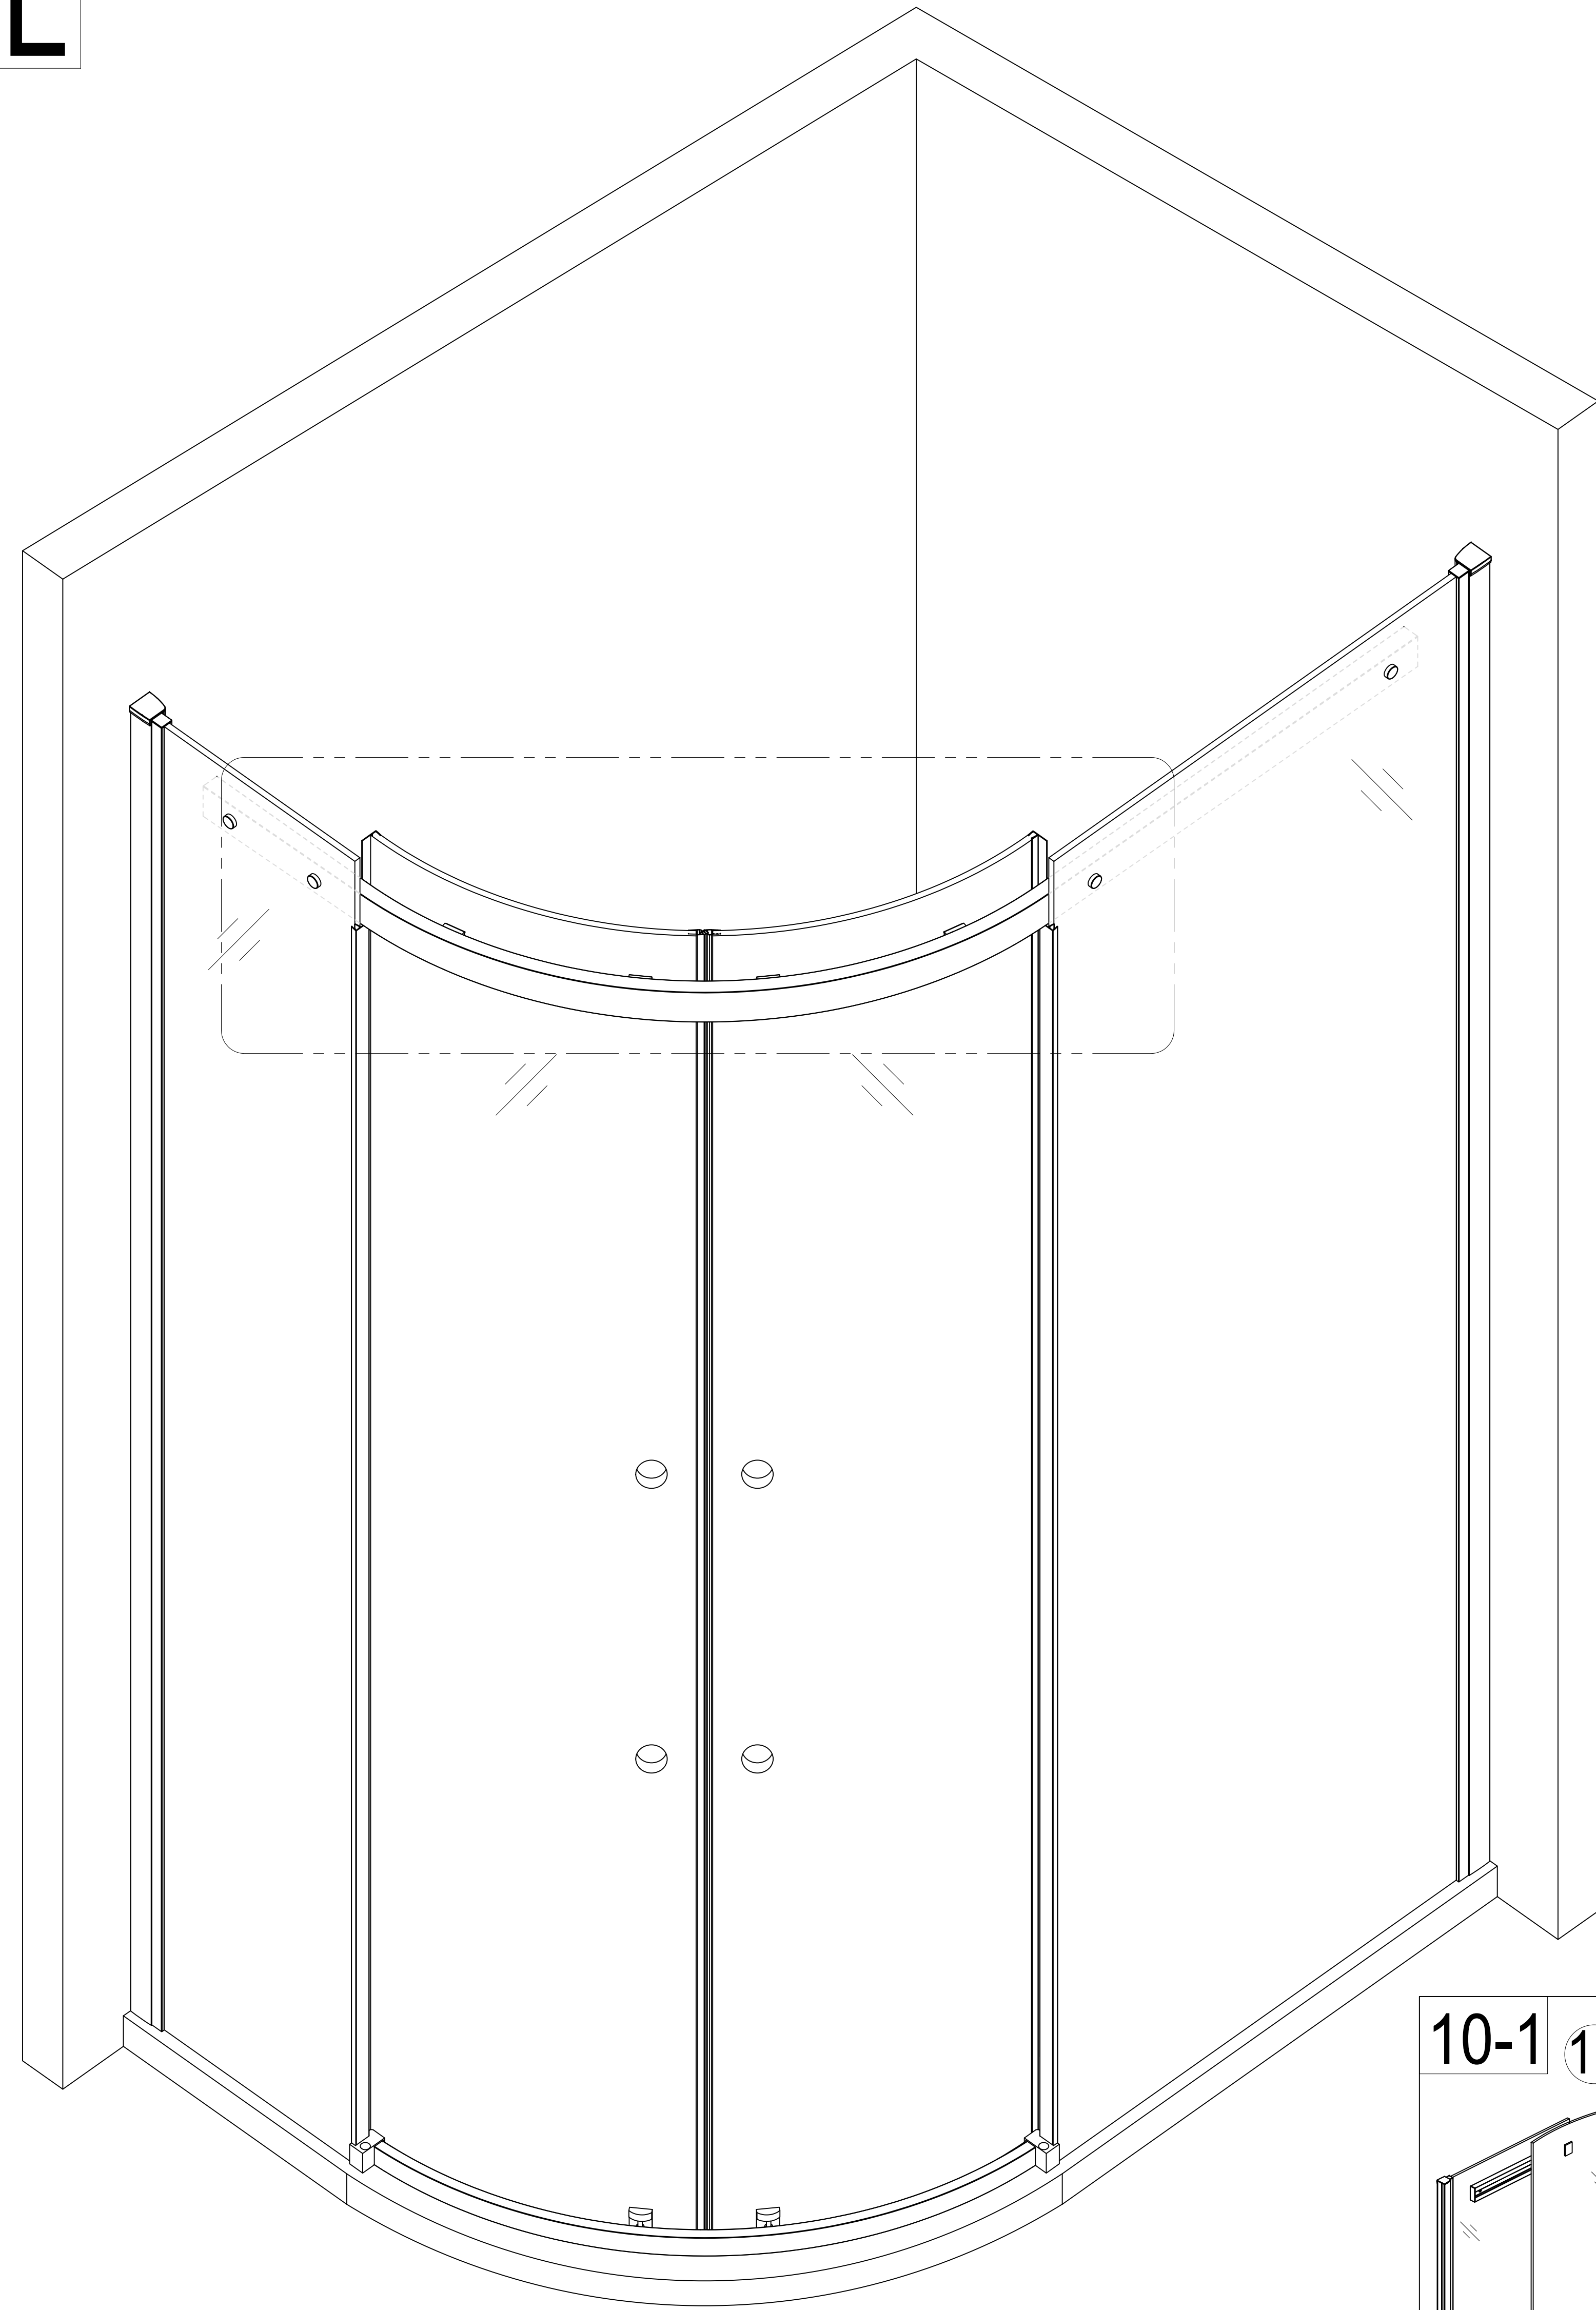



Add door stops to top rail

Add door stops to top rail









11L

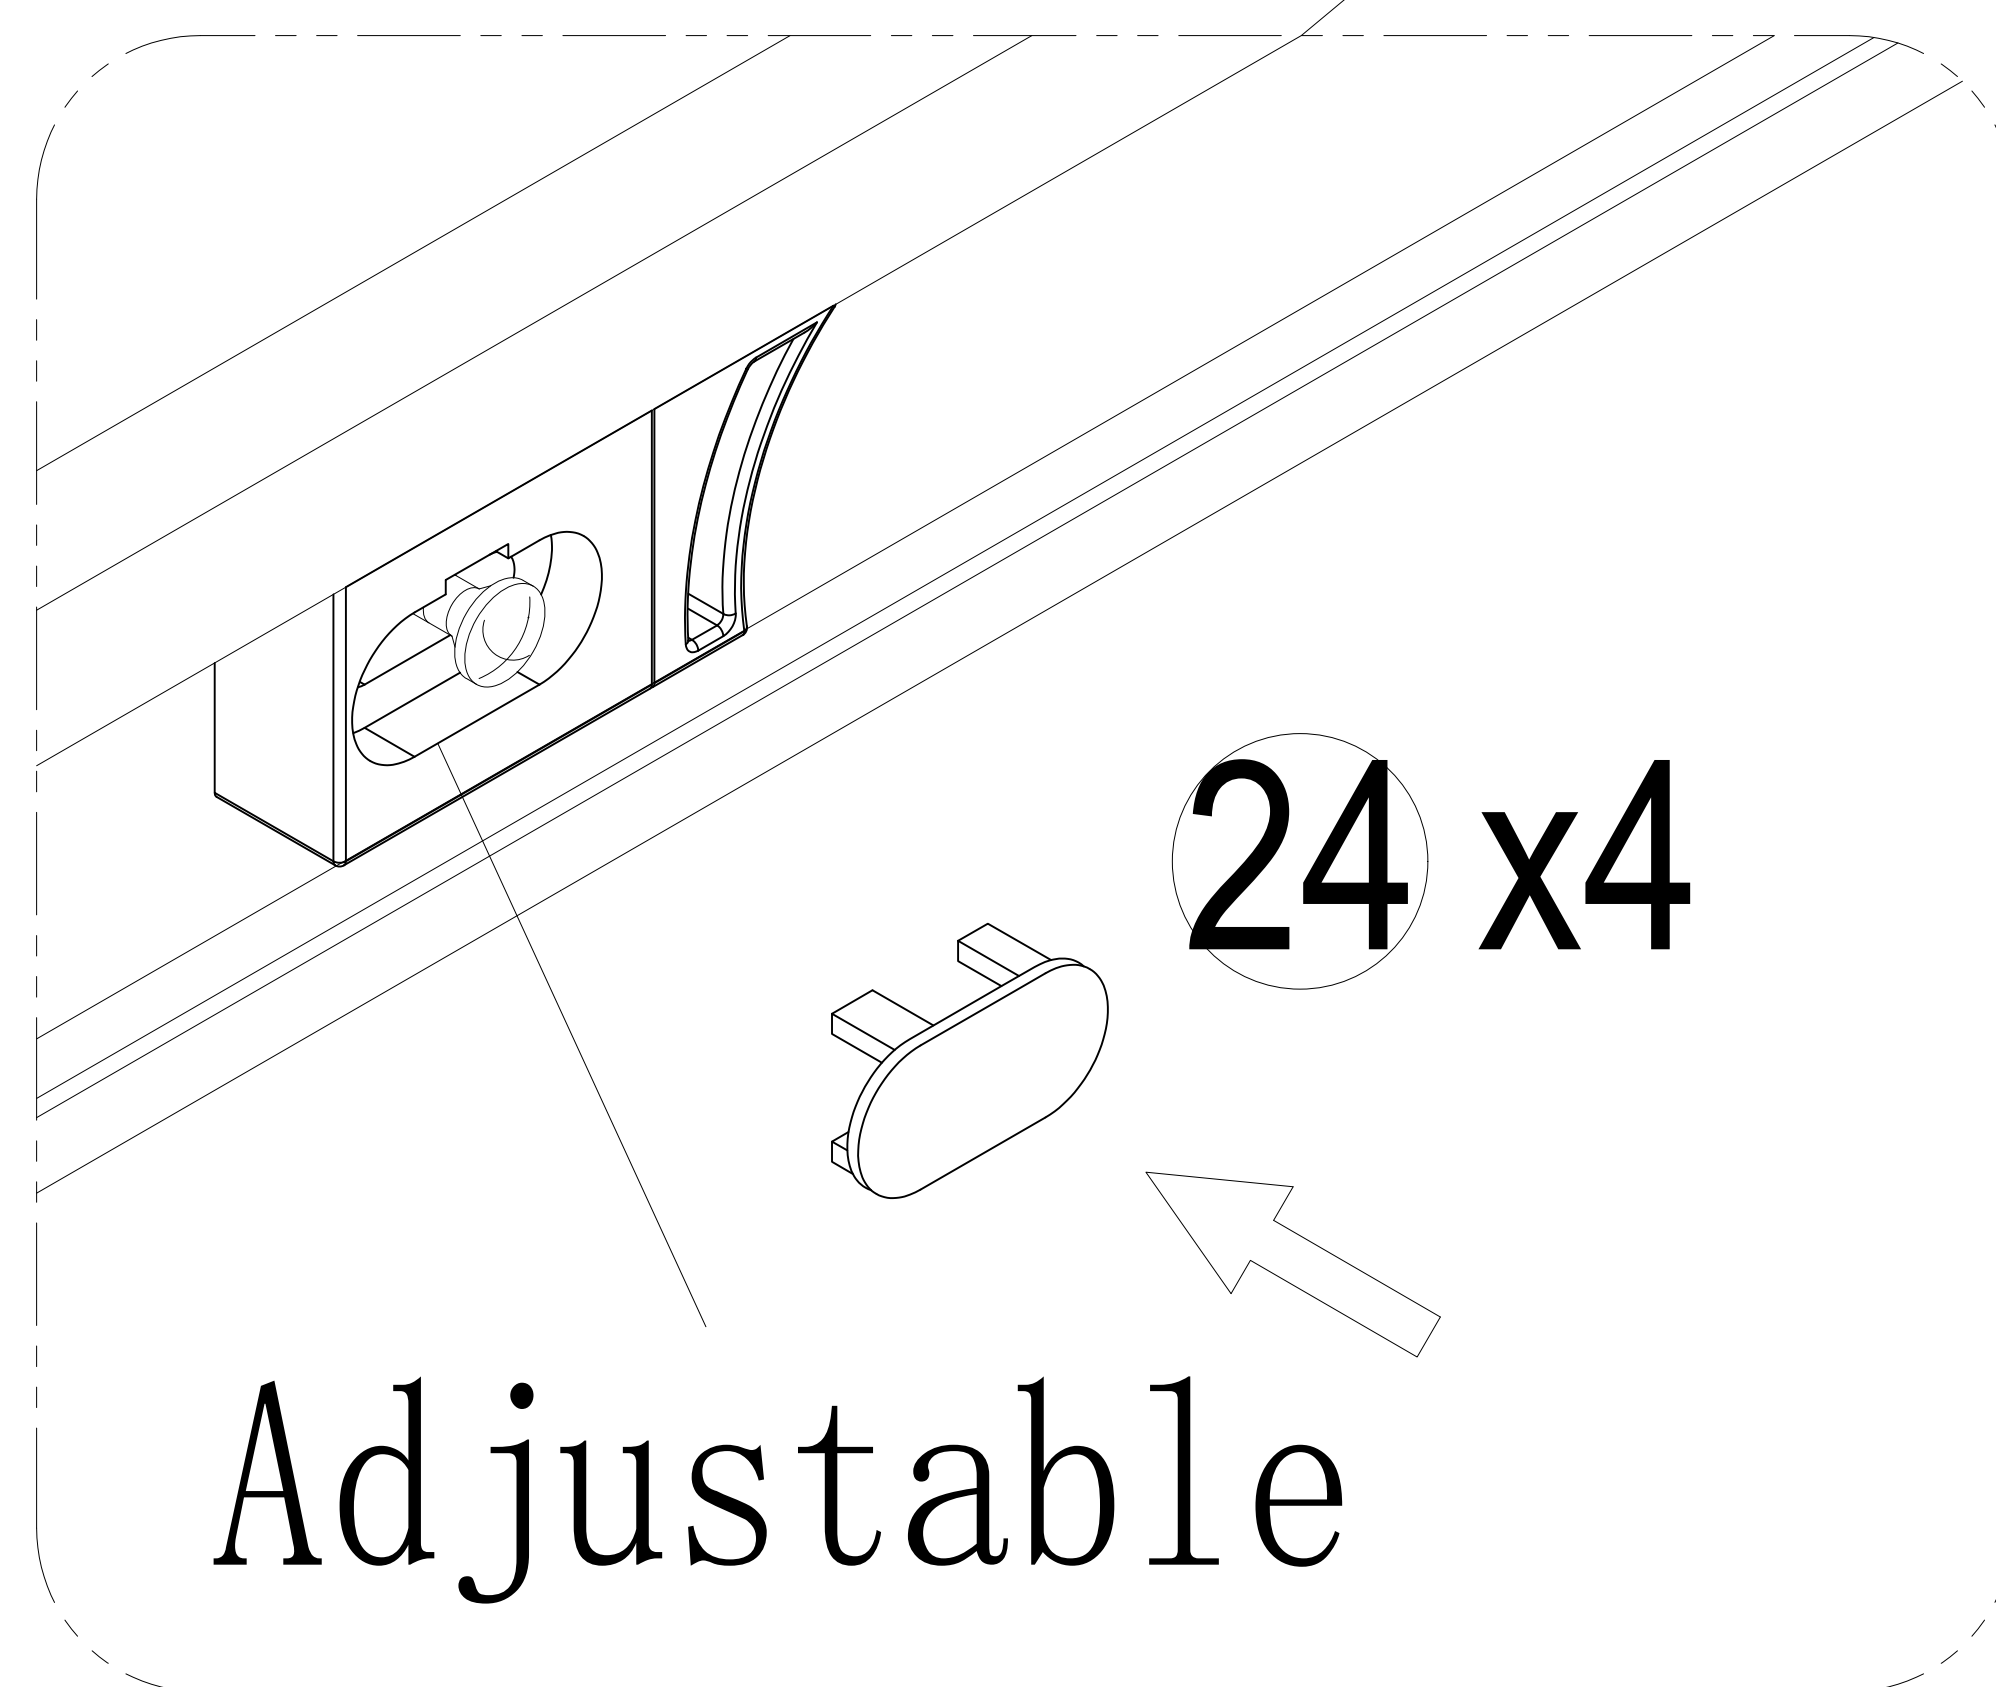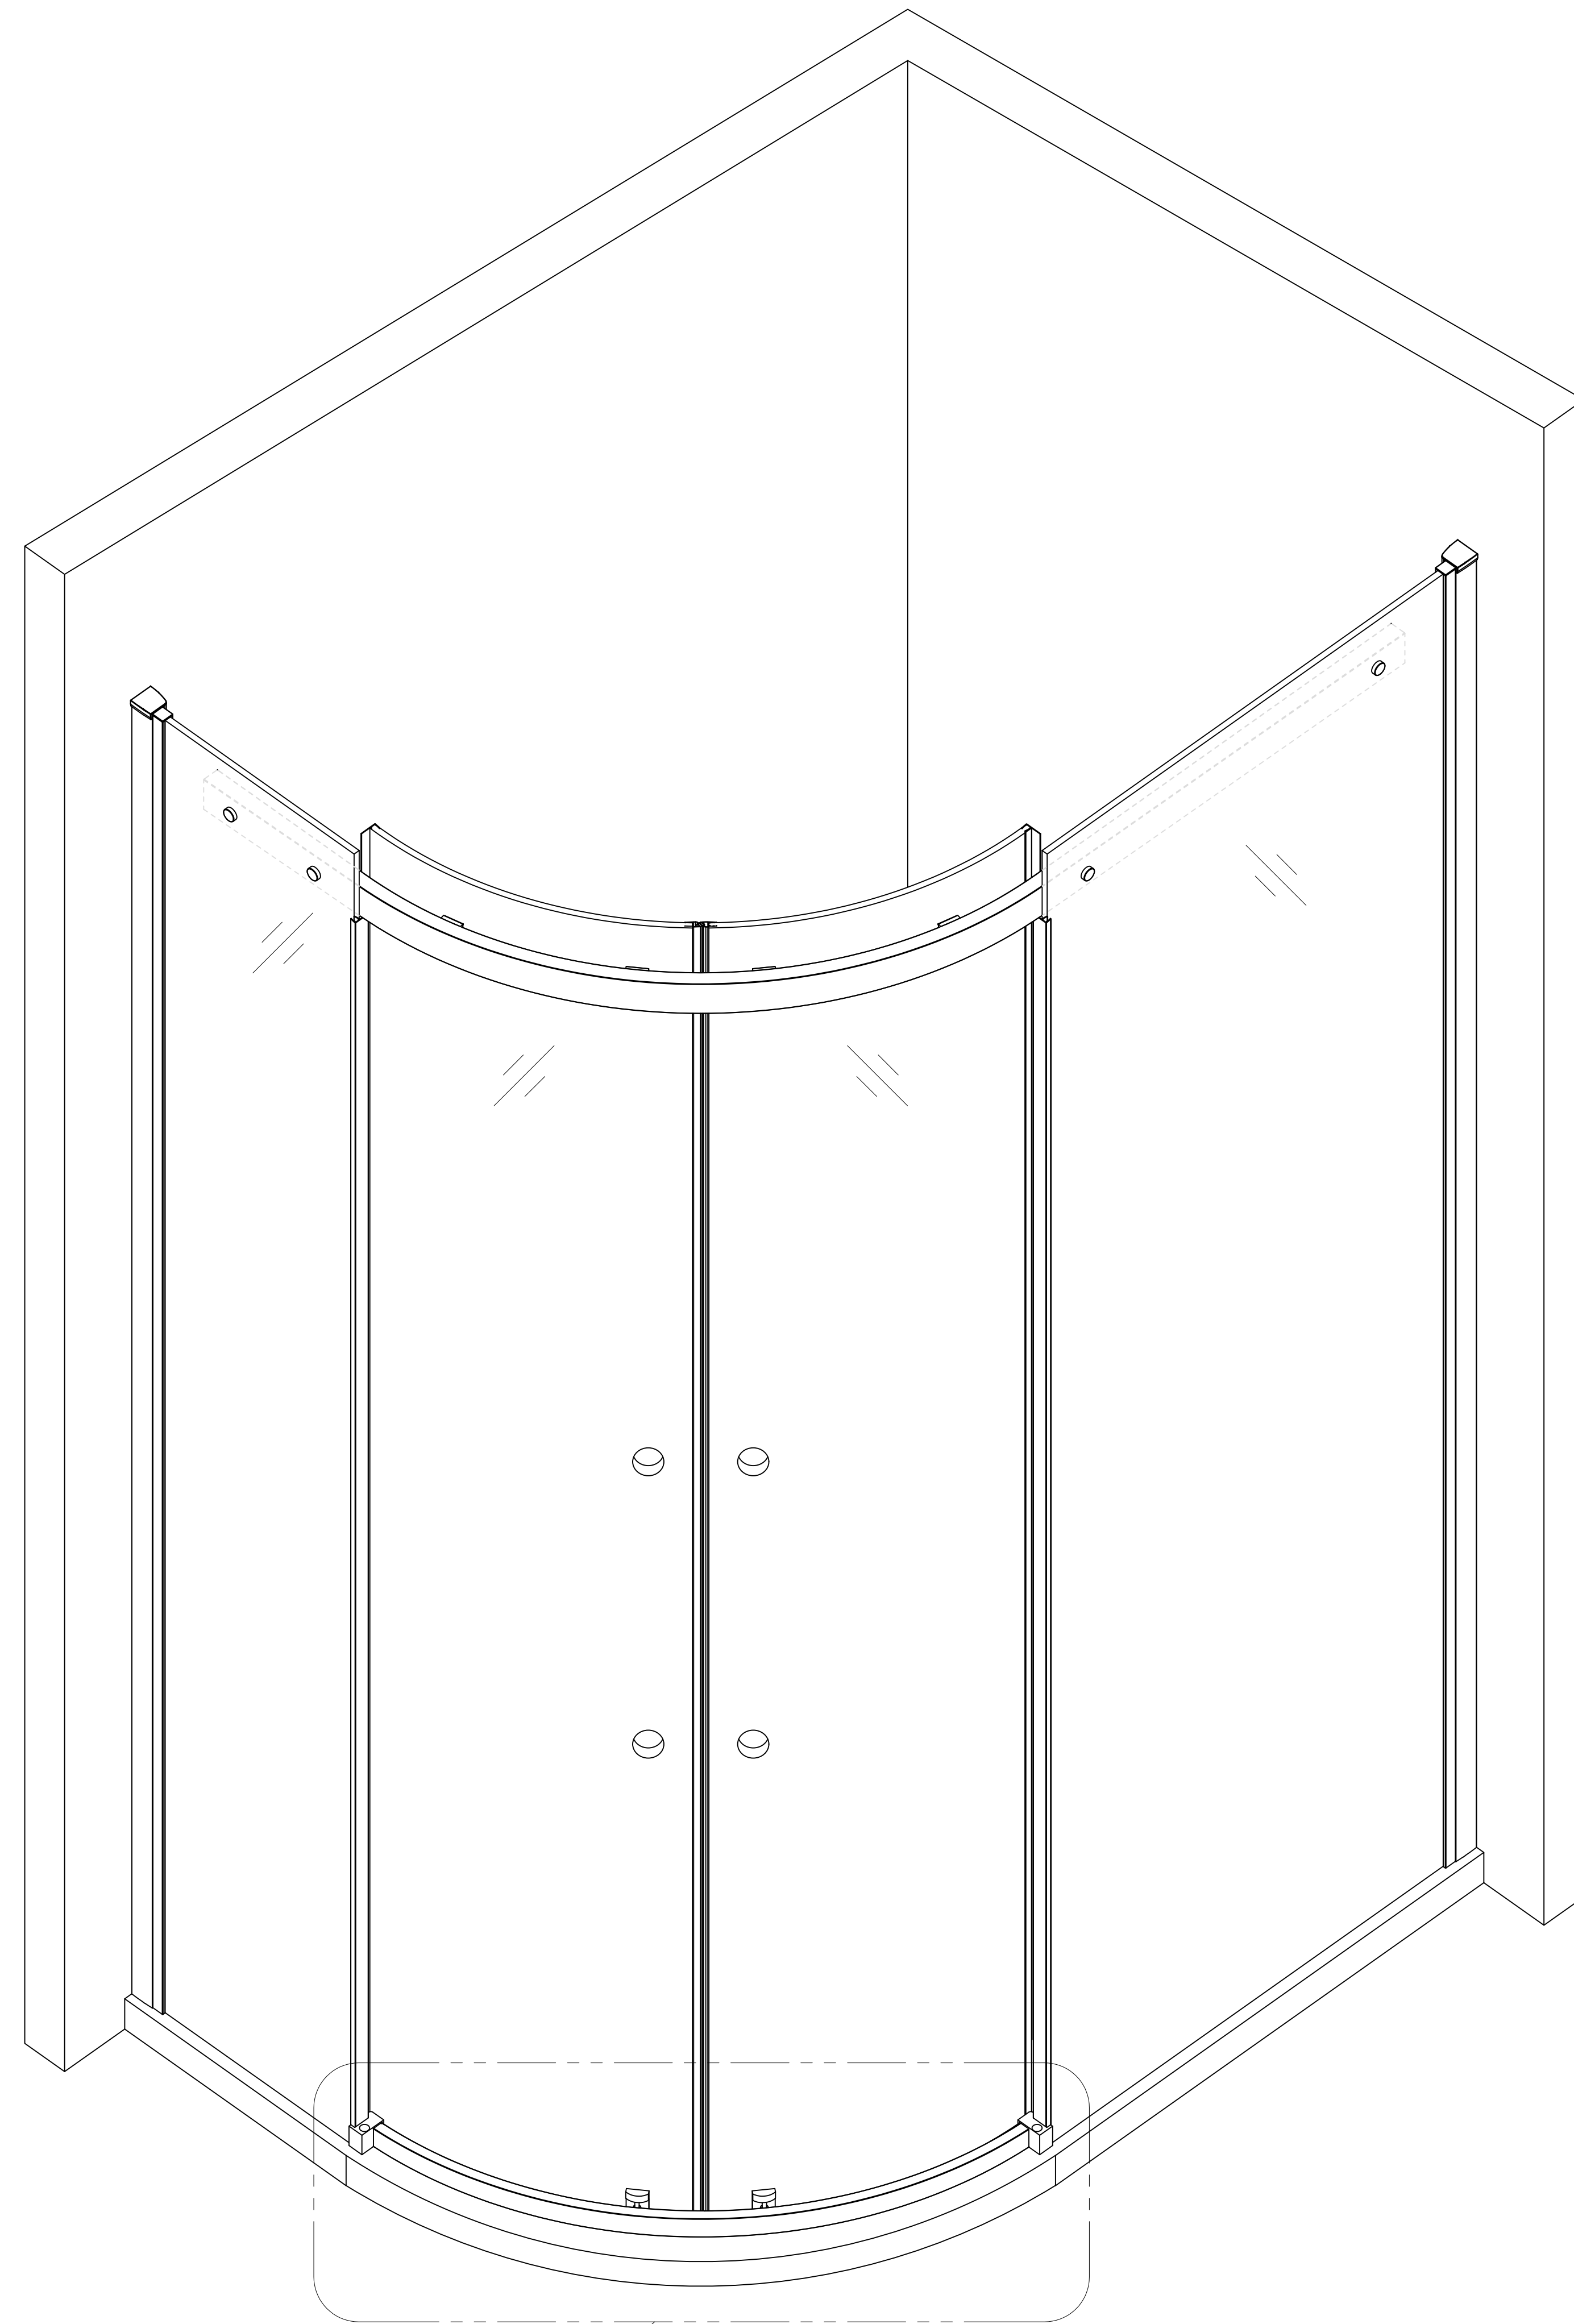

11R

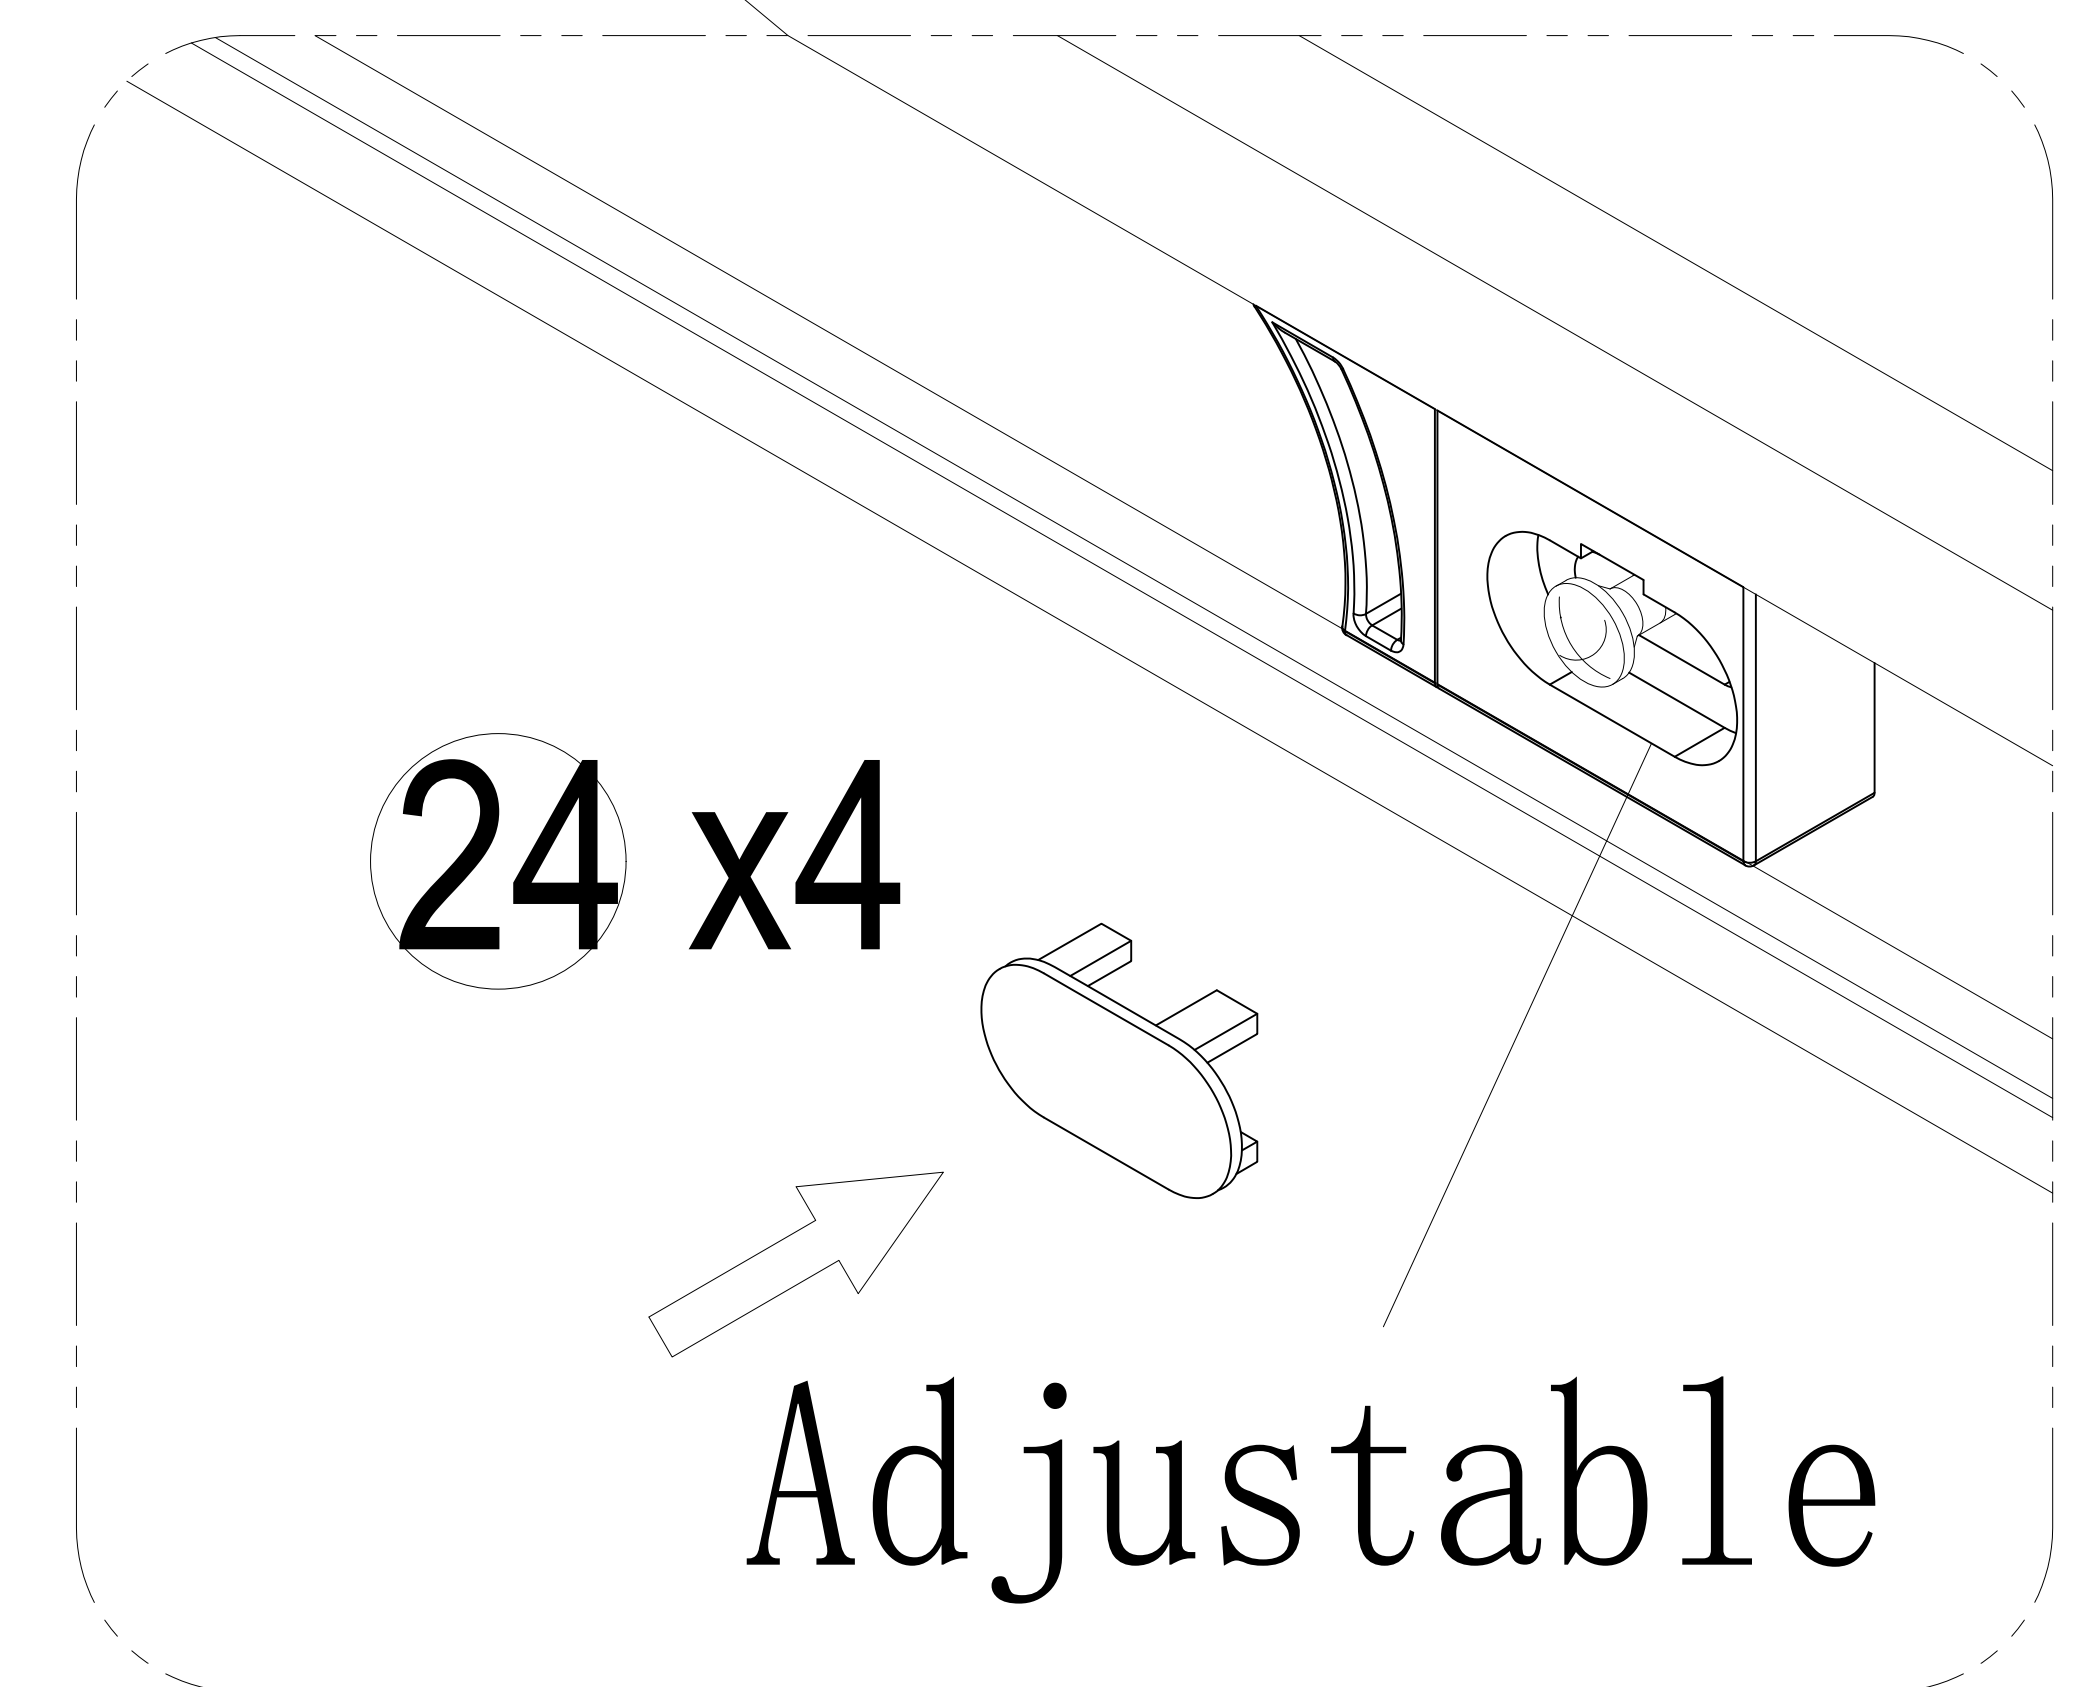
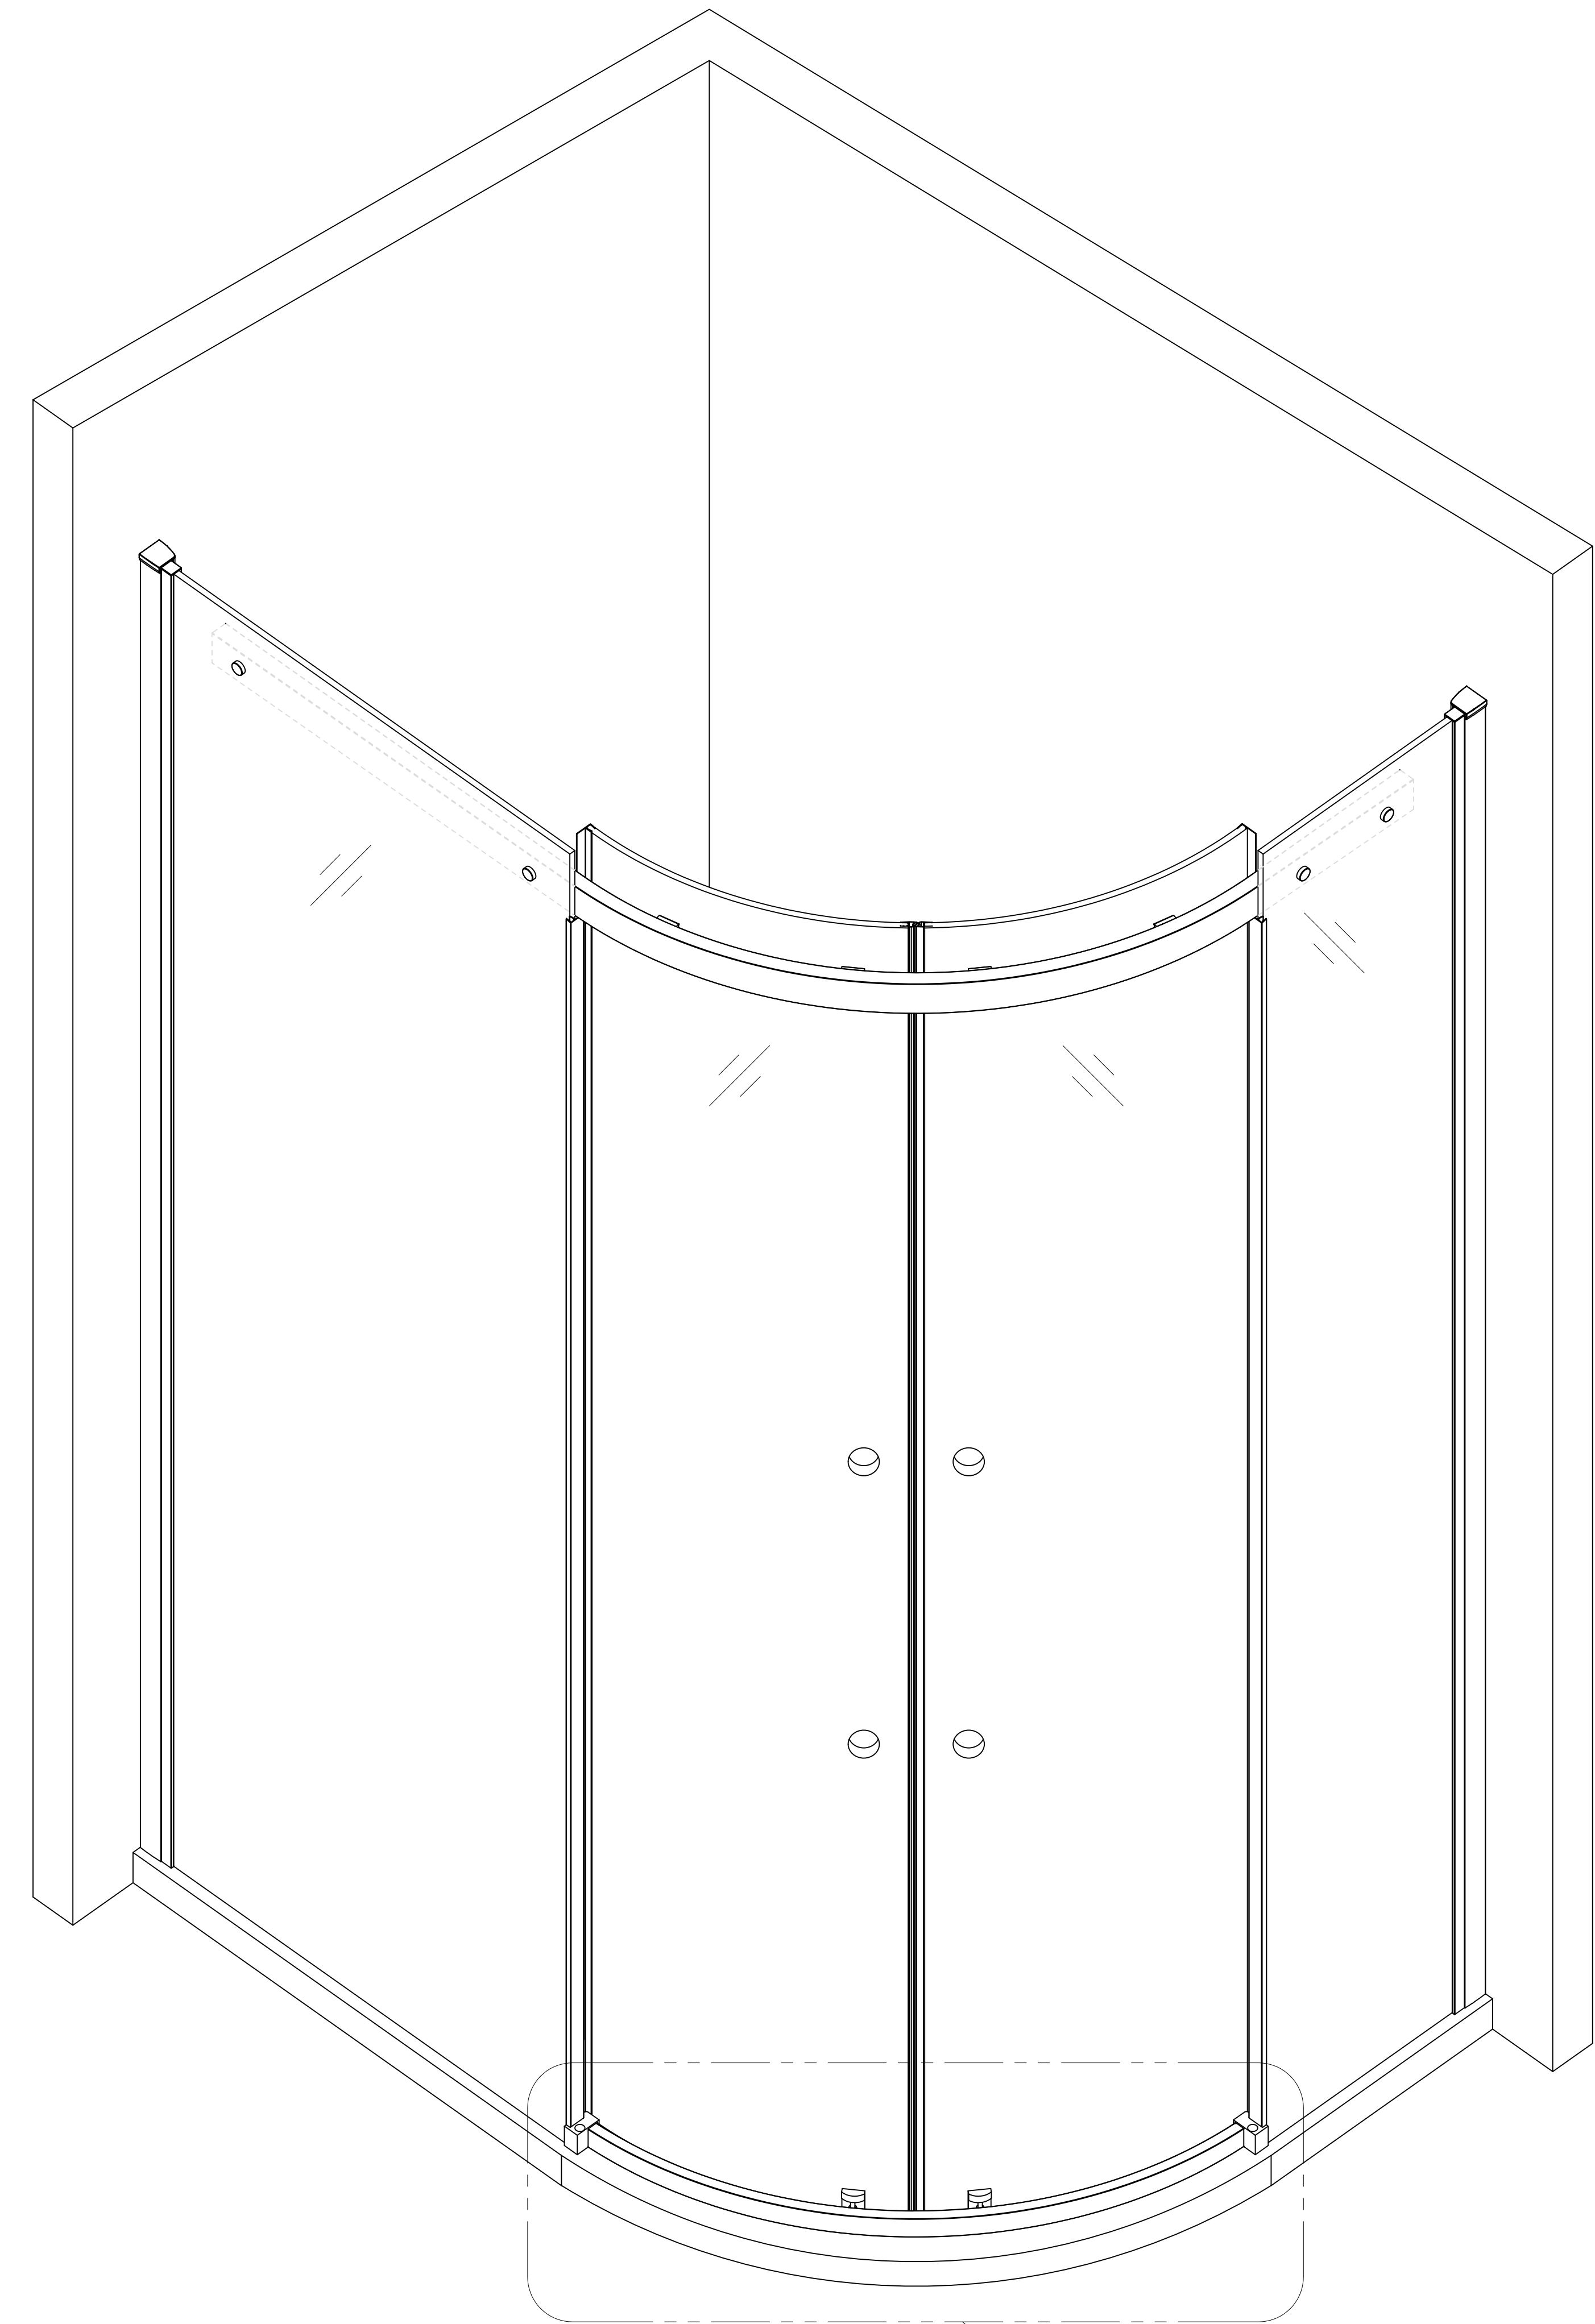


12L

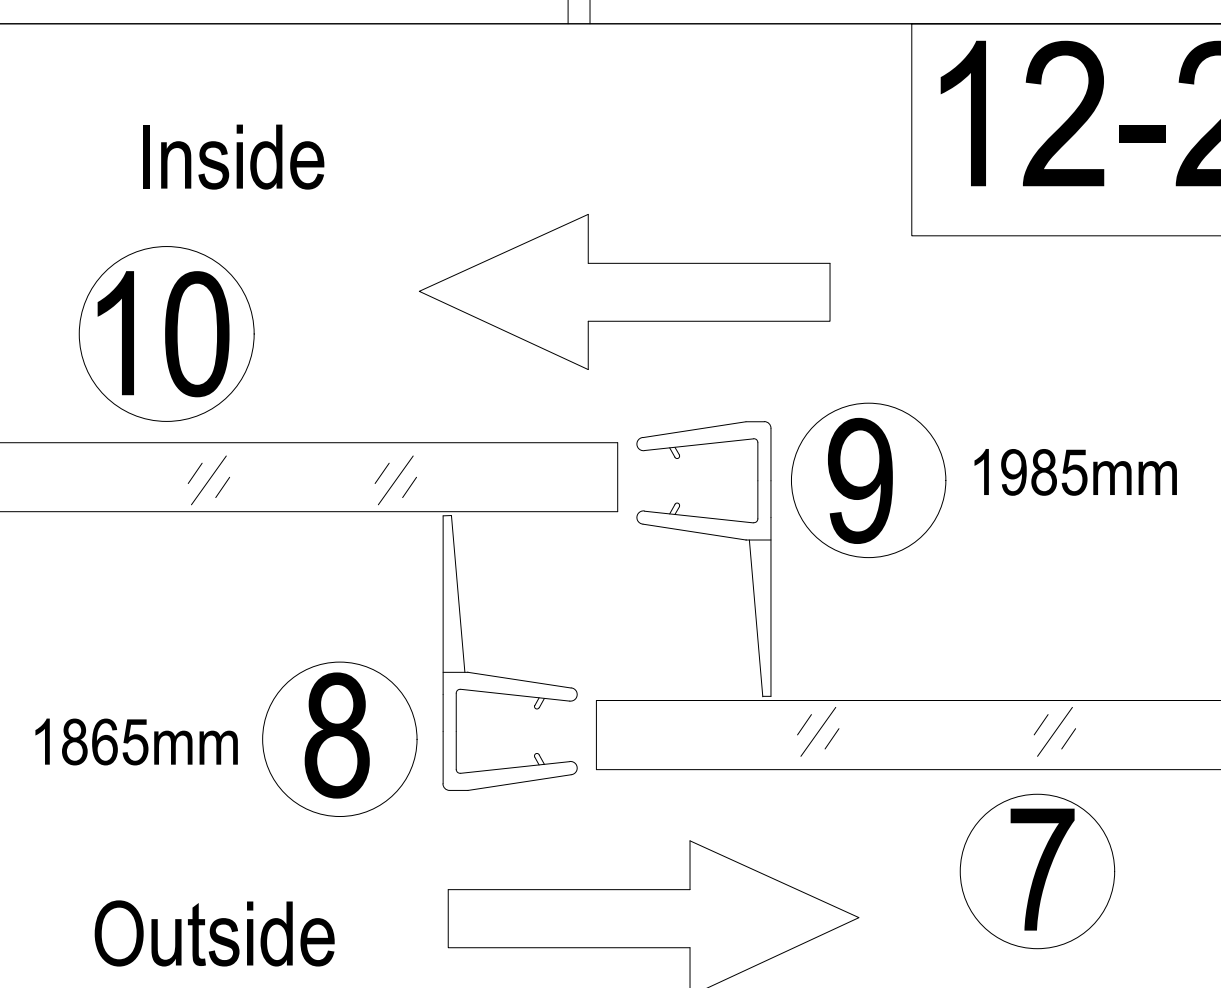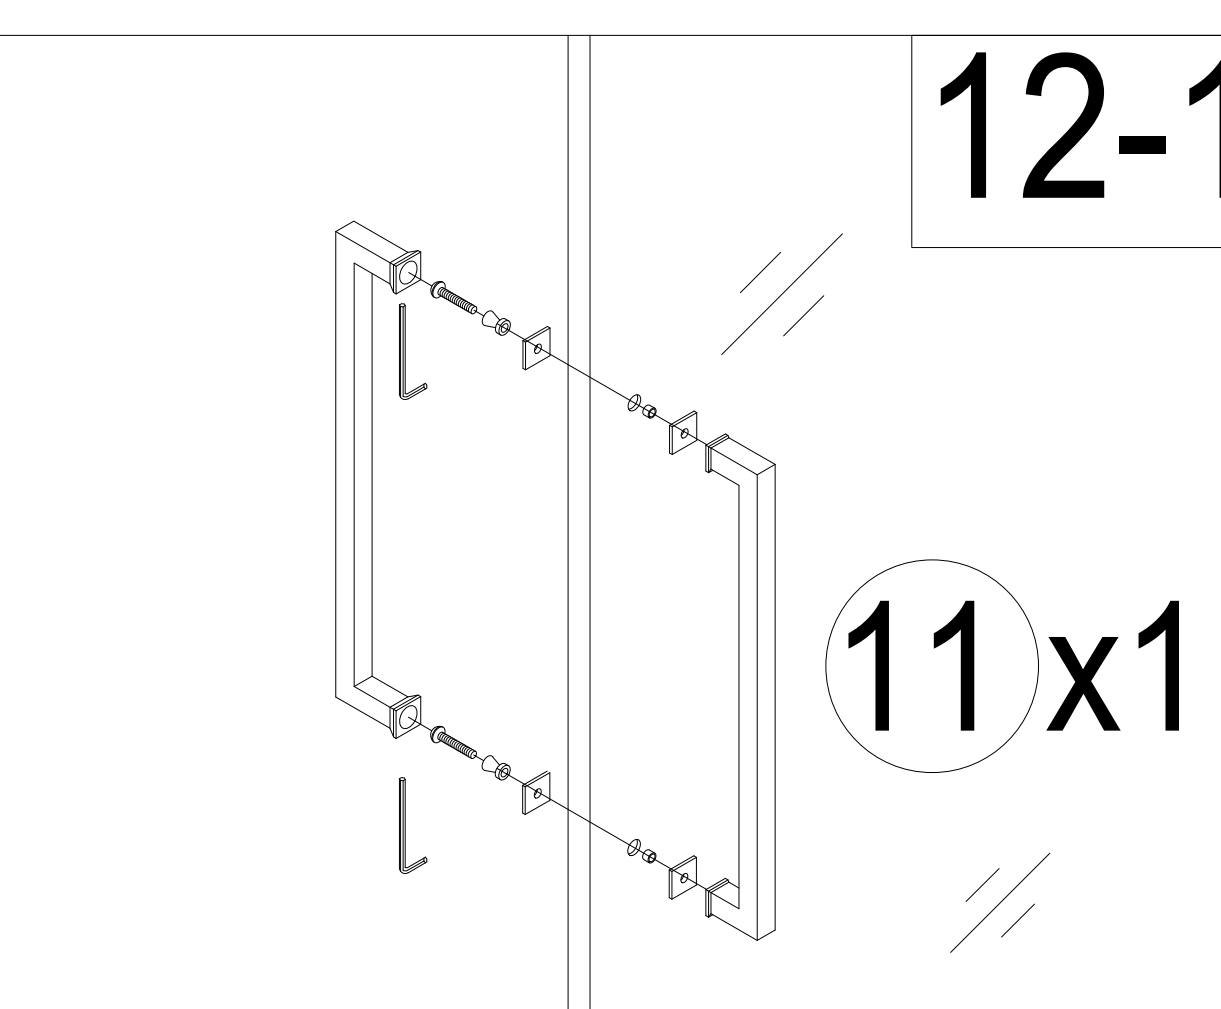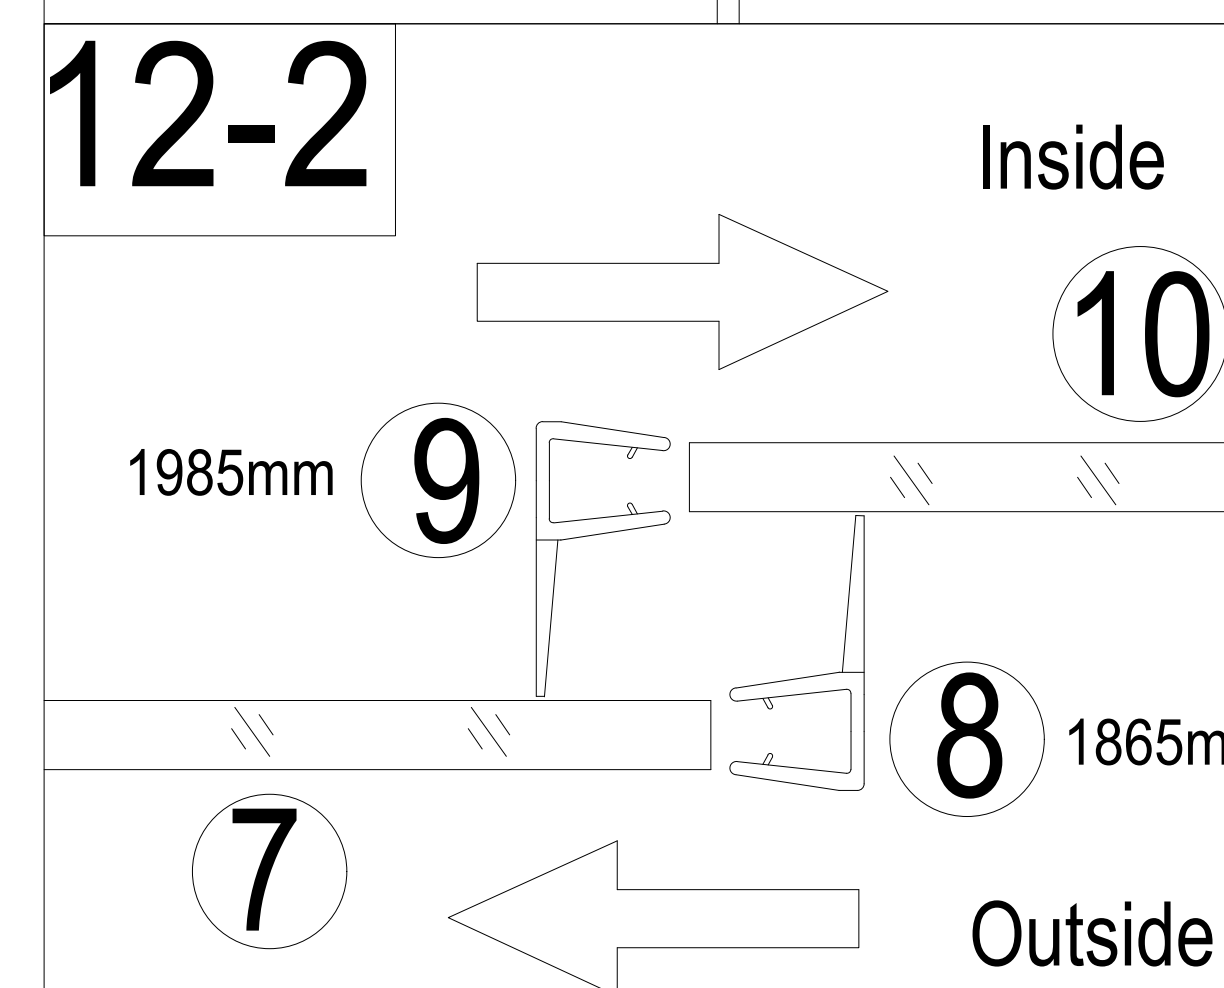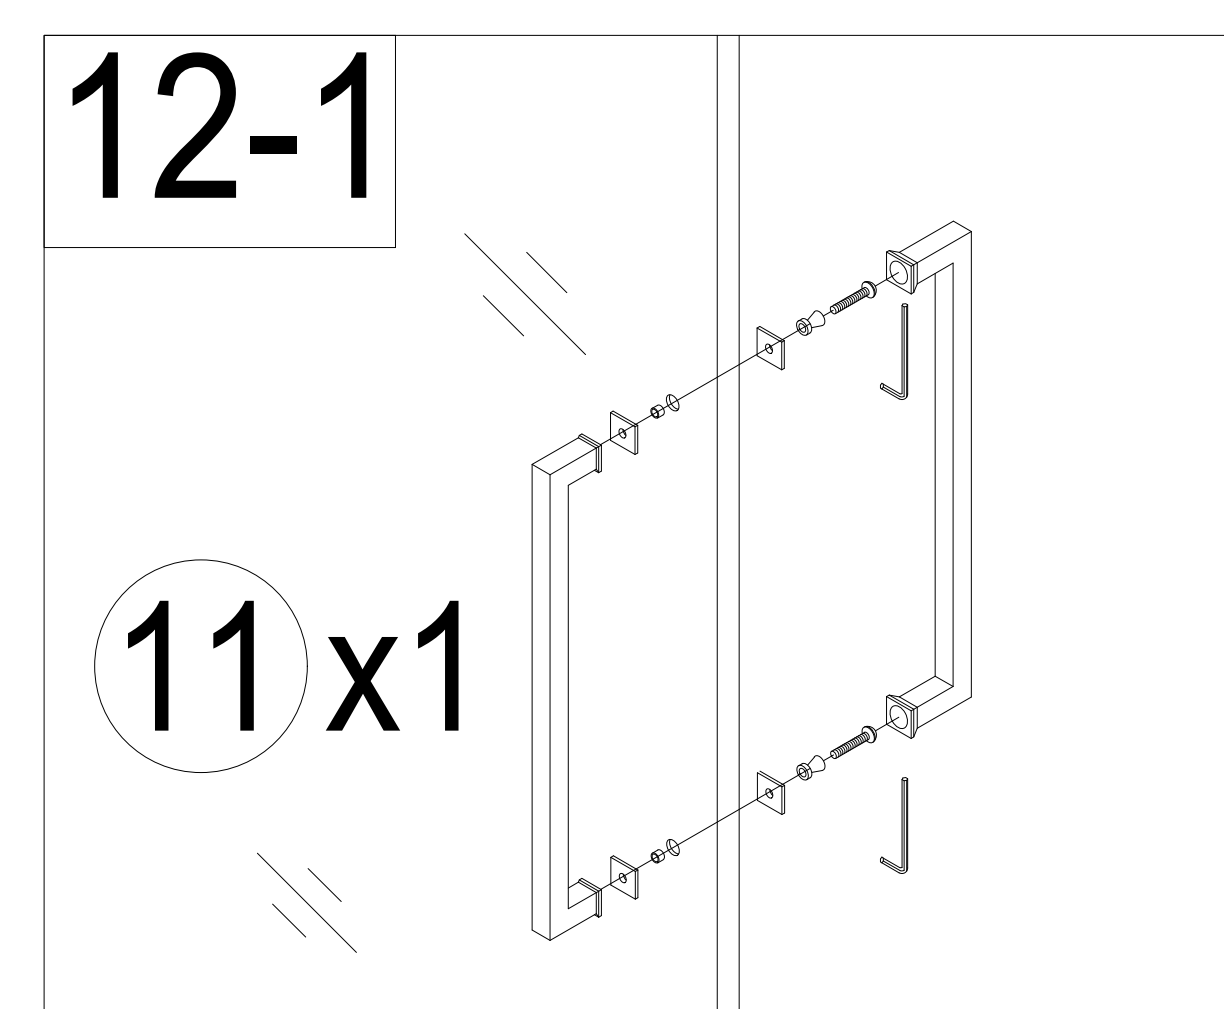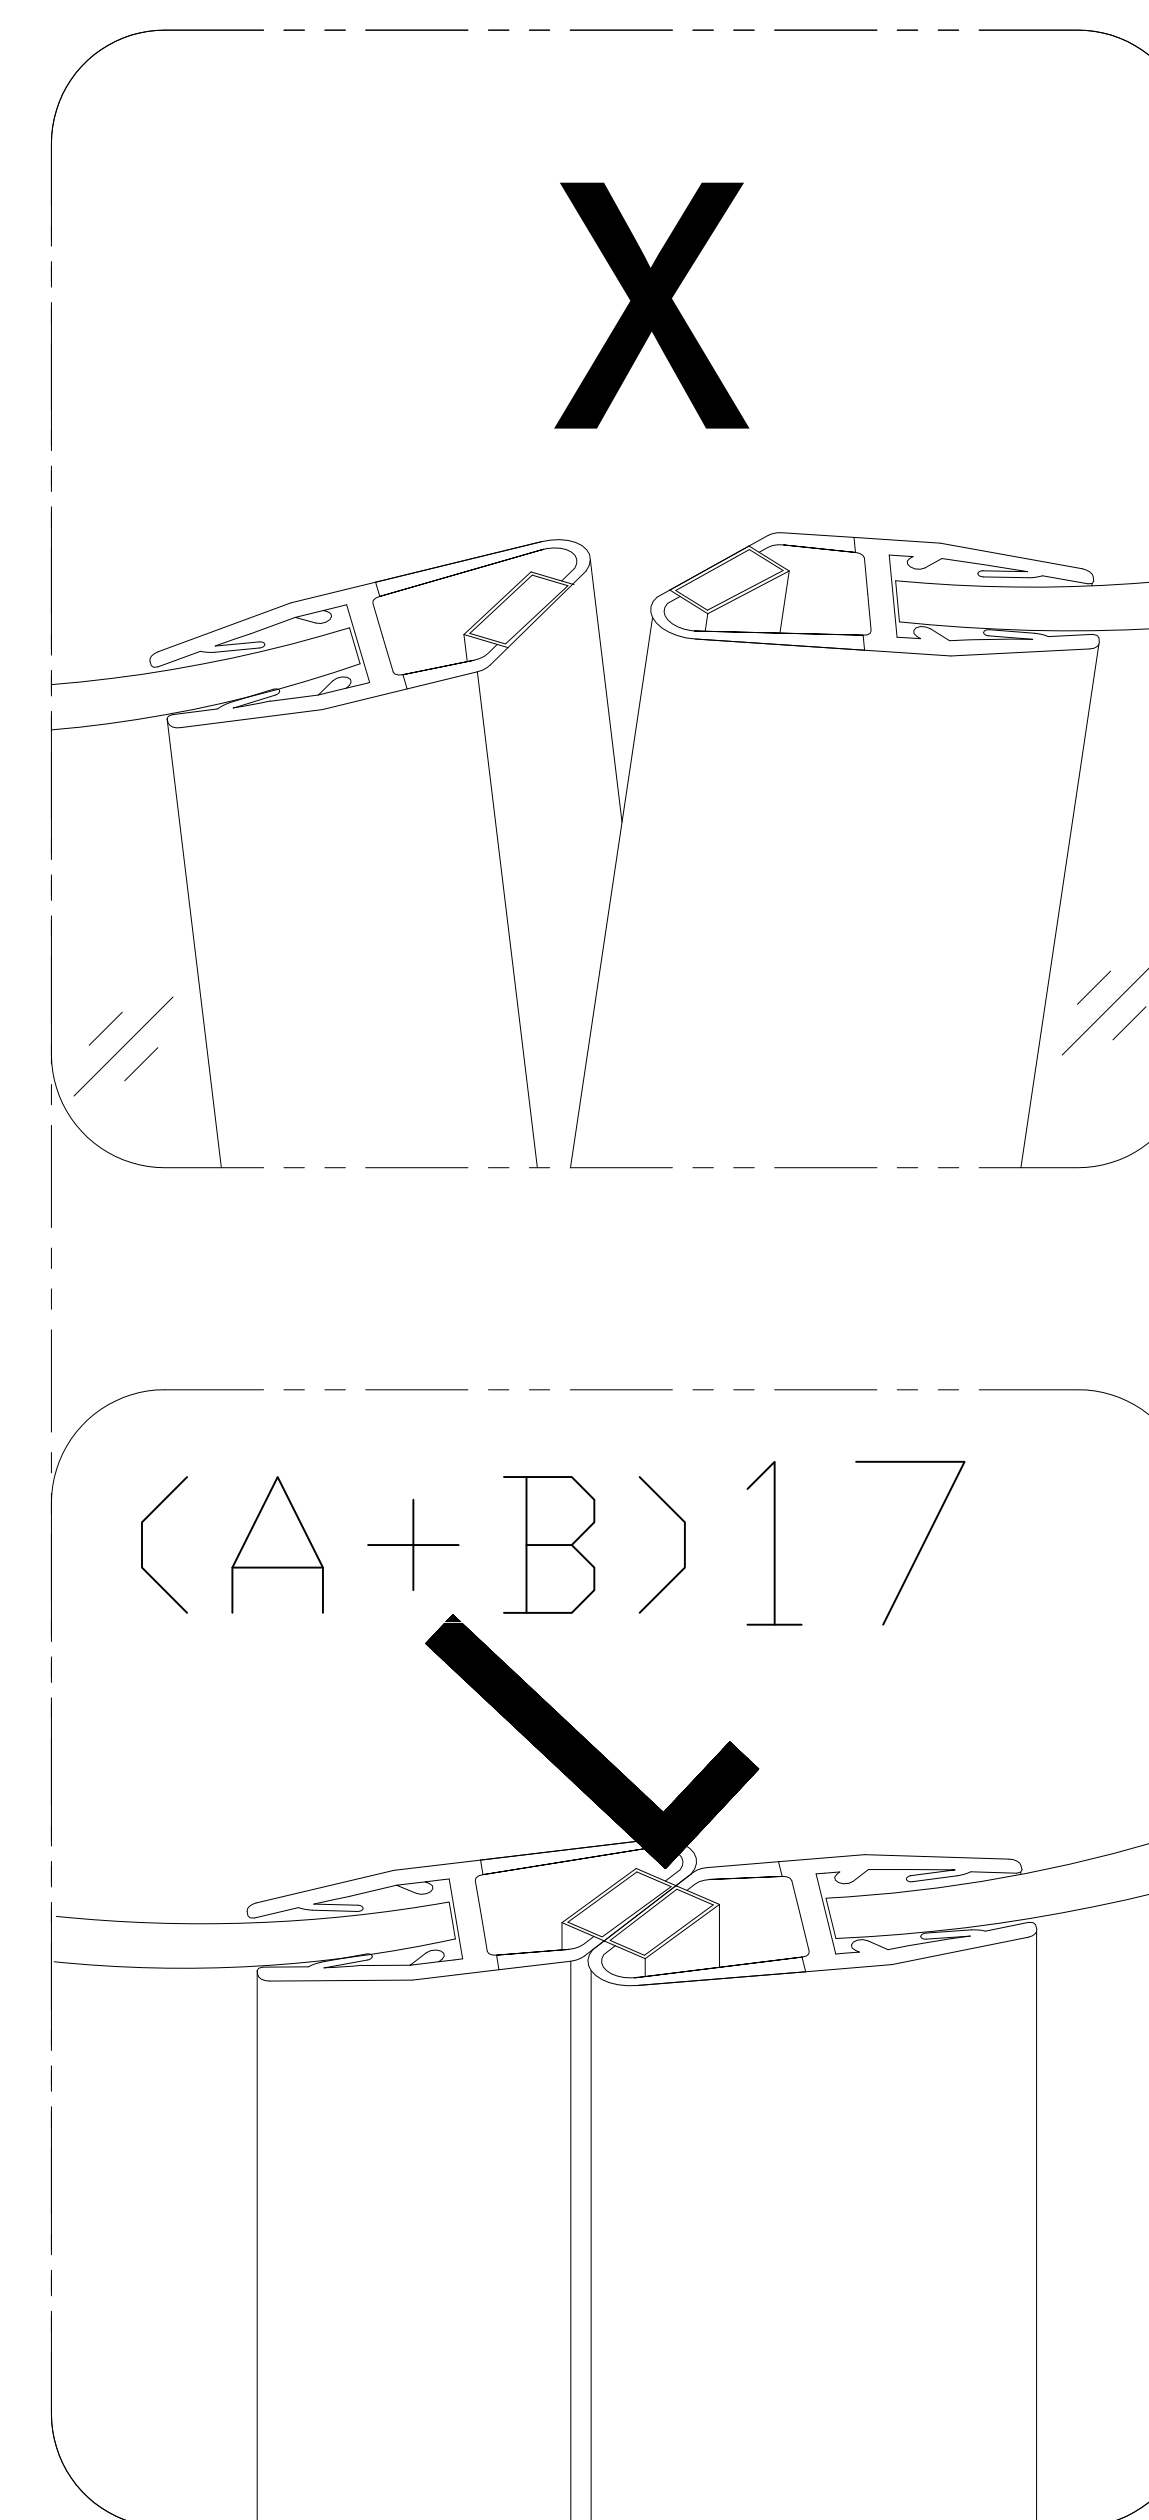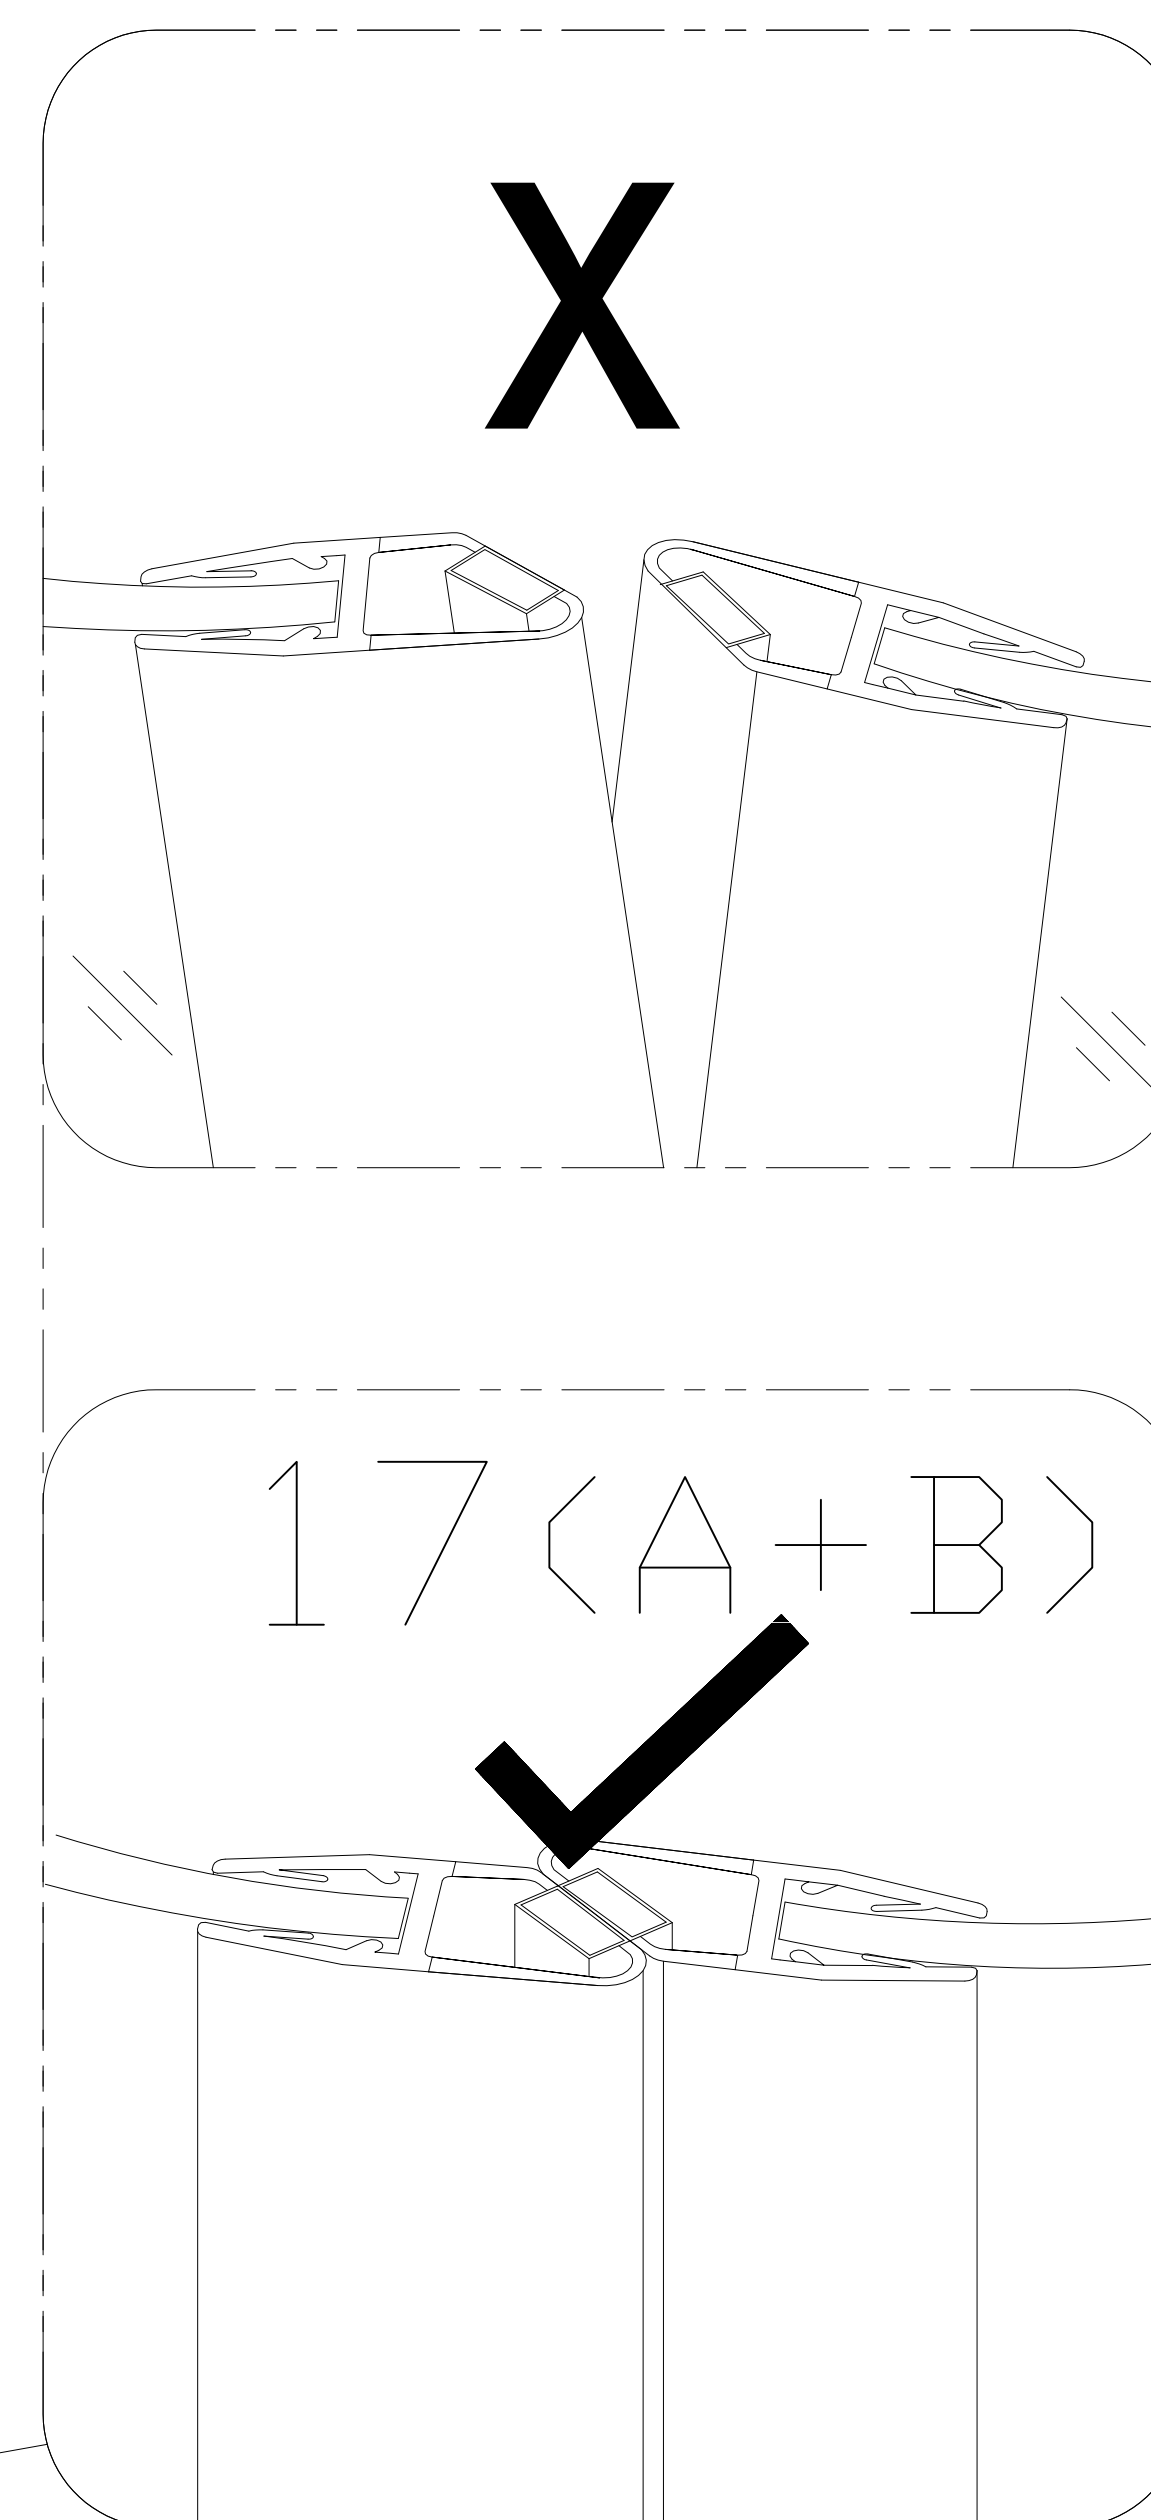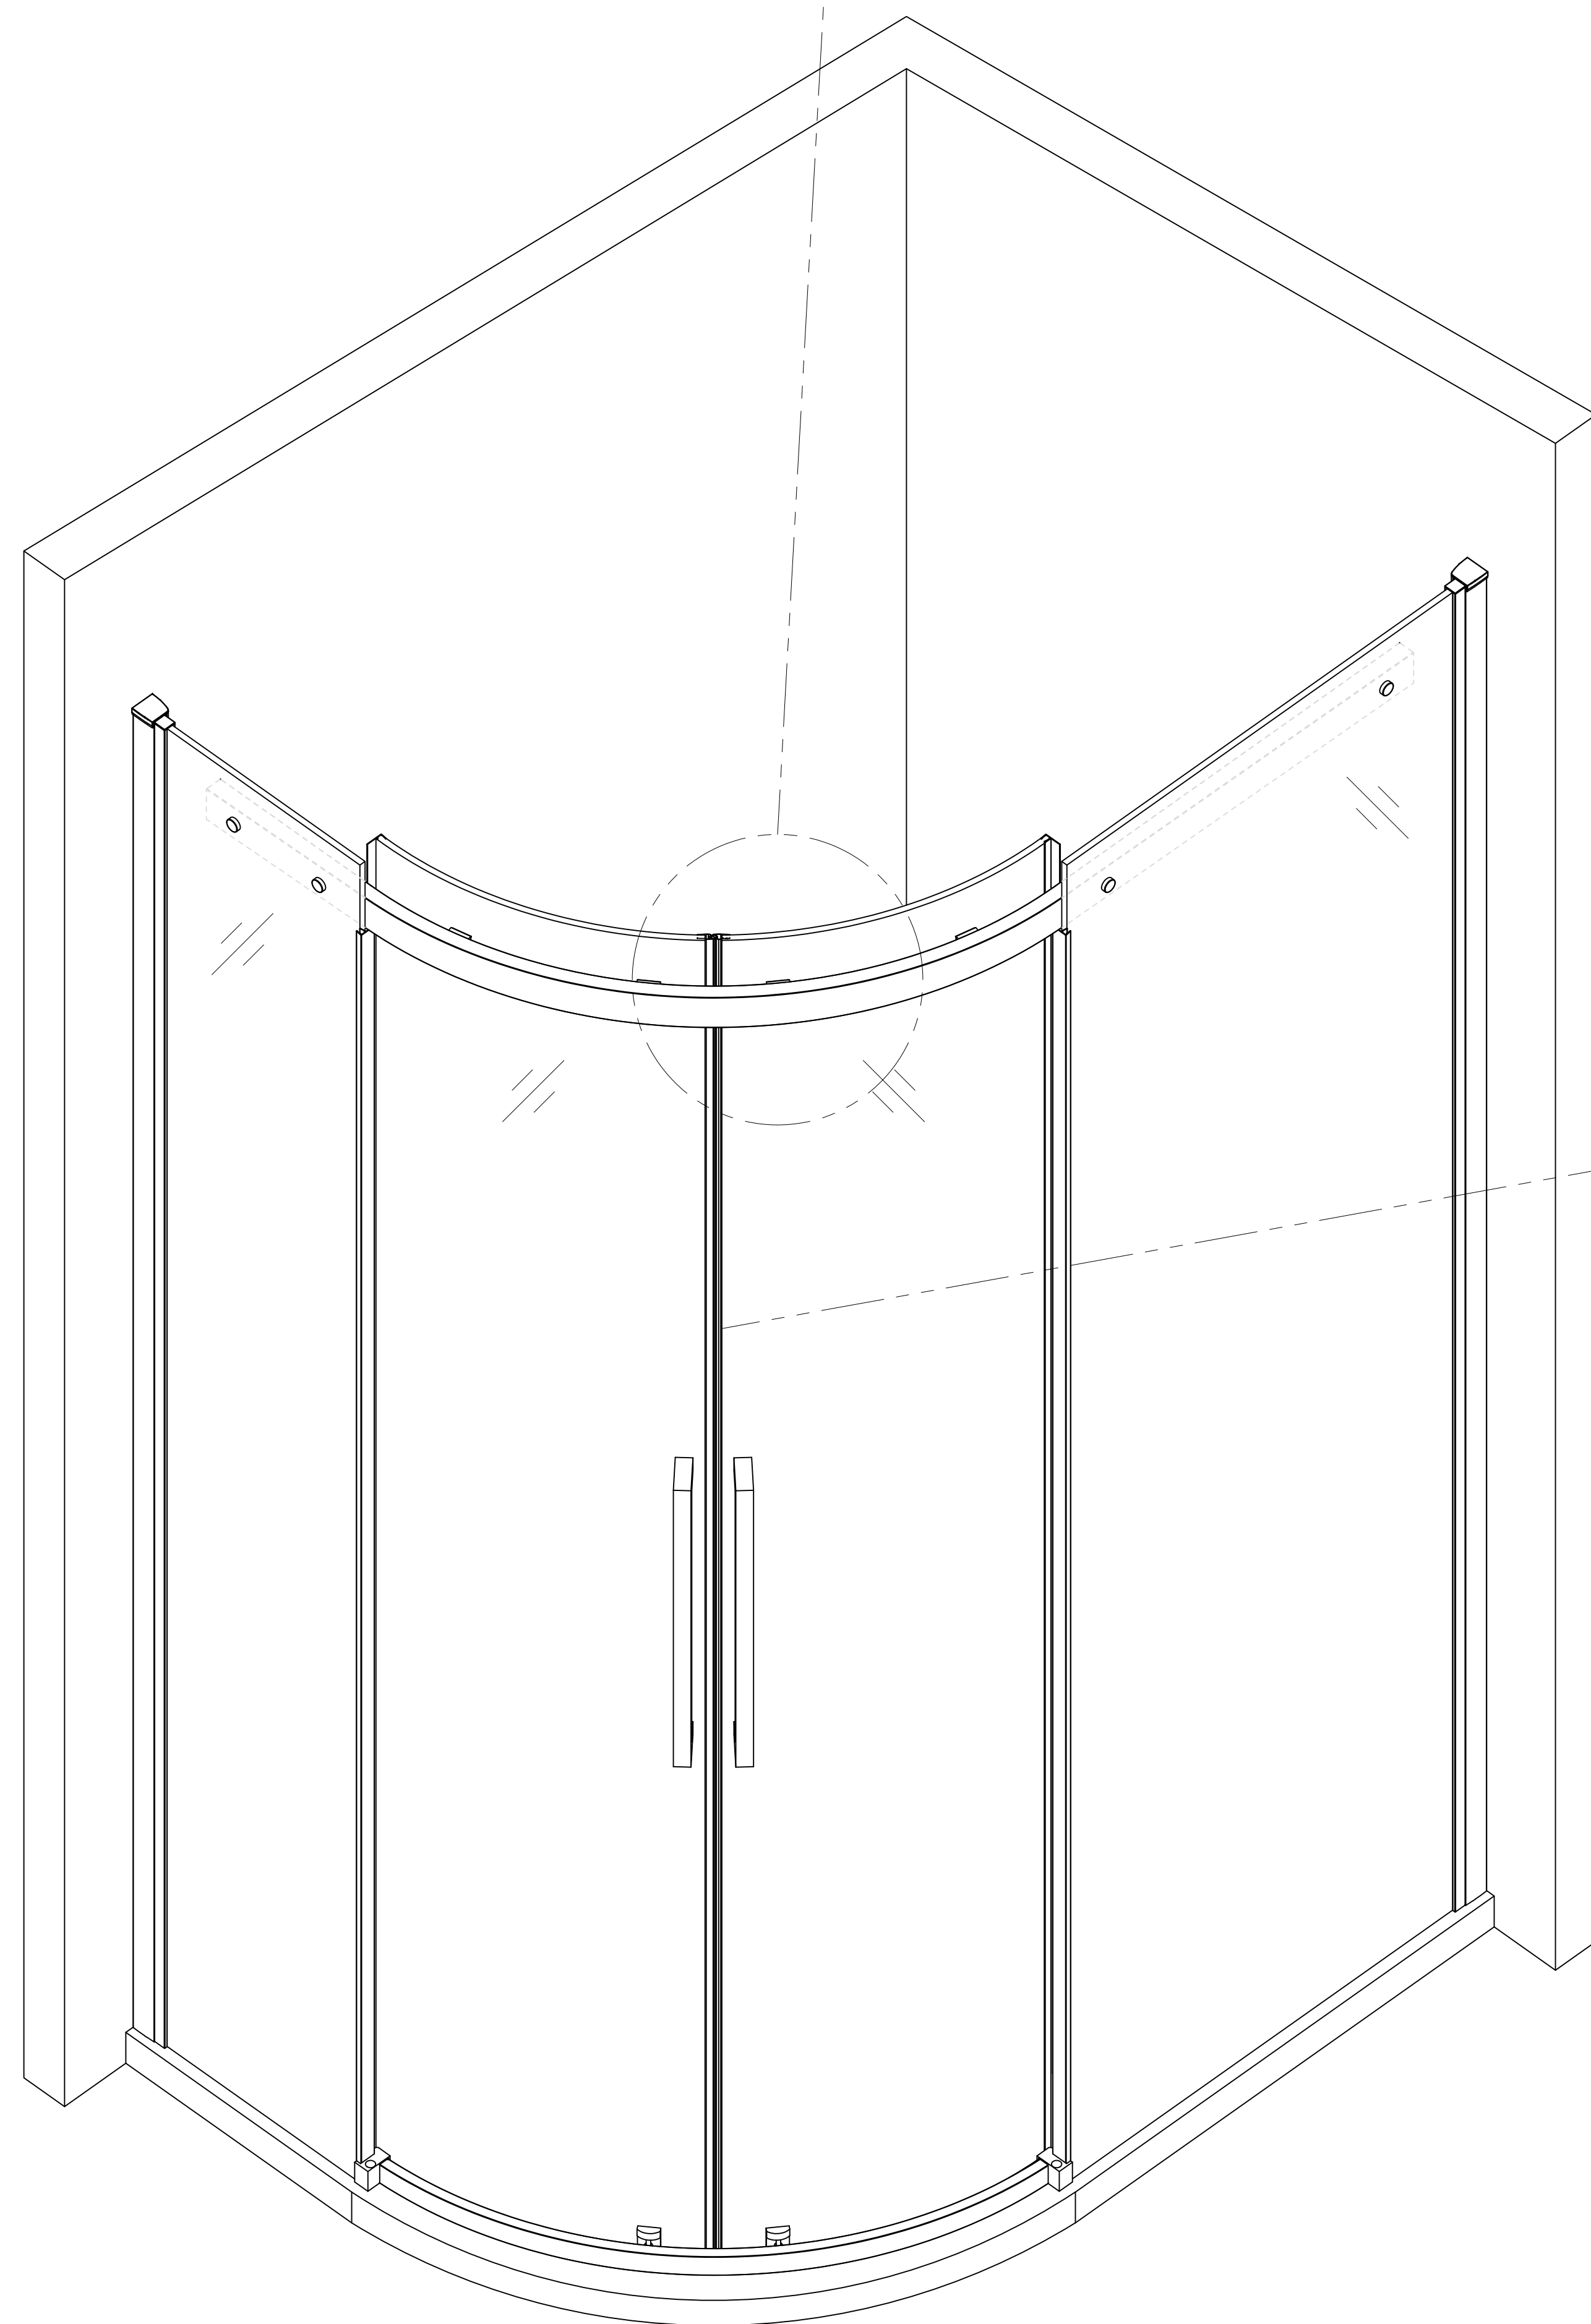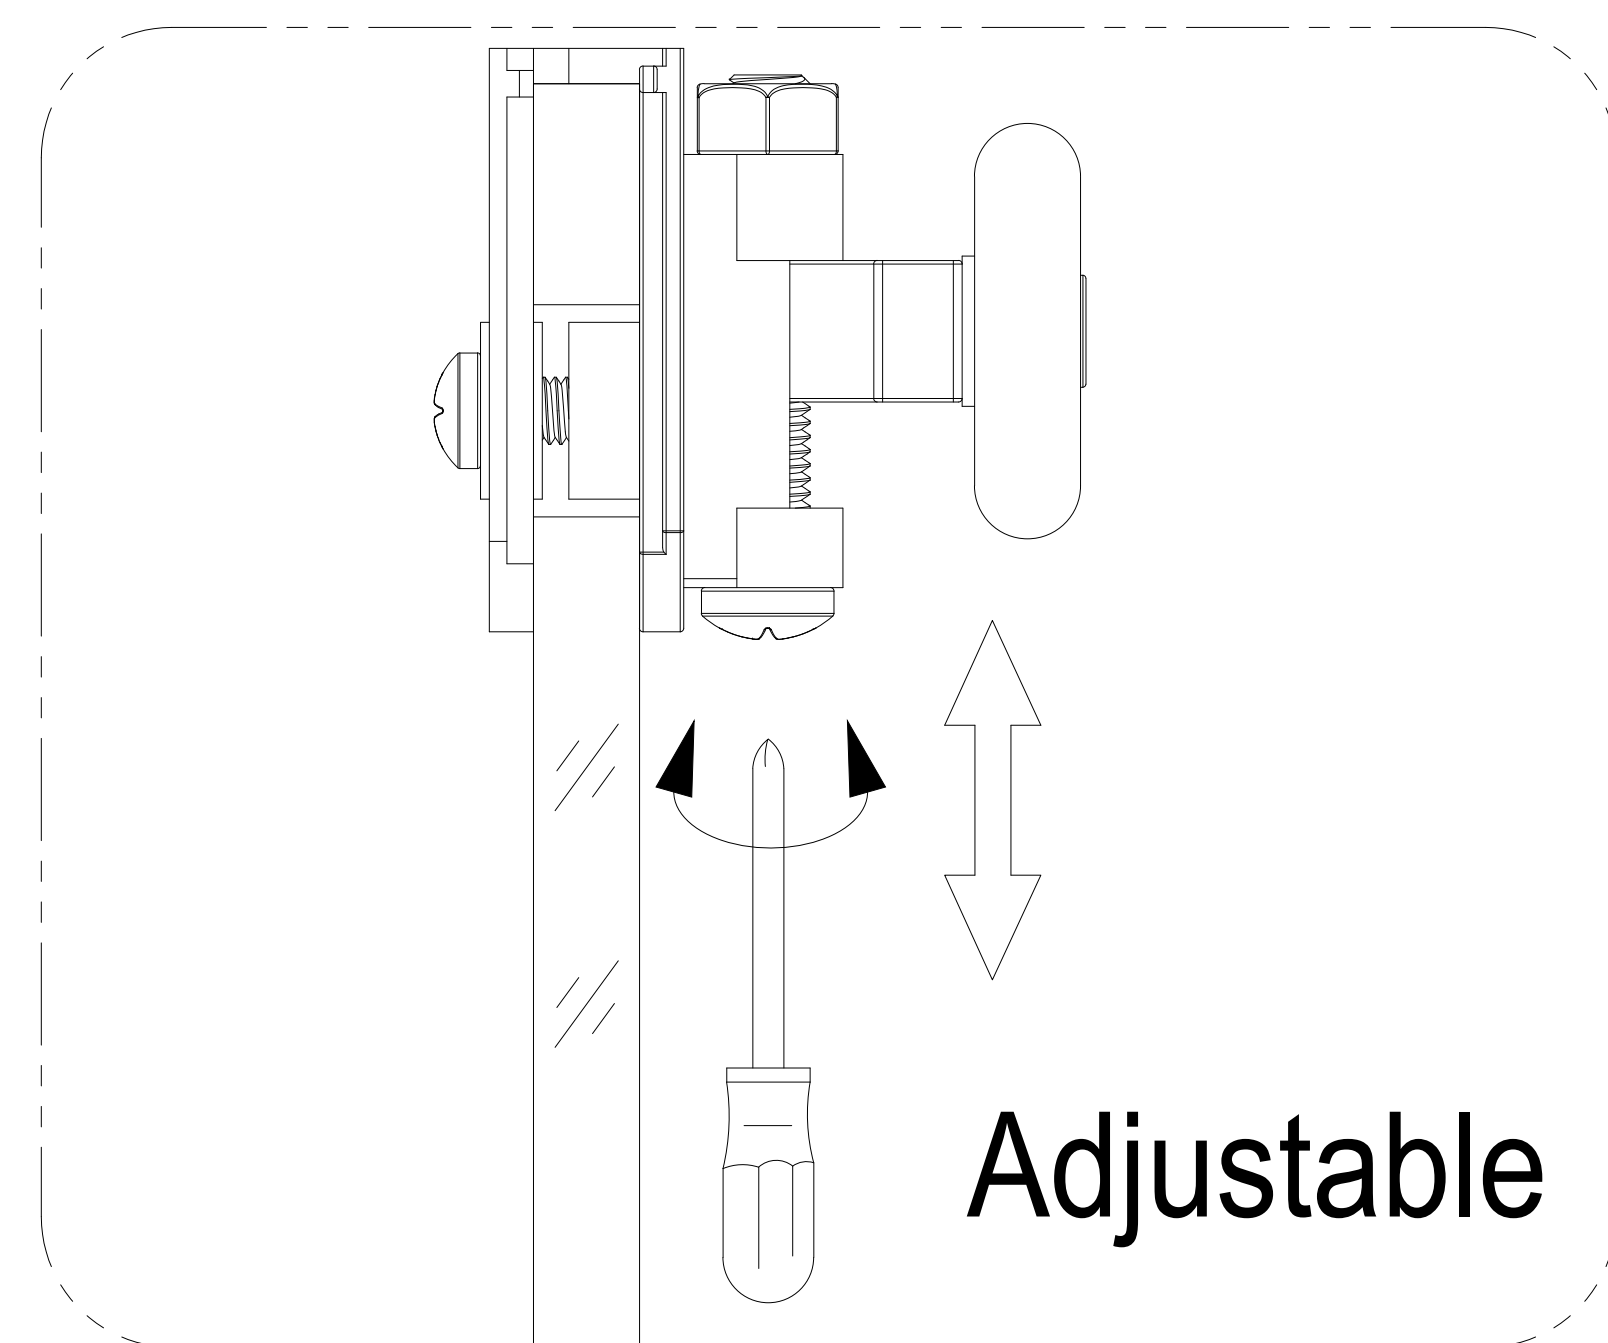

Fit magnetic seals and handles



12R

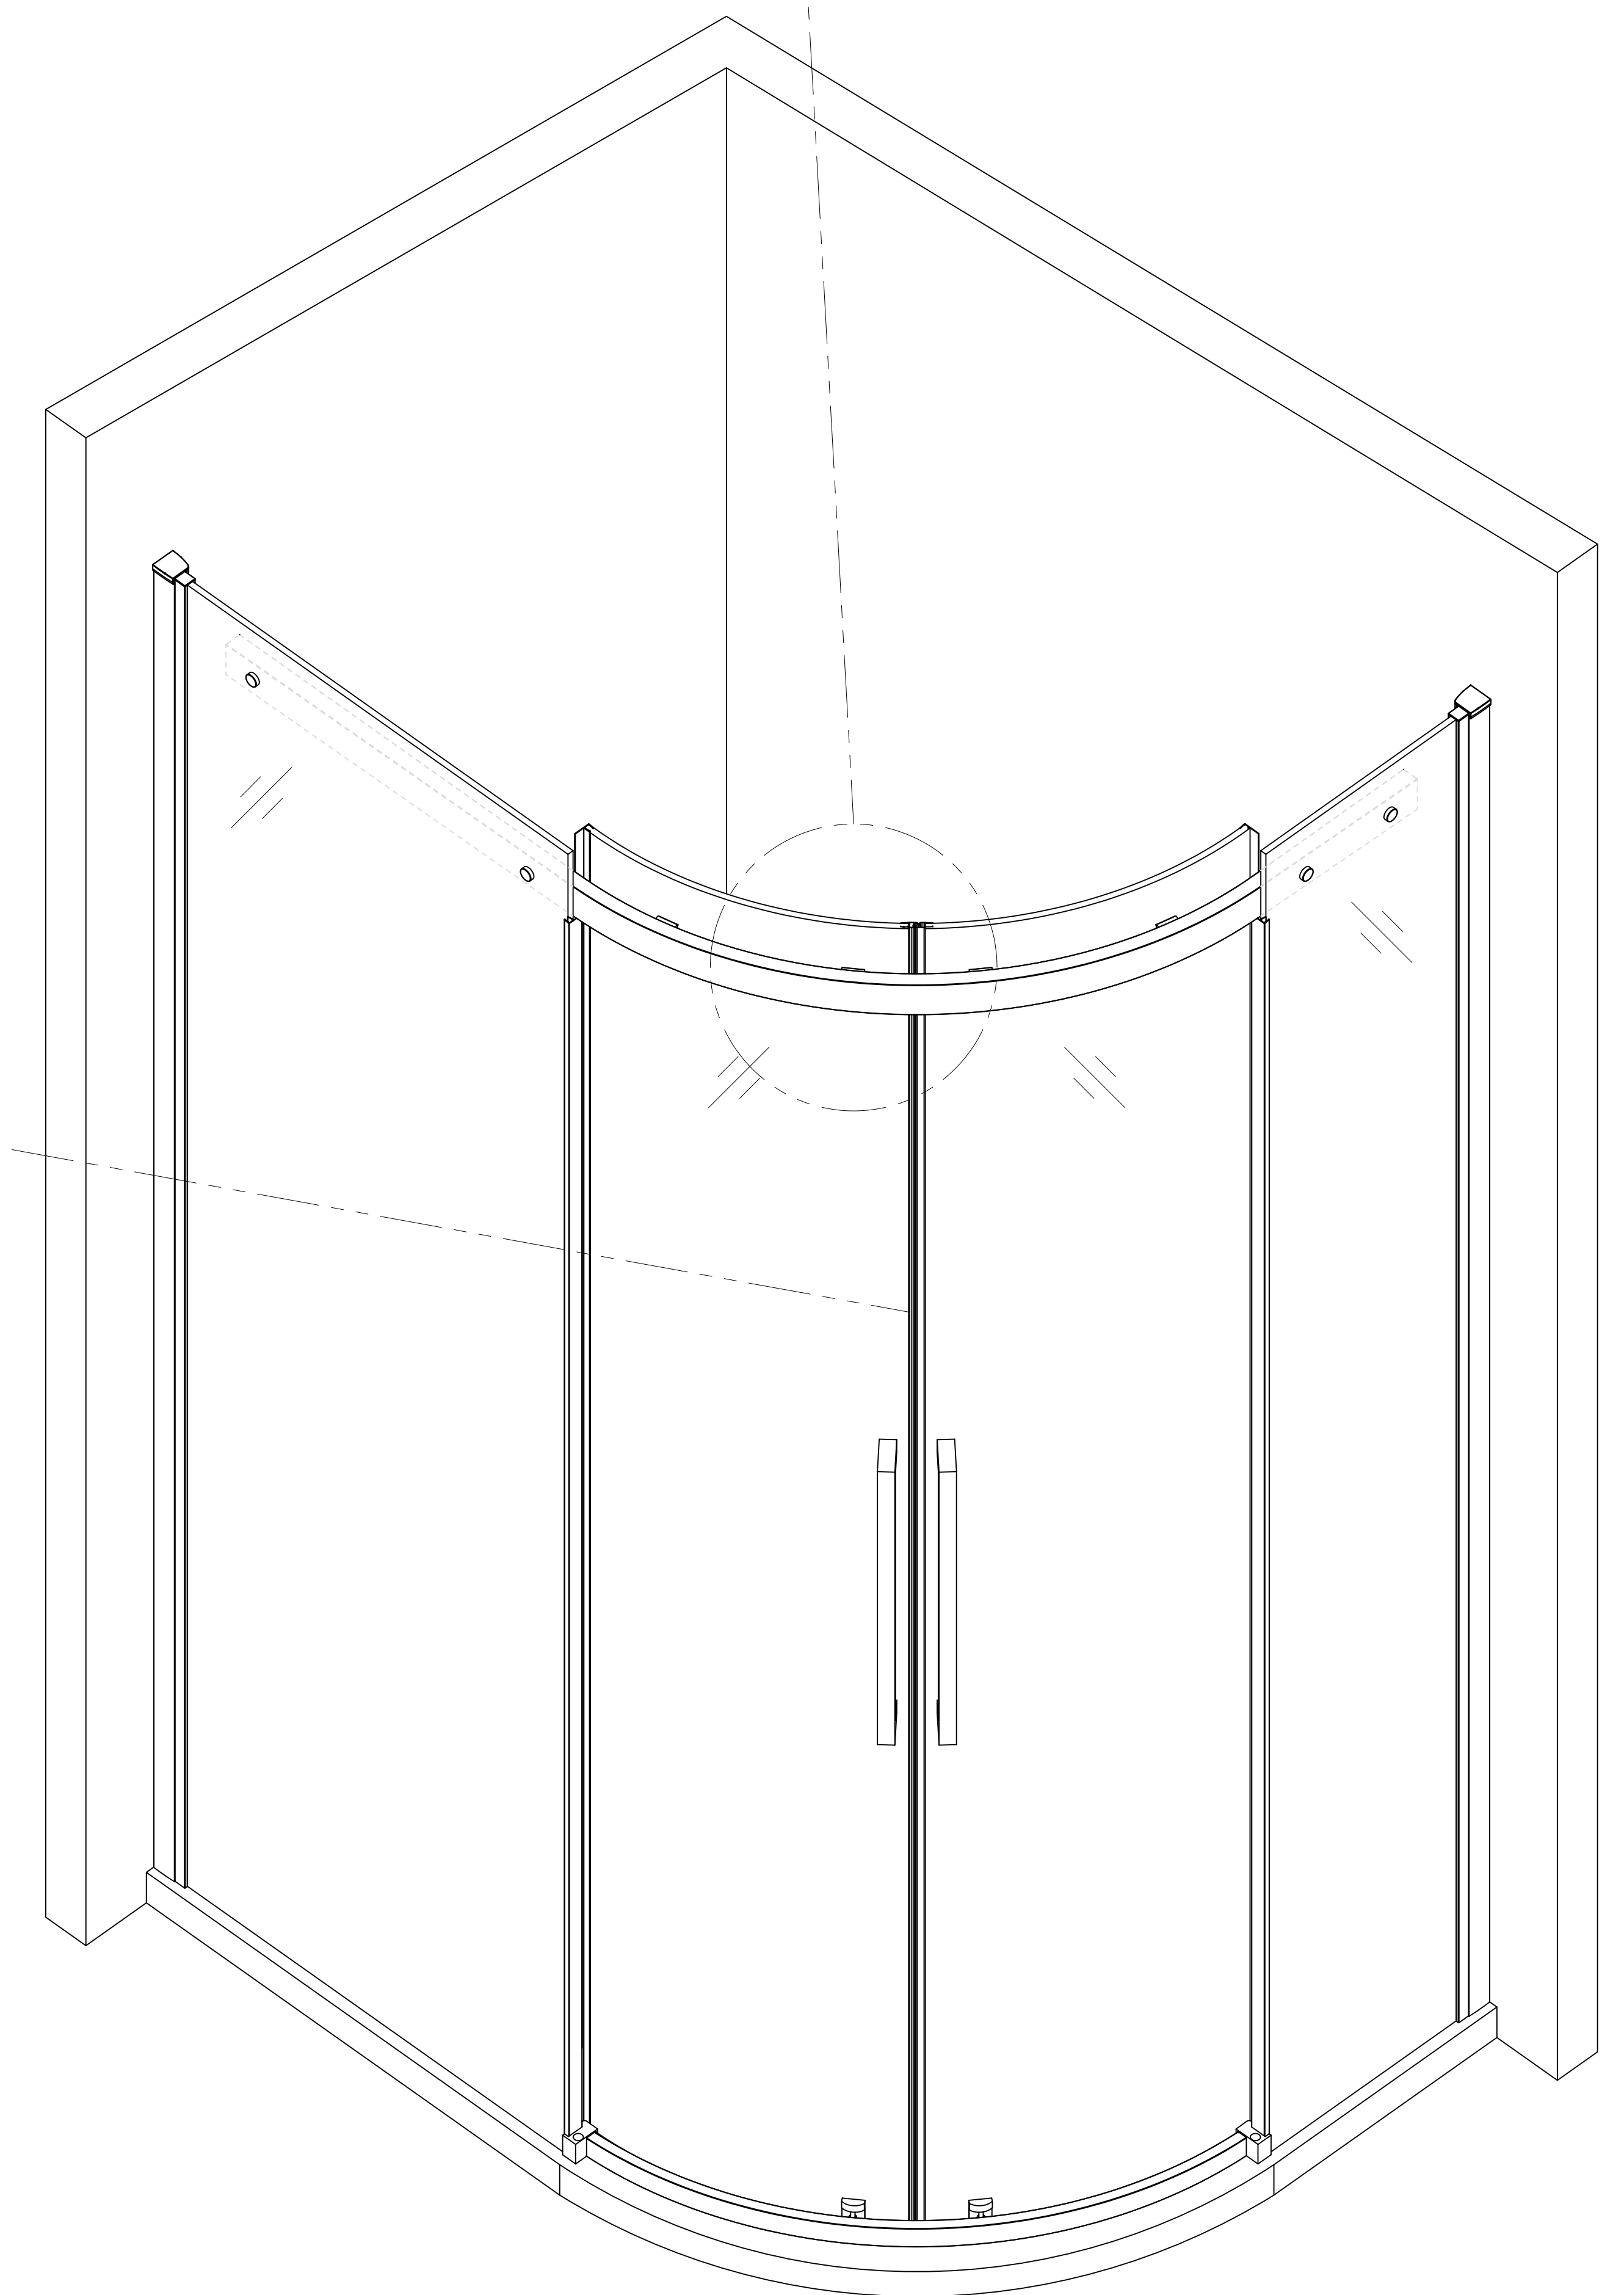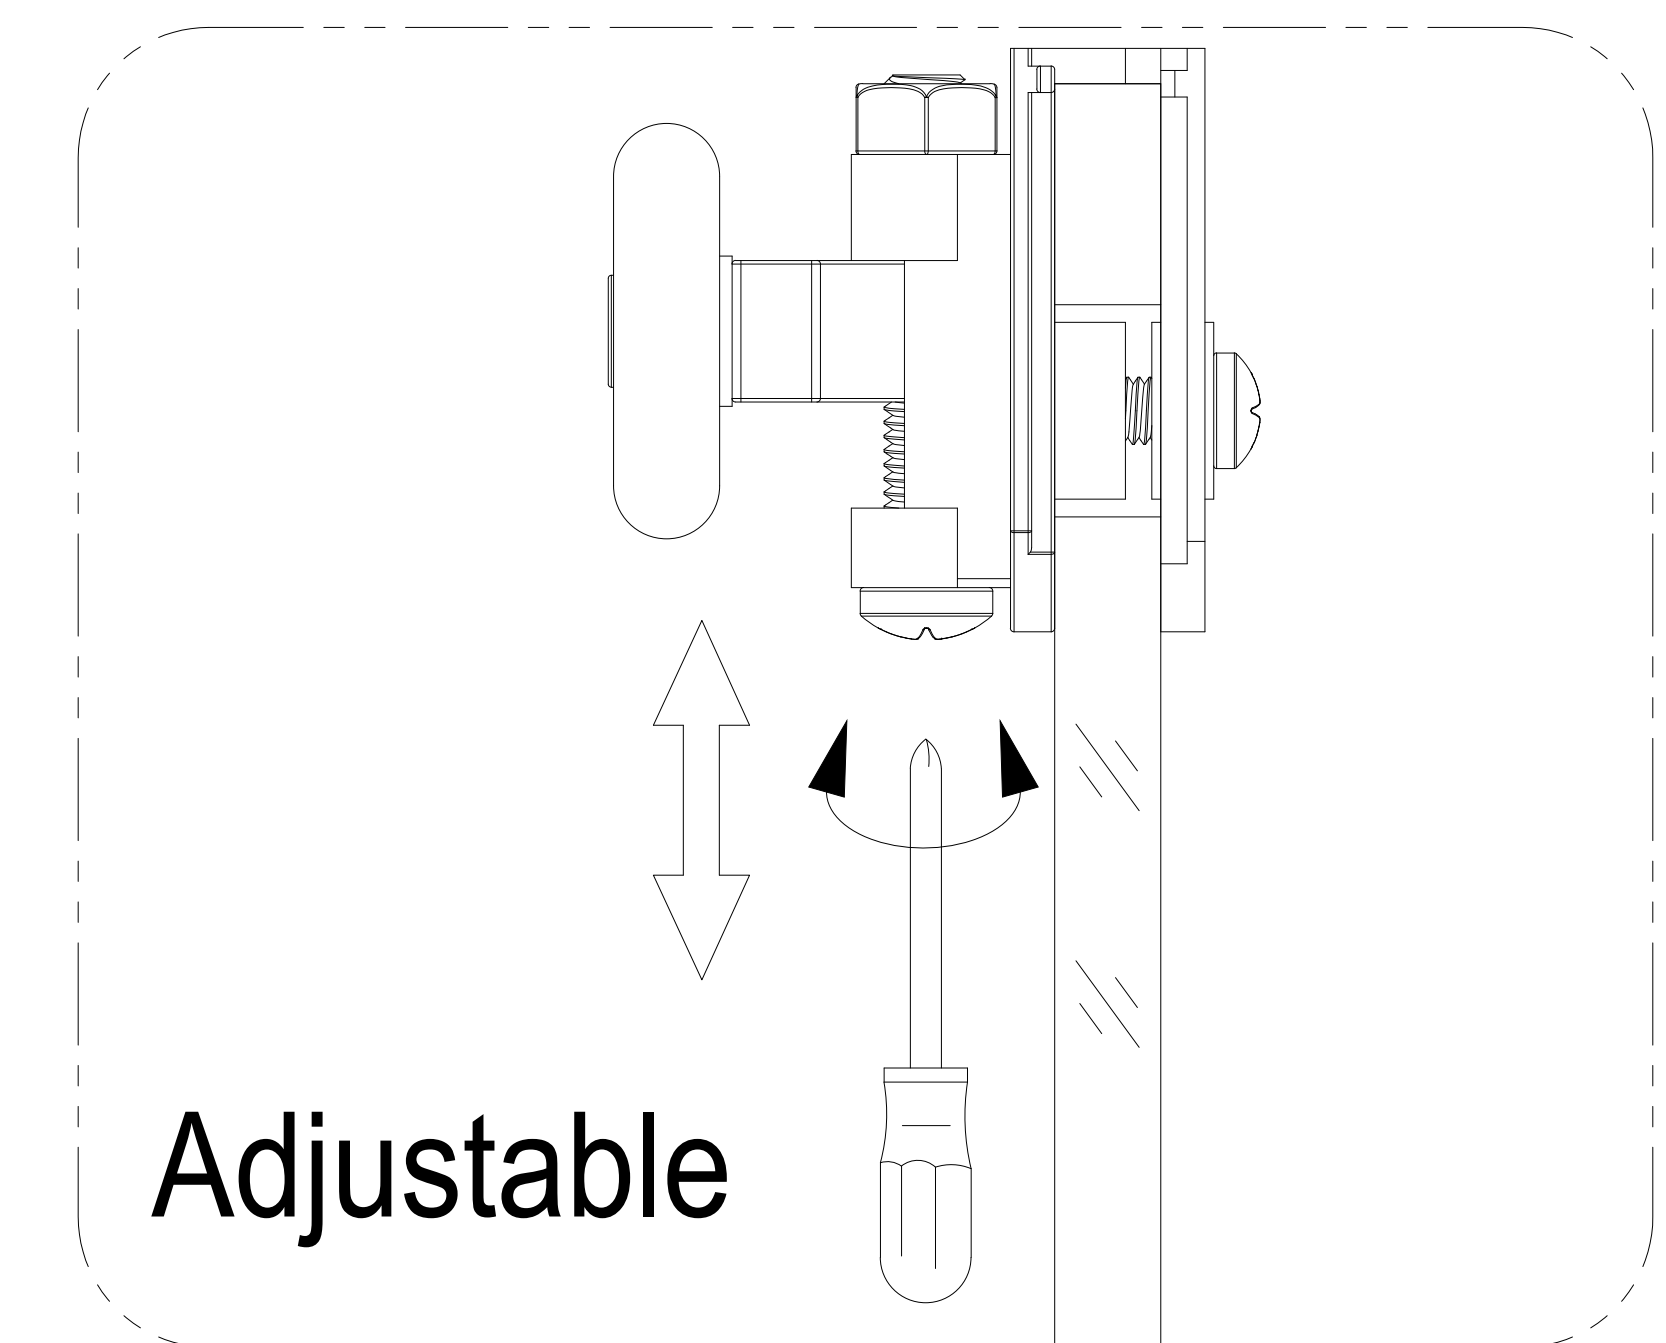


Fit magnetic seals and handles

13L

13R

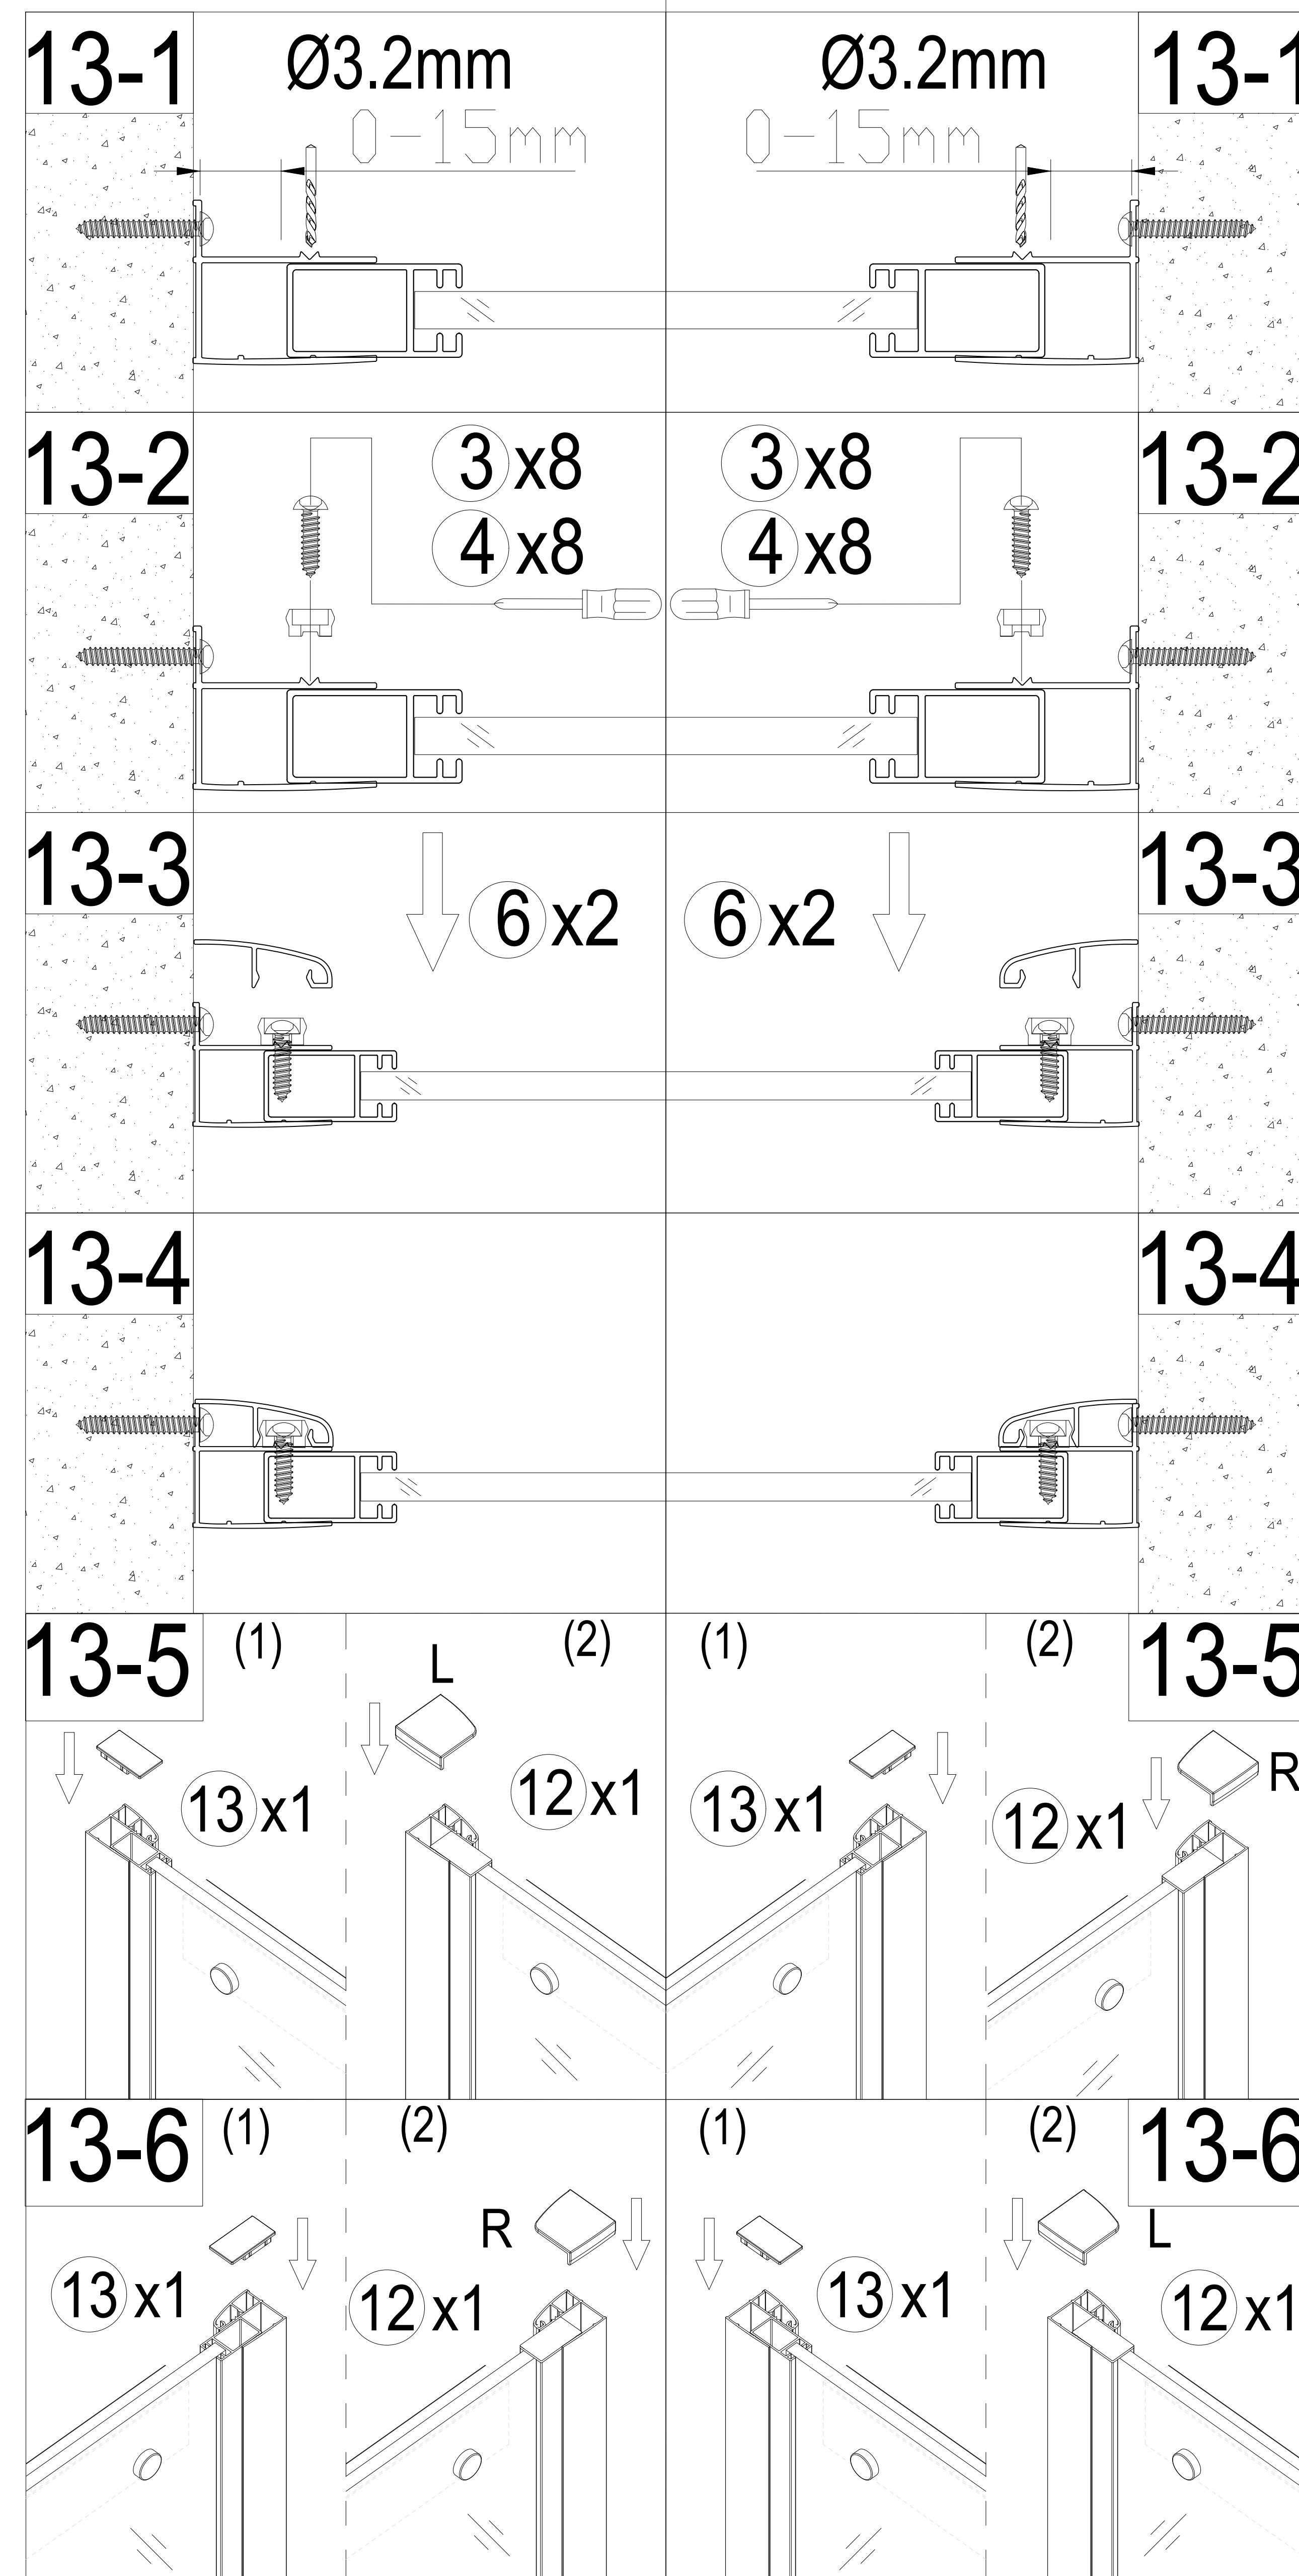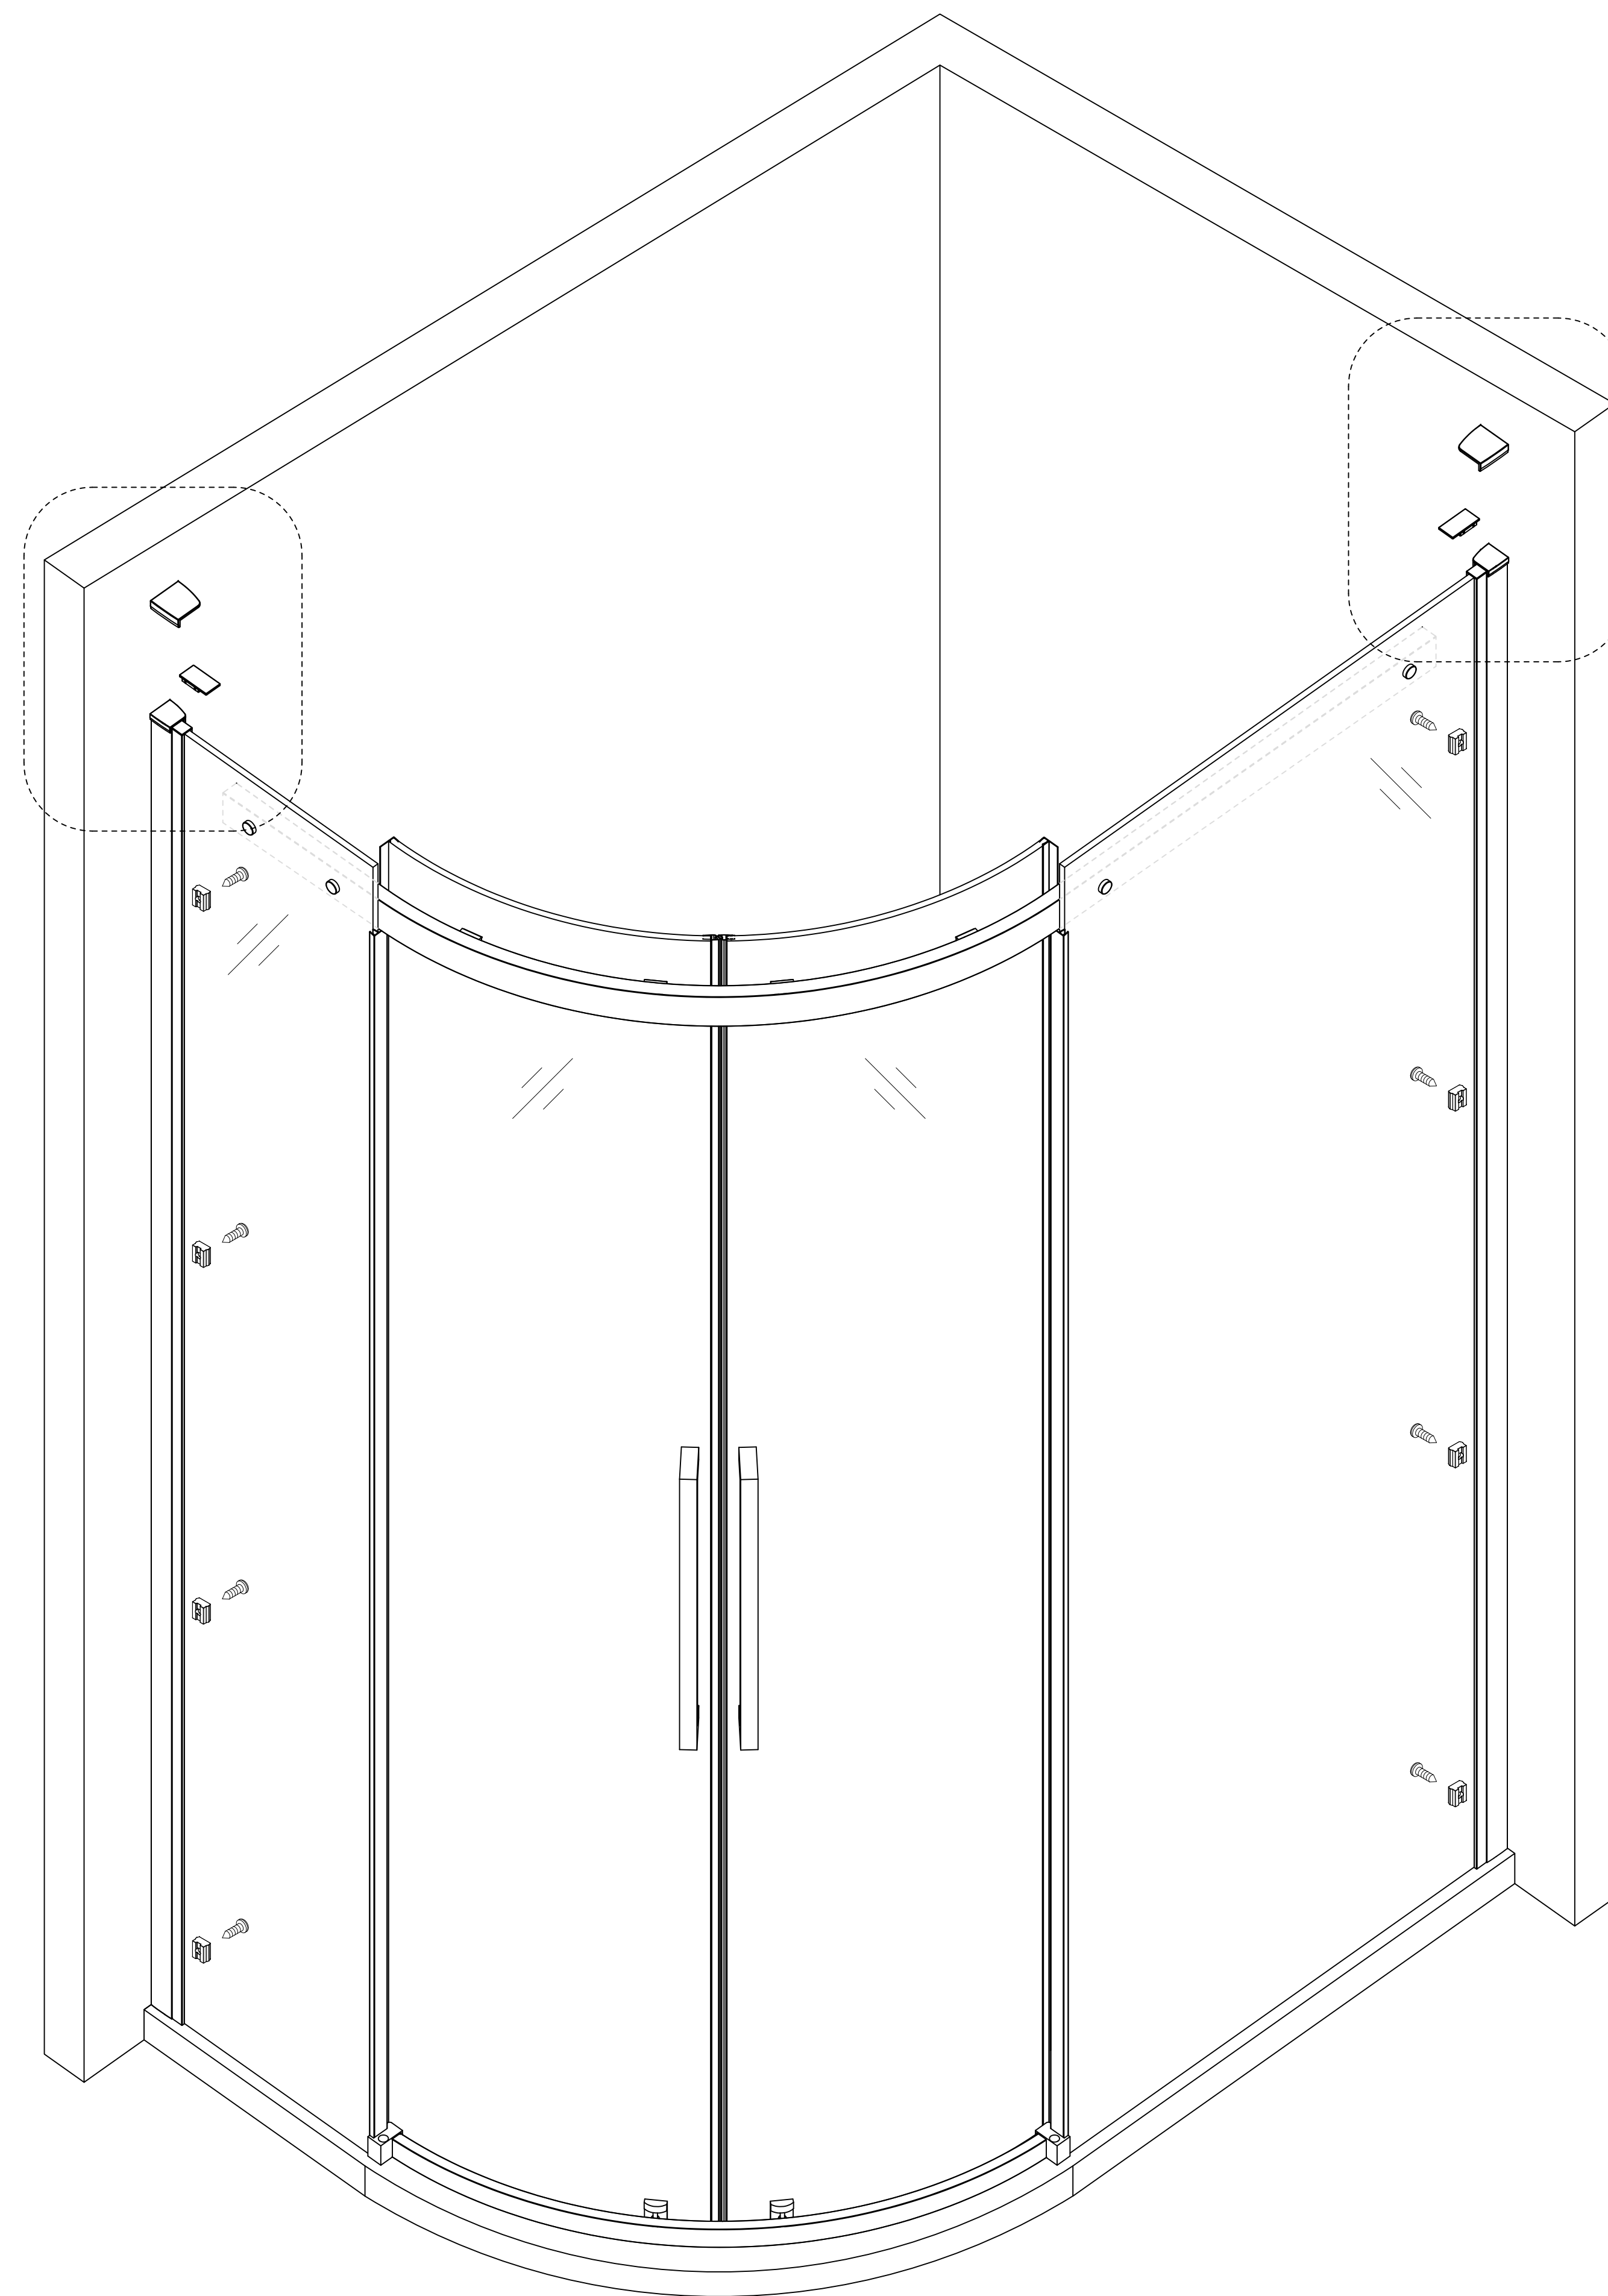

Install profile cover caps

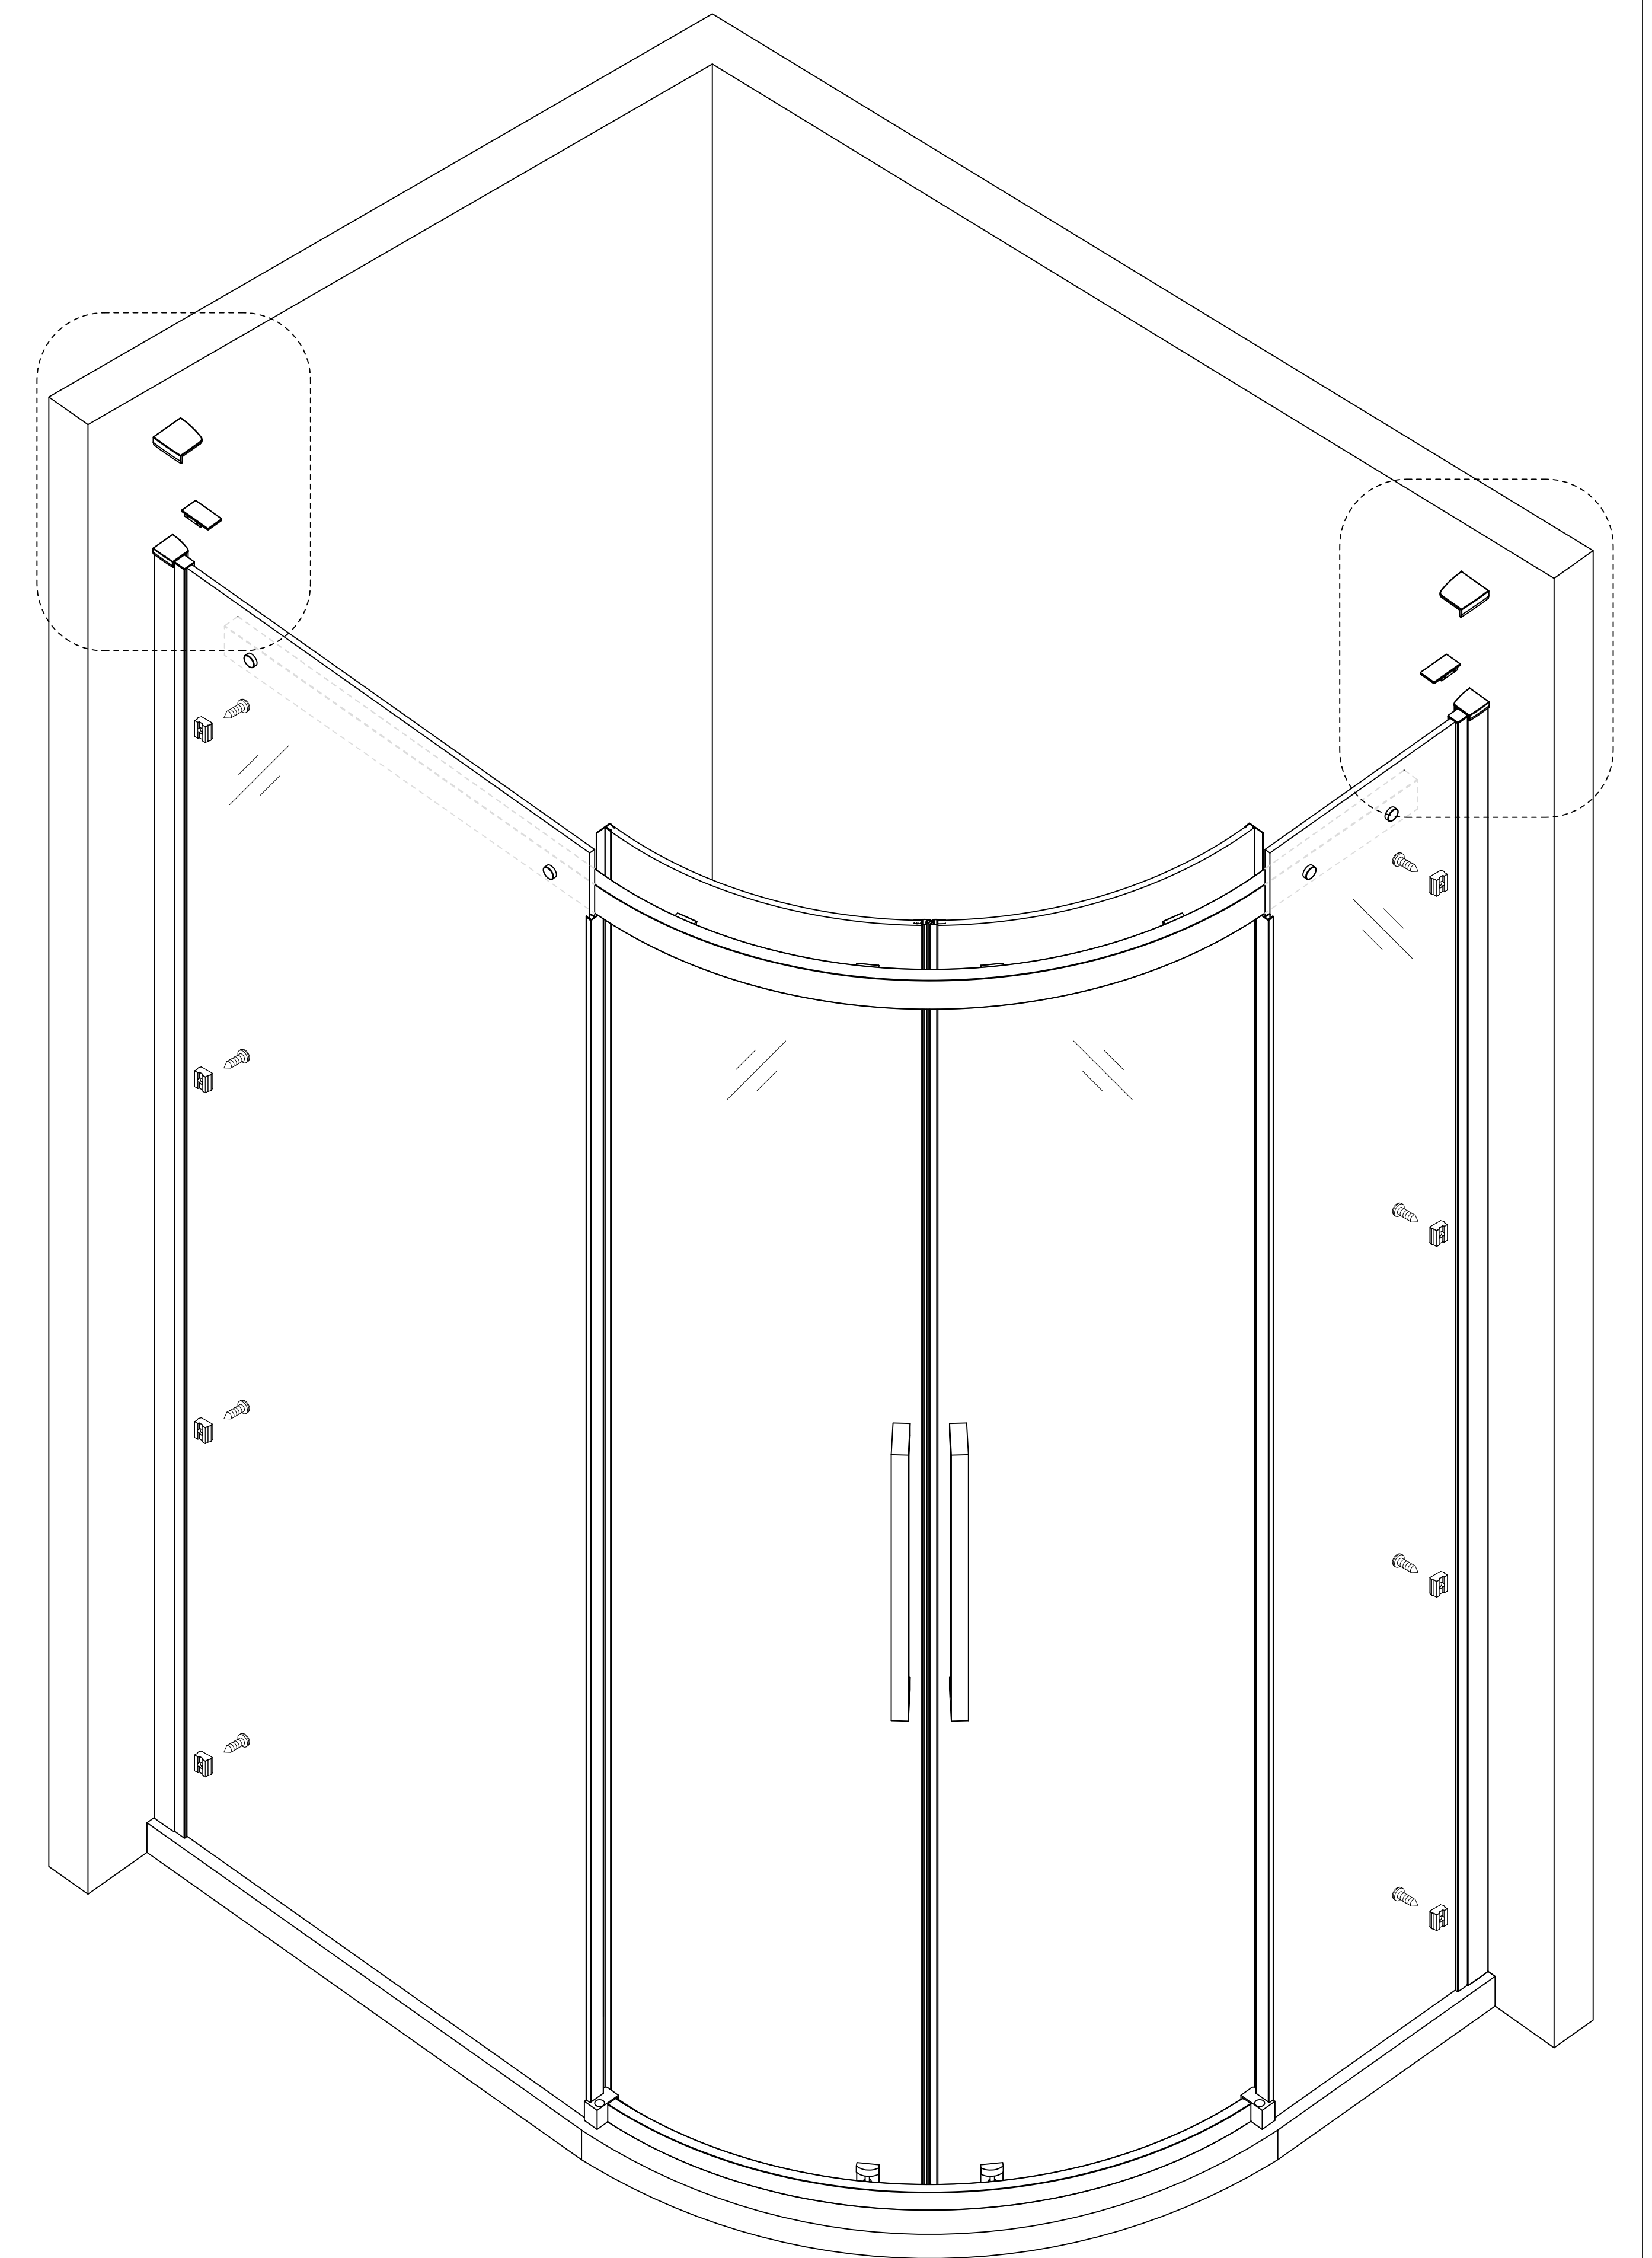


Install profile cover caps



Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

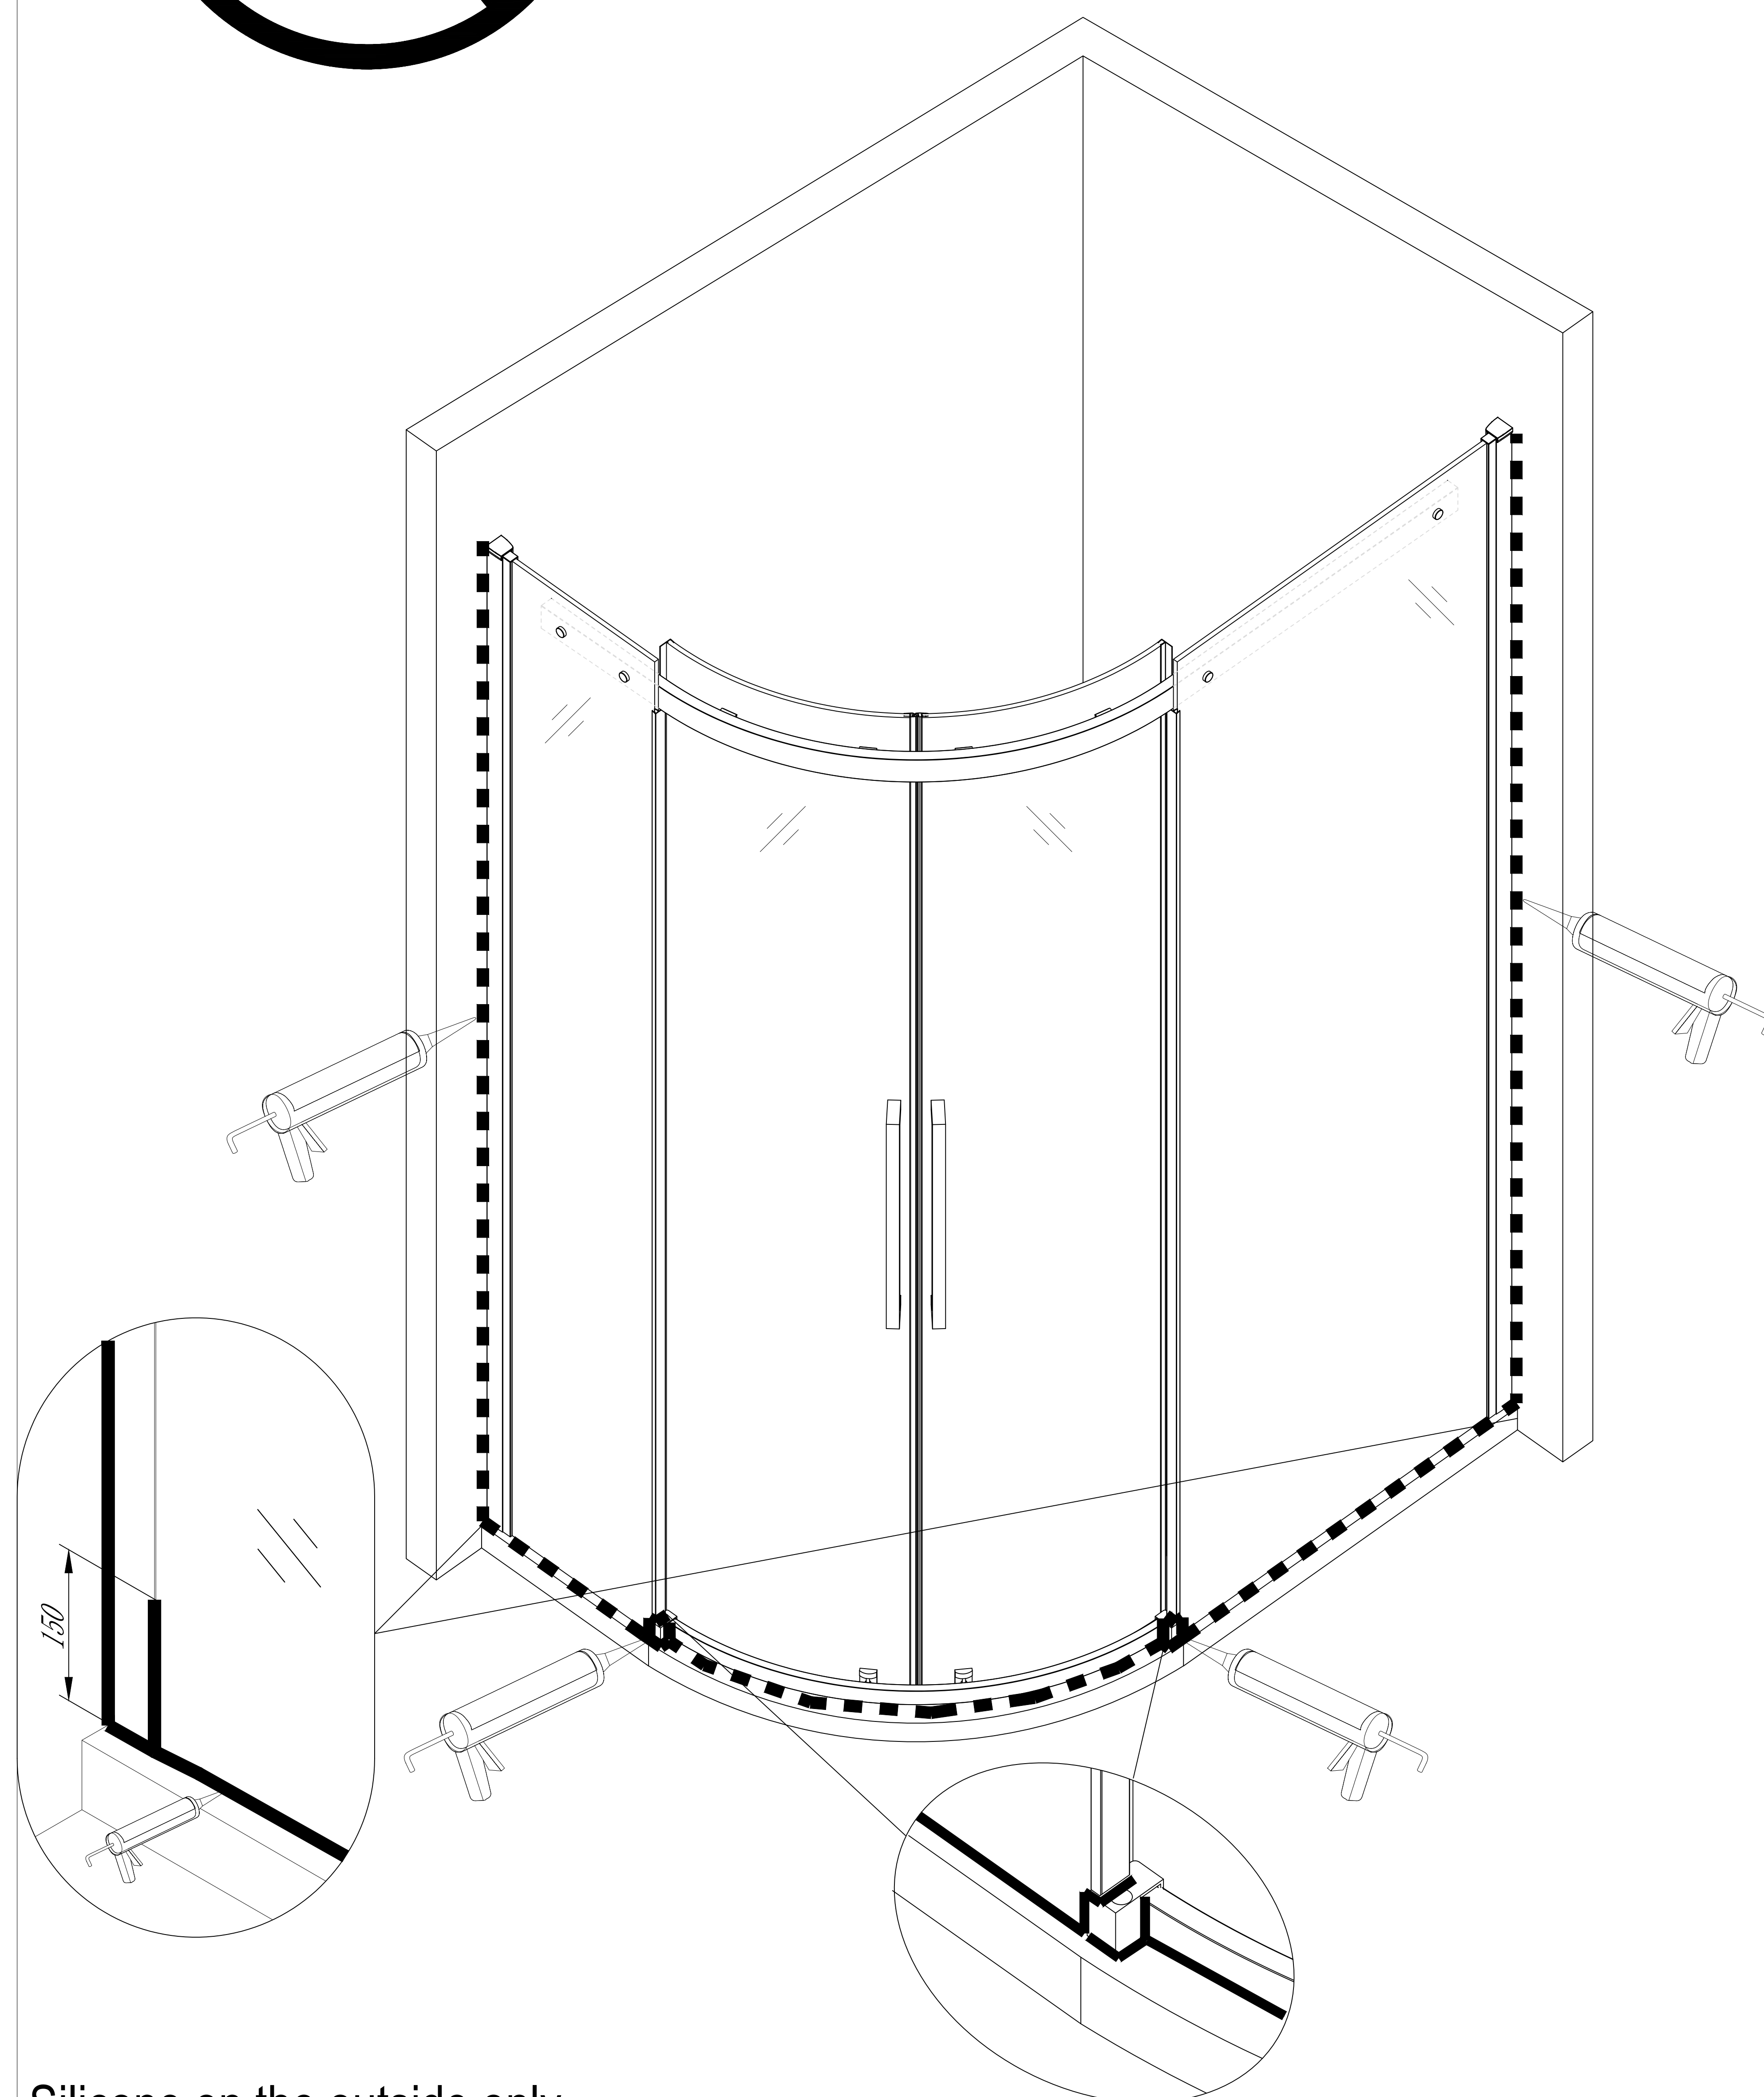


Silicone on the outside only



Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

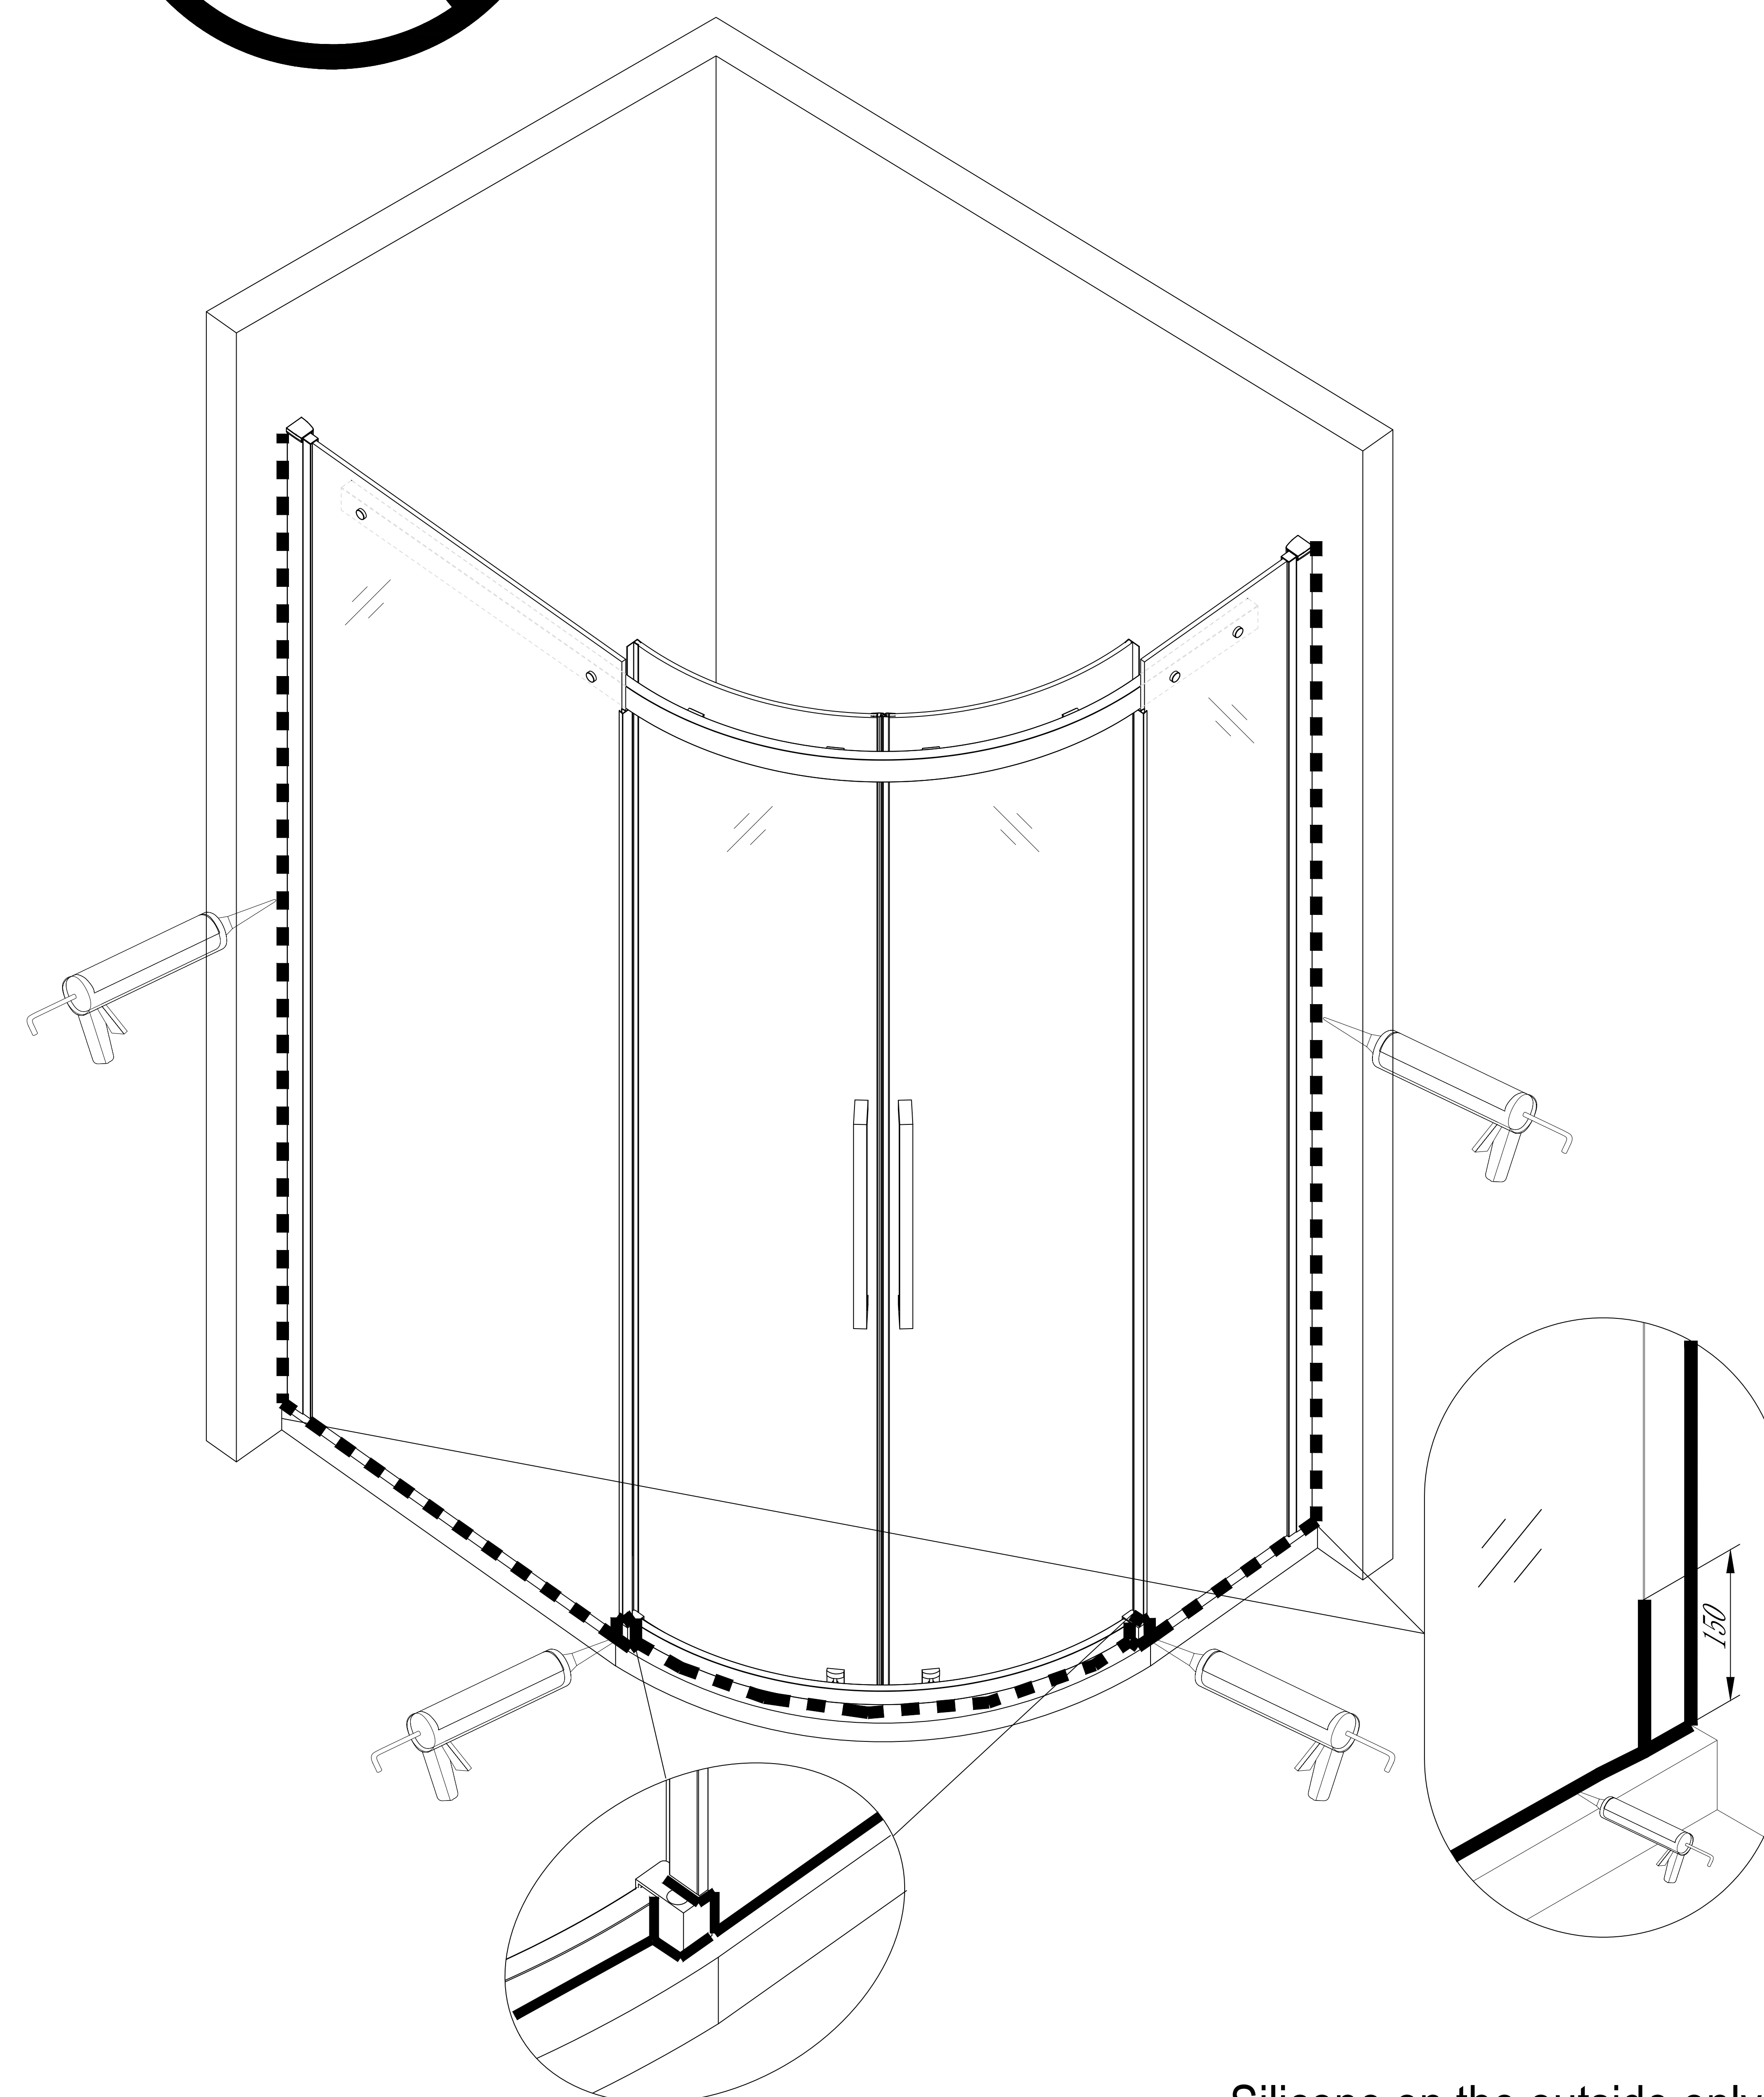

Silicone on the outside only



**Eastbrook Road, Gloucester GL4 3DB**

**Technical Helpline: 01452 317890**

**Email: [technical@eastbrookco.com](mailto:technical@eastbrookco.com)**

### **Cleaning and Maintenance of Shower Enclosures**

**Do not clean the shower enclosure with irritant detergents such as alcohol, bleach or other chemical cleaners.**

**Only clean with mild soapy water or a proprietary cleaner where the label advises it is suitable for the materials the enclosure is constructed from. Test on a small area first.**

**For treating limescale we would recommend distilled vinegar in a half and half solution with water.**

**Following installation should you find that there is a notable noise when the glass door moves you may add a small amount of silicon lubricant onto the roller wheels and tracks, hinges or clips.**

**It is the responsibility of the product owner to maintain the product as recommended above. Also, to check for parts which have broken or become loose to protect against failure of the enclosure.**