



Before installation ensure all measurements on the product are correct.

Installation of wall-hung WC pan

1. Install both waste outlet and water inlet in desired position and ensure that bolt holes are ready for installation.

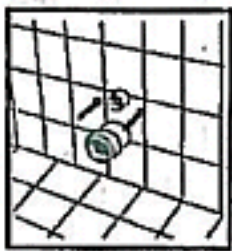


2. Determine the correct length of the bolts for installation.

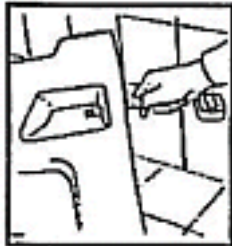


3. Cut off any excess on the bolt.



4. Fix wall-hung WC pan into position.

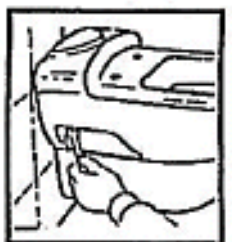

5. Fix plastic bolt caps onto the nuts.

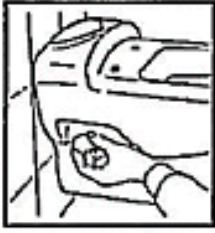

6. Install toilet set and cover.

