



49.3226A/49.3227A/49.3228A/49.3229A/49.3231A/49.3232A/
49.3233A/49.3234A/49.3235A/49.3236A/49.3204A/49.3205A/
49.3206A/49.3207A/

L

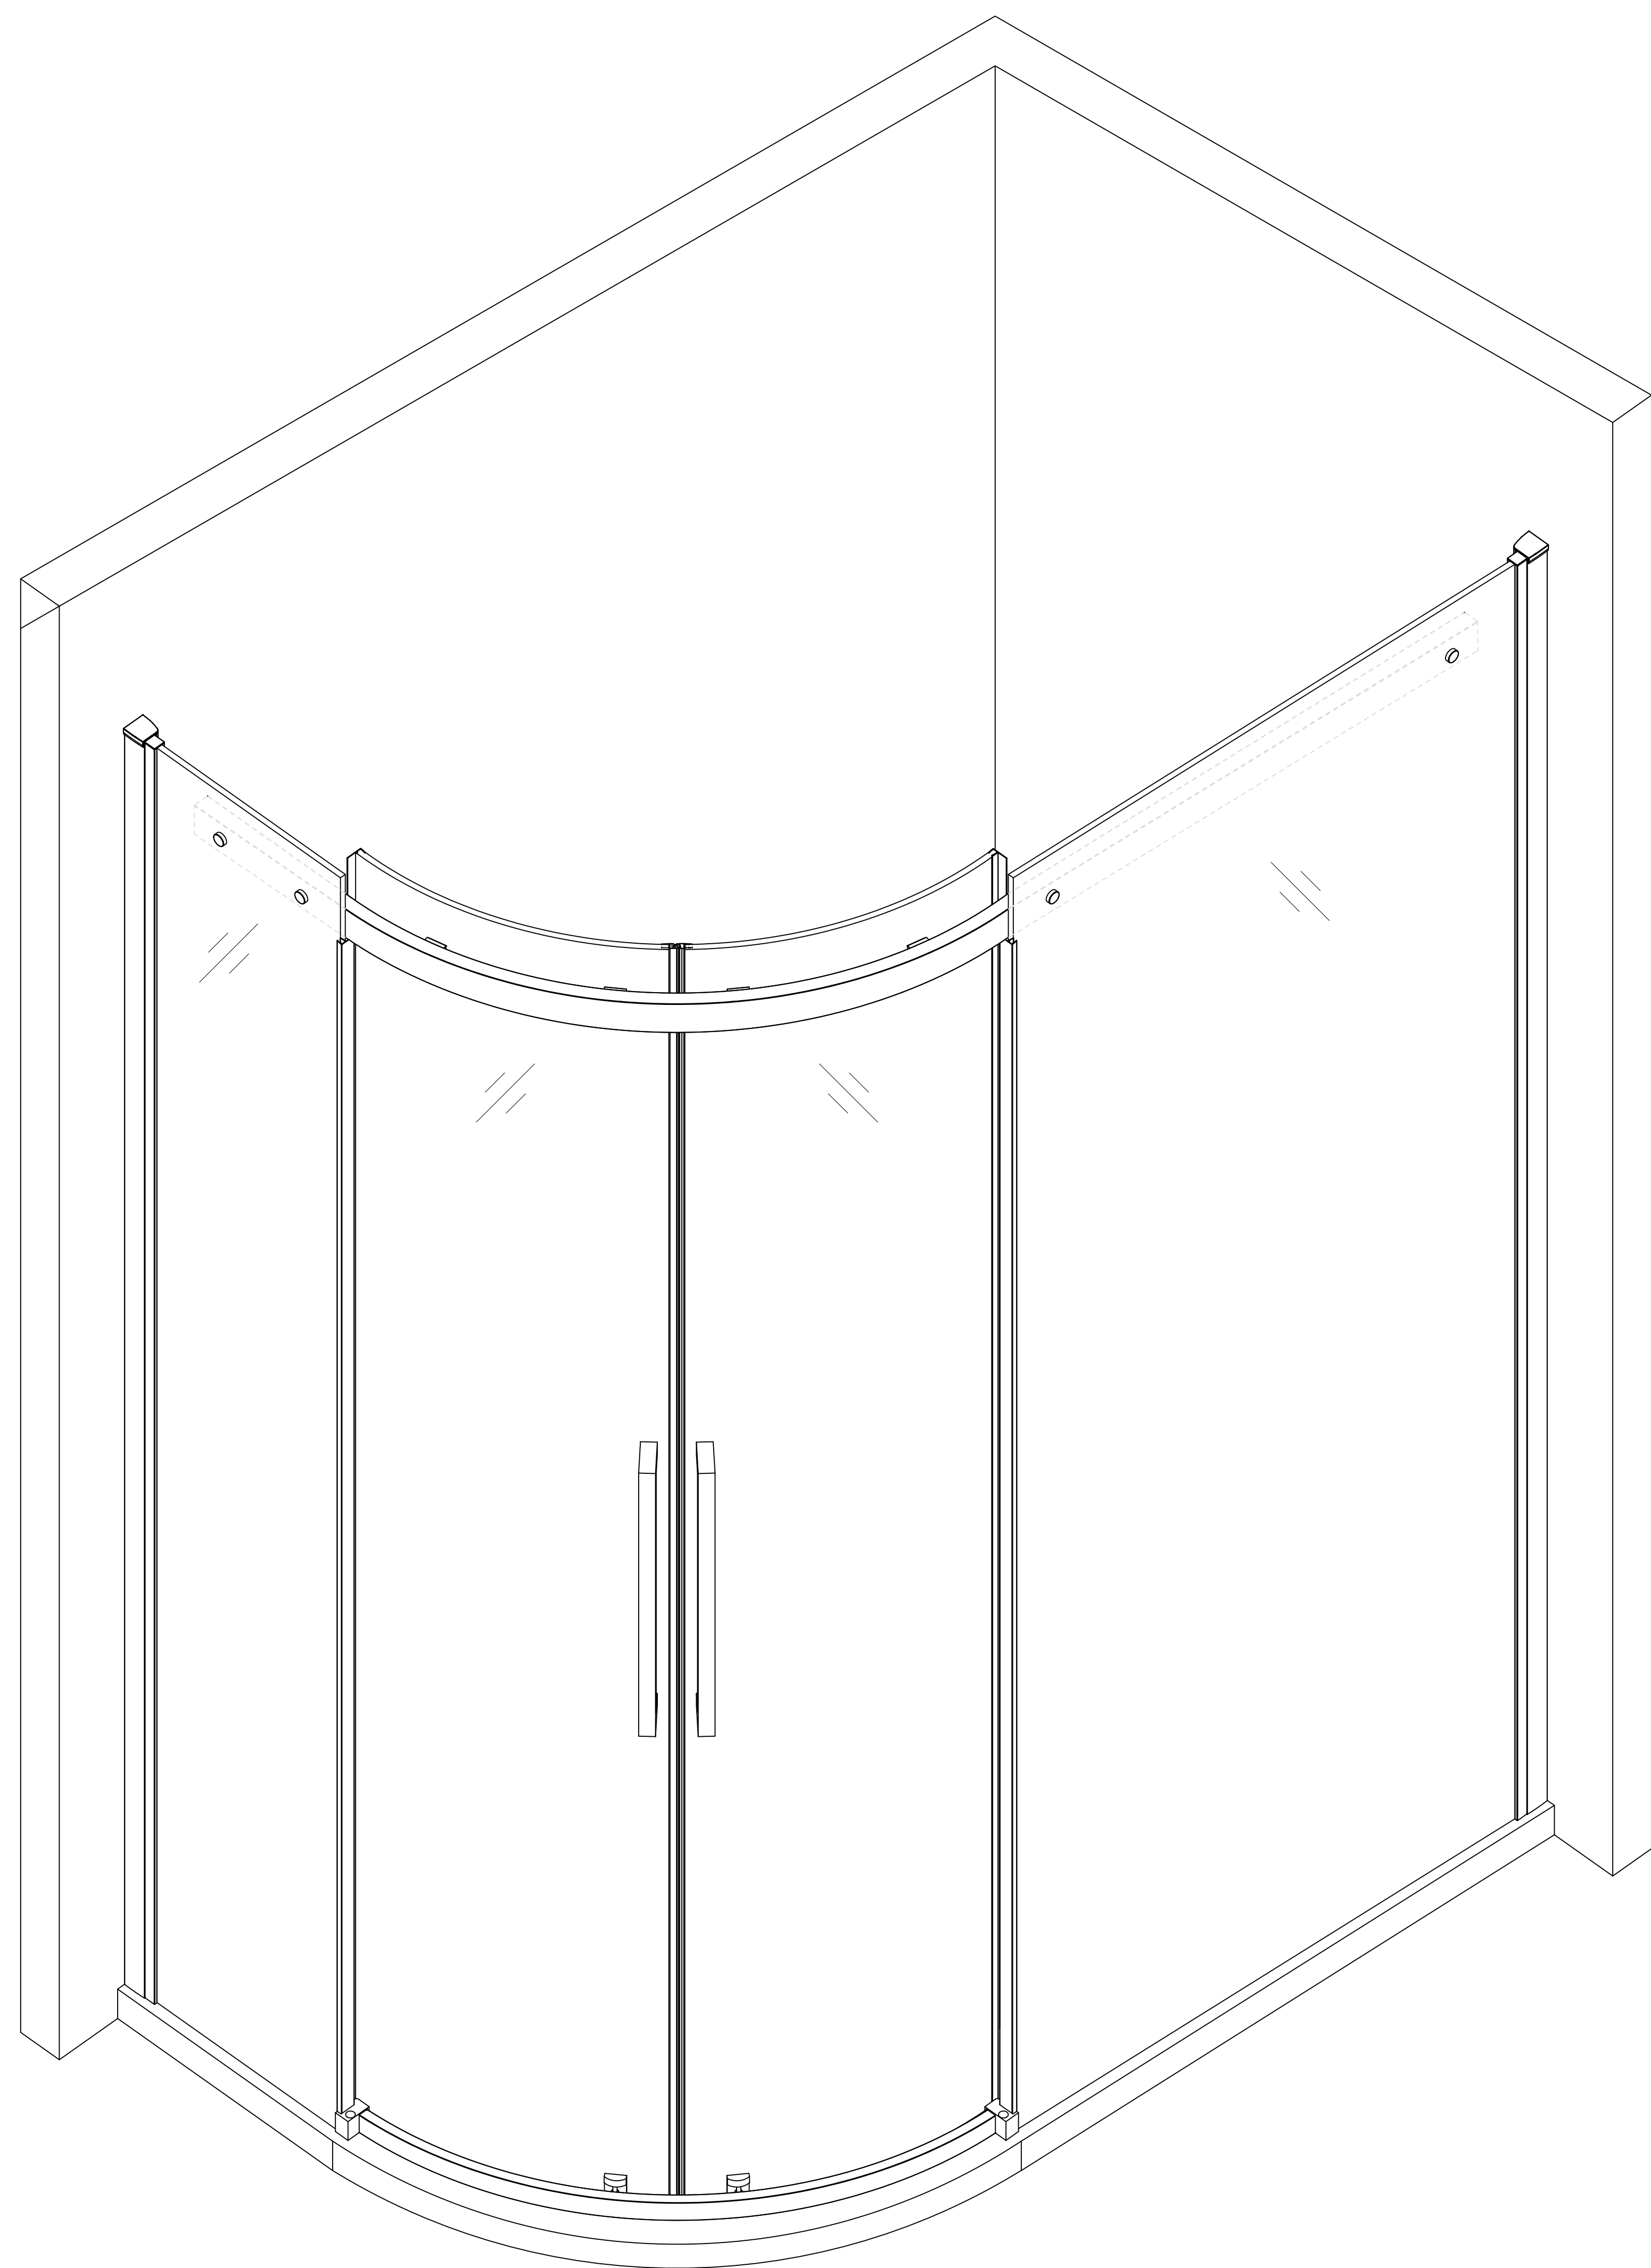






























This product should only be fitted by a fully qualified installer.

R

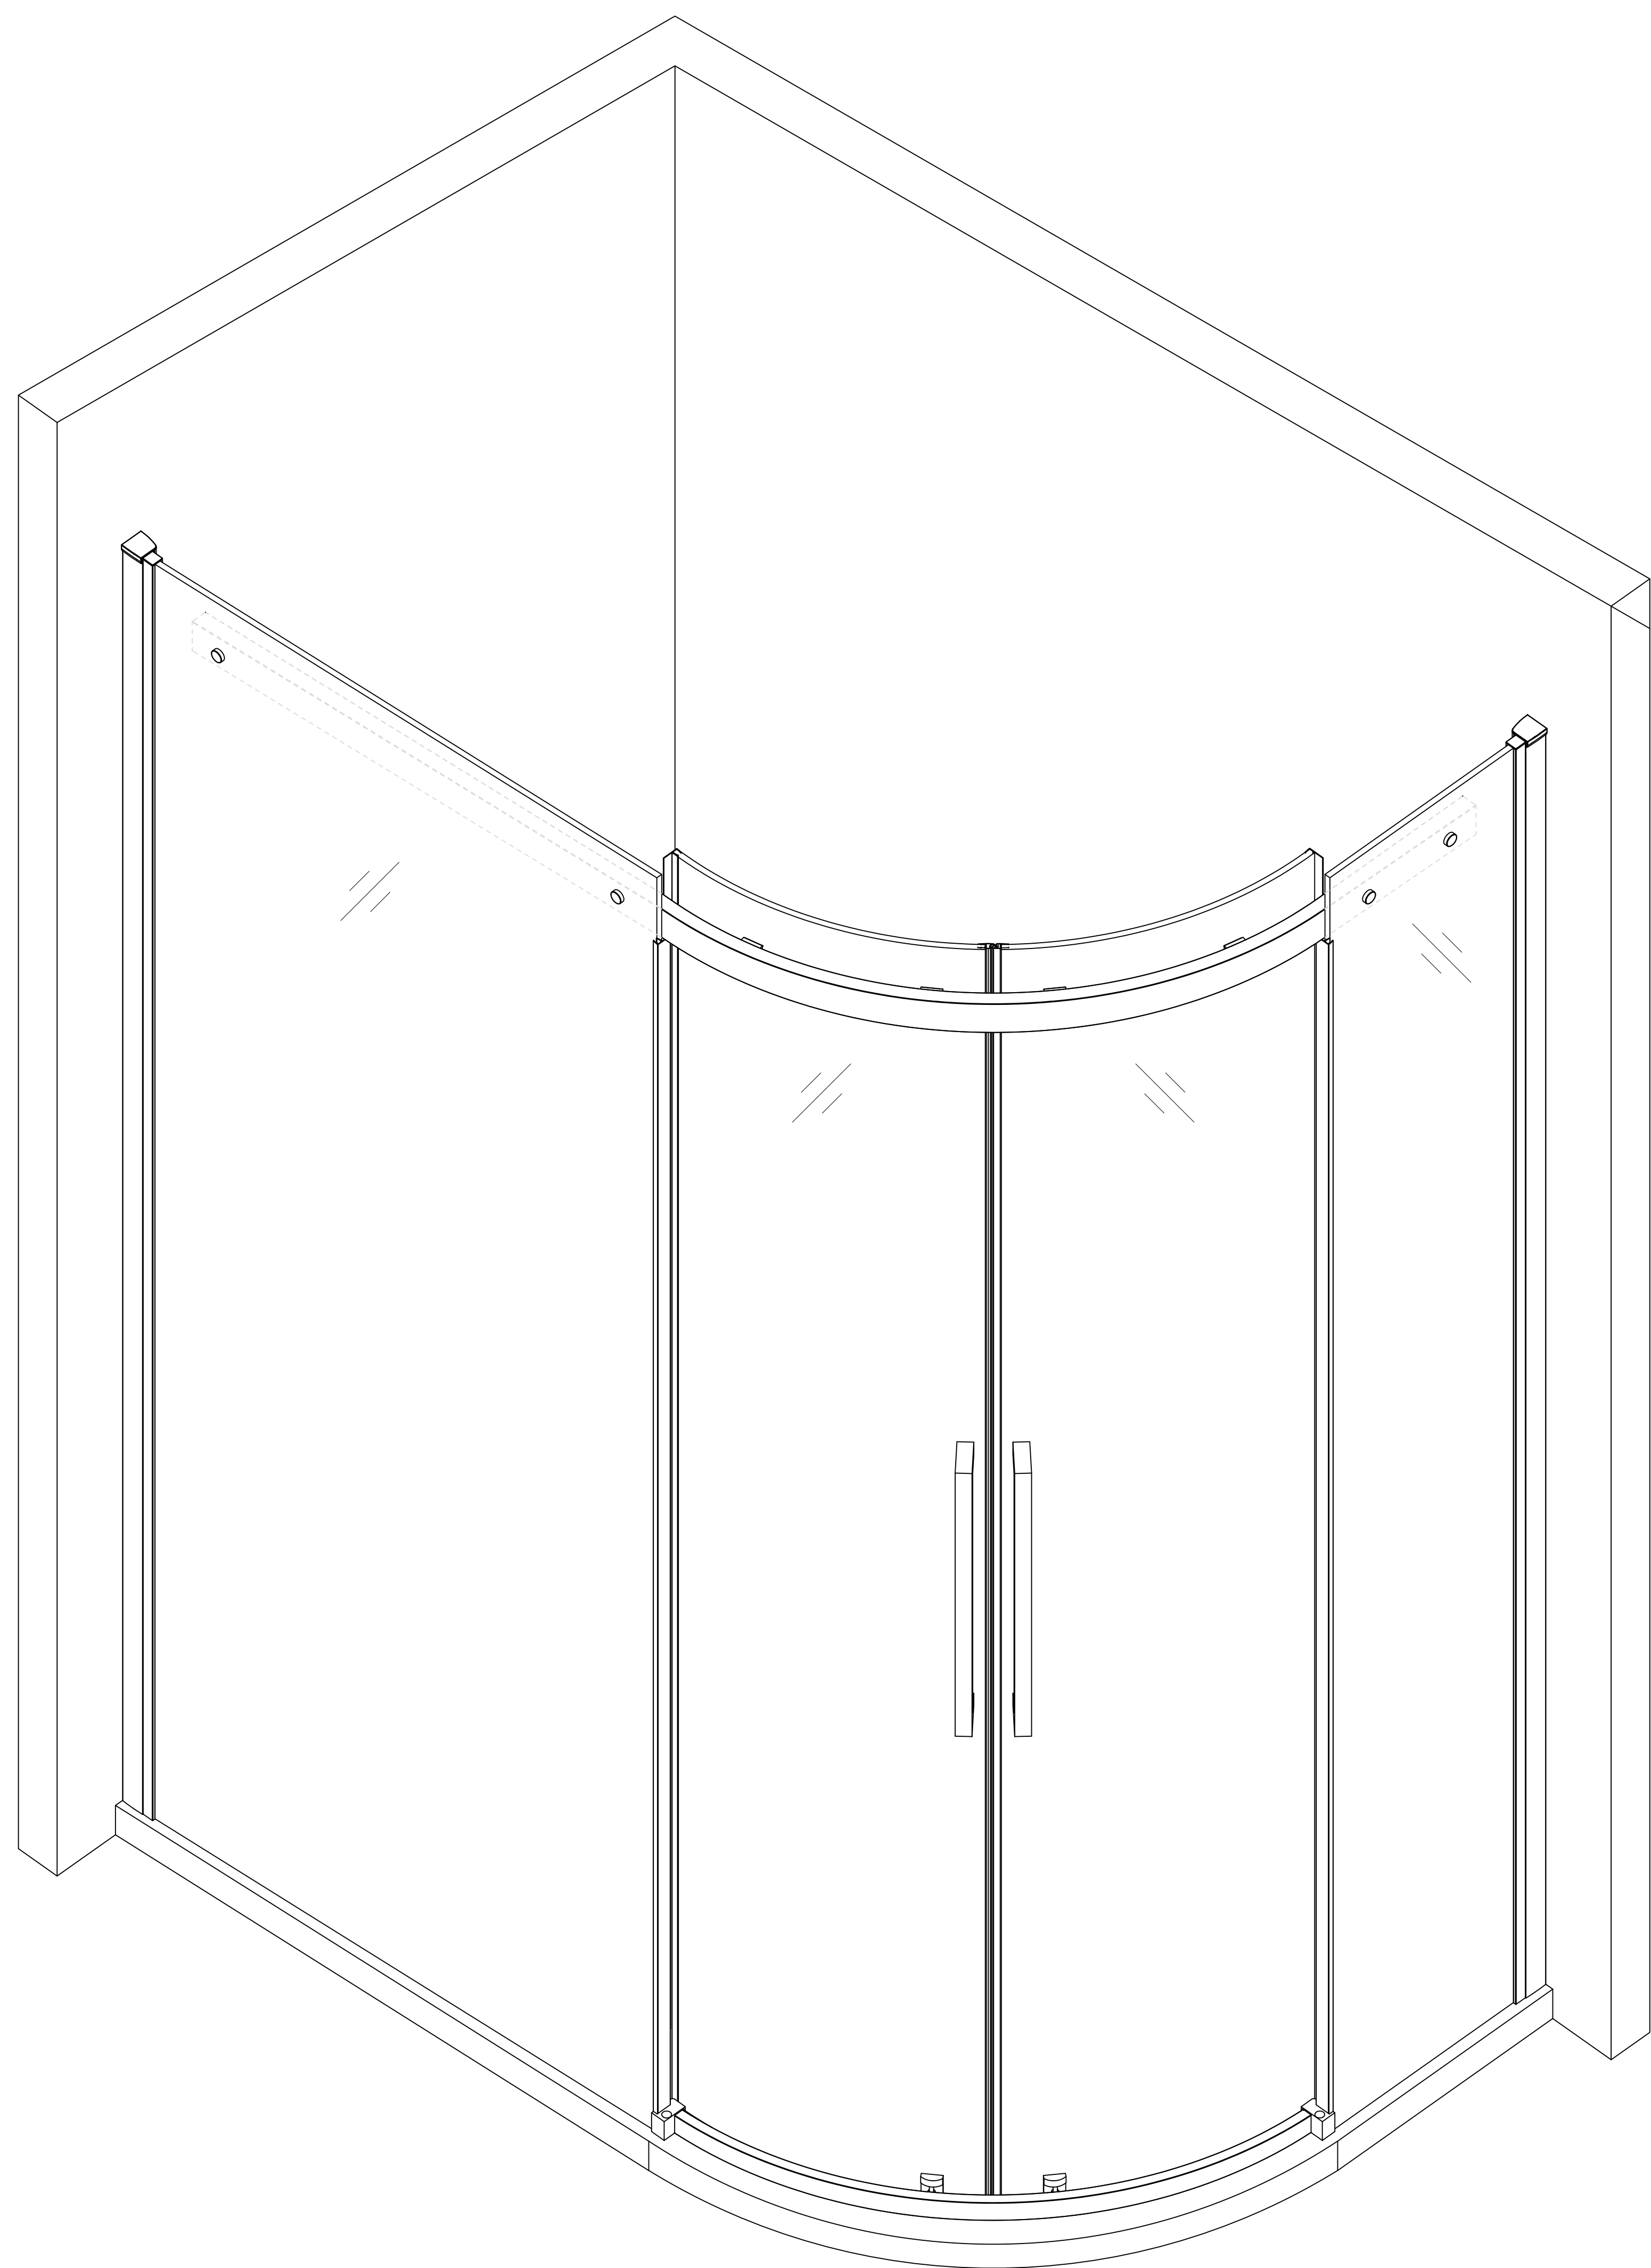


This product should only be fitted by a fully qualified installer.

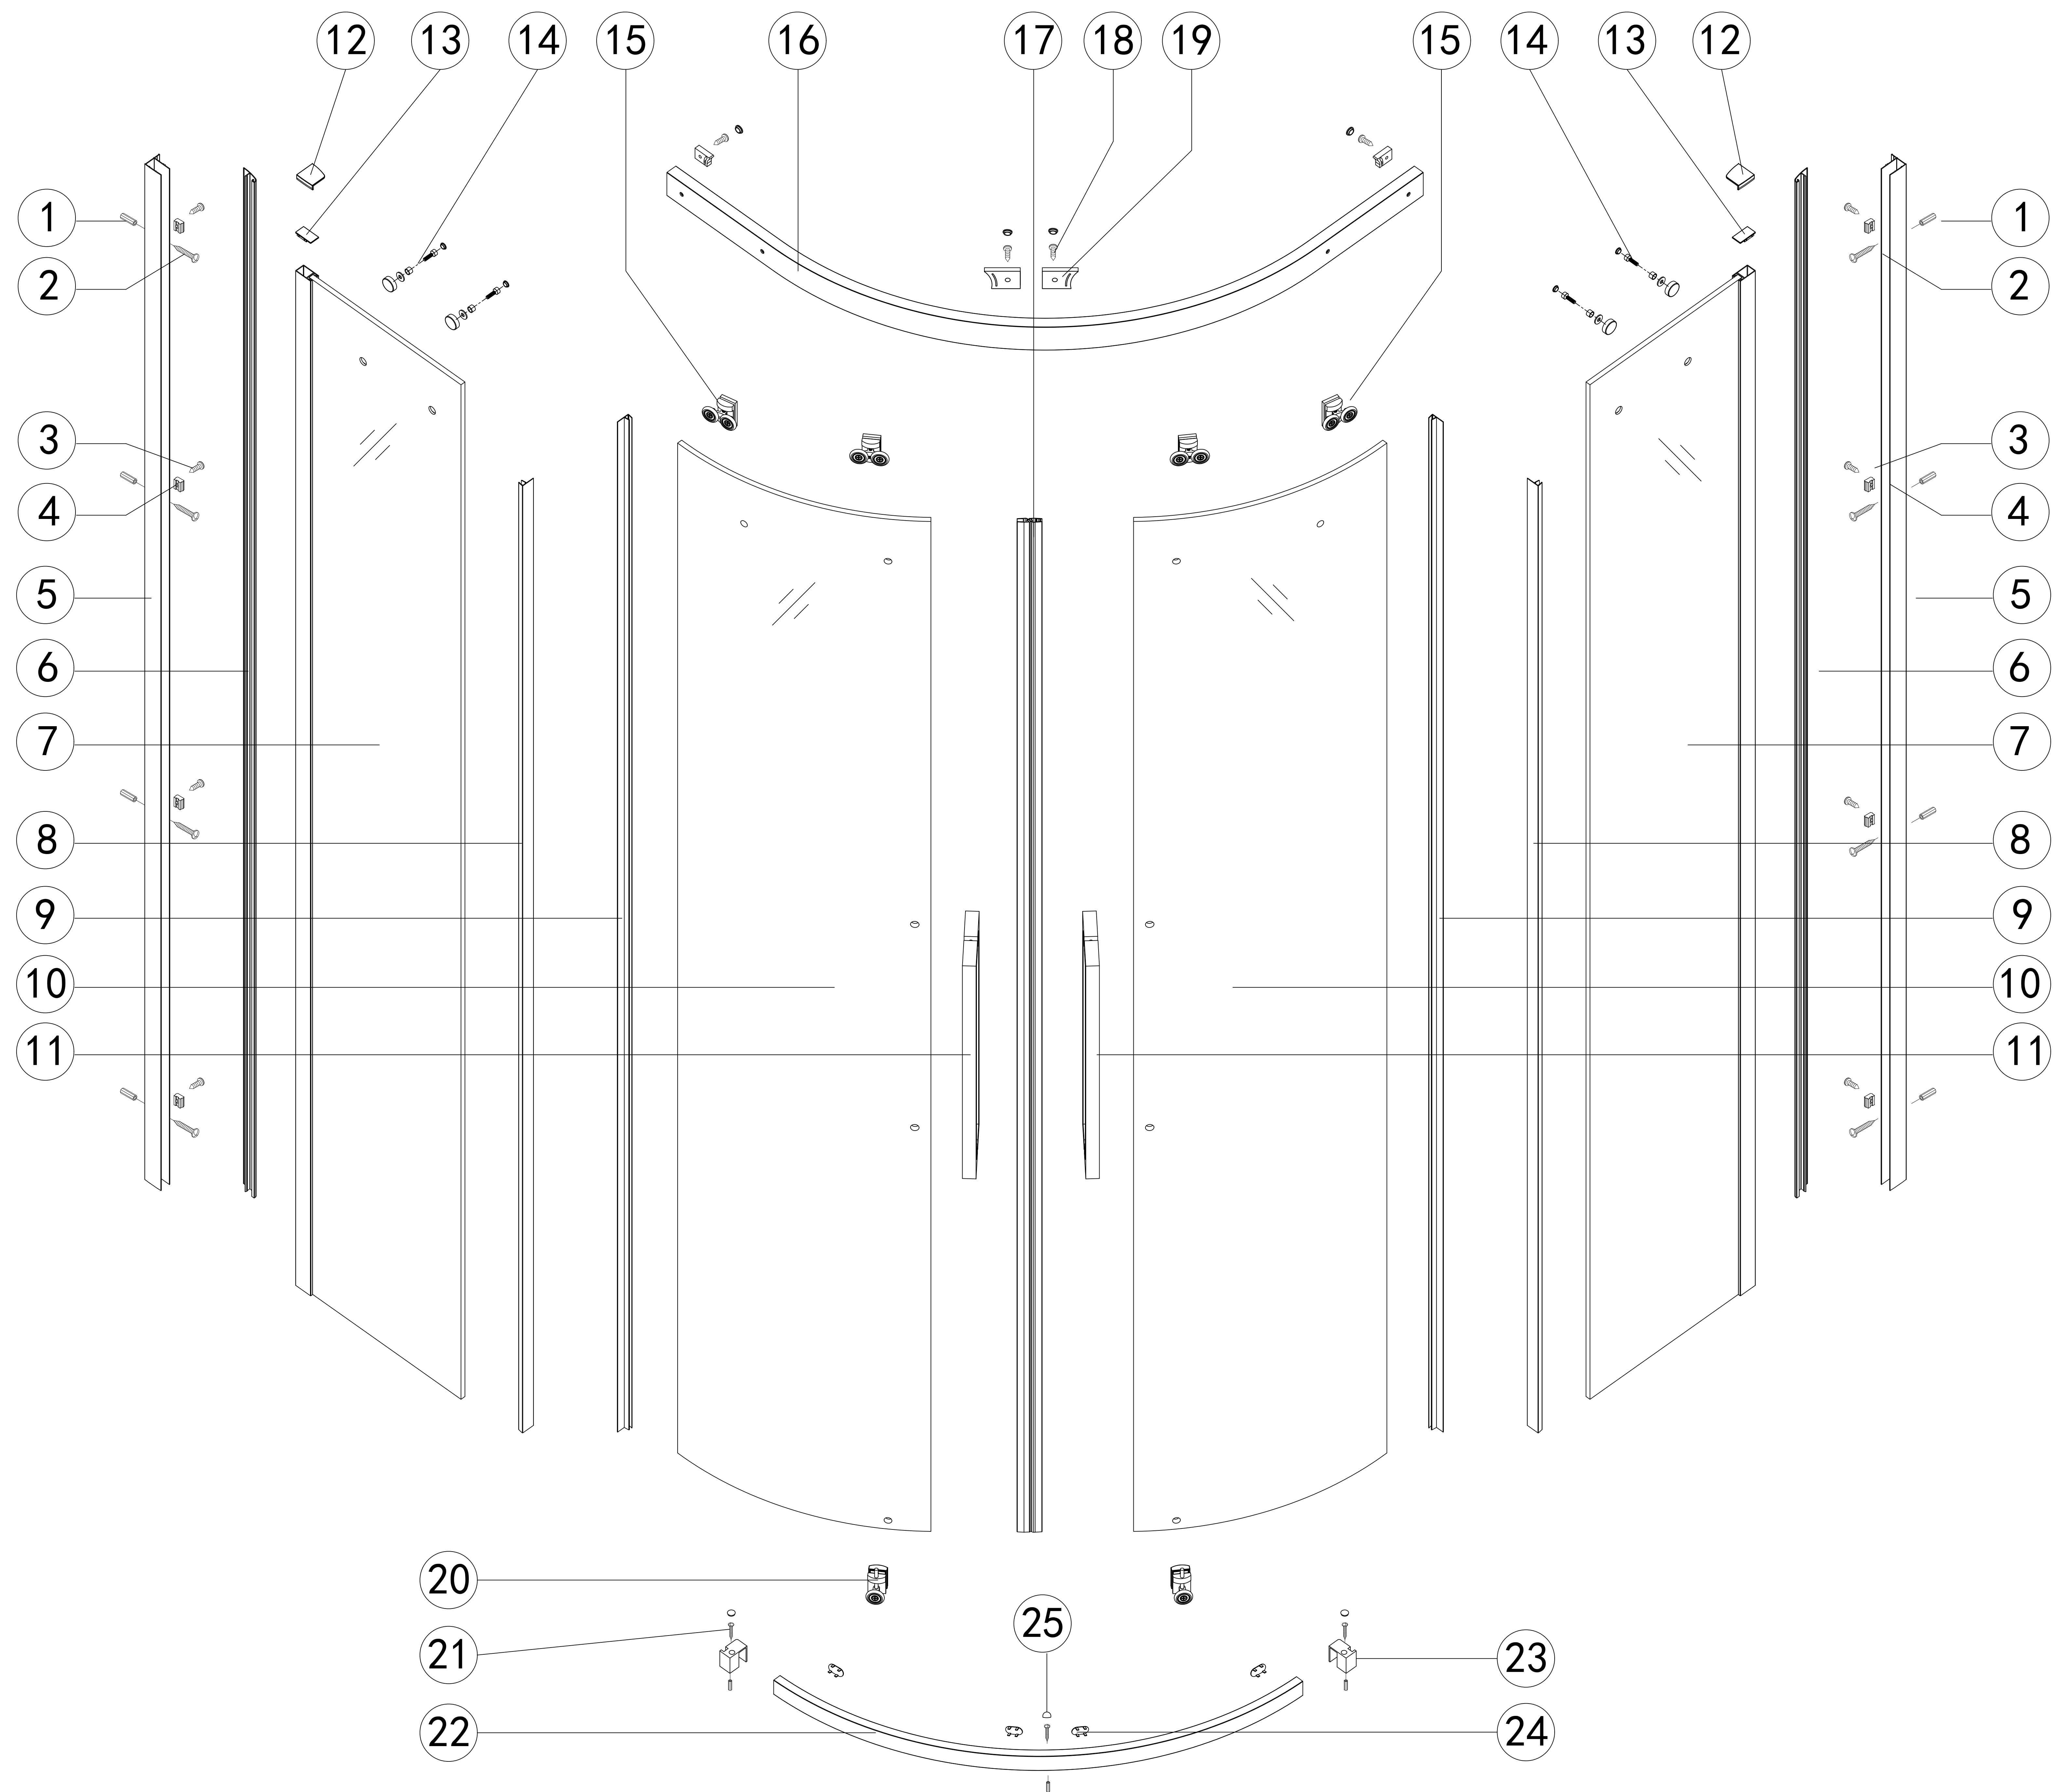


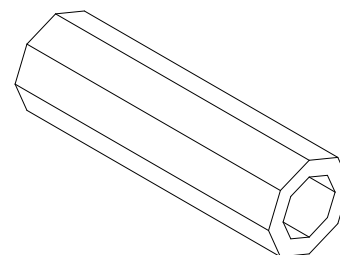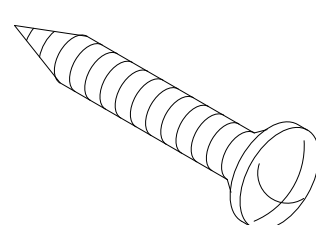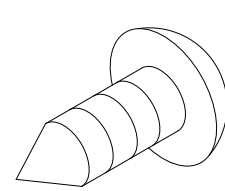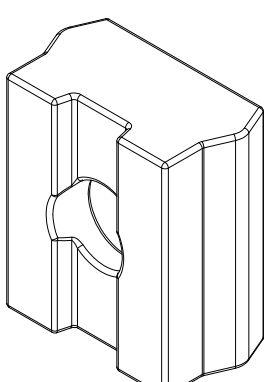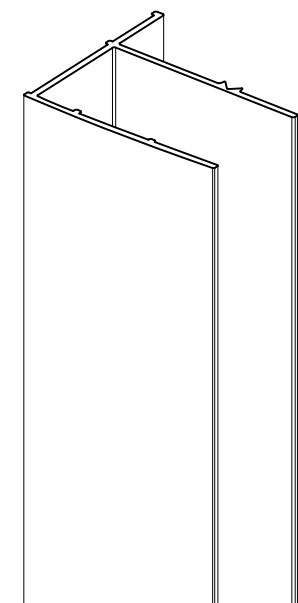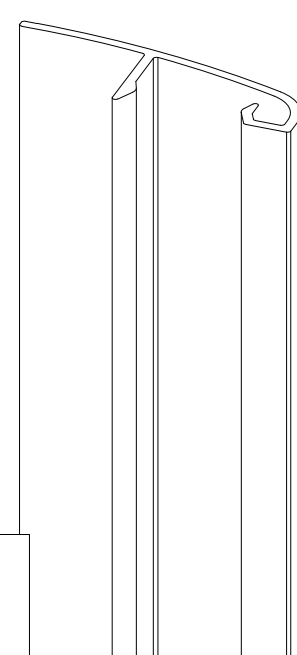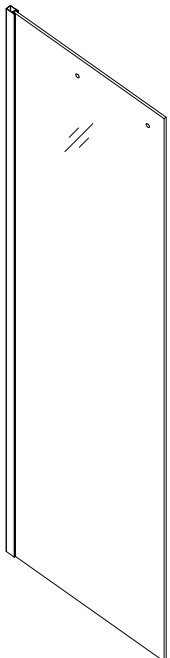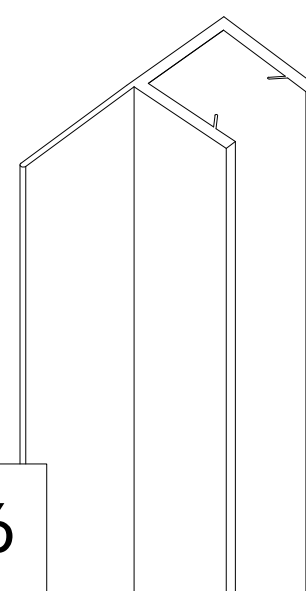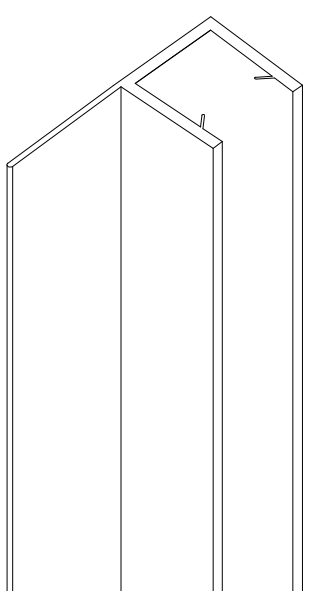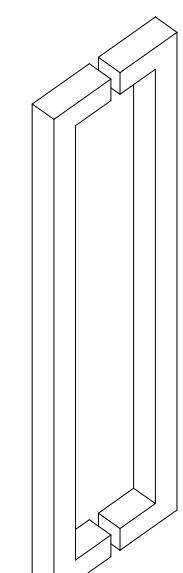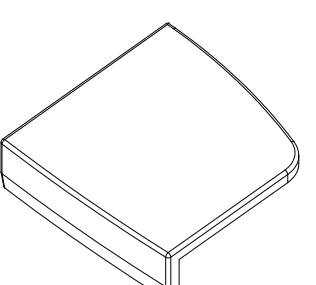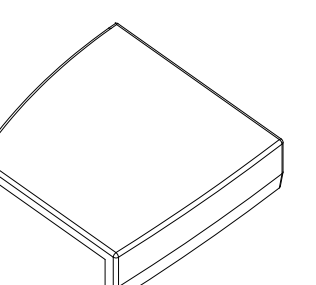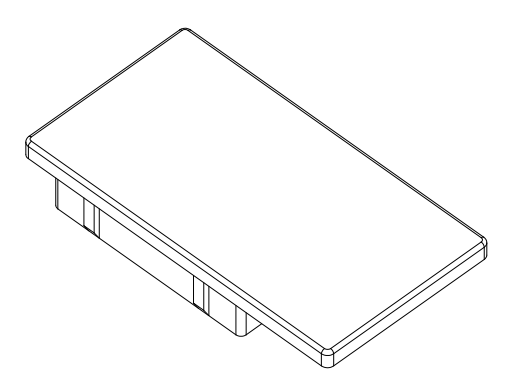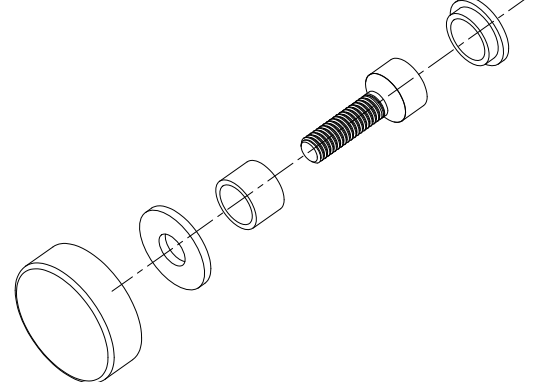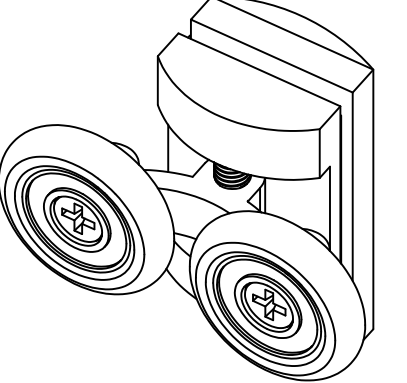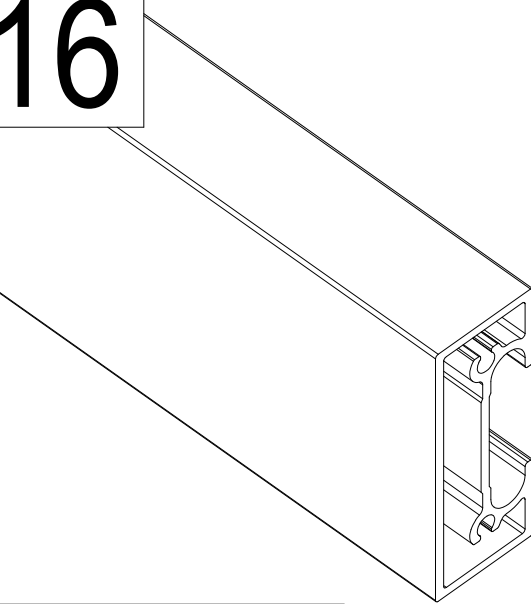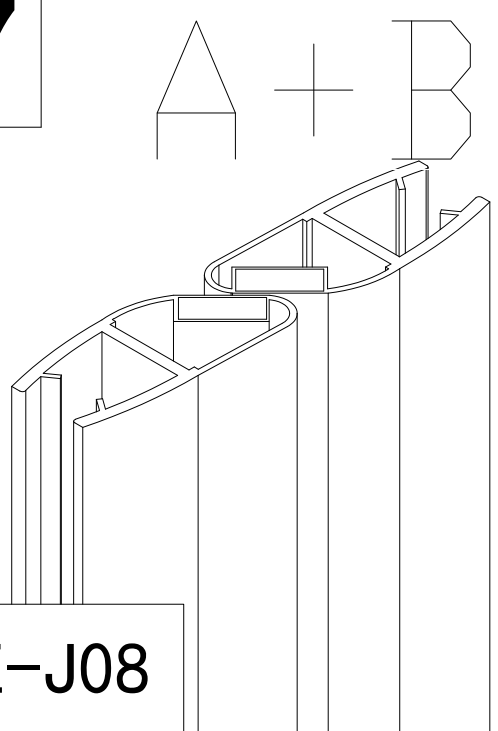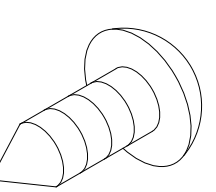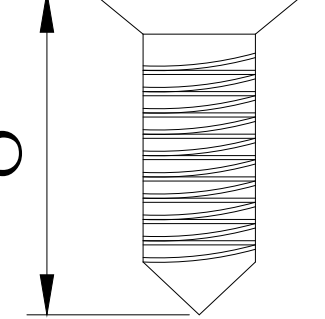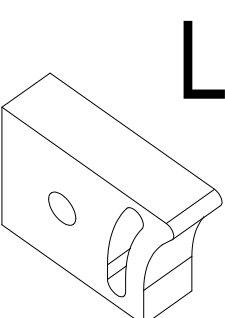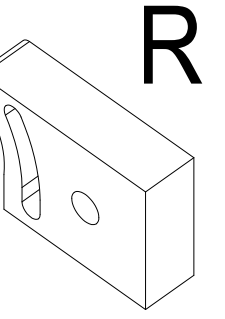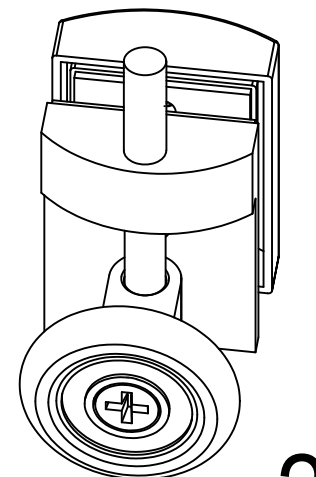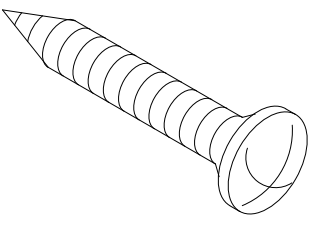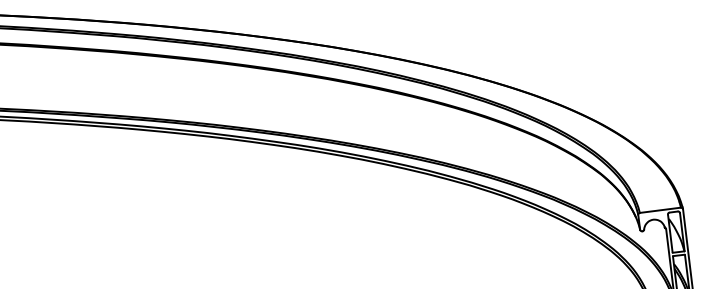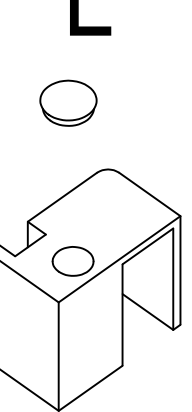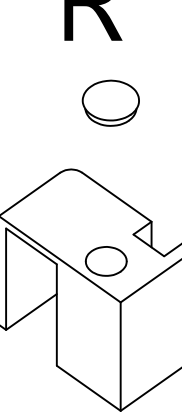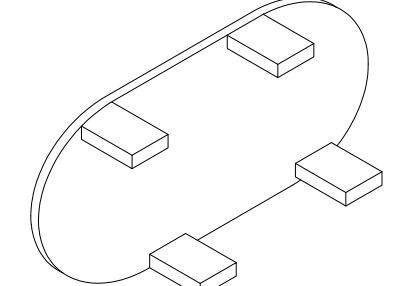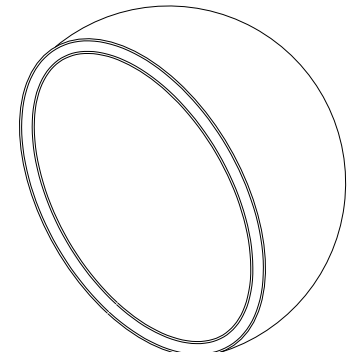1		D6x30	11Pcs	2		ST4X30	9Pcs	3		ST4X12	8Pcs	4		CRF-6Y01	8Pcs	5		CWE-B01	2Pcs	6		CWE-B02	2Pcs	7		CWE-J06	2Pcs	8		1865mm	2Pcs	9		1985mm	2Pcs
10		CWE-D05	2Pcs	11		CWE-S01	2Pcs	12	 L  R	CWE-S01	2Pcs	13		CWE-S03	2Pcs	14		CWE-D12	4Pcs	15		CWE-D09	4Pcs	16		CWE-B08-S	1Pcs	17		CWE-J08	1Pair	18	 ∞ 	ST4X8	4Pcs
19	 L  R	CWE-S05	4Pcs	20		CWE-D10	2Pcs	21		ST4X35	2Pcs	22		CWE-B09-S	1Pcs	23	 L  R	CWE-D11	2Pcs	24		CRF-6Y05	4Pcs	25		CWE-S07	1Pcs	Tools:							

Please report any missing parts or damage to your supplier within 10 working days and before installation.

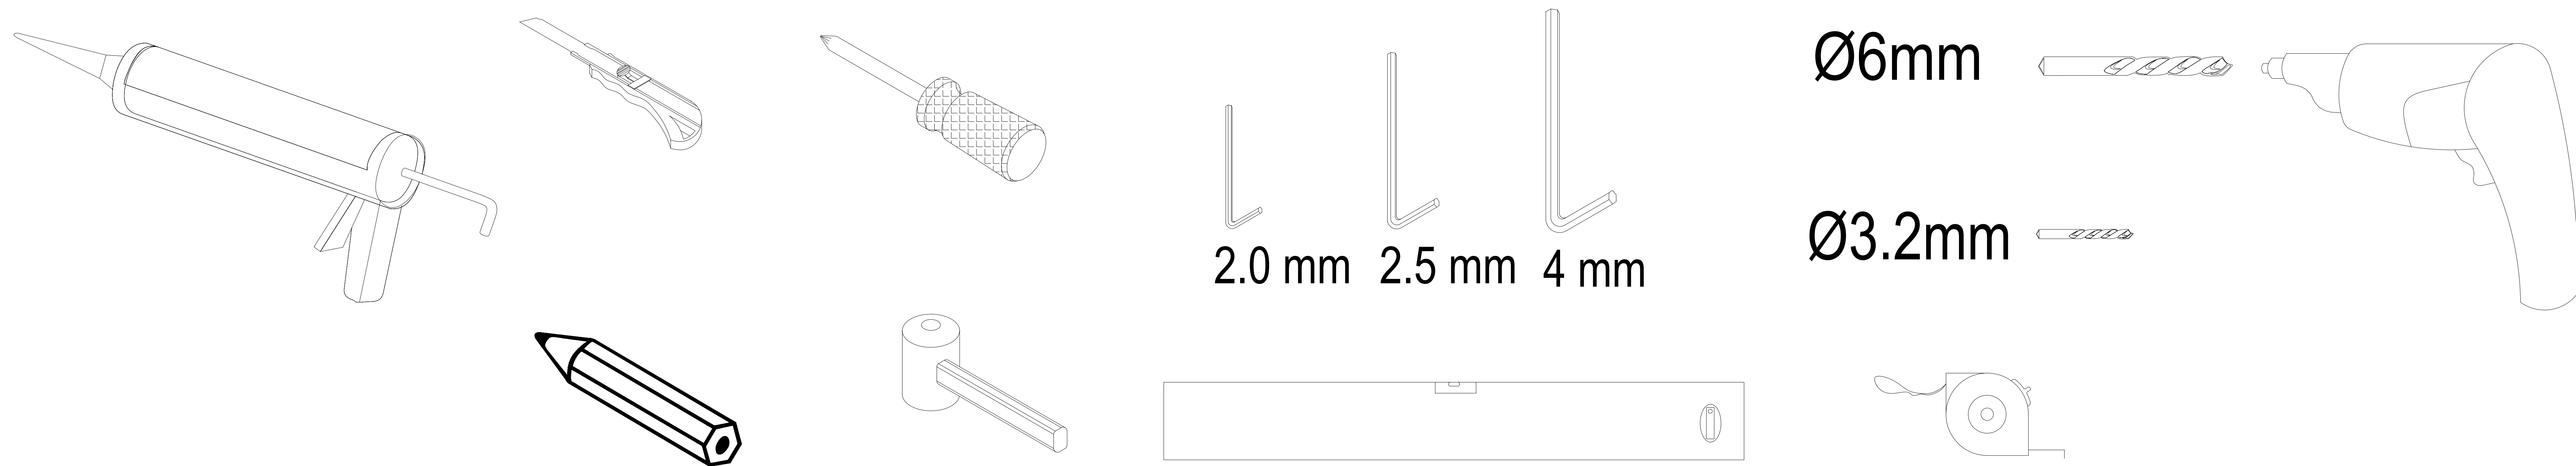


1L

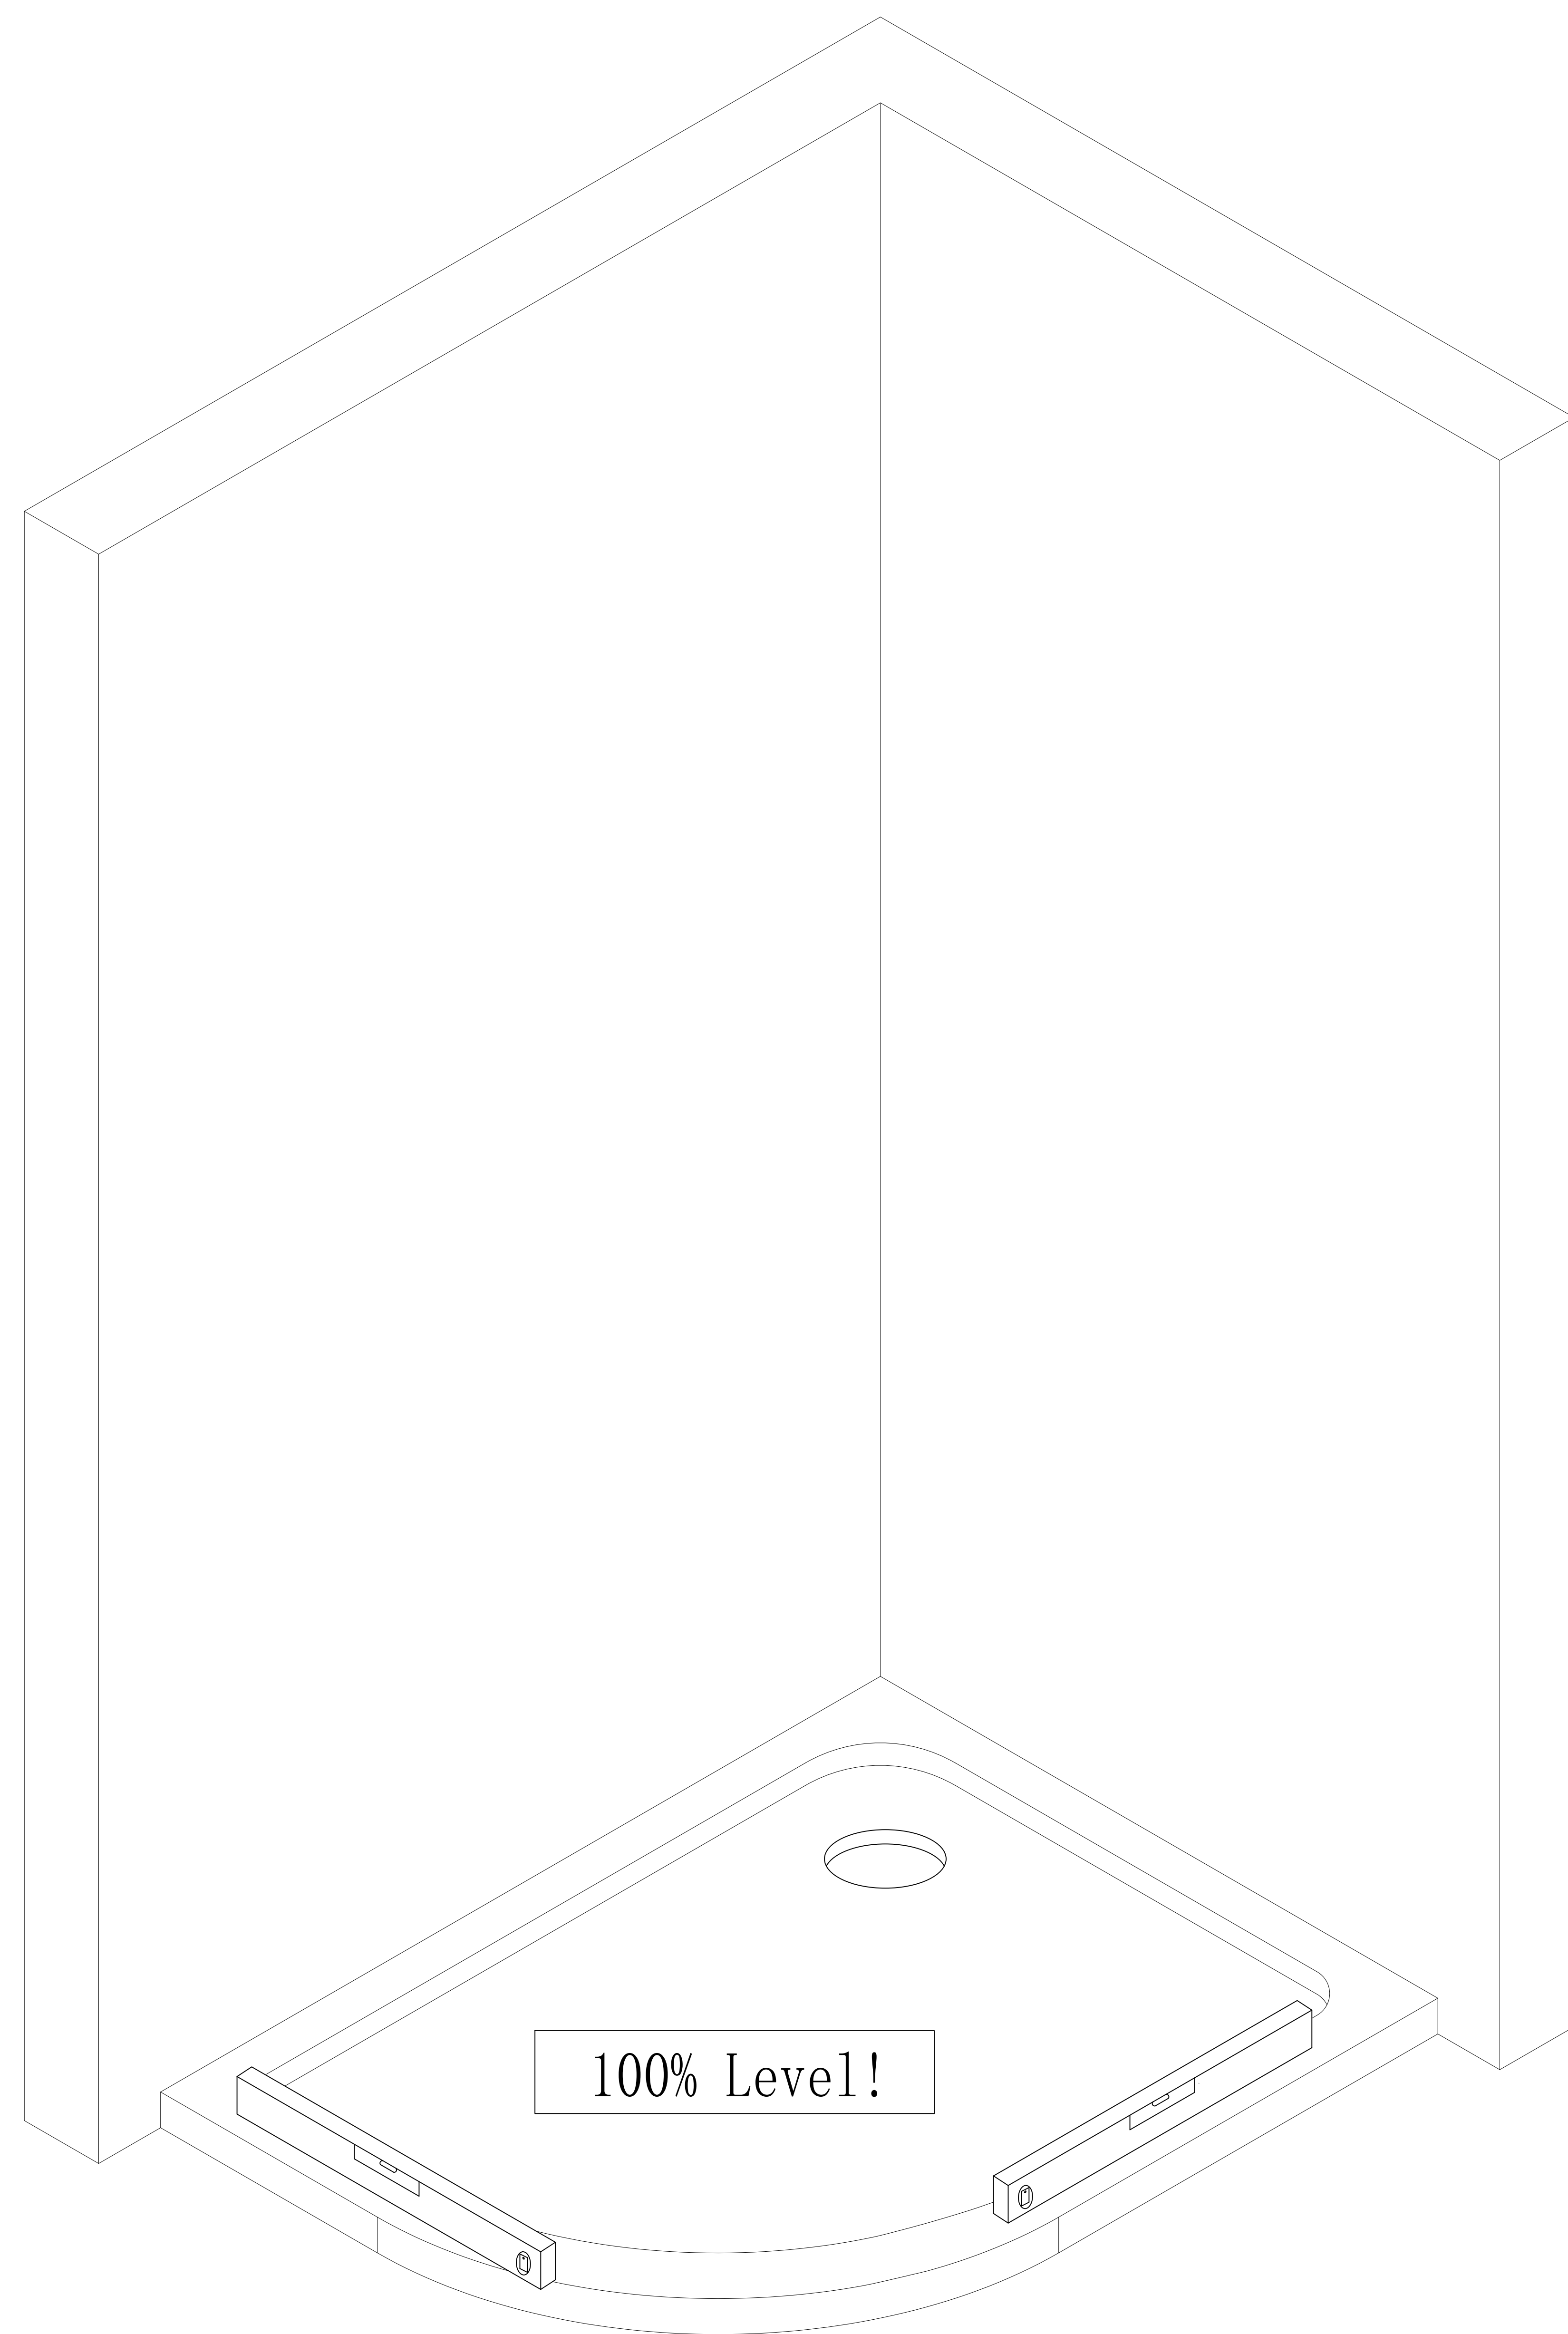


Check tray is level

1R


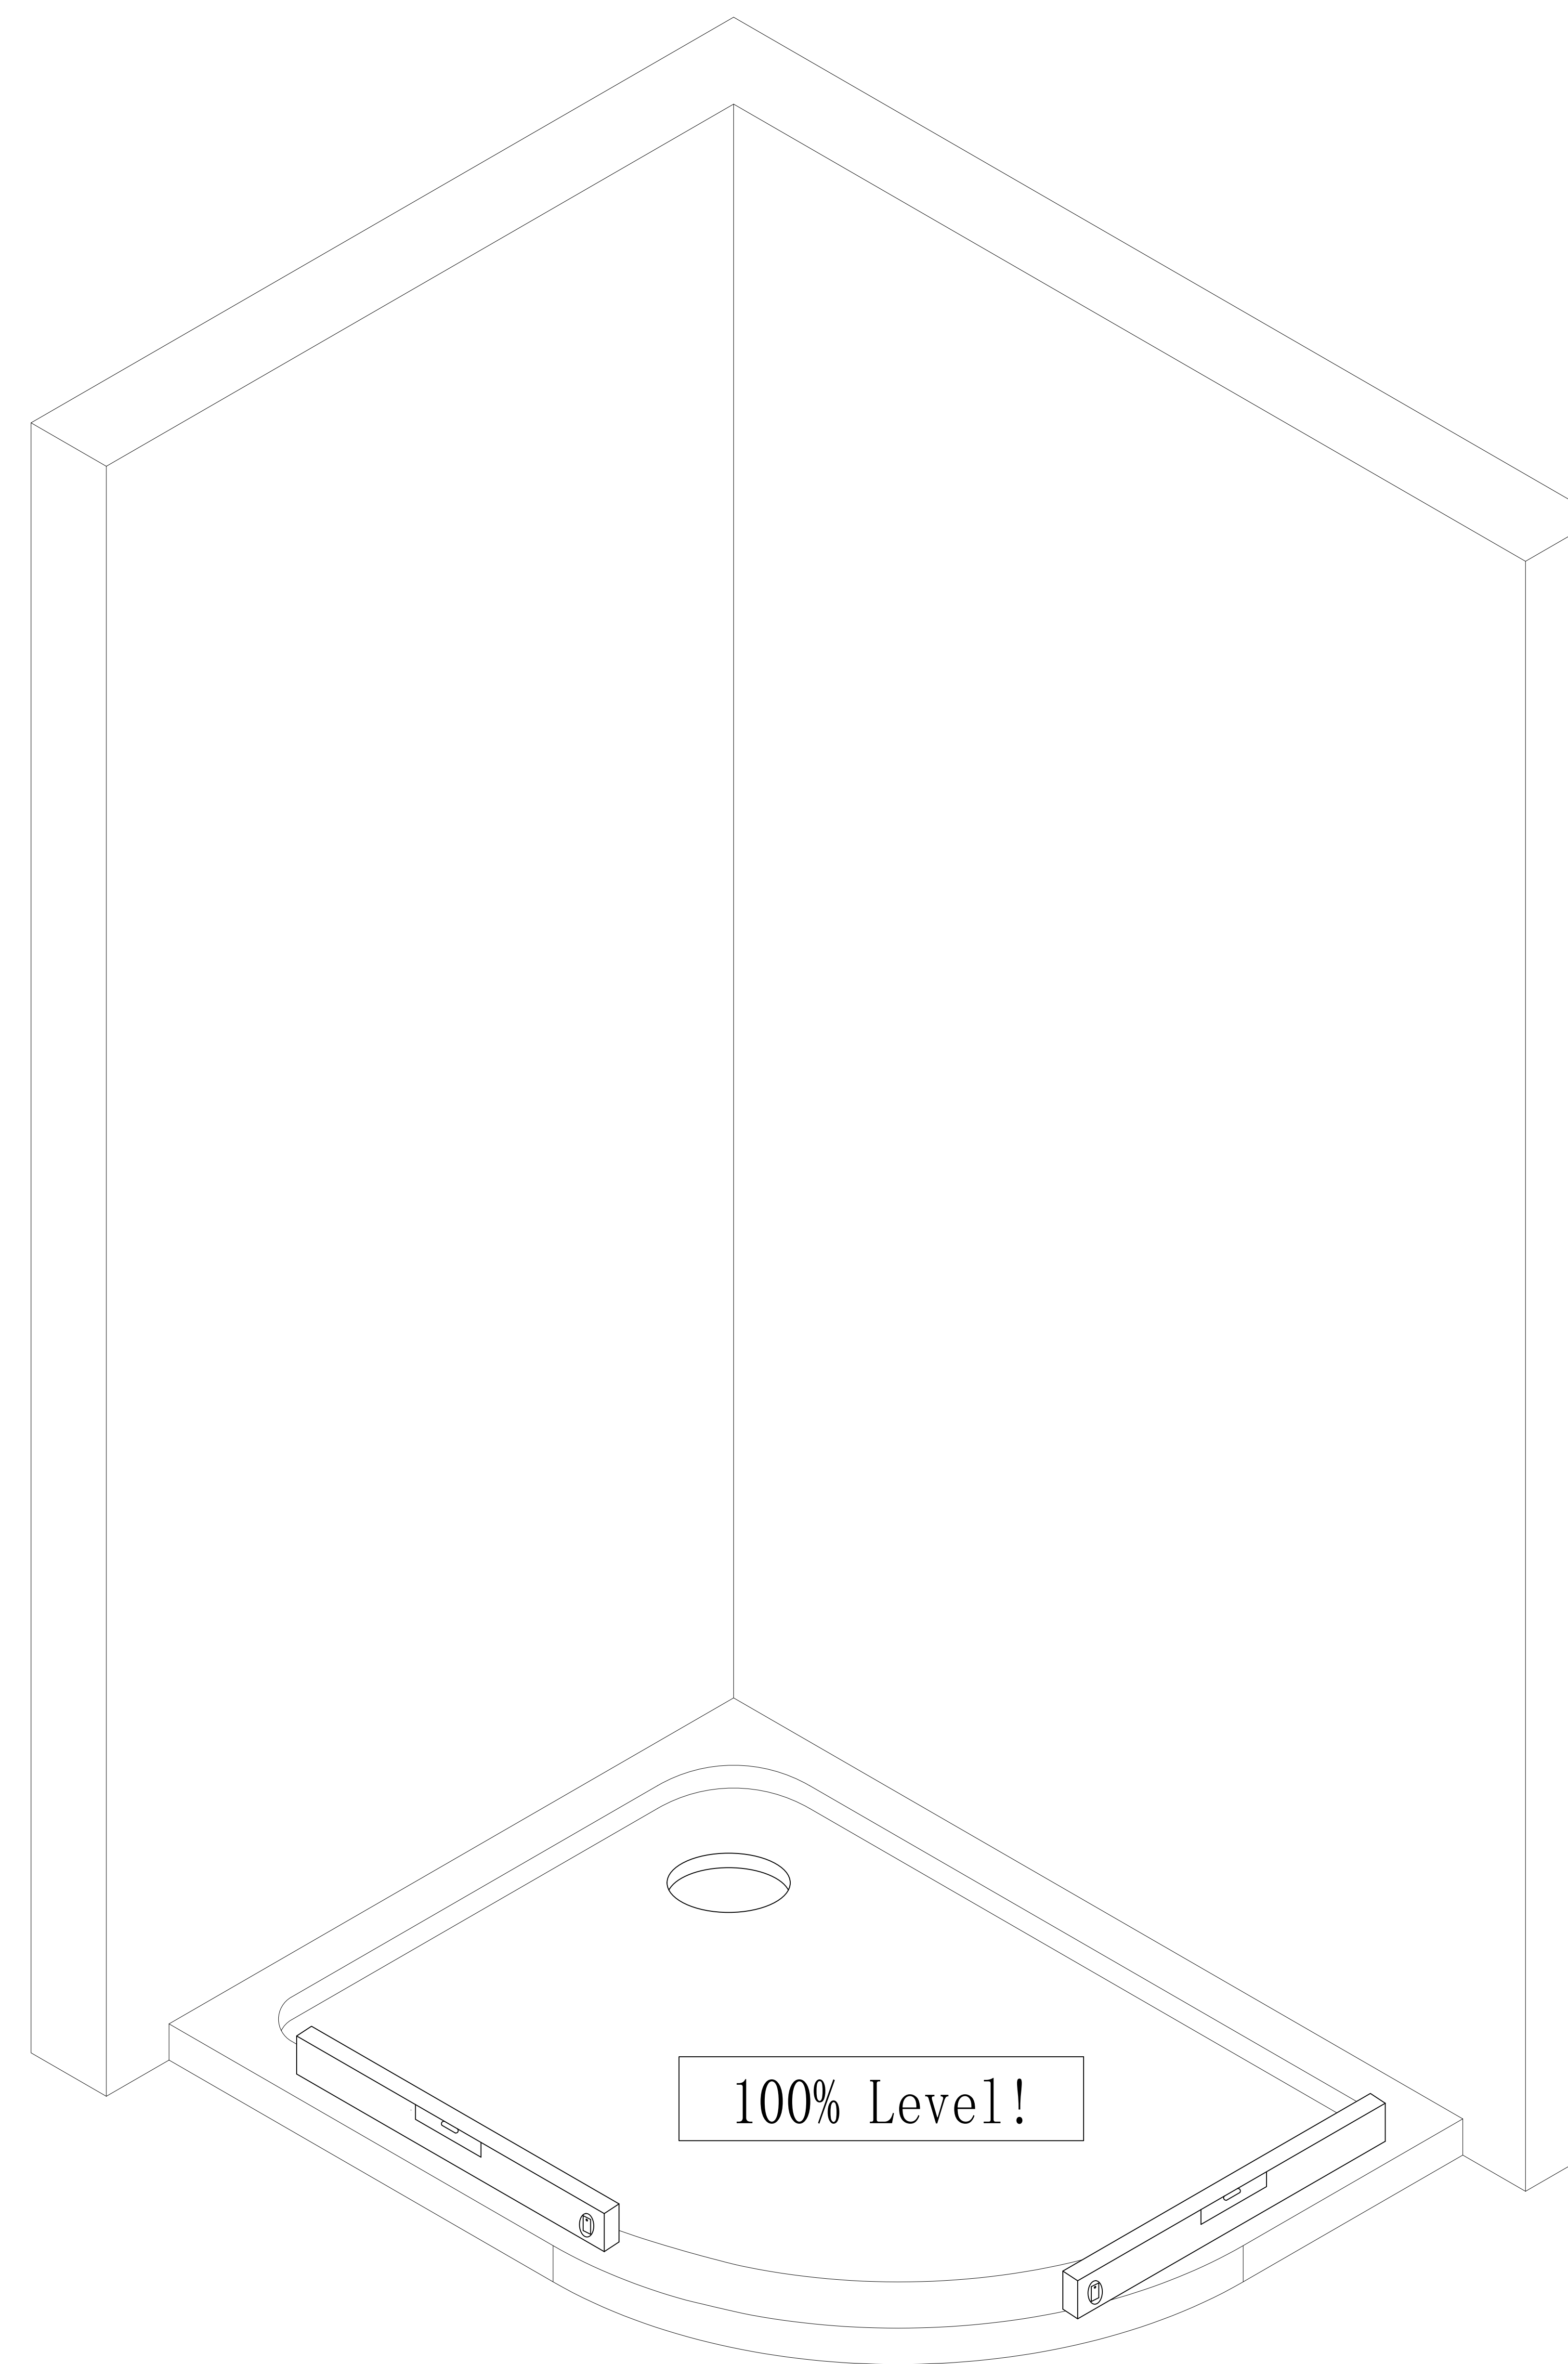


Check tray is level

2L

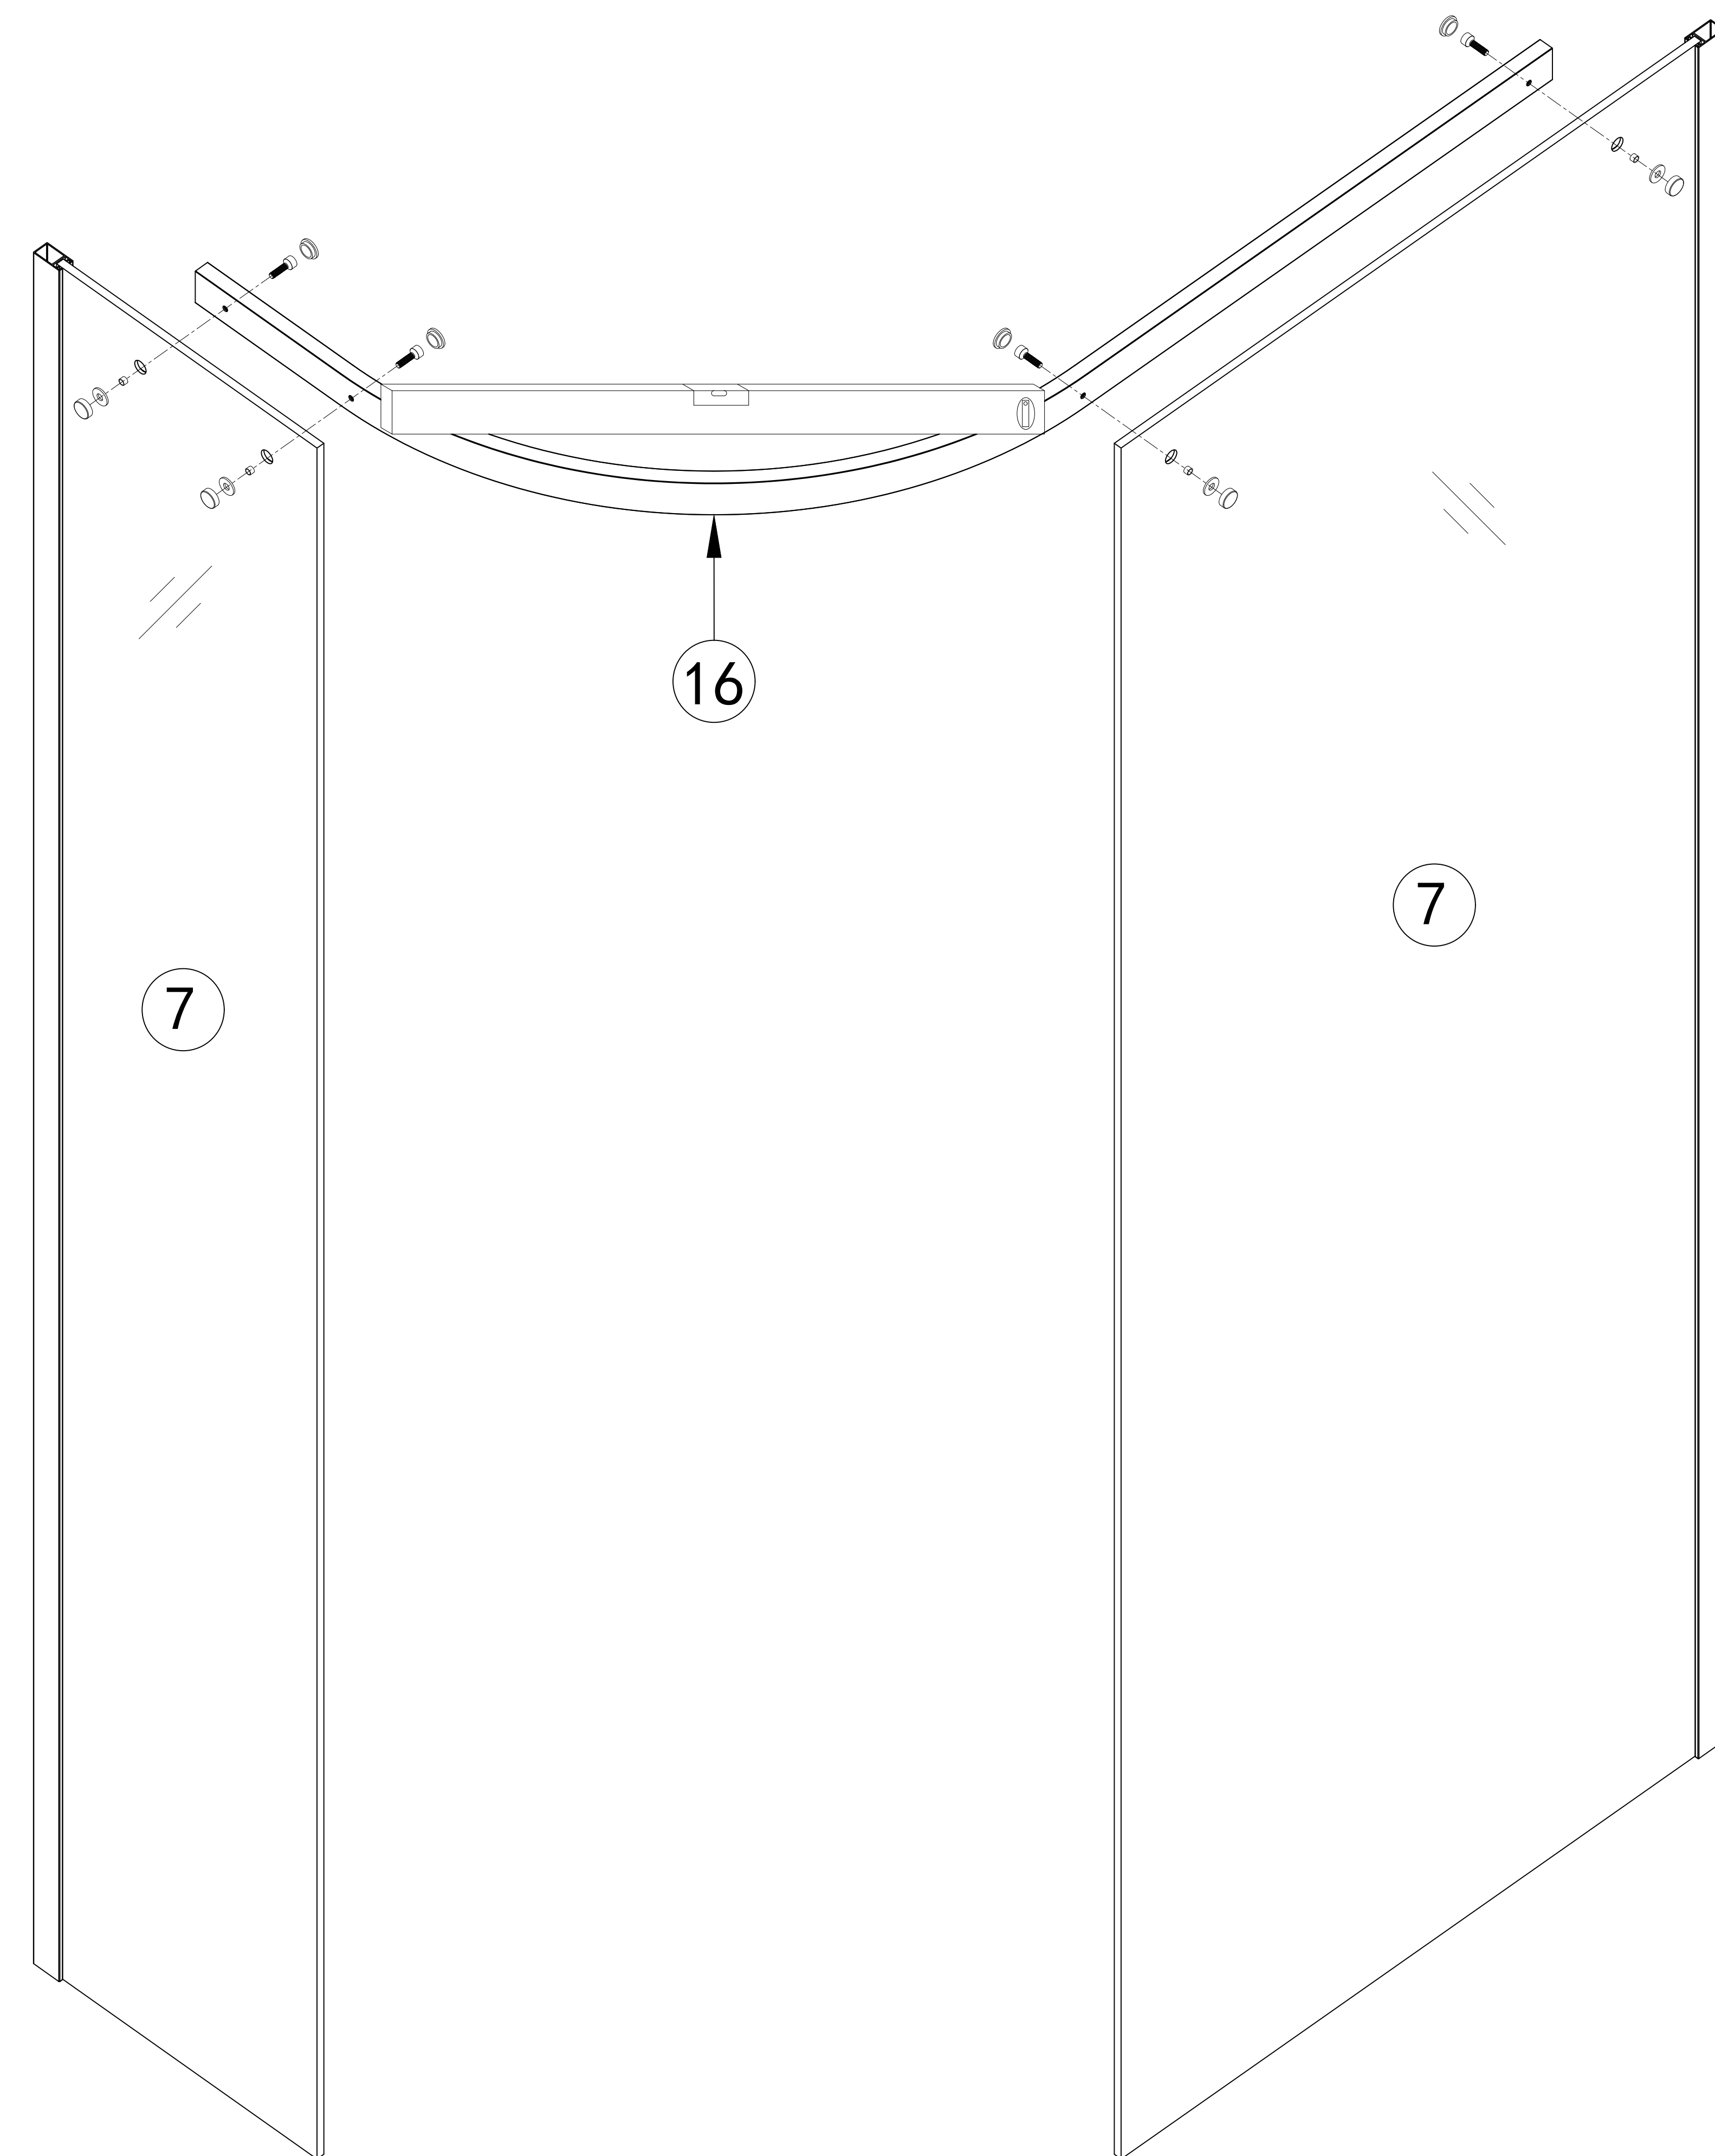

2R

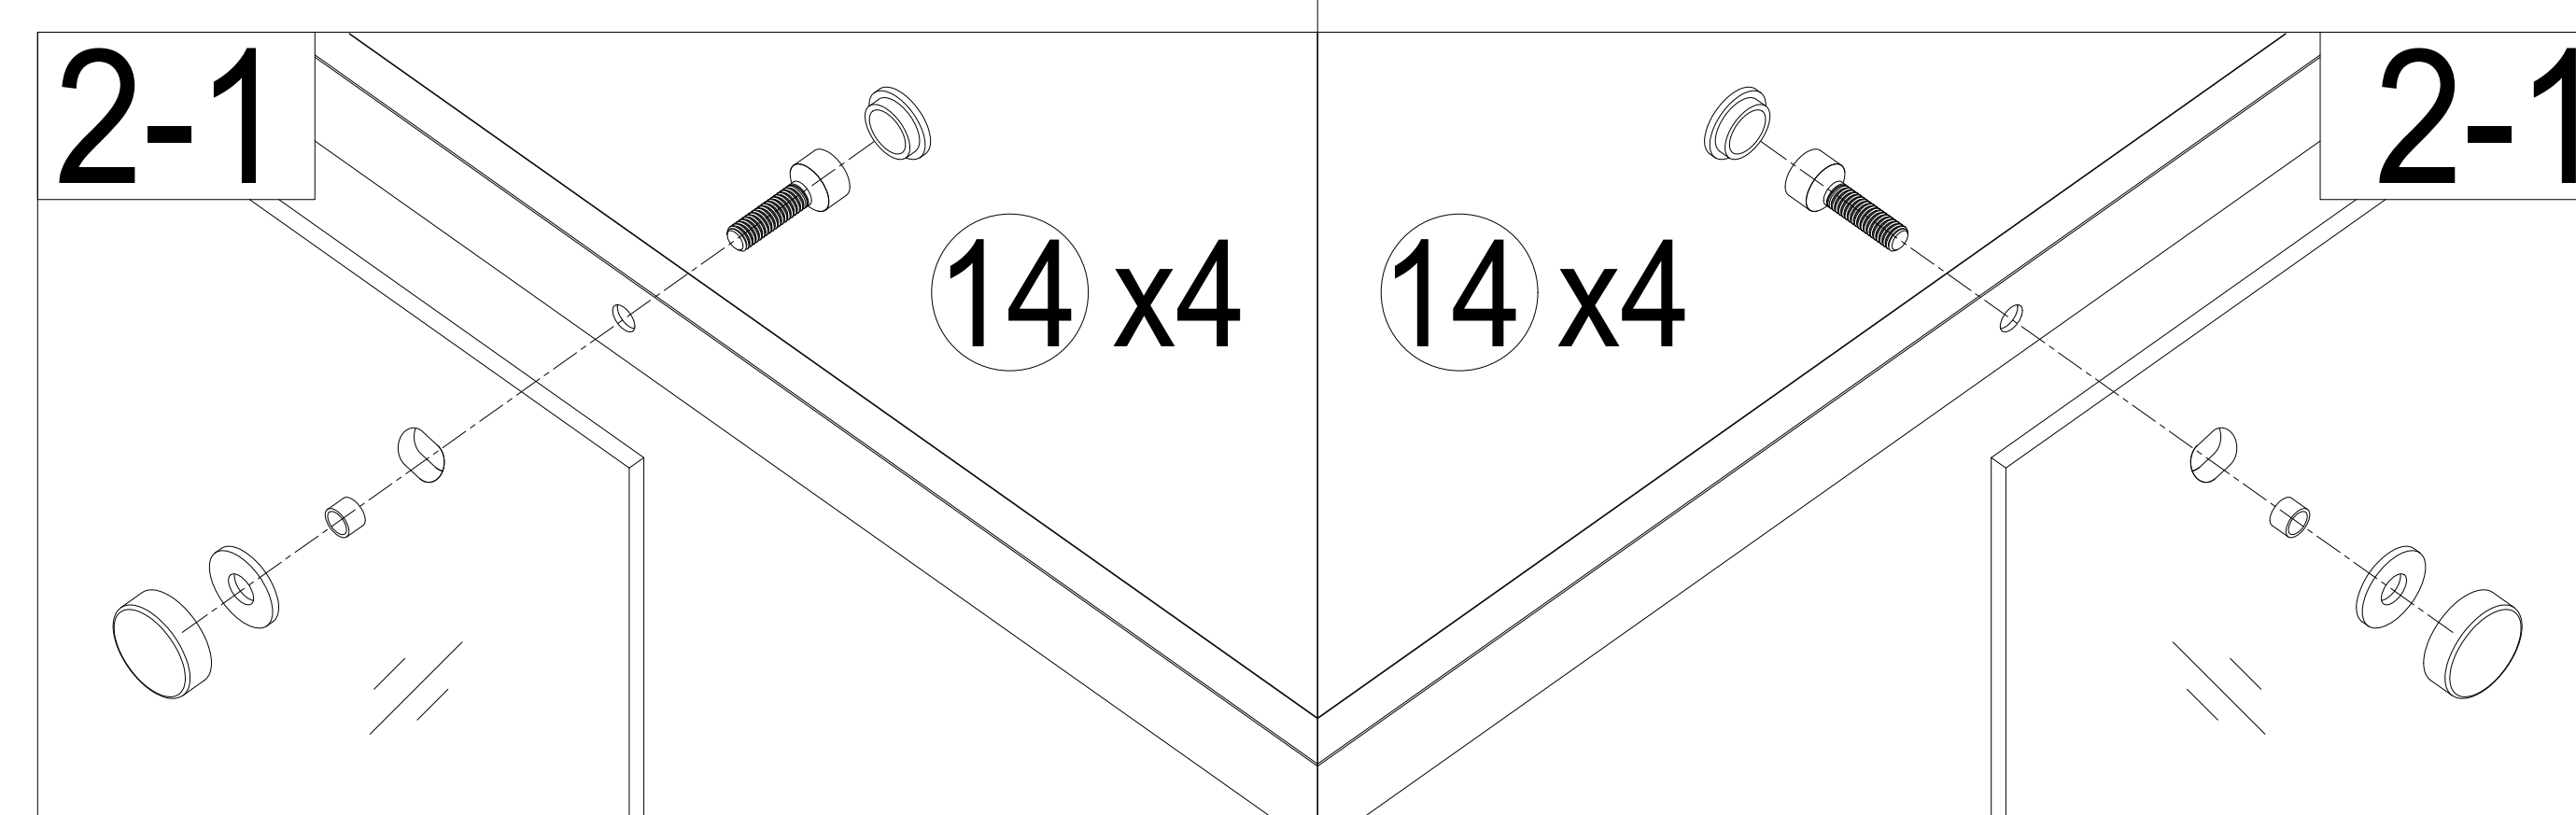
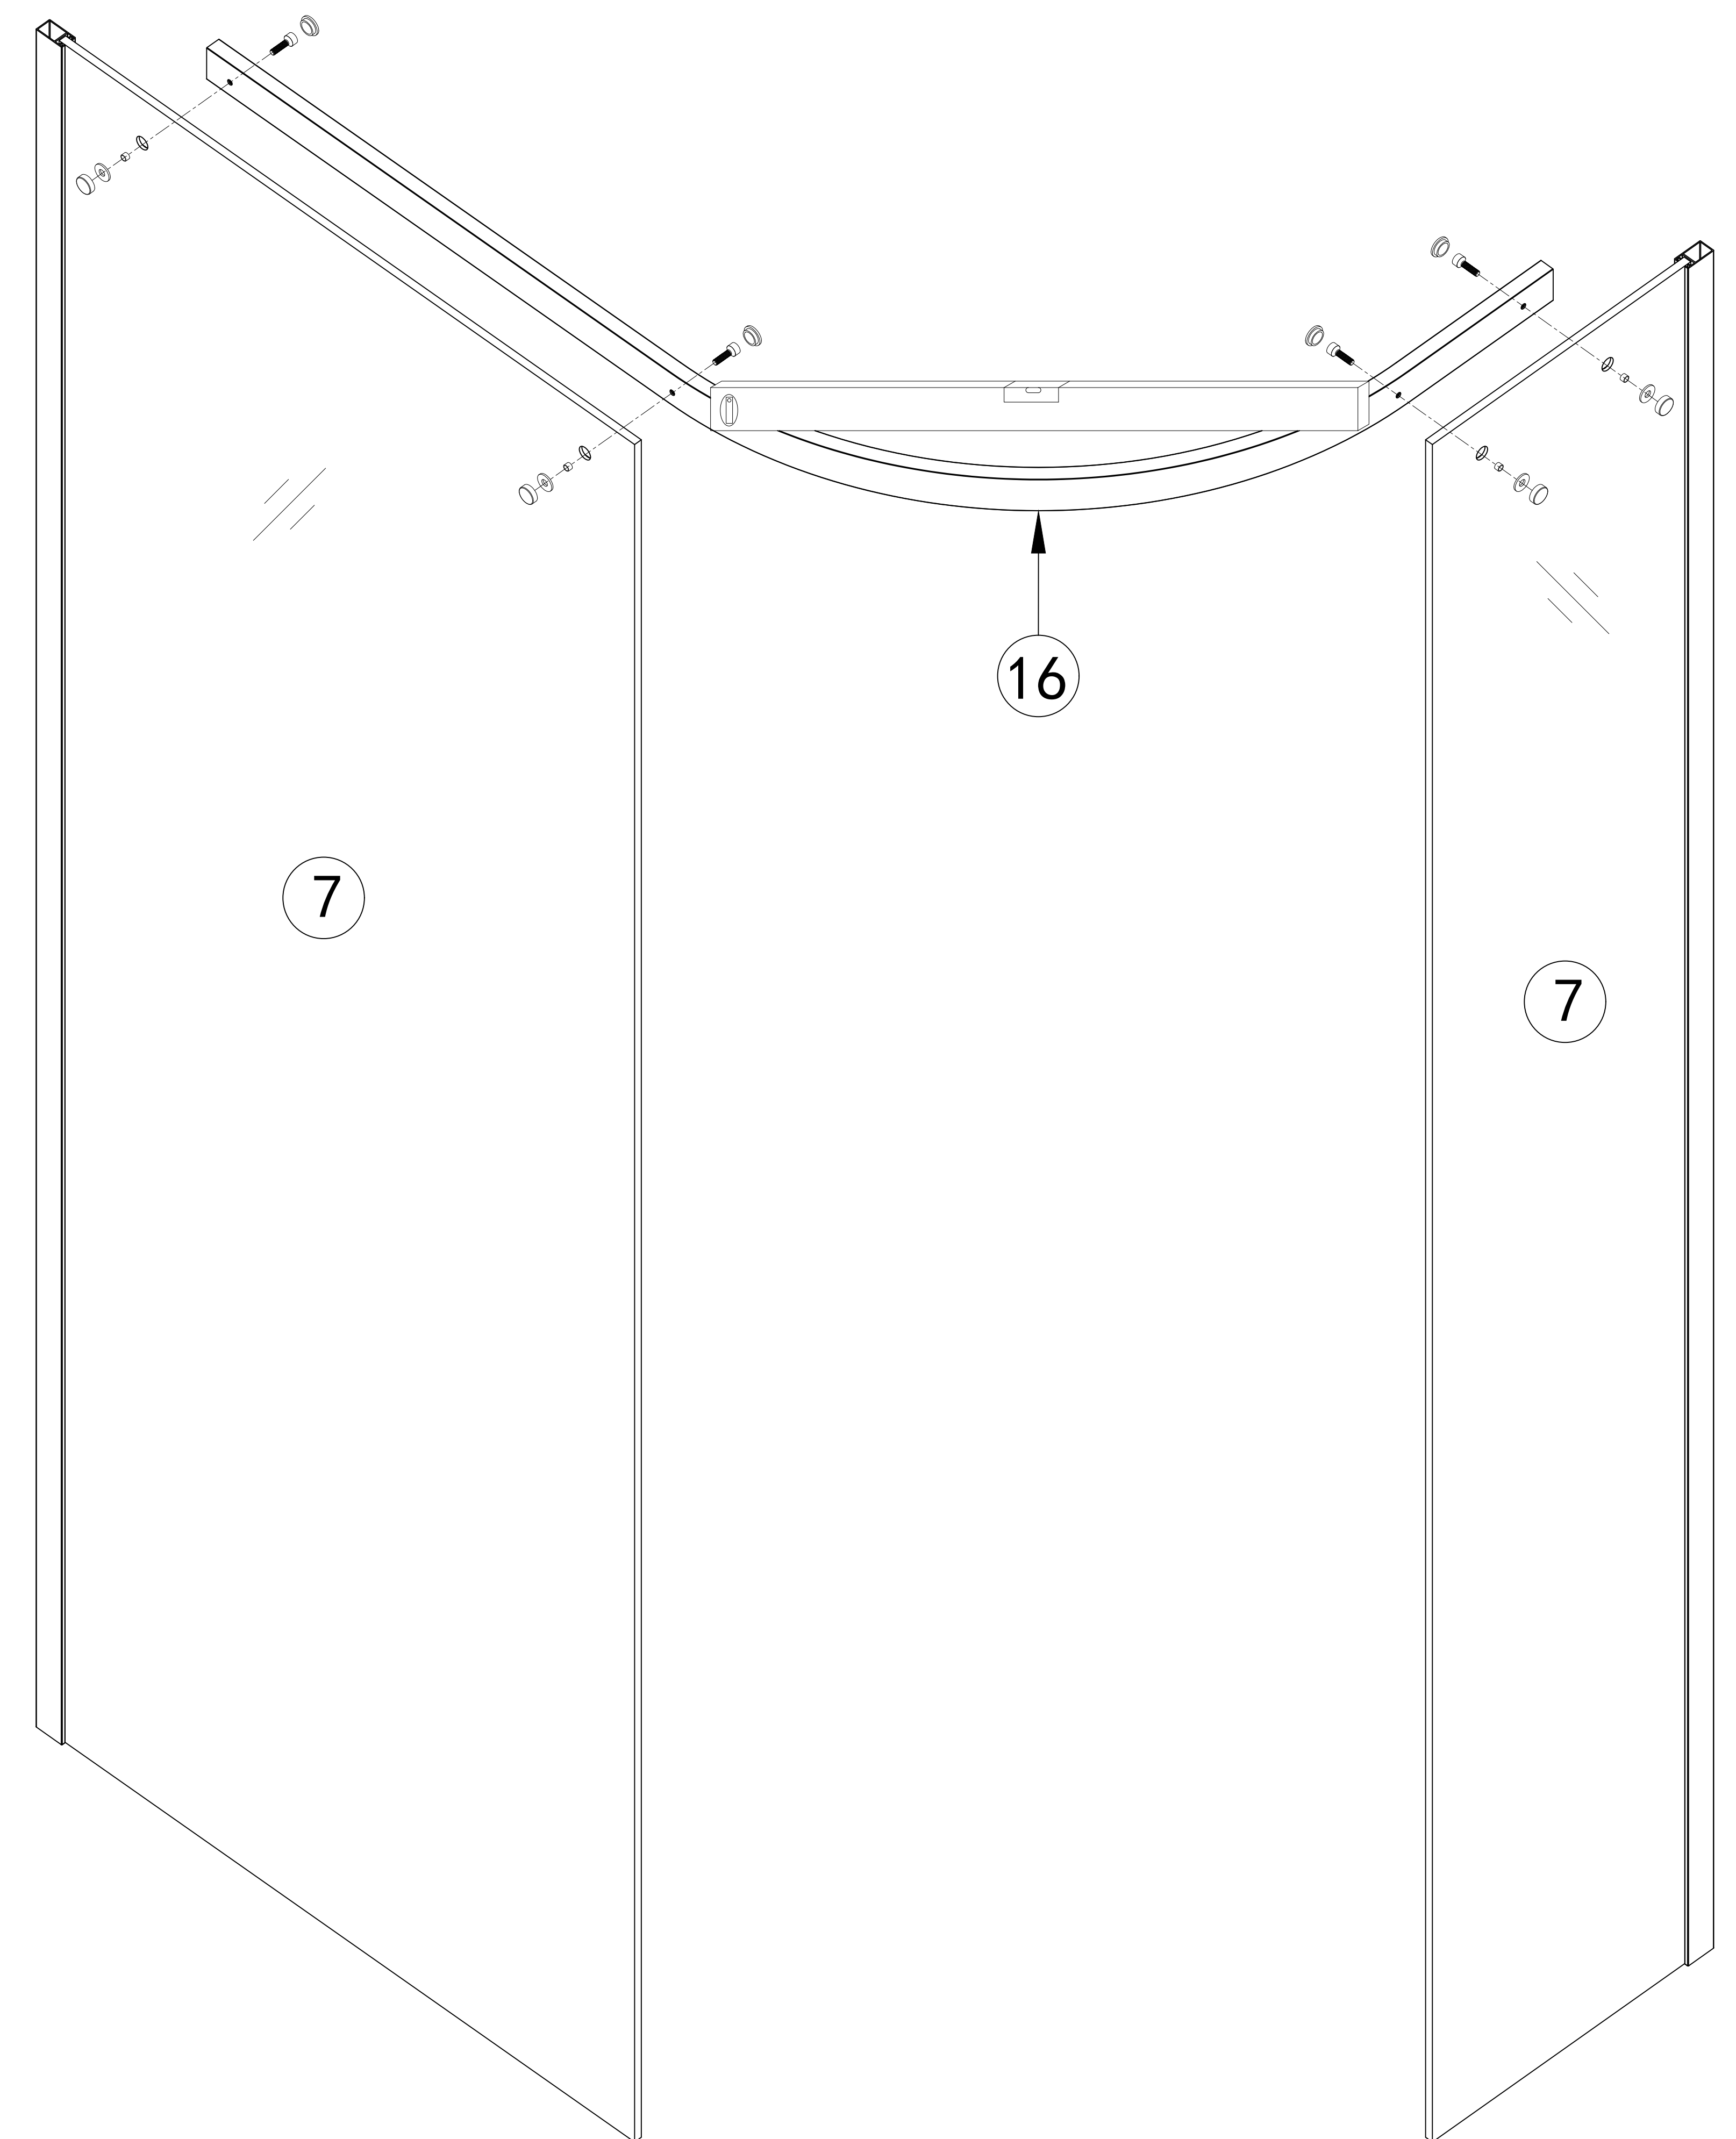


Connect top support bar 16 to fixed glass panels 7 with bolts 14.



Connect top support bar 16 to fixed glass panels 7 with bolts 14.

3L


3R

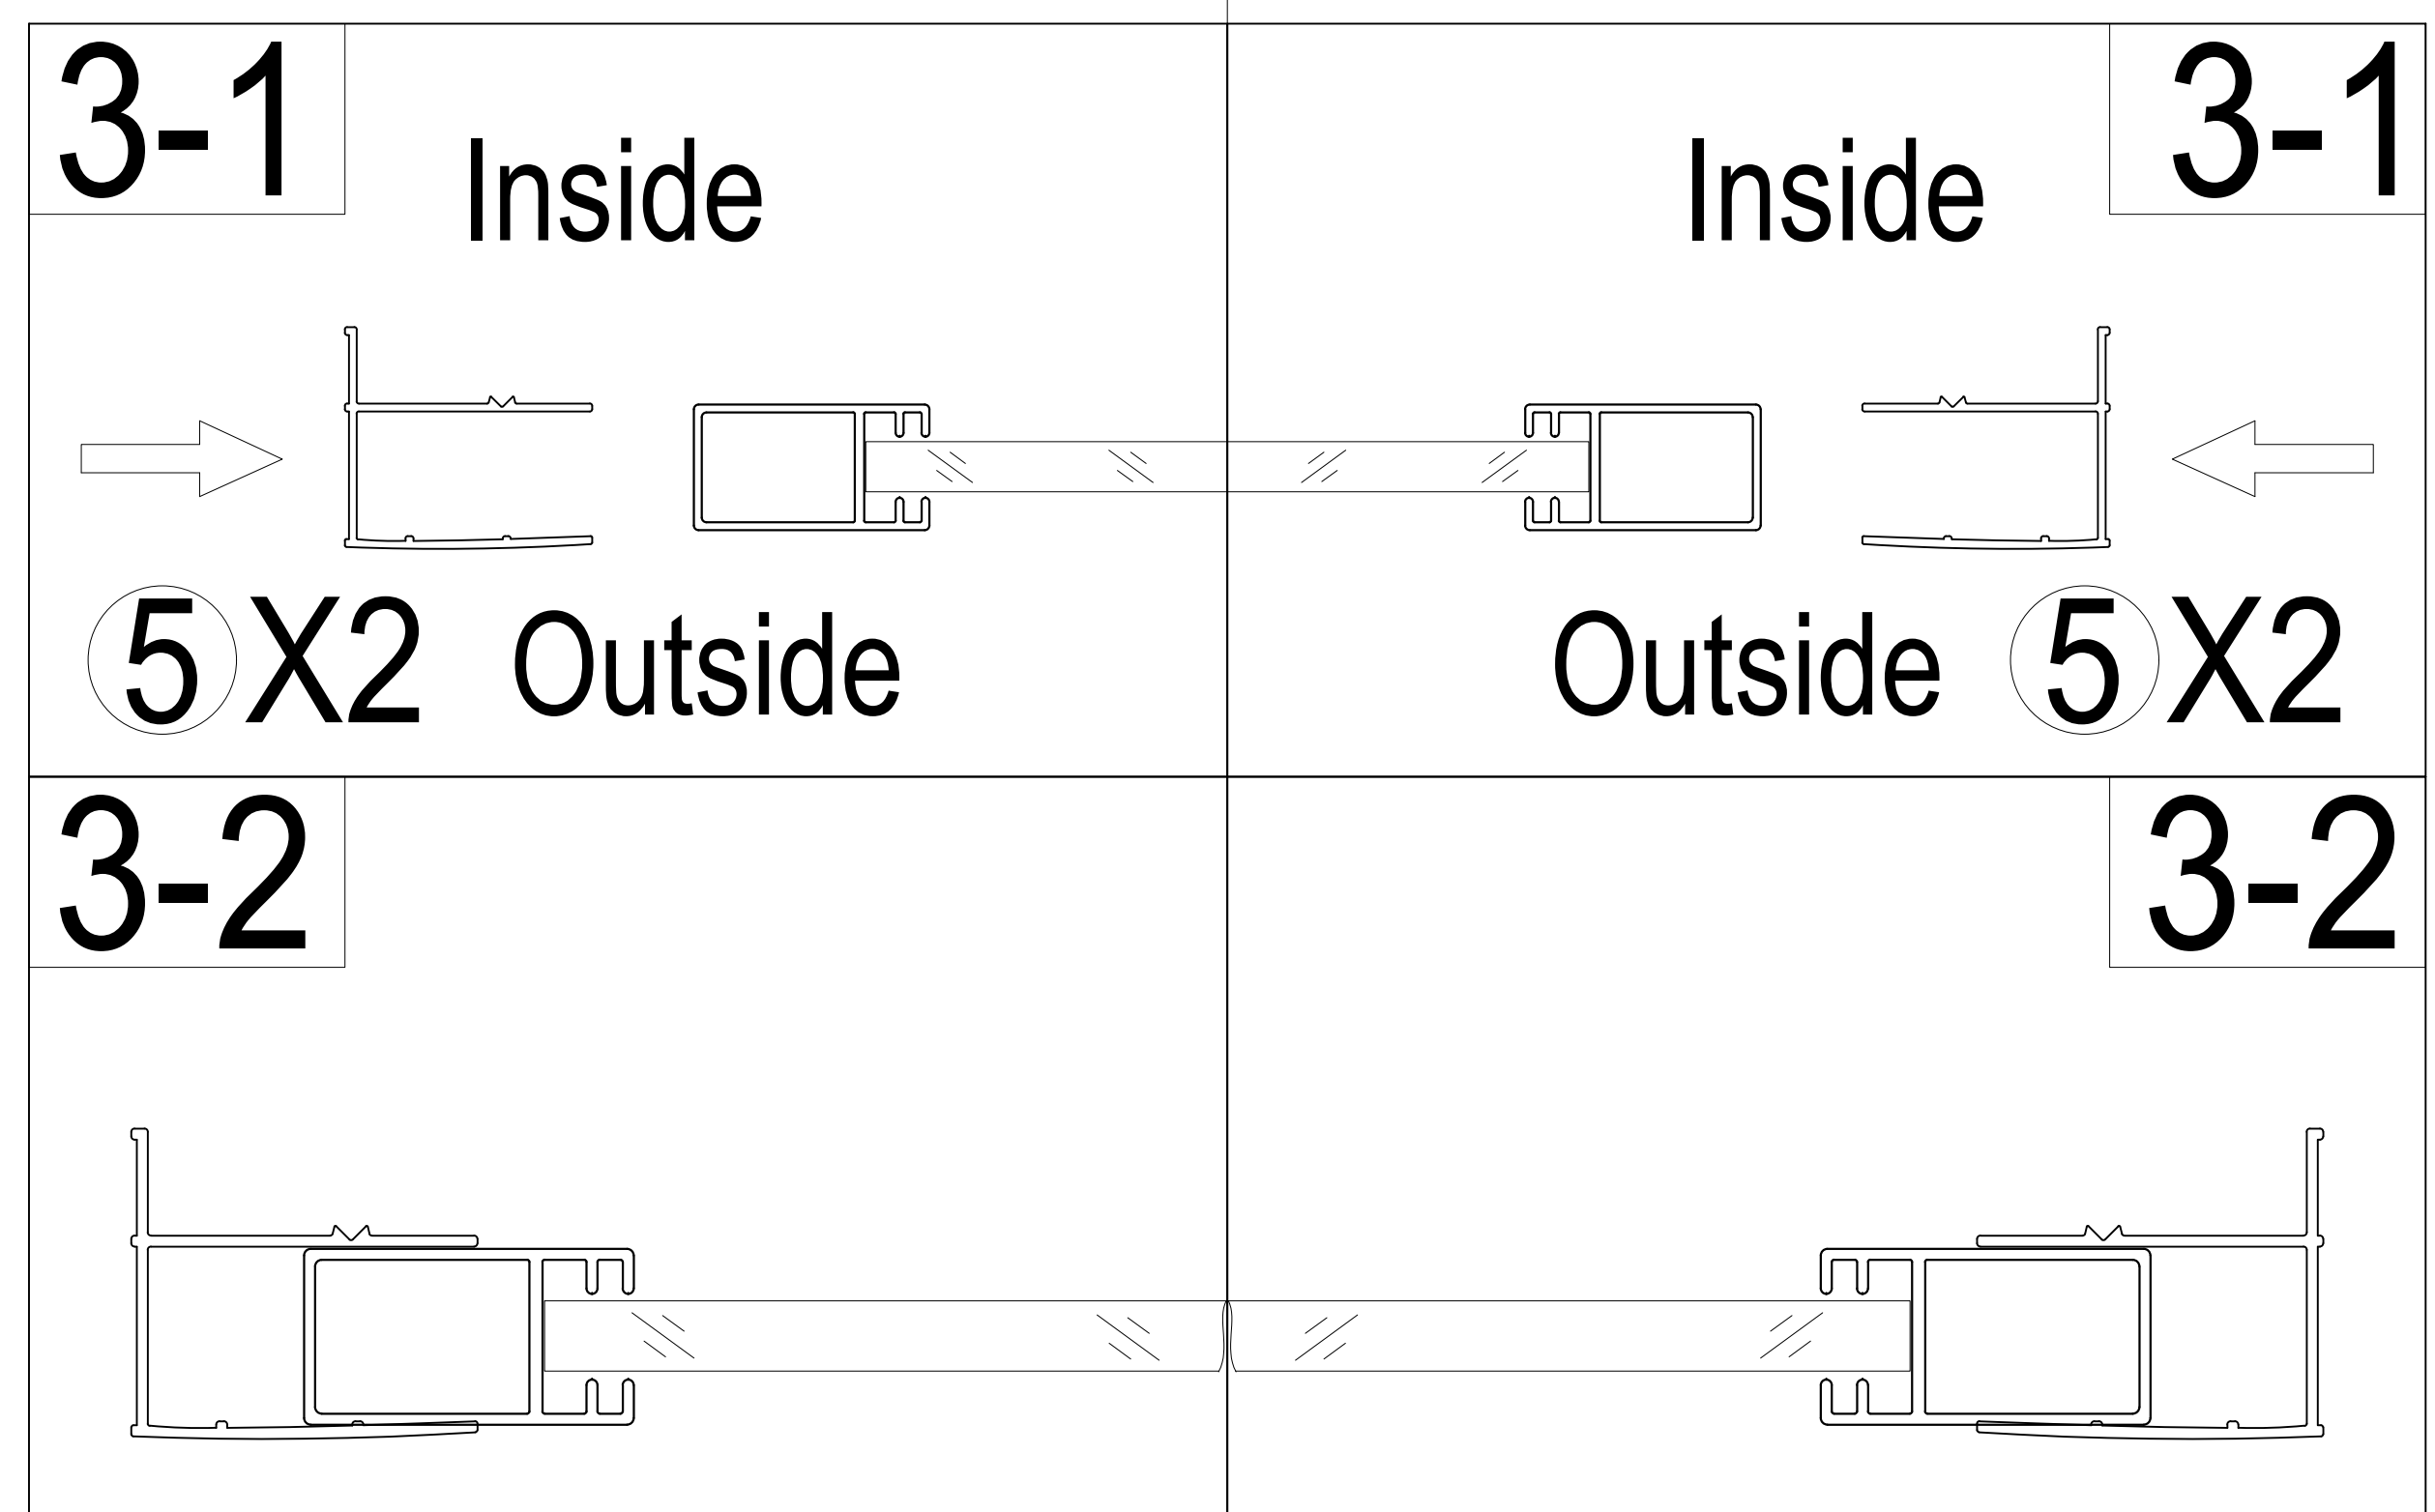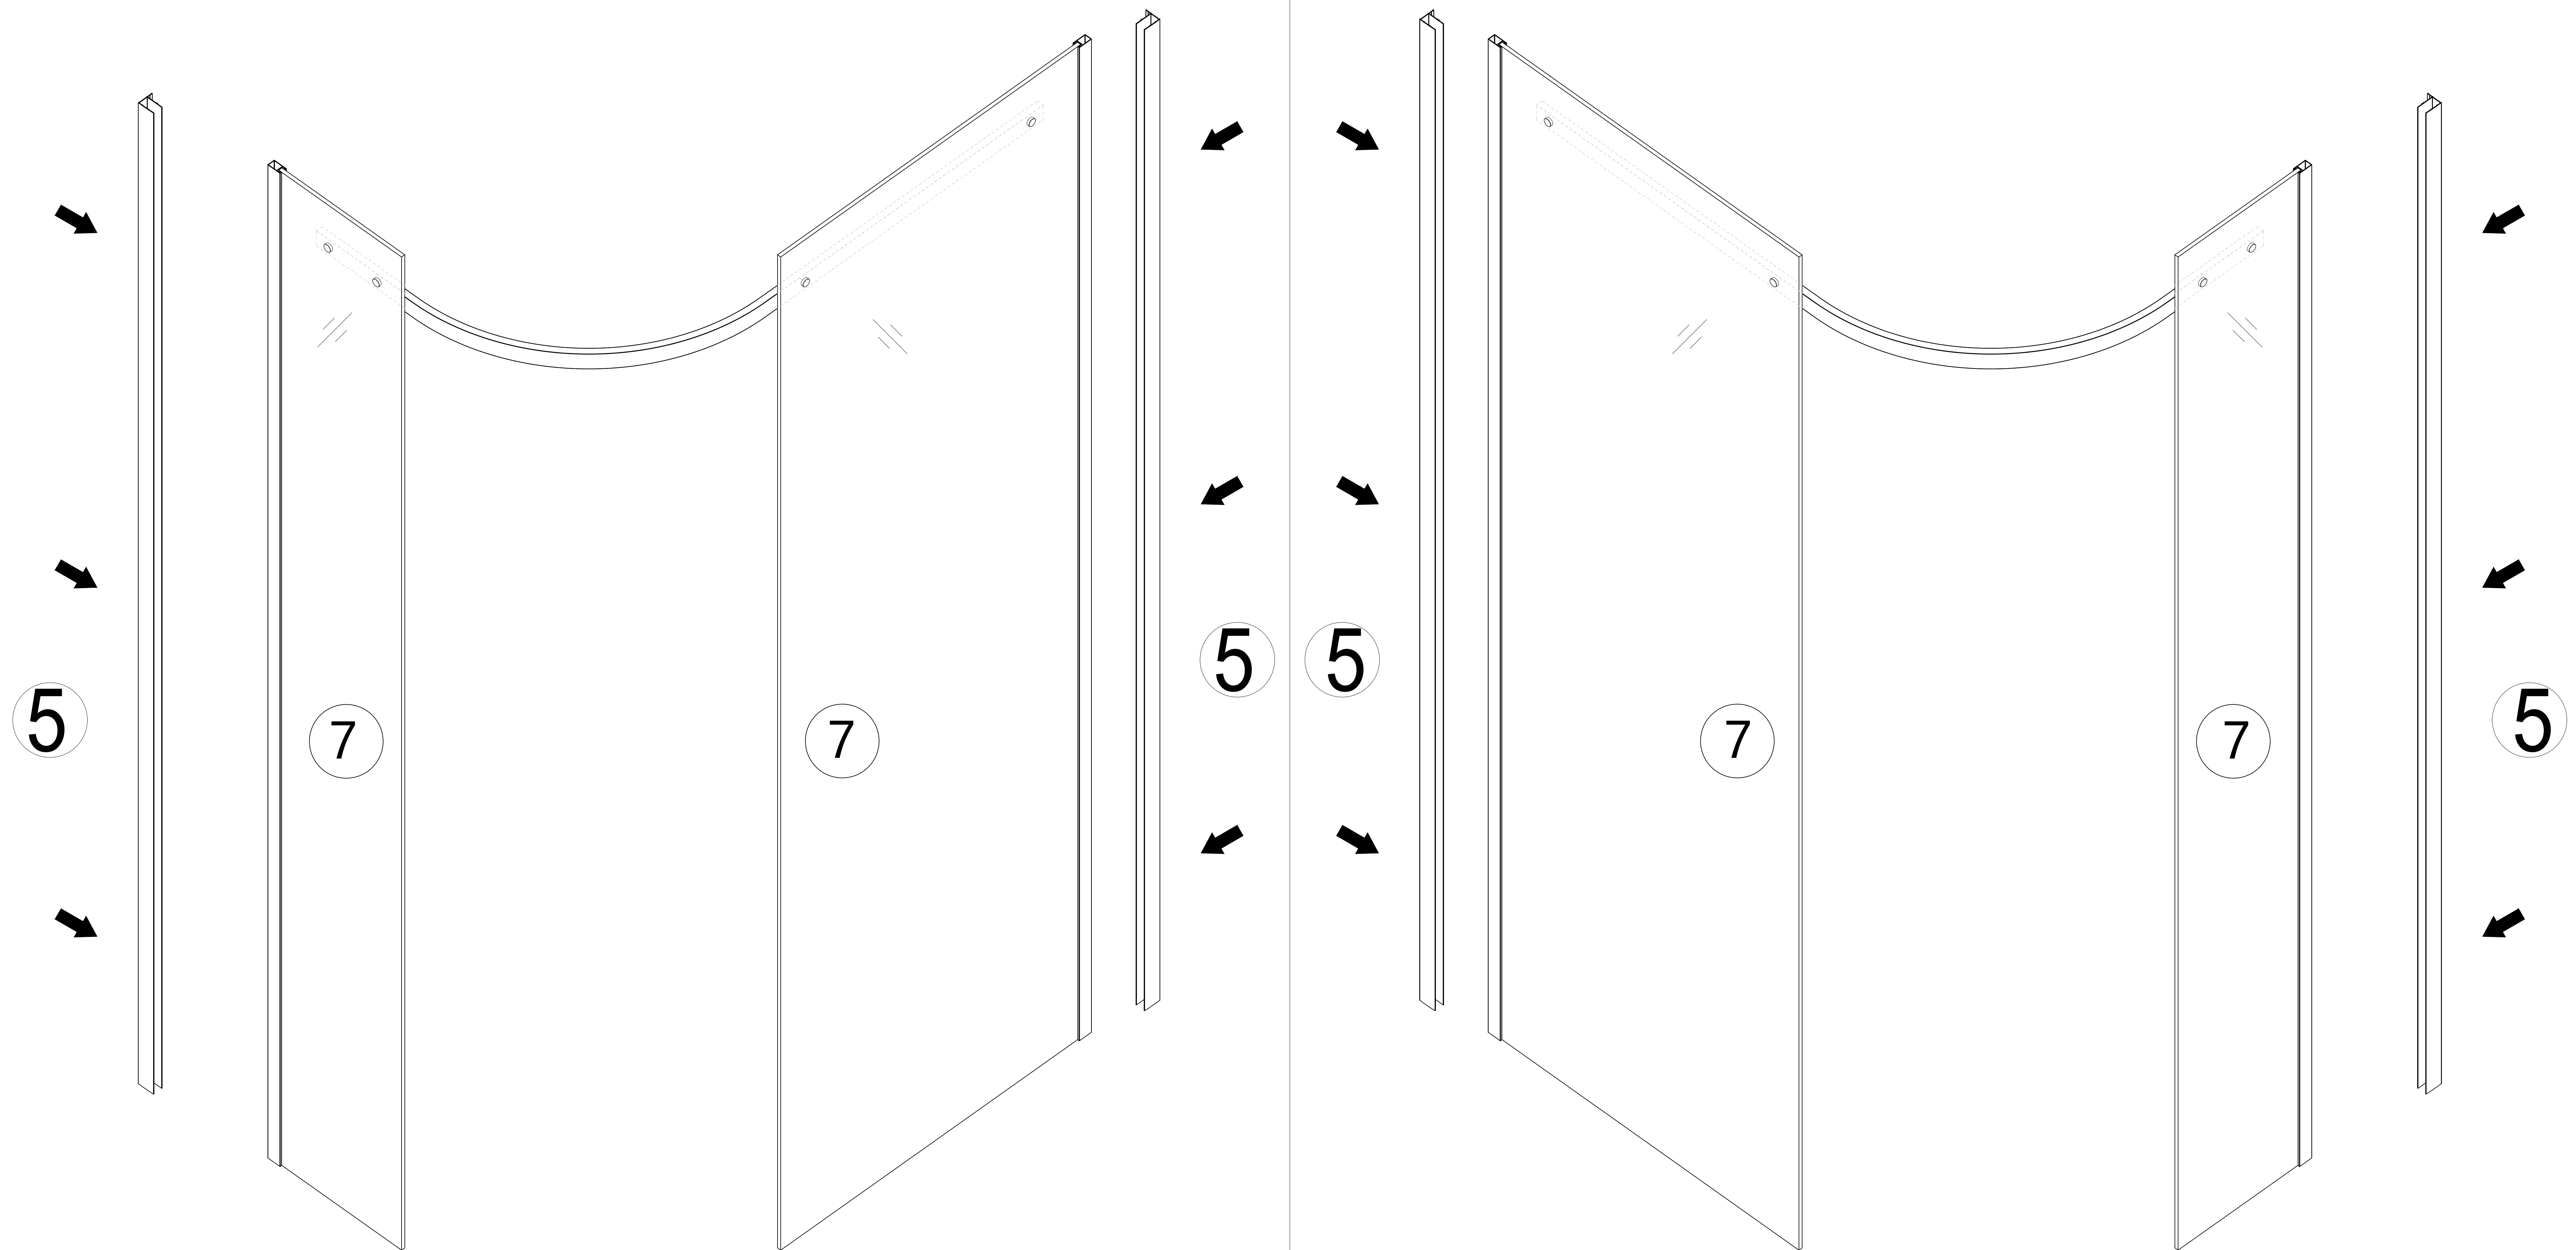

4L

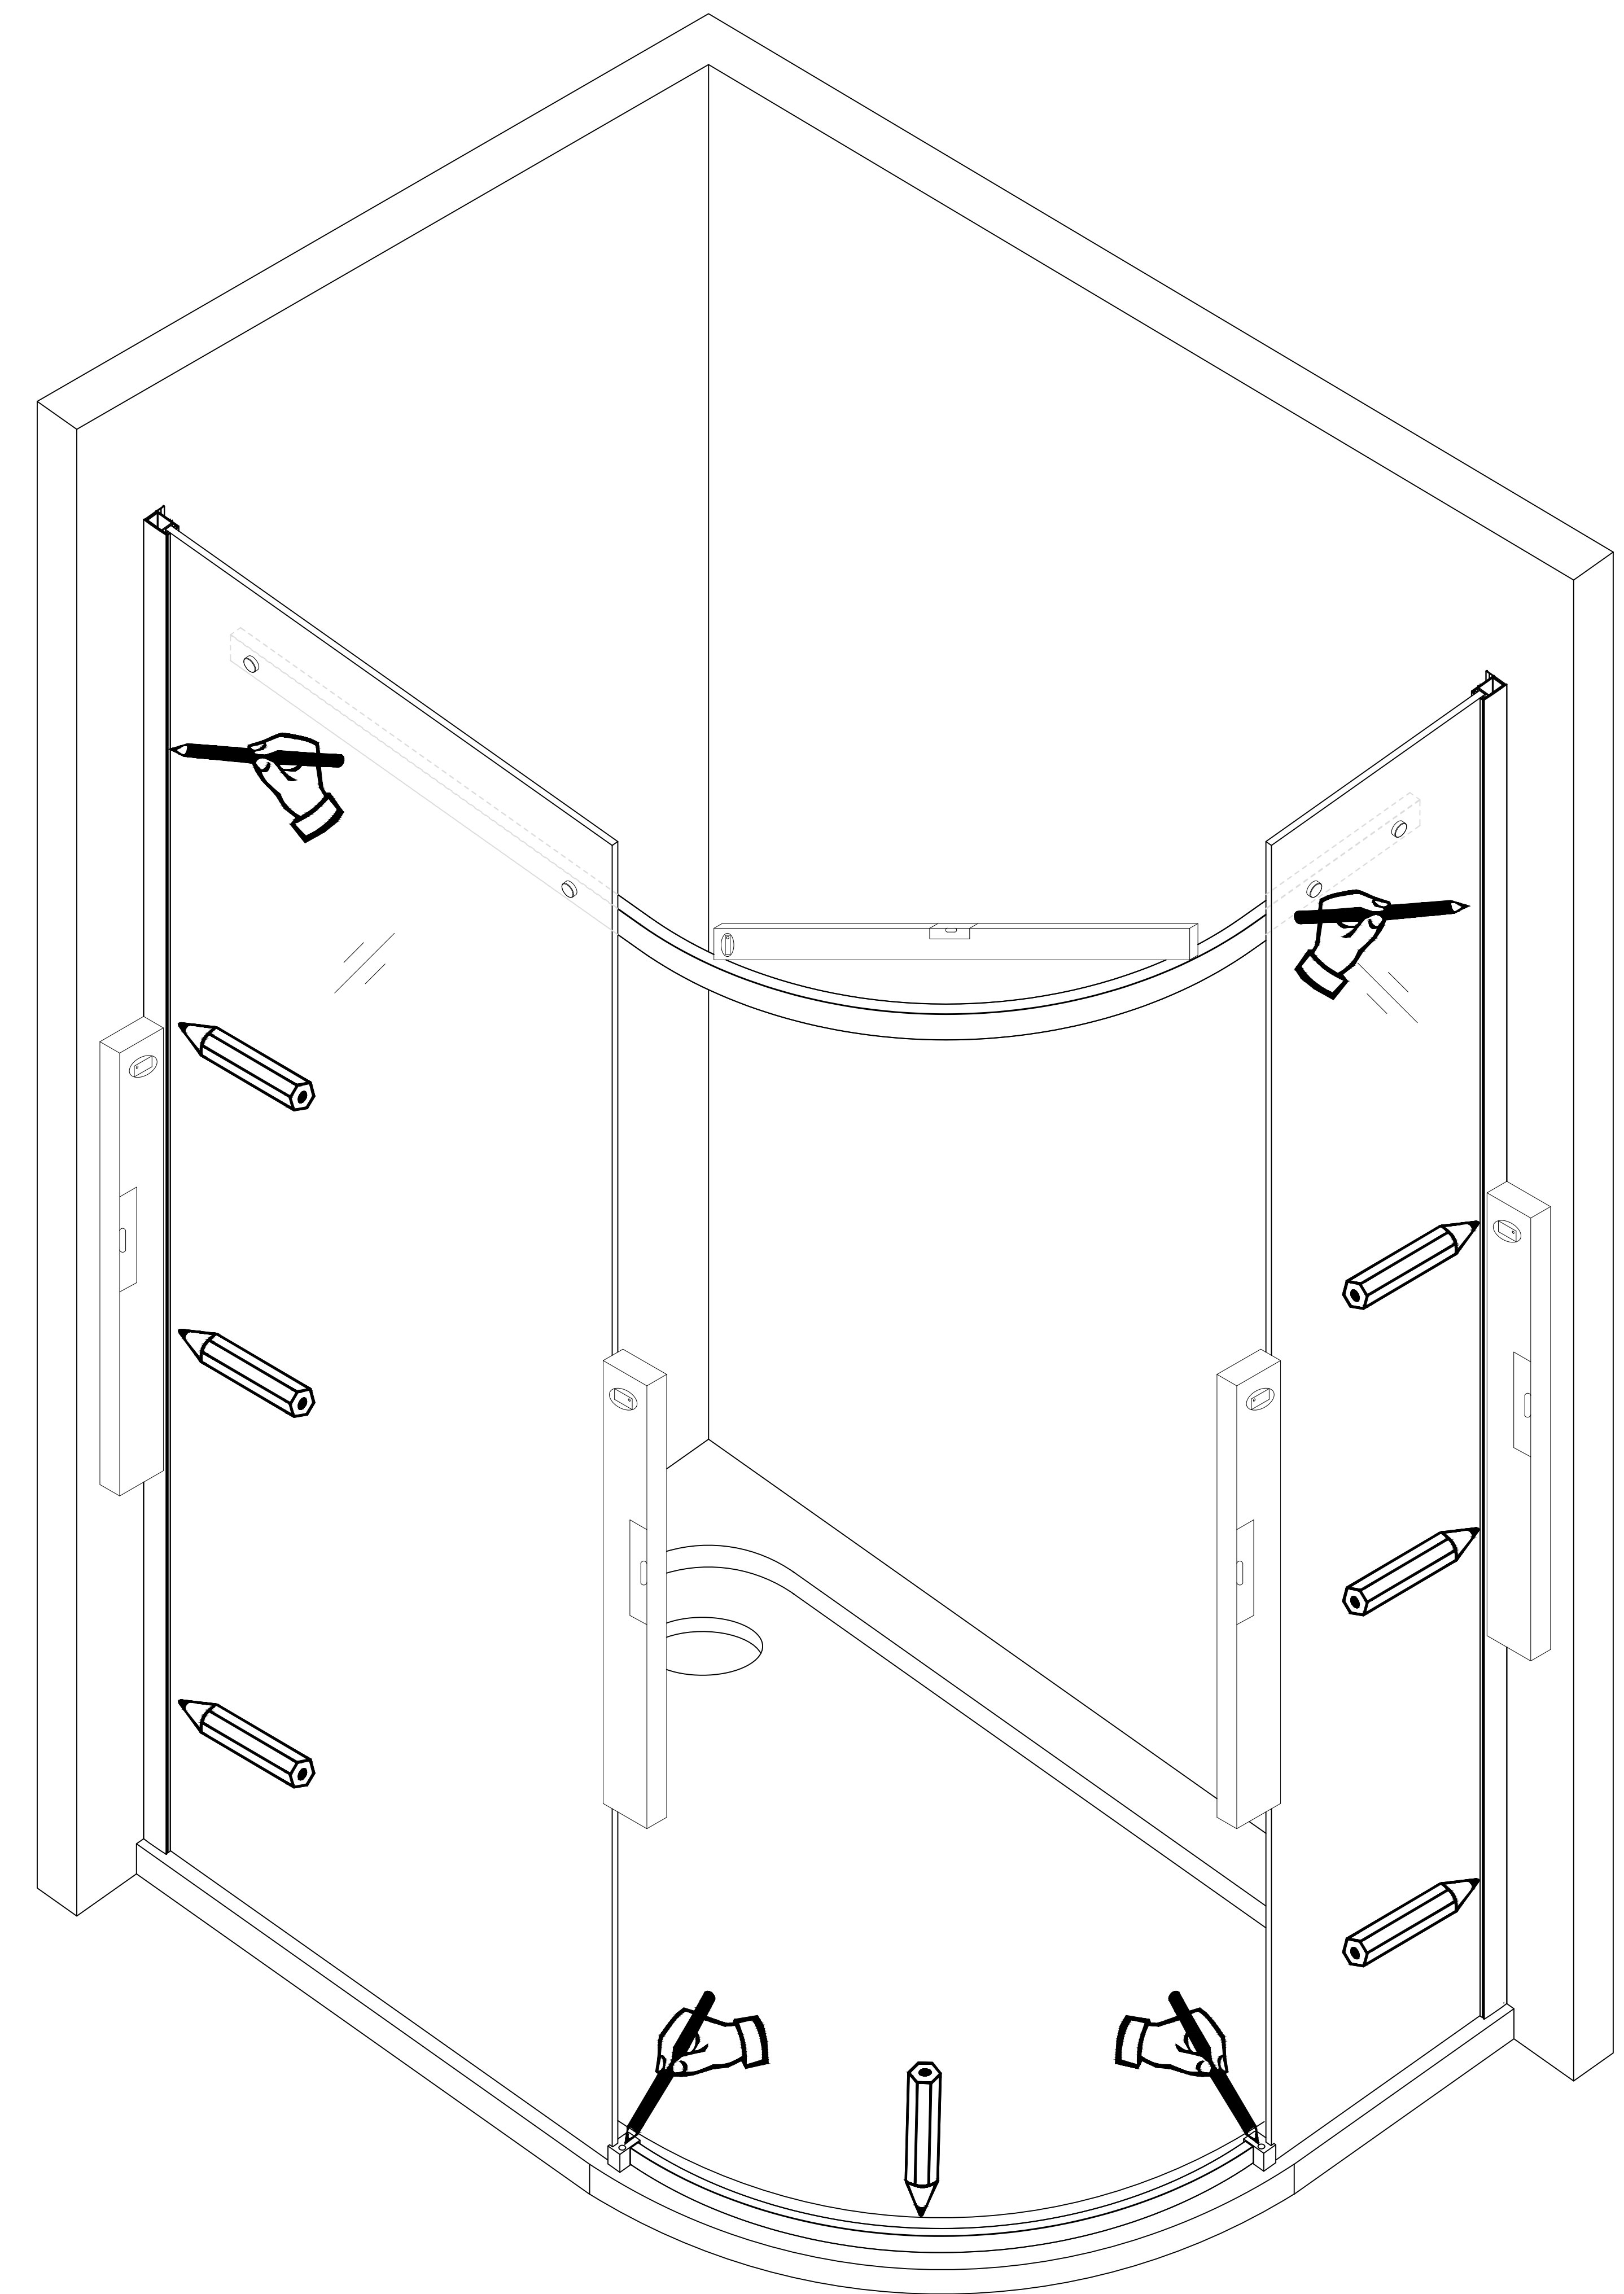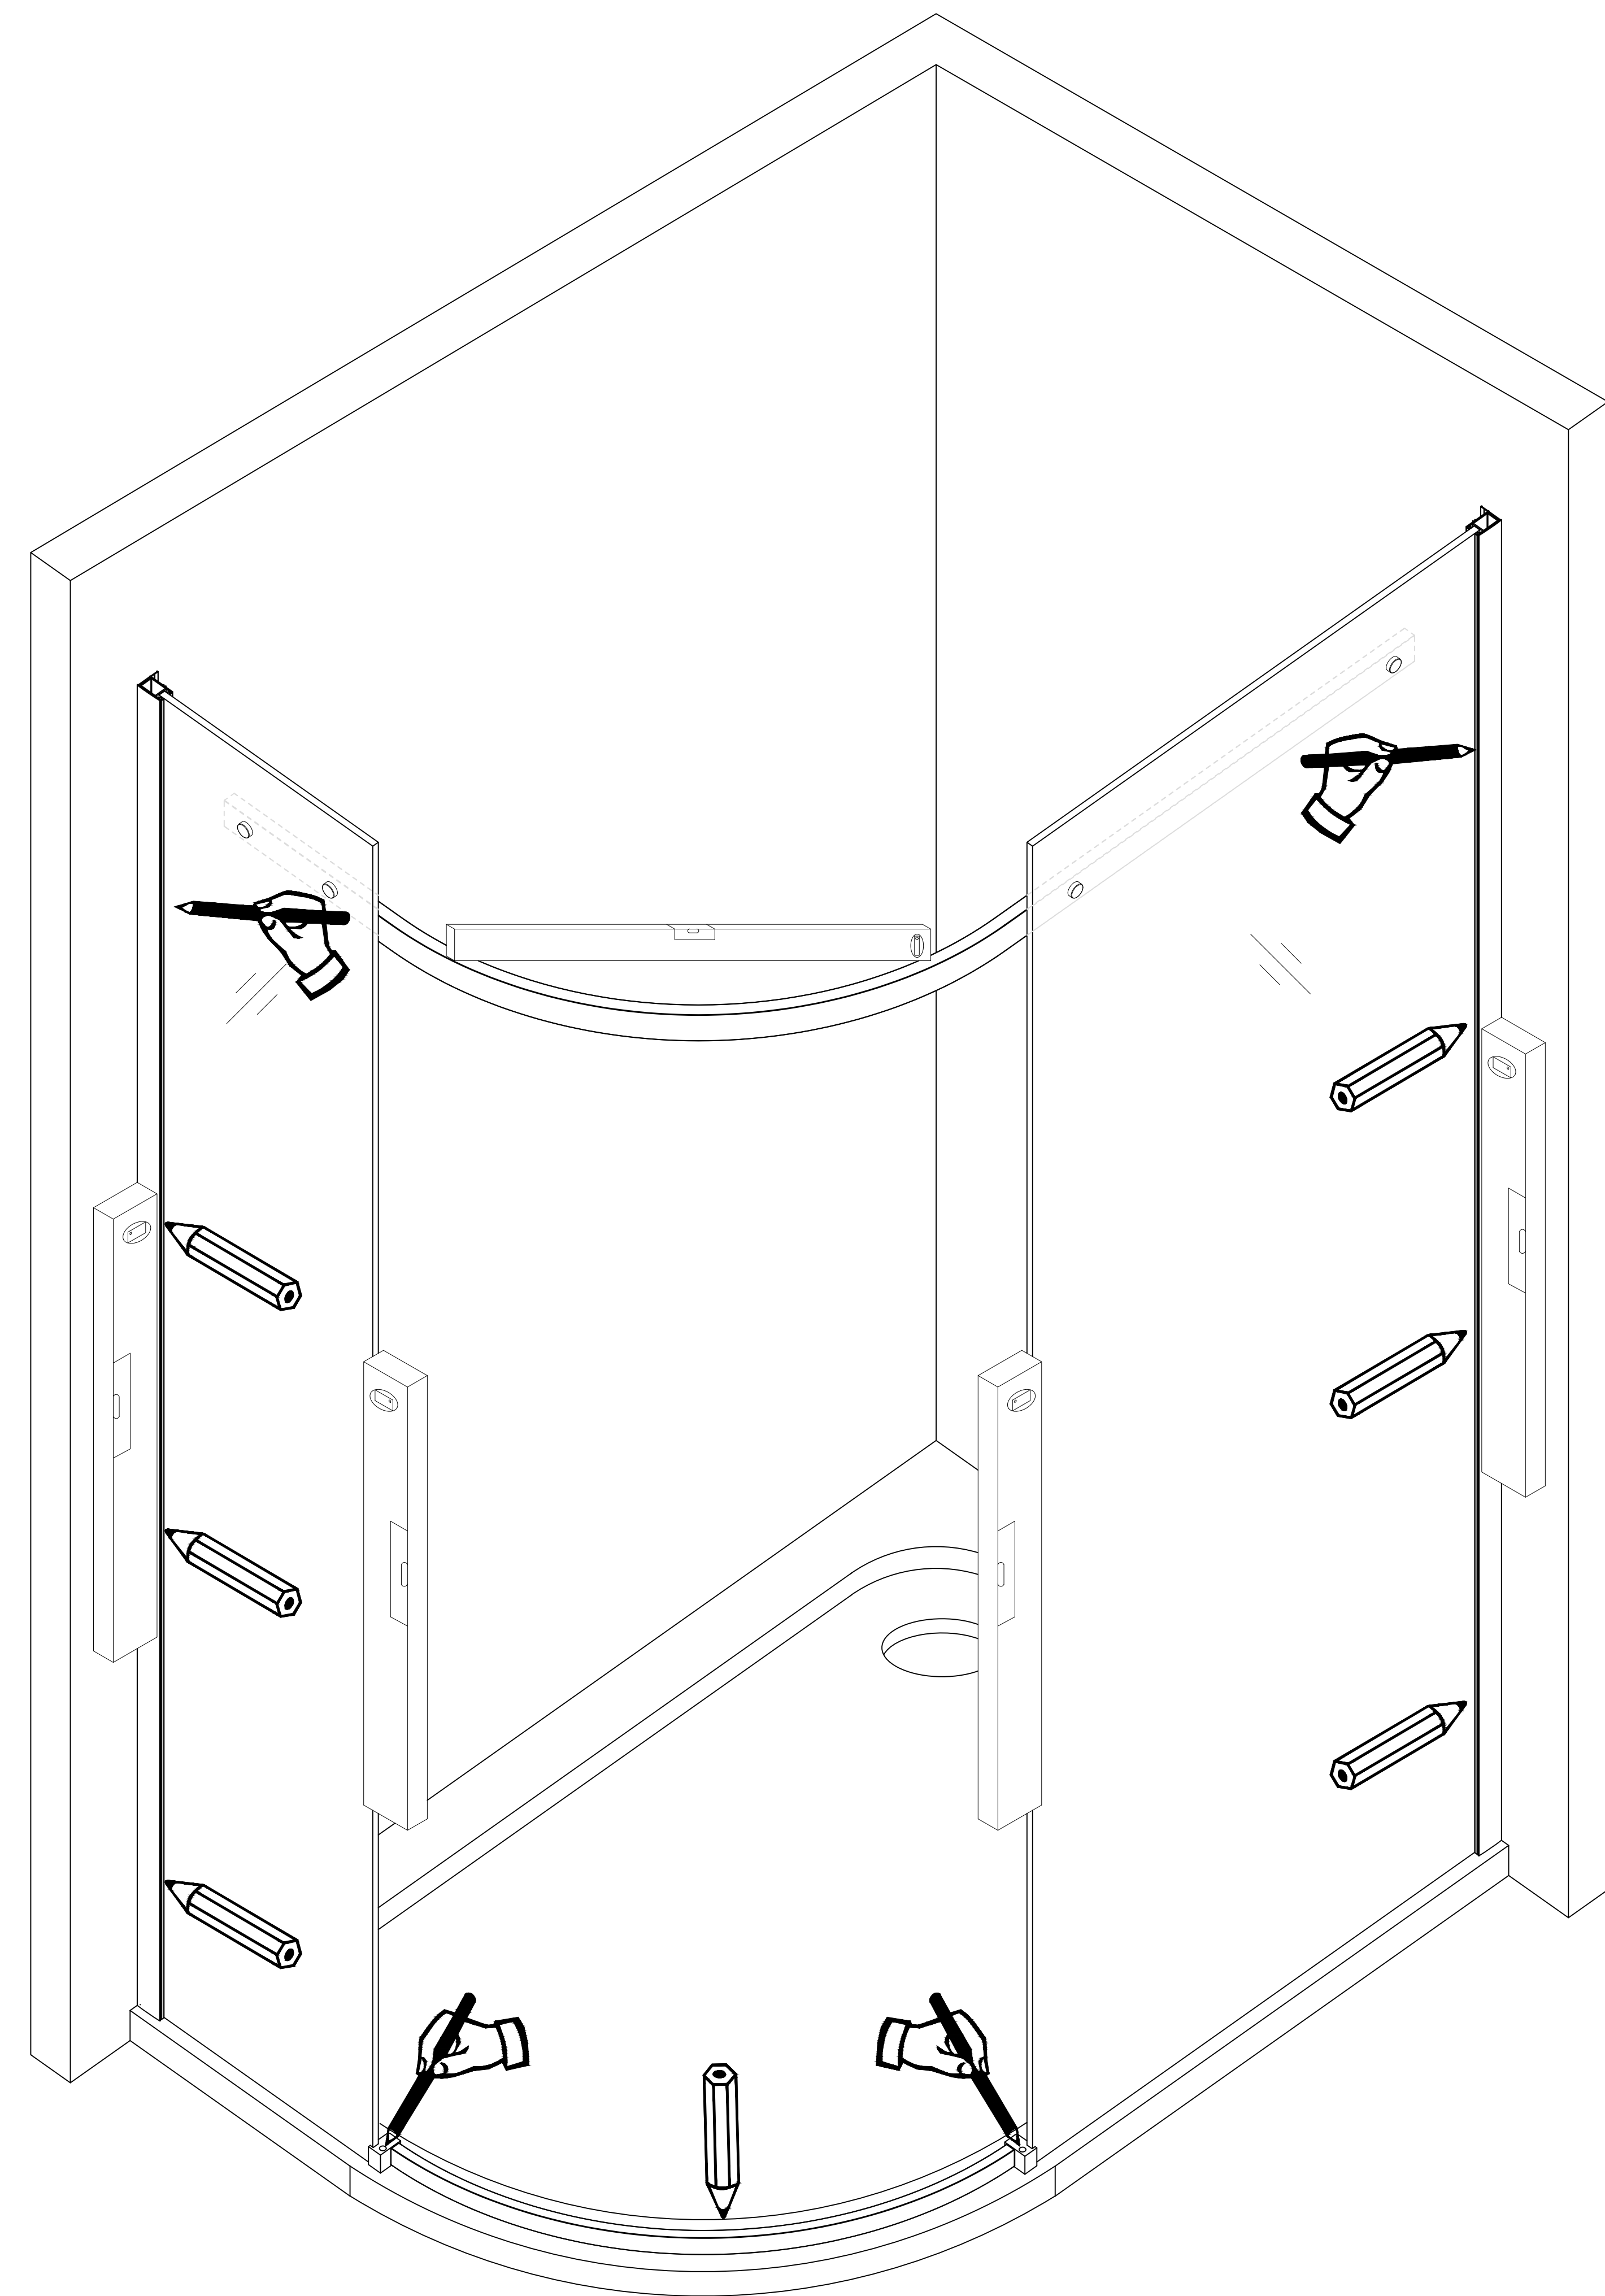



4R

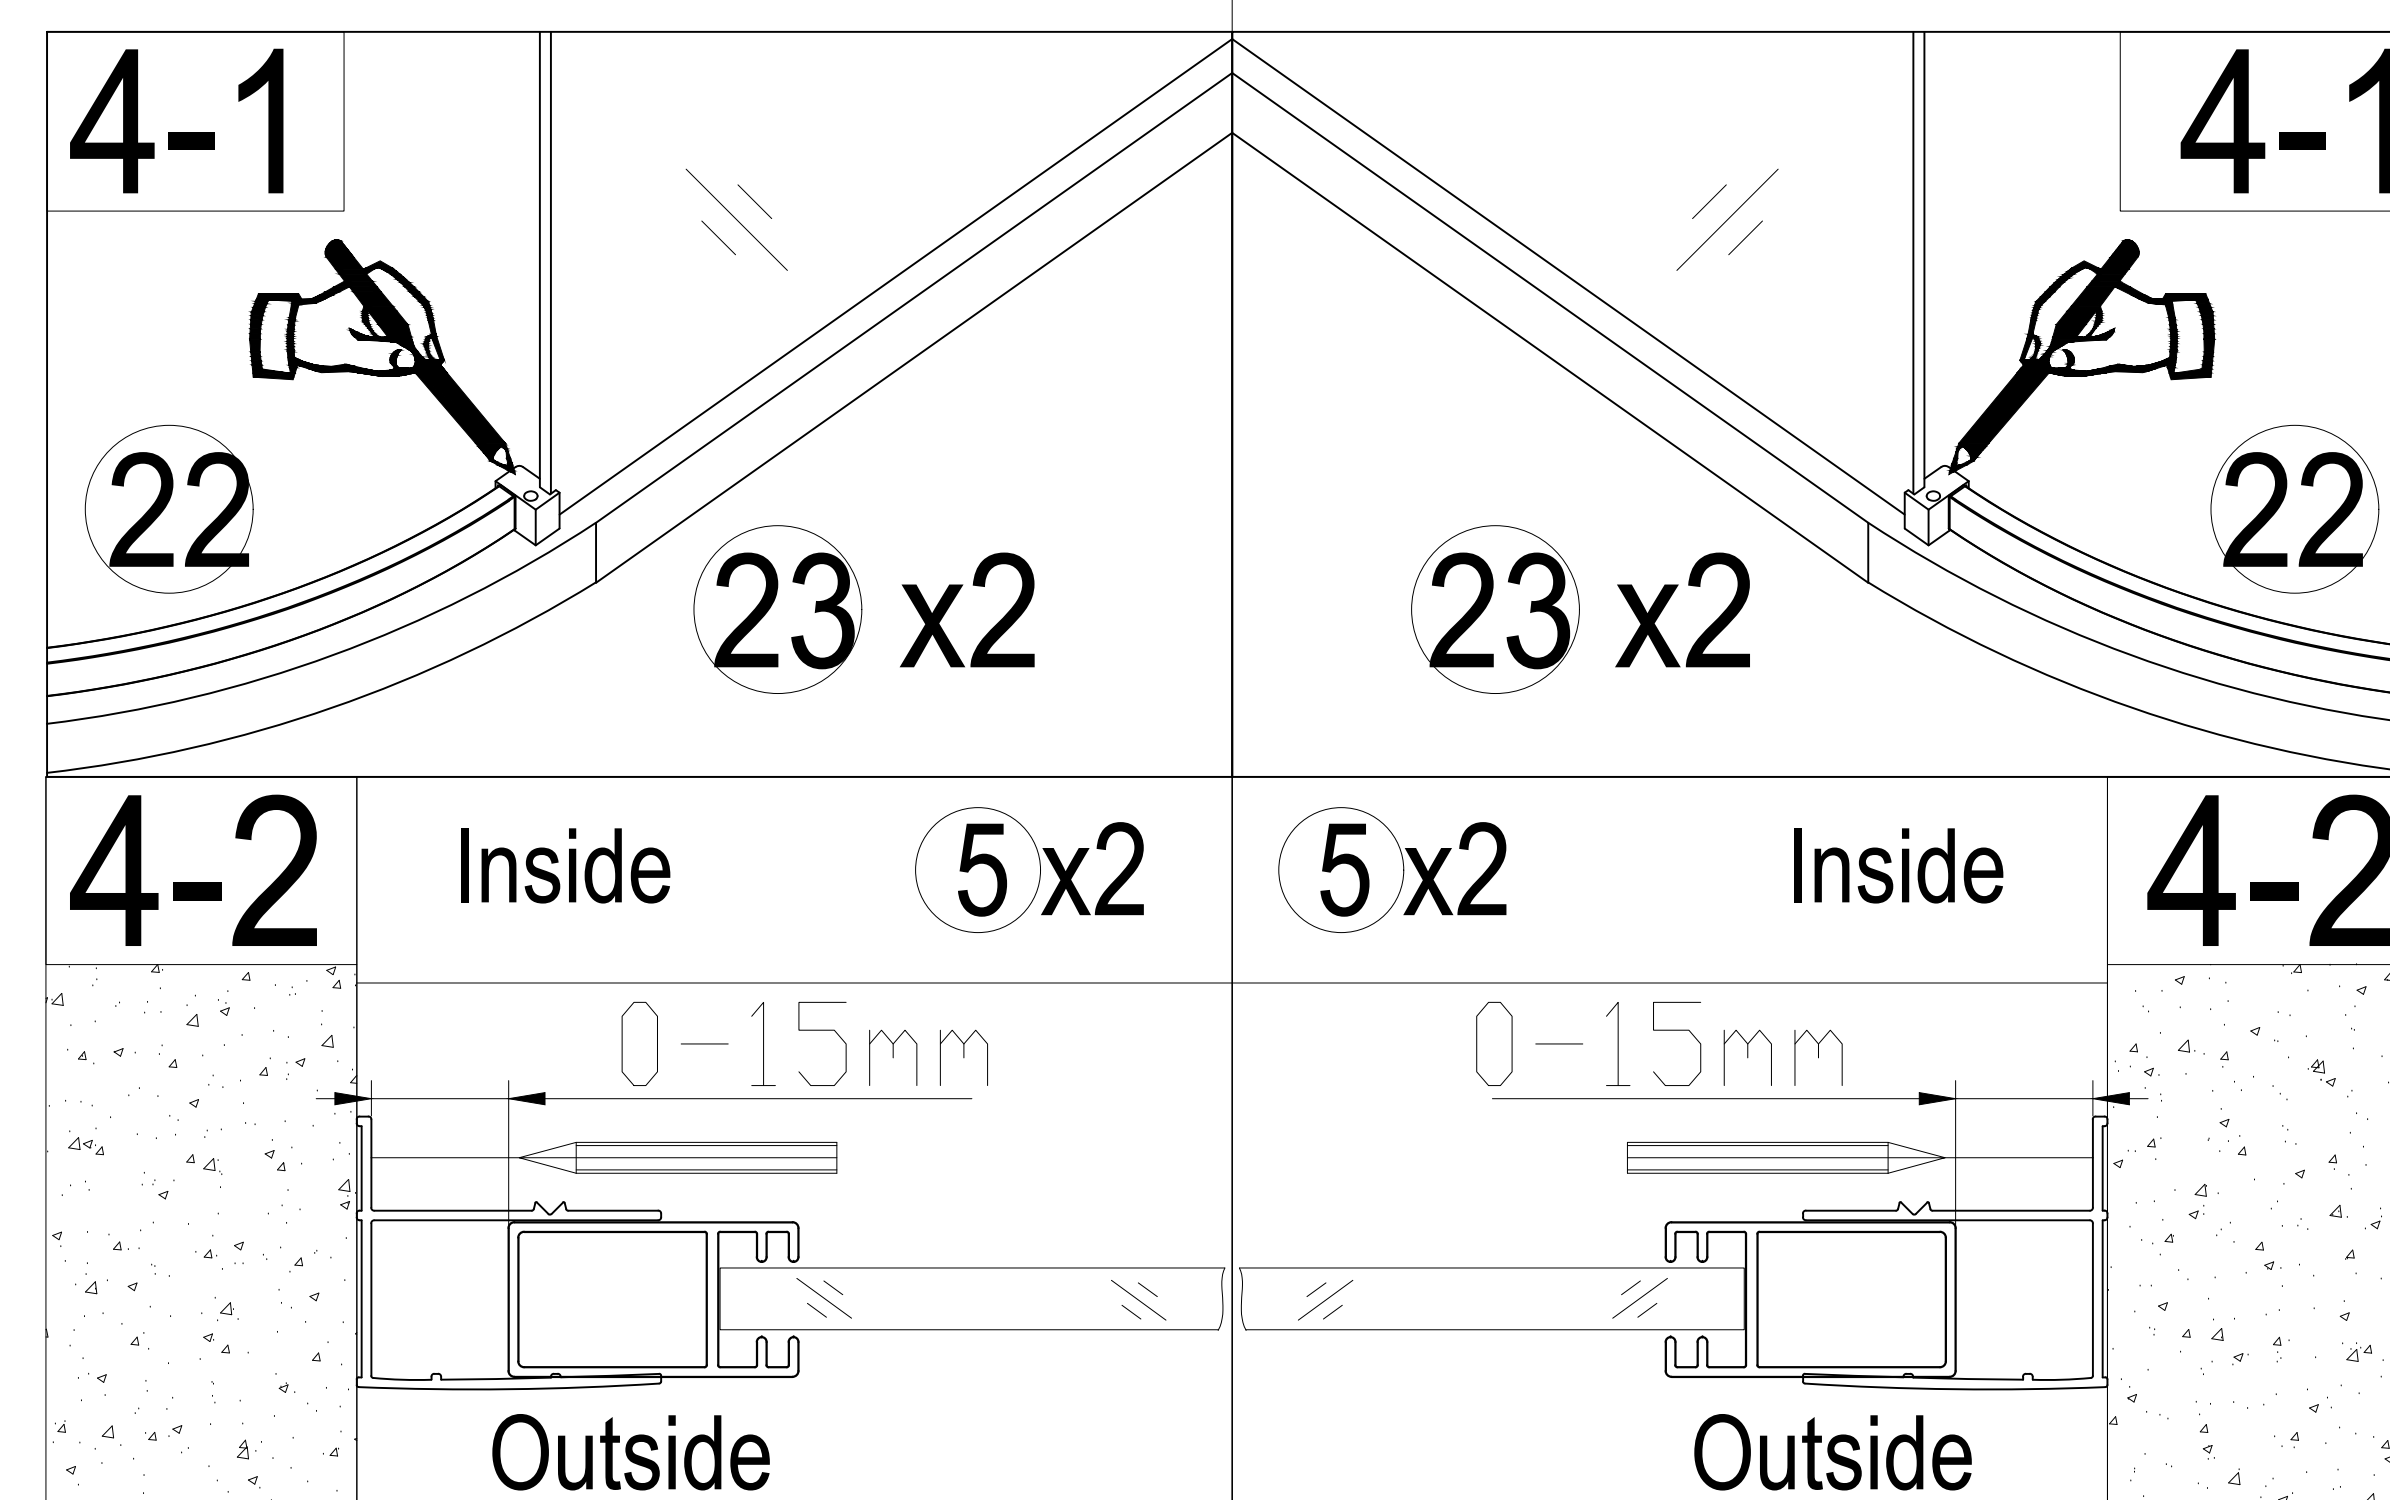


Lift fixed panels with bar attached onto tray for best fit and mark position for wall profiles and bottom rail & rail fixtures

Lift fixed panels with bar attached onto tray for best fit and mark position for wall profiles and bottom rail & rail fixtures

5L

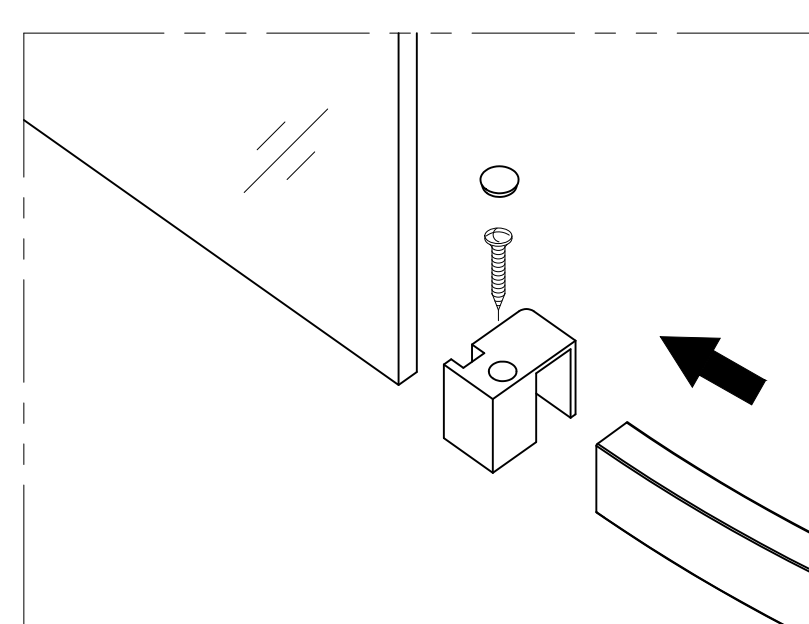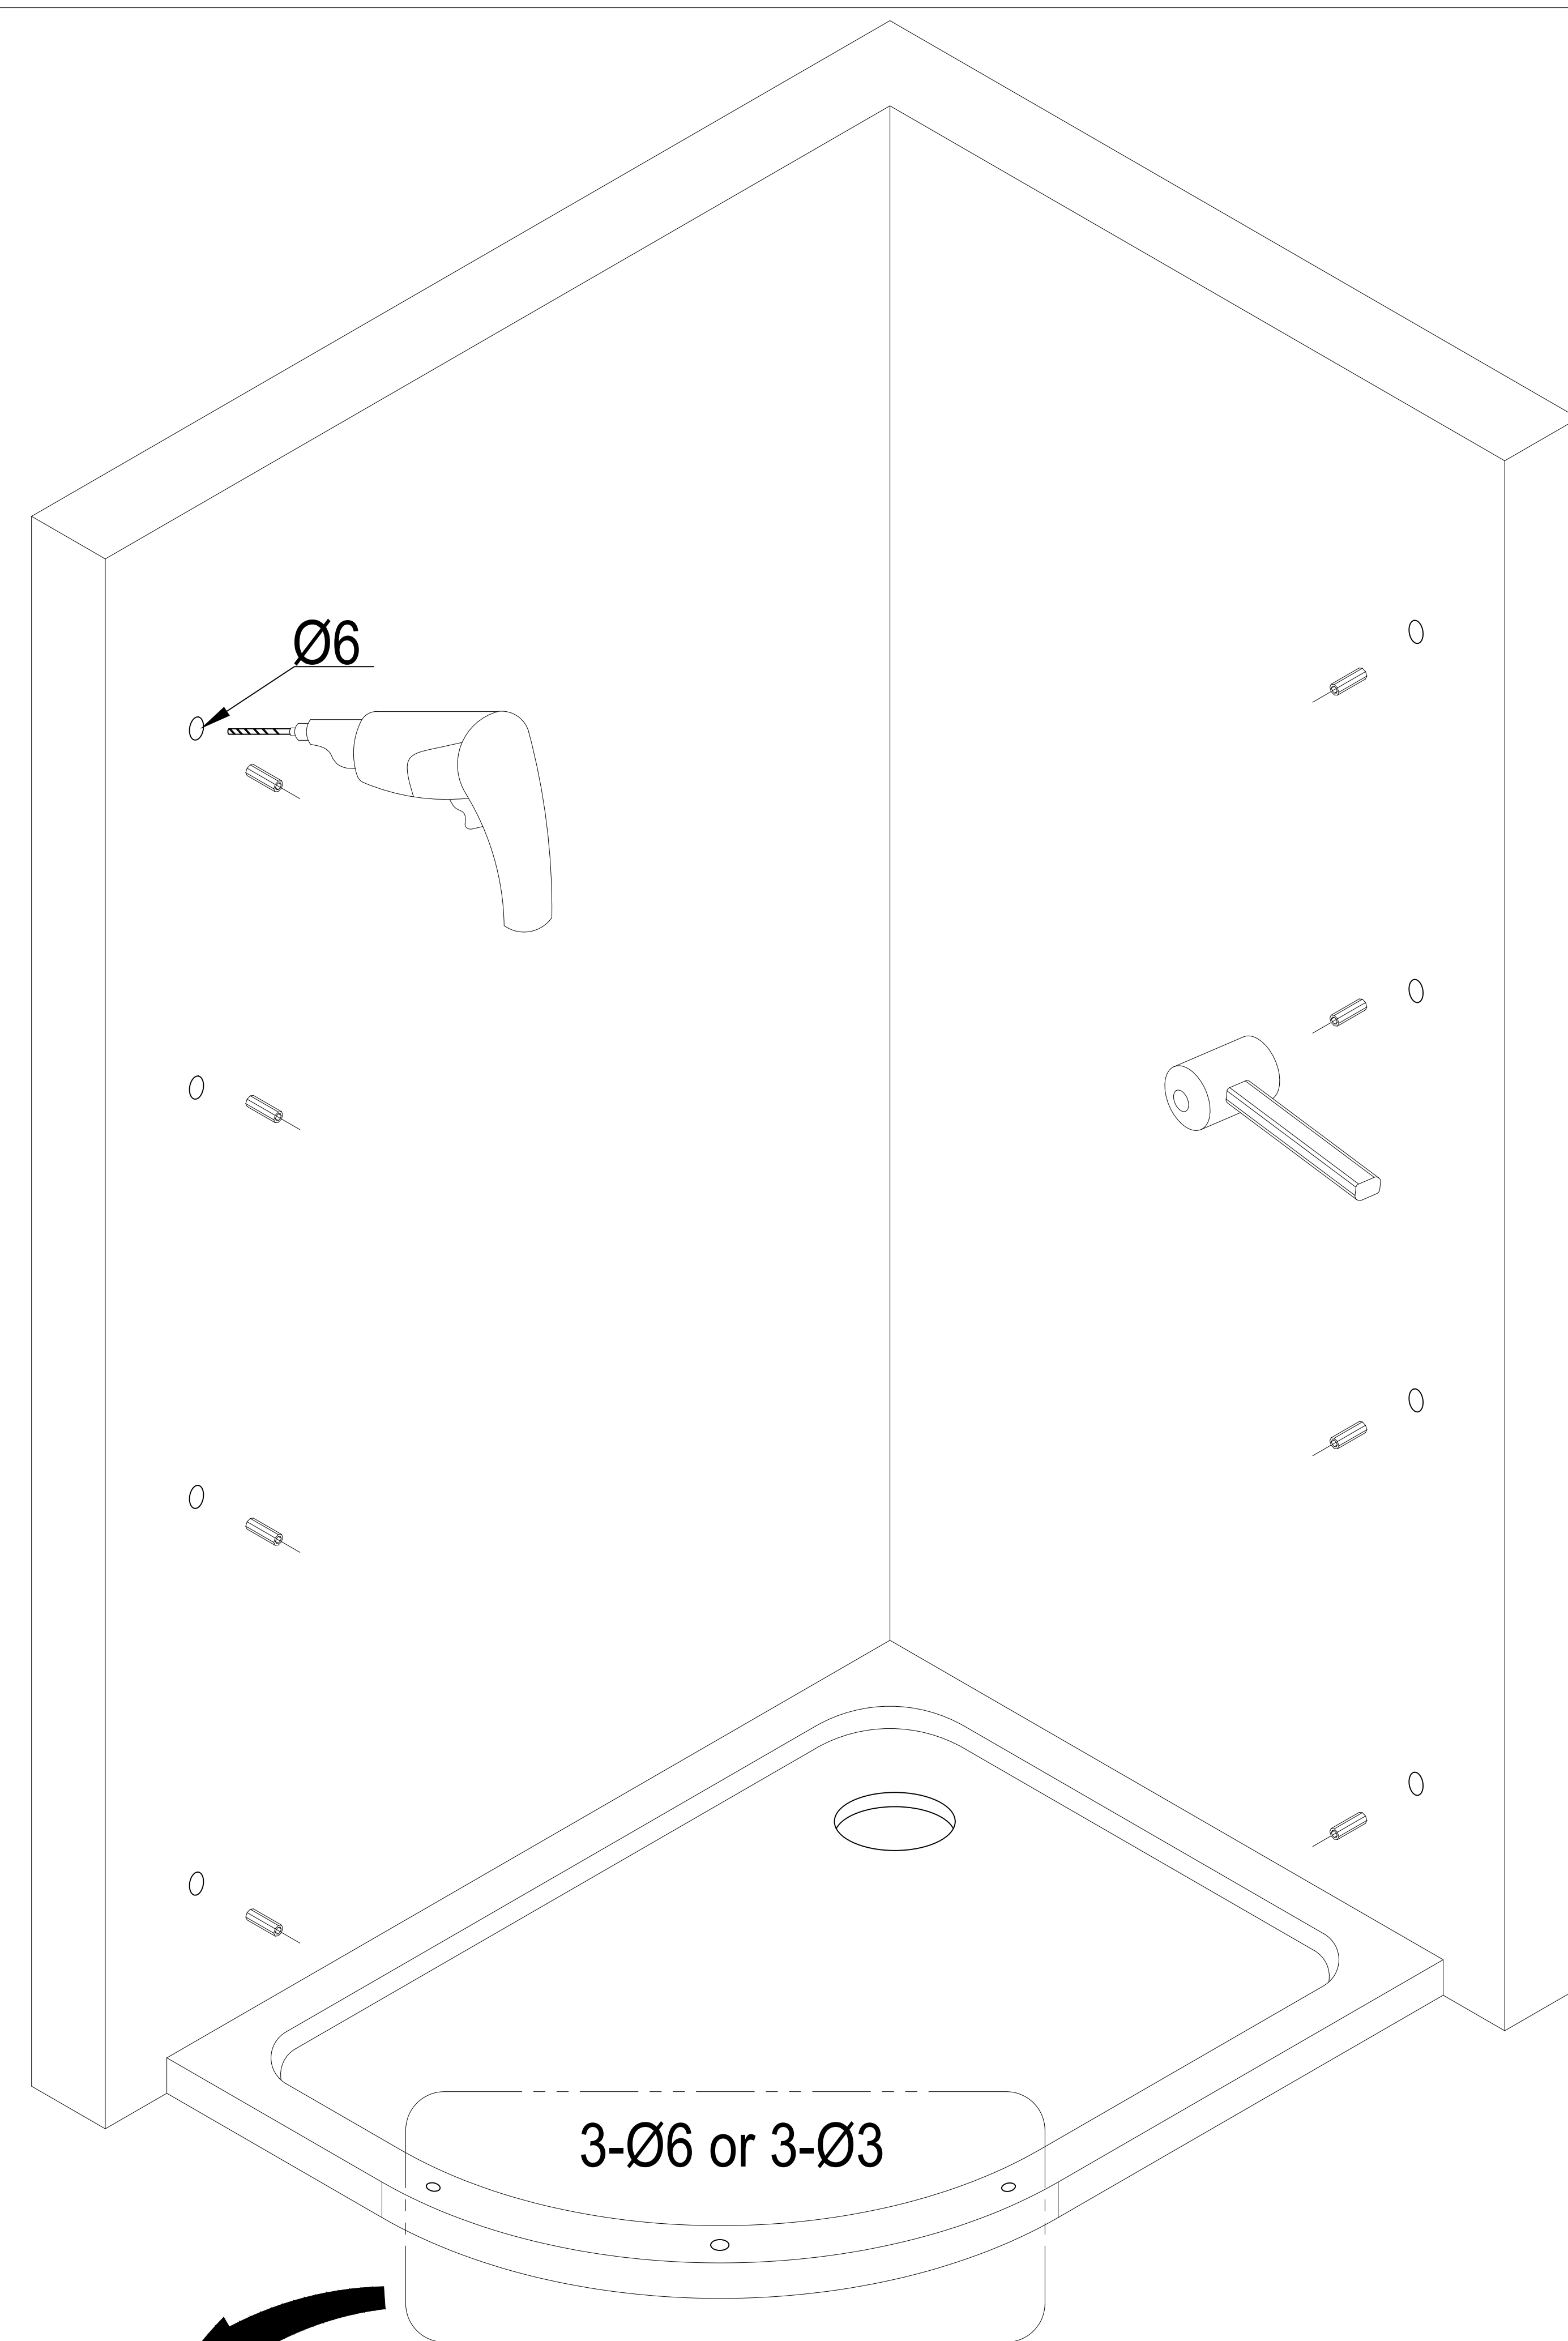


If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;

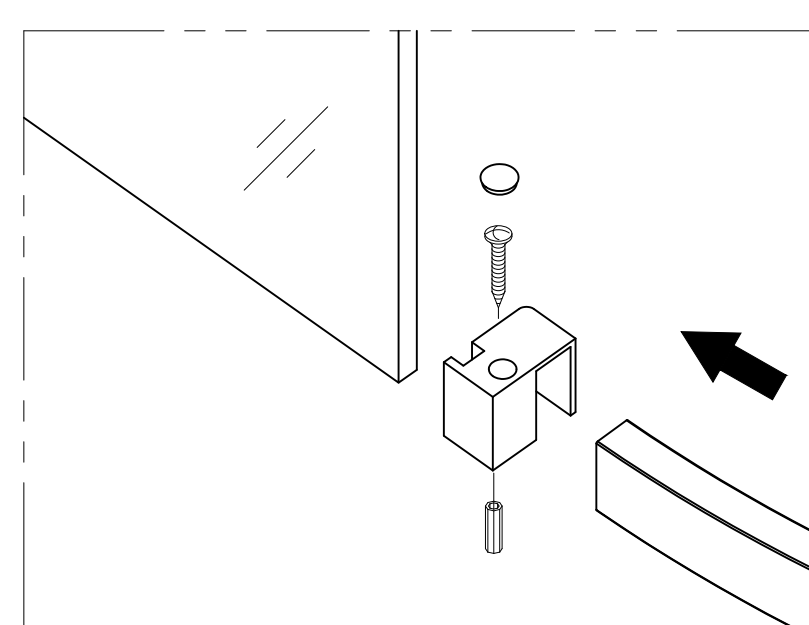

If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;

Installing wall profiles - checking levels


5-1

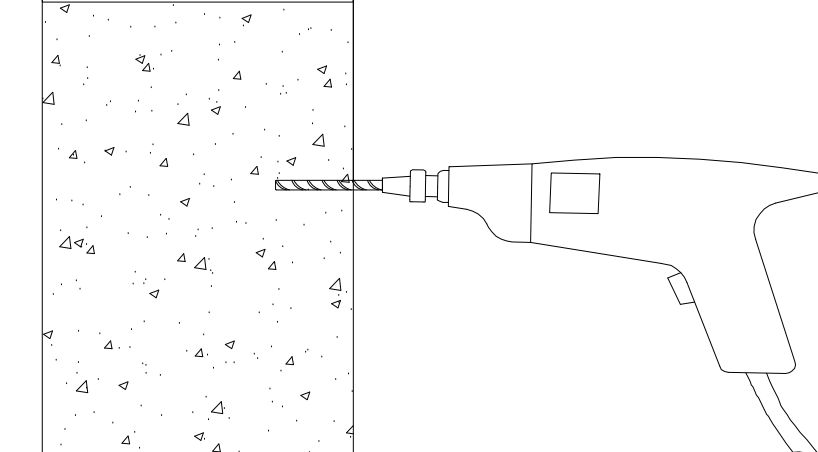

Ø6


Ø6

5-1

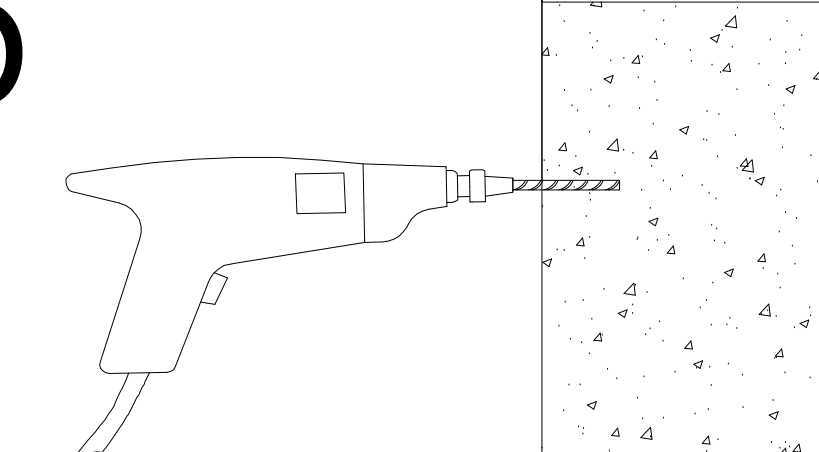


5-2

1x8


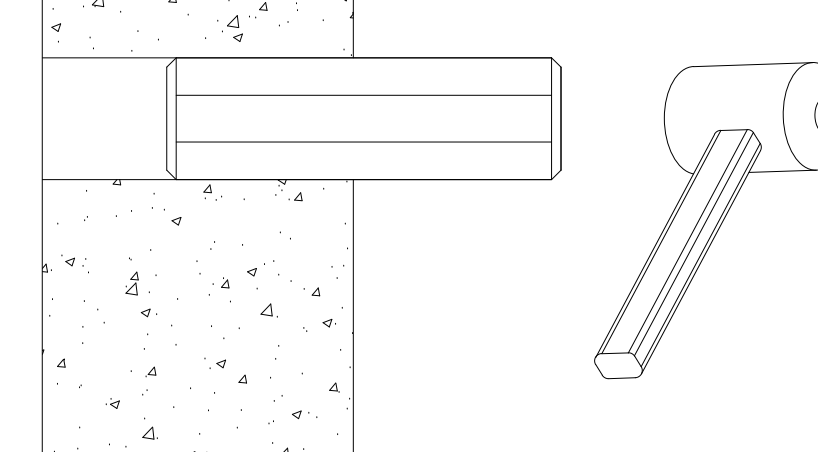


1x8

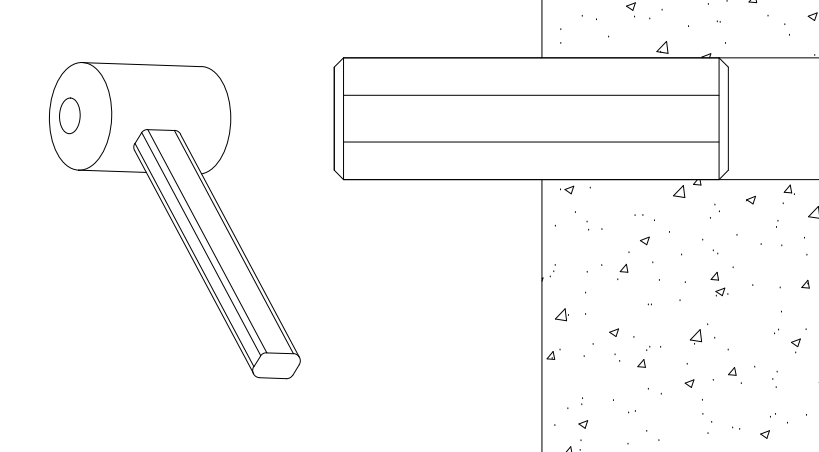


5-2

5R

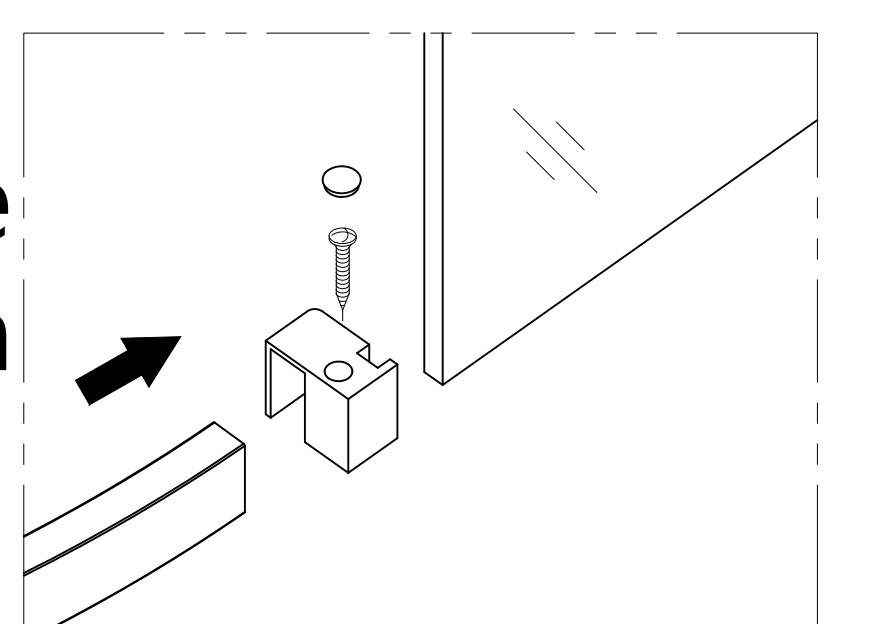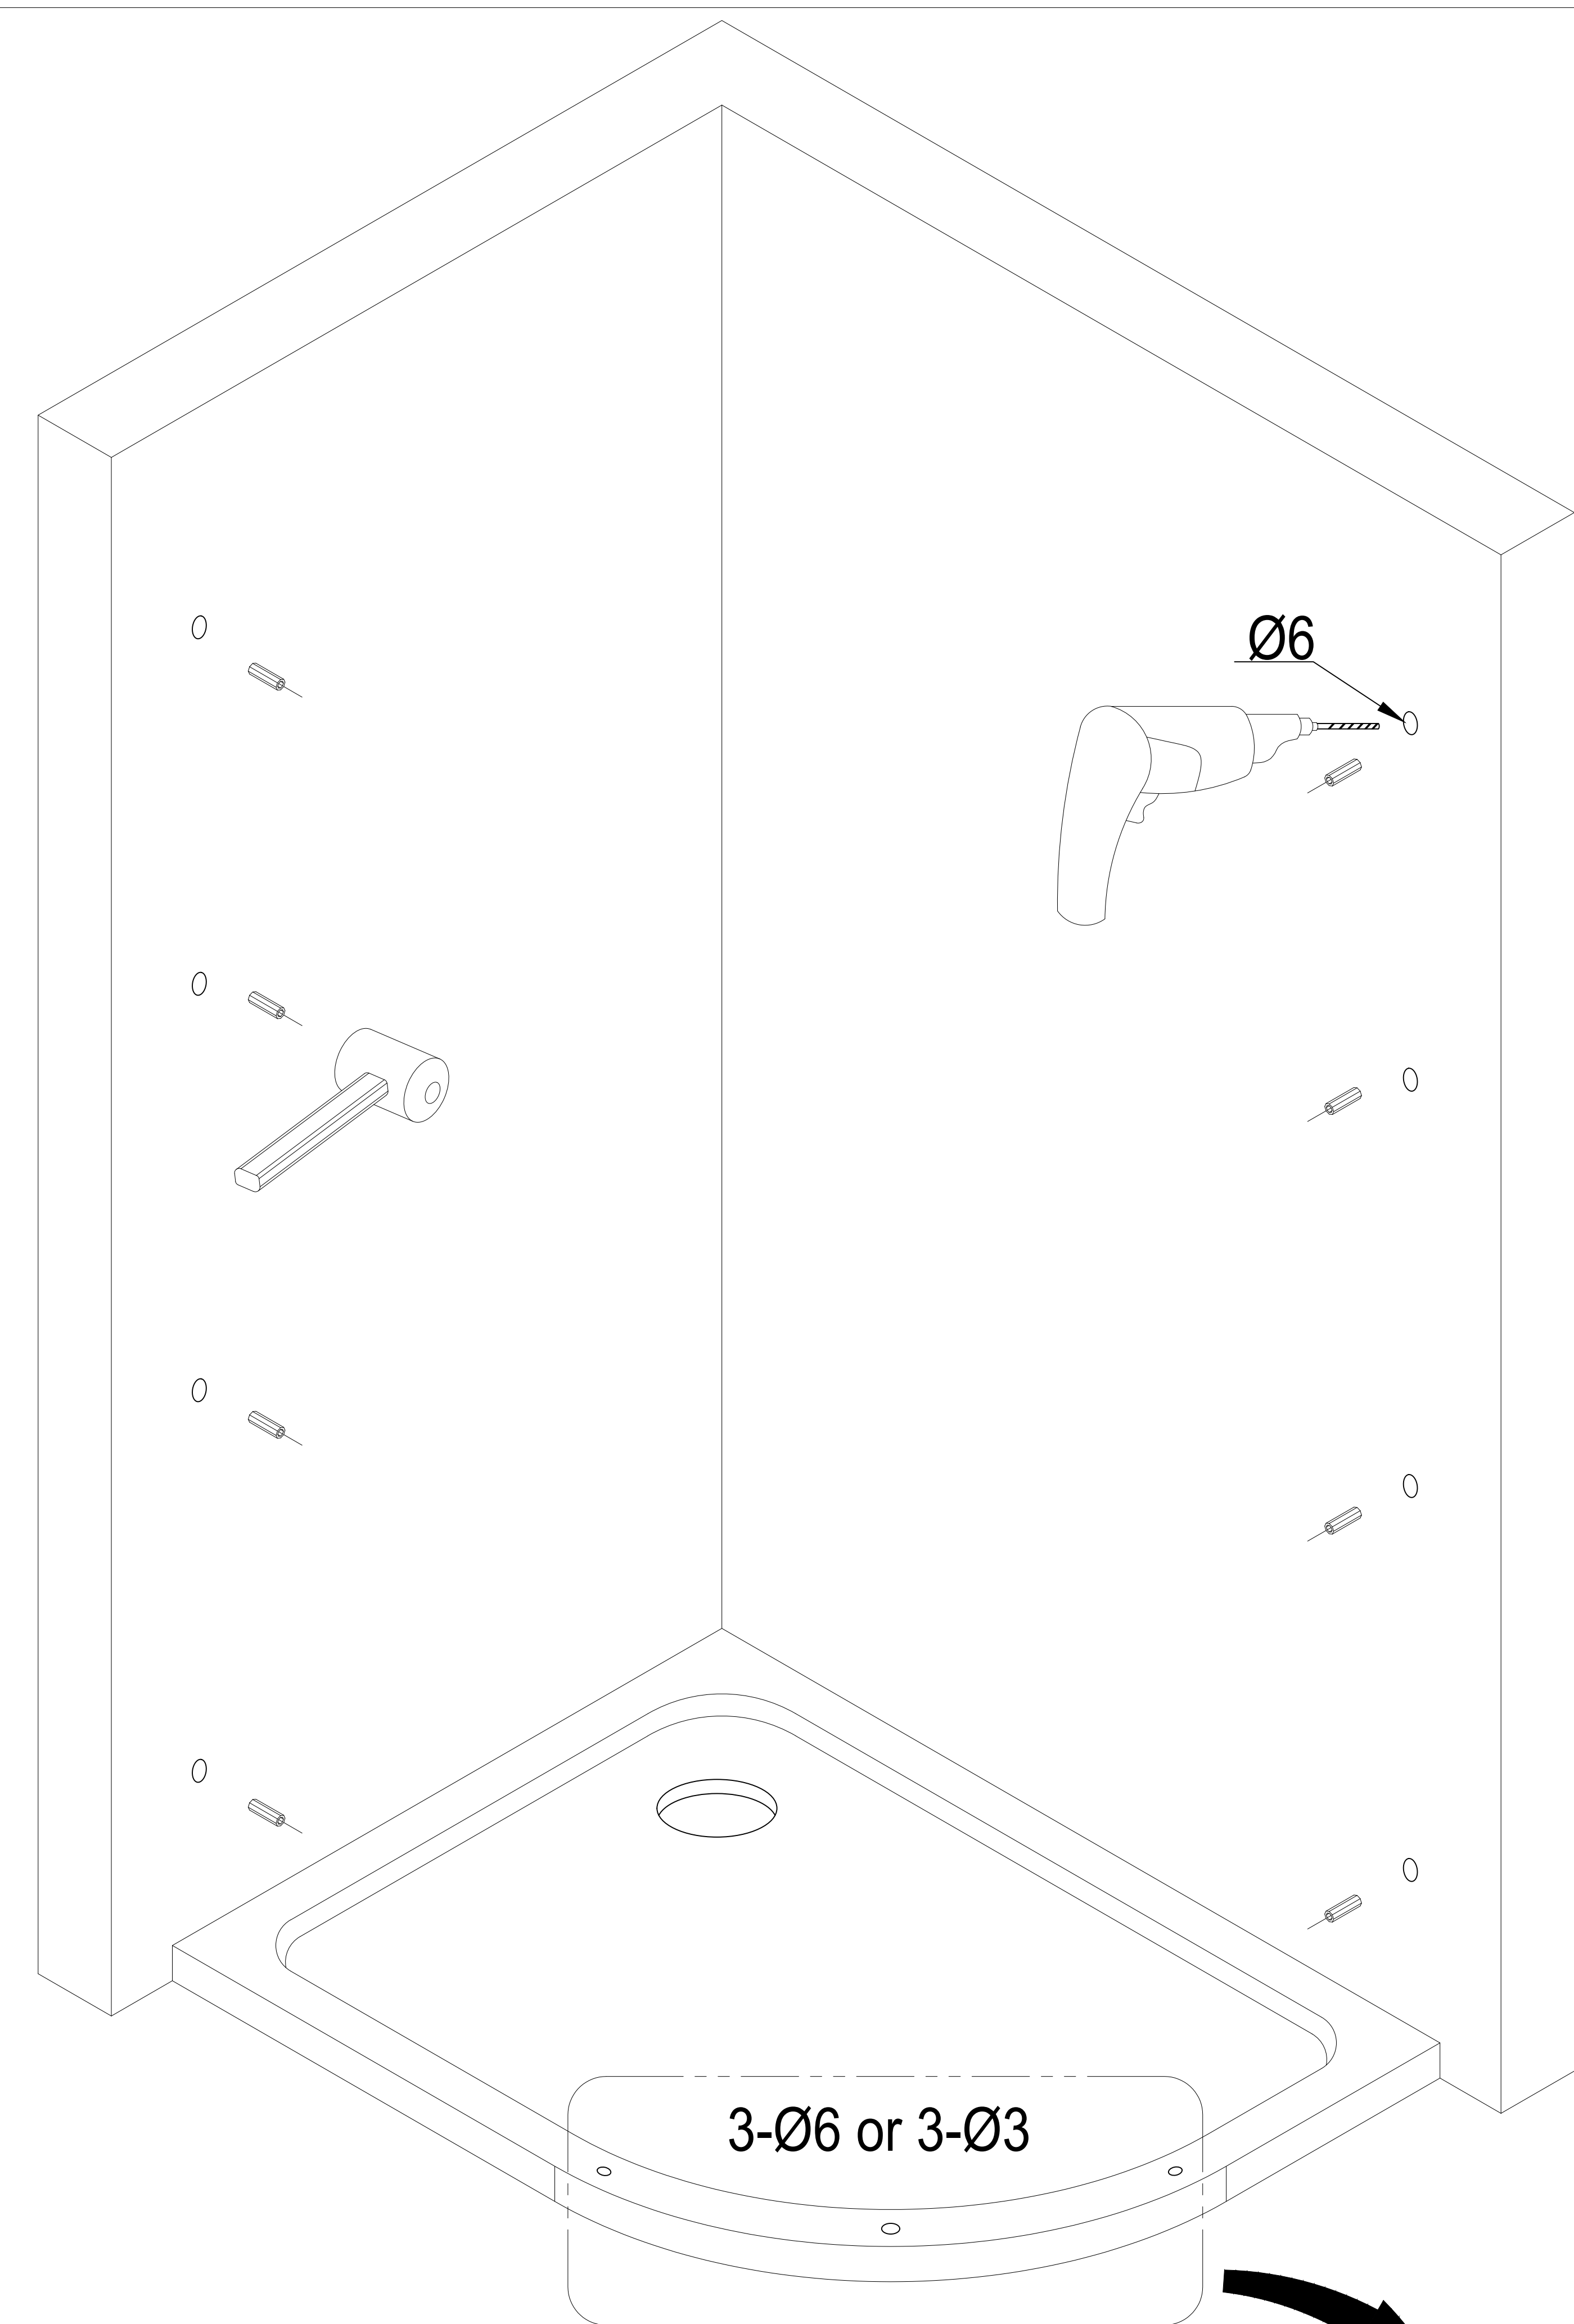


If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;

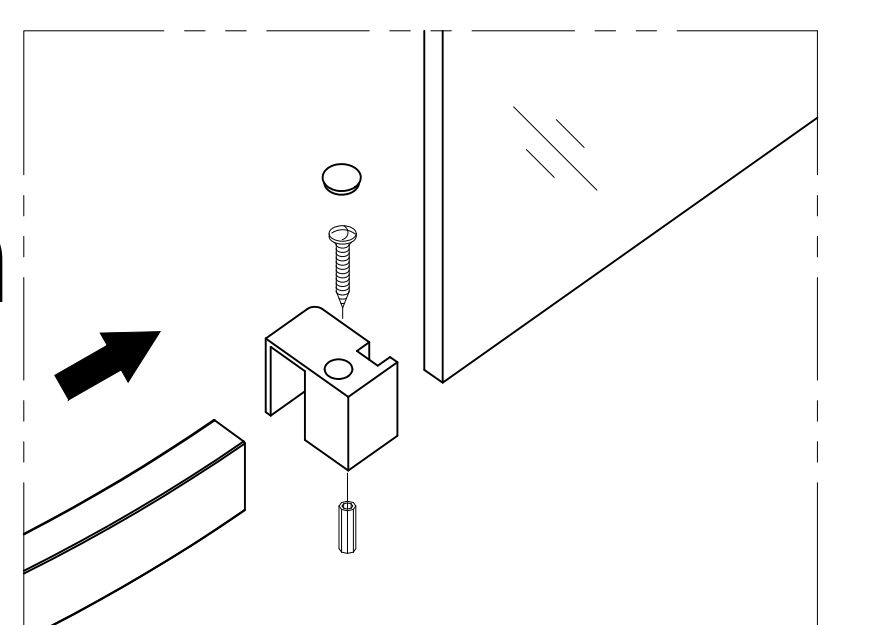


If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;



Installing wall profiles - checking levels

6L


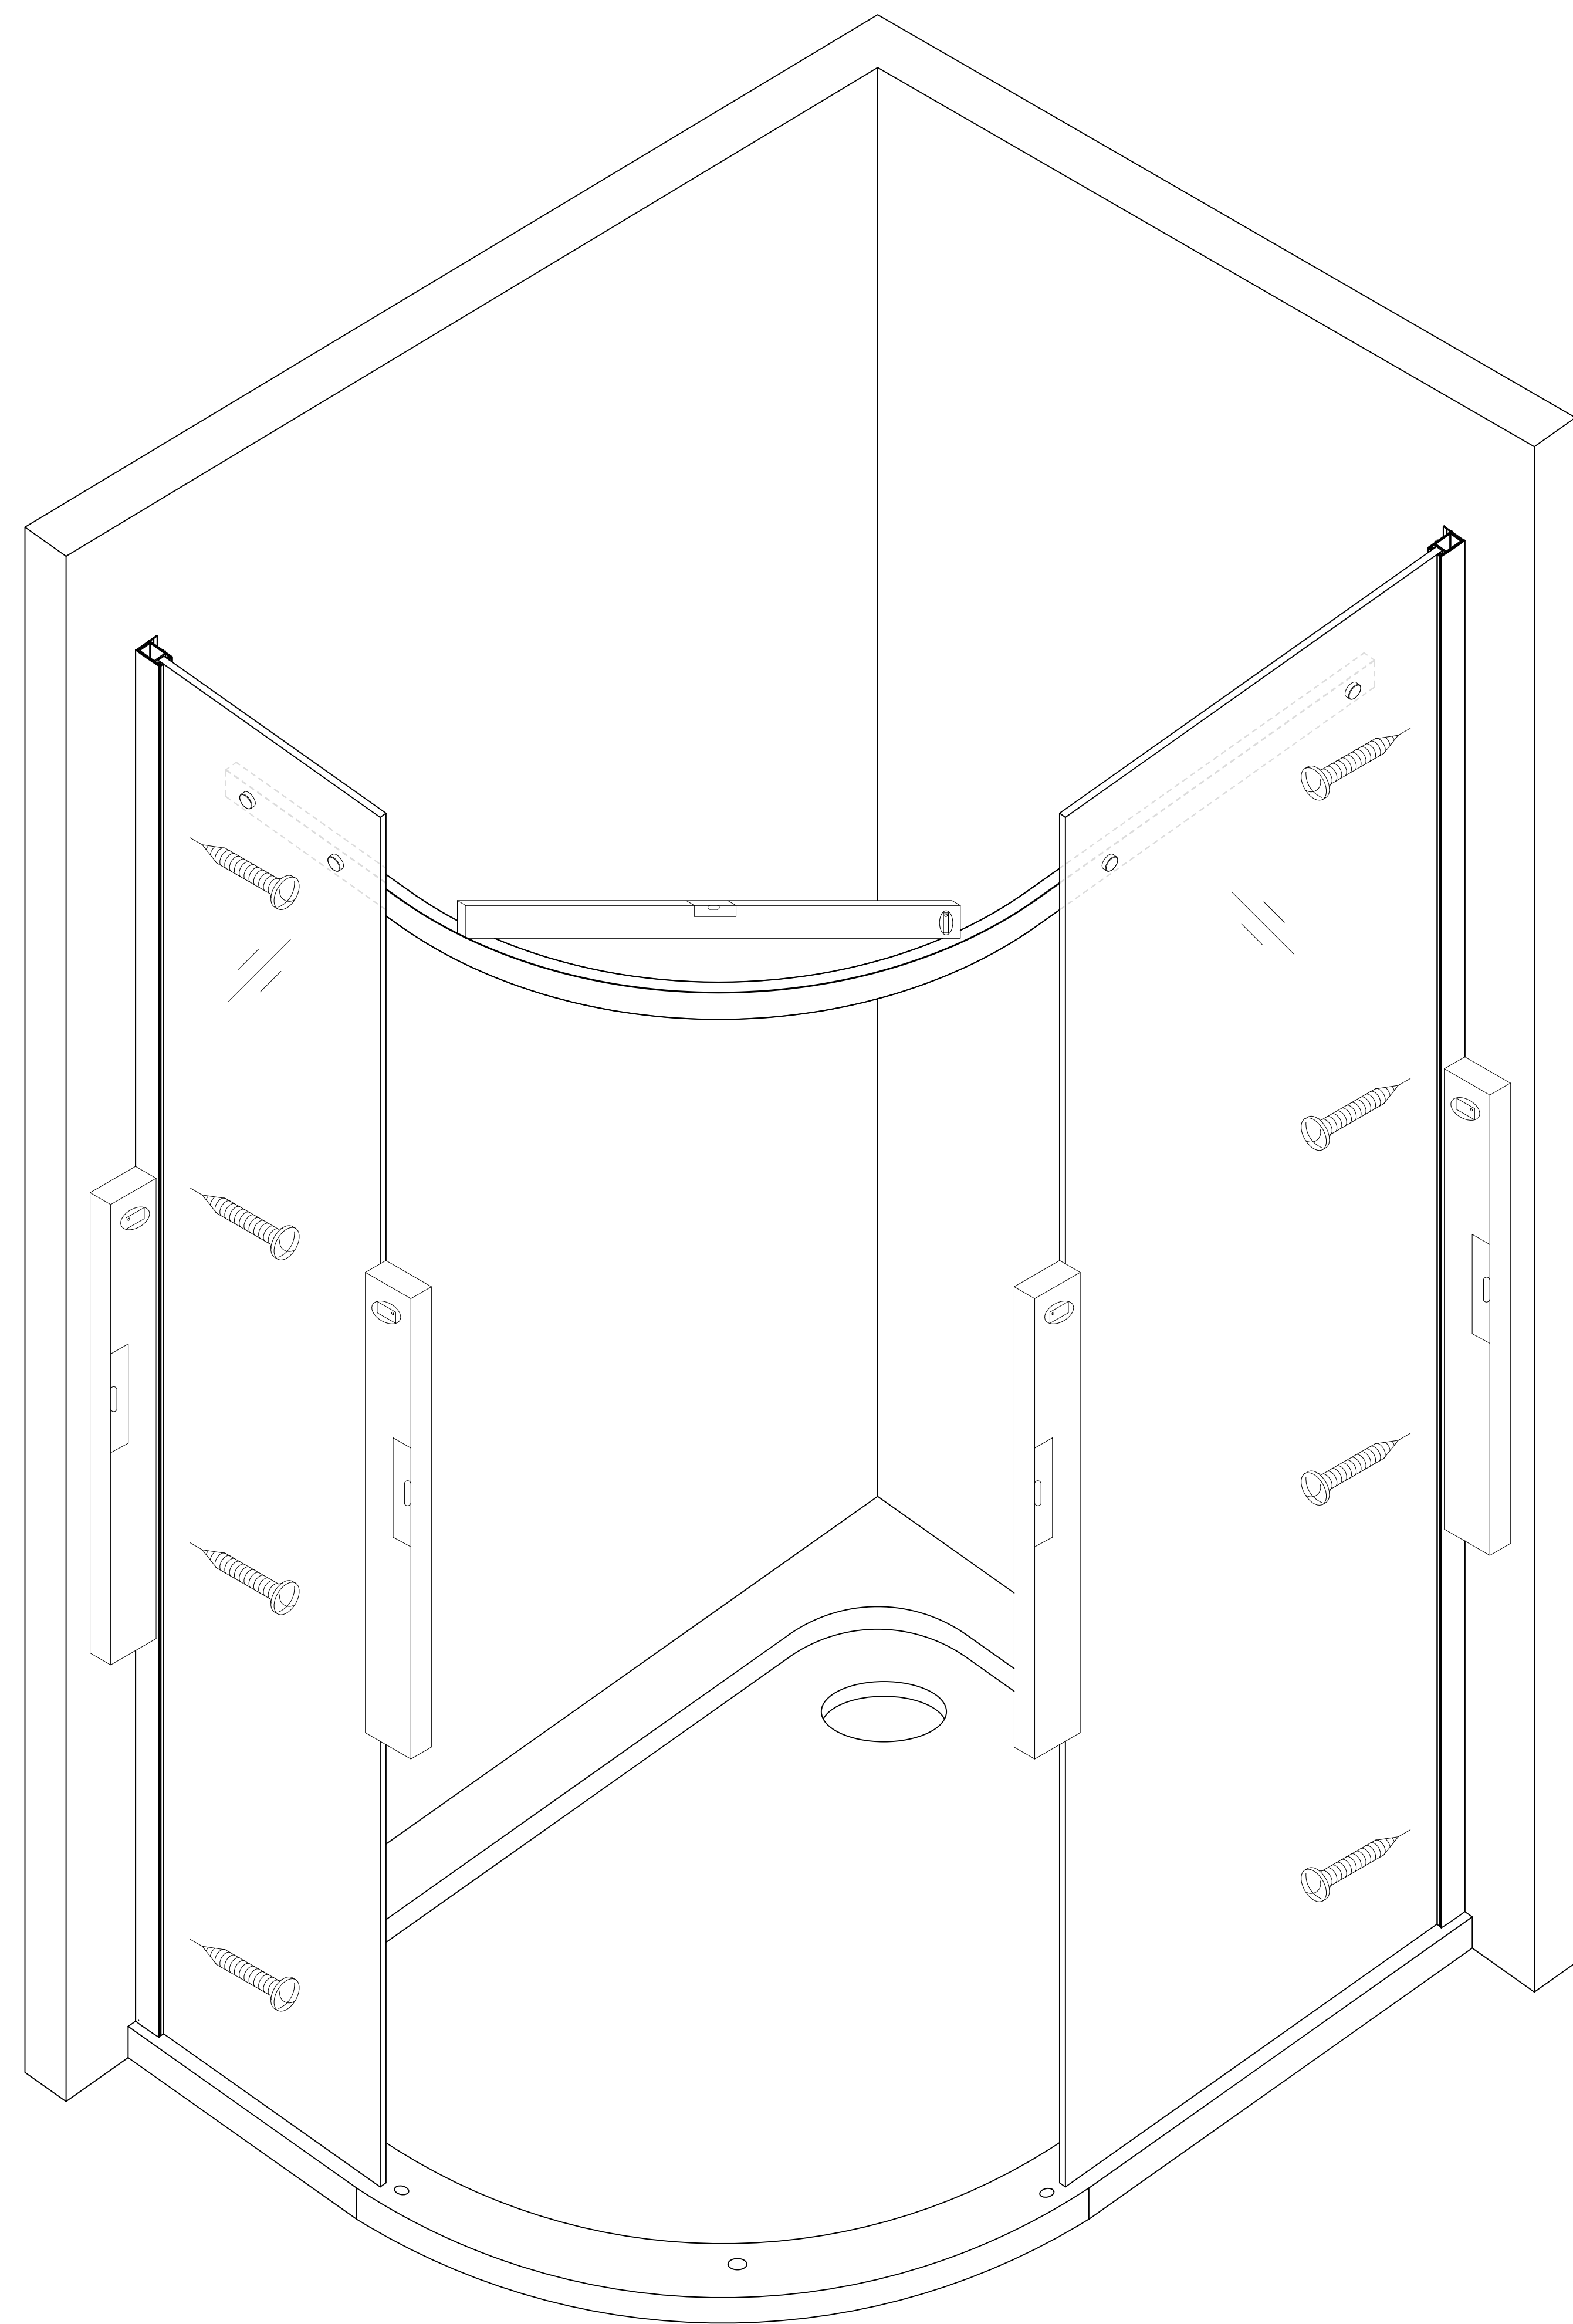


6R

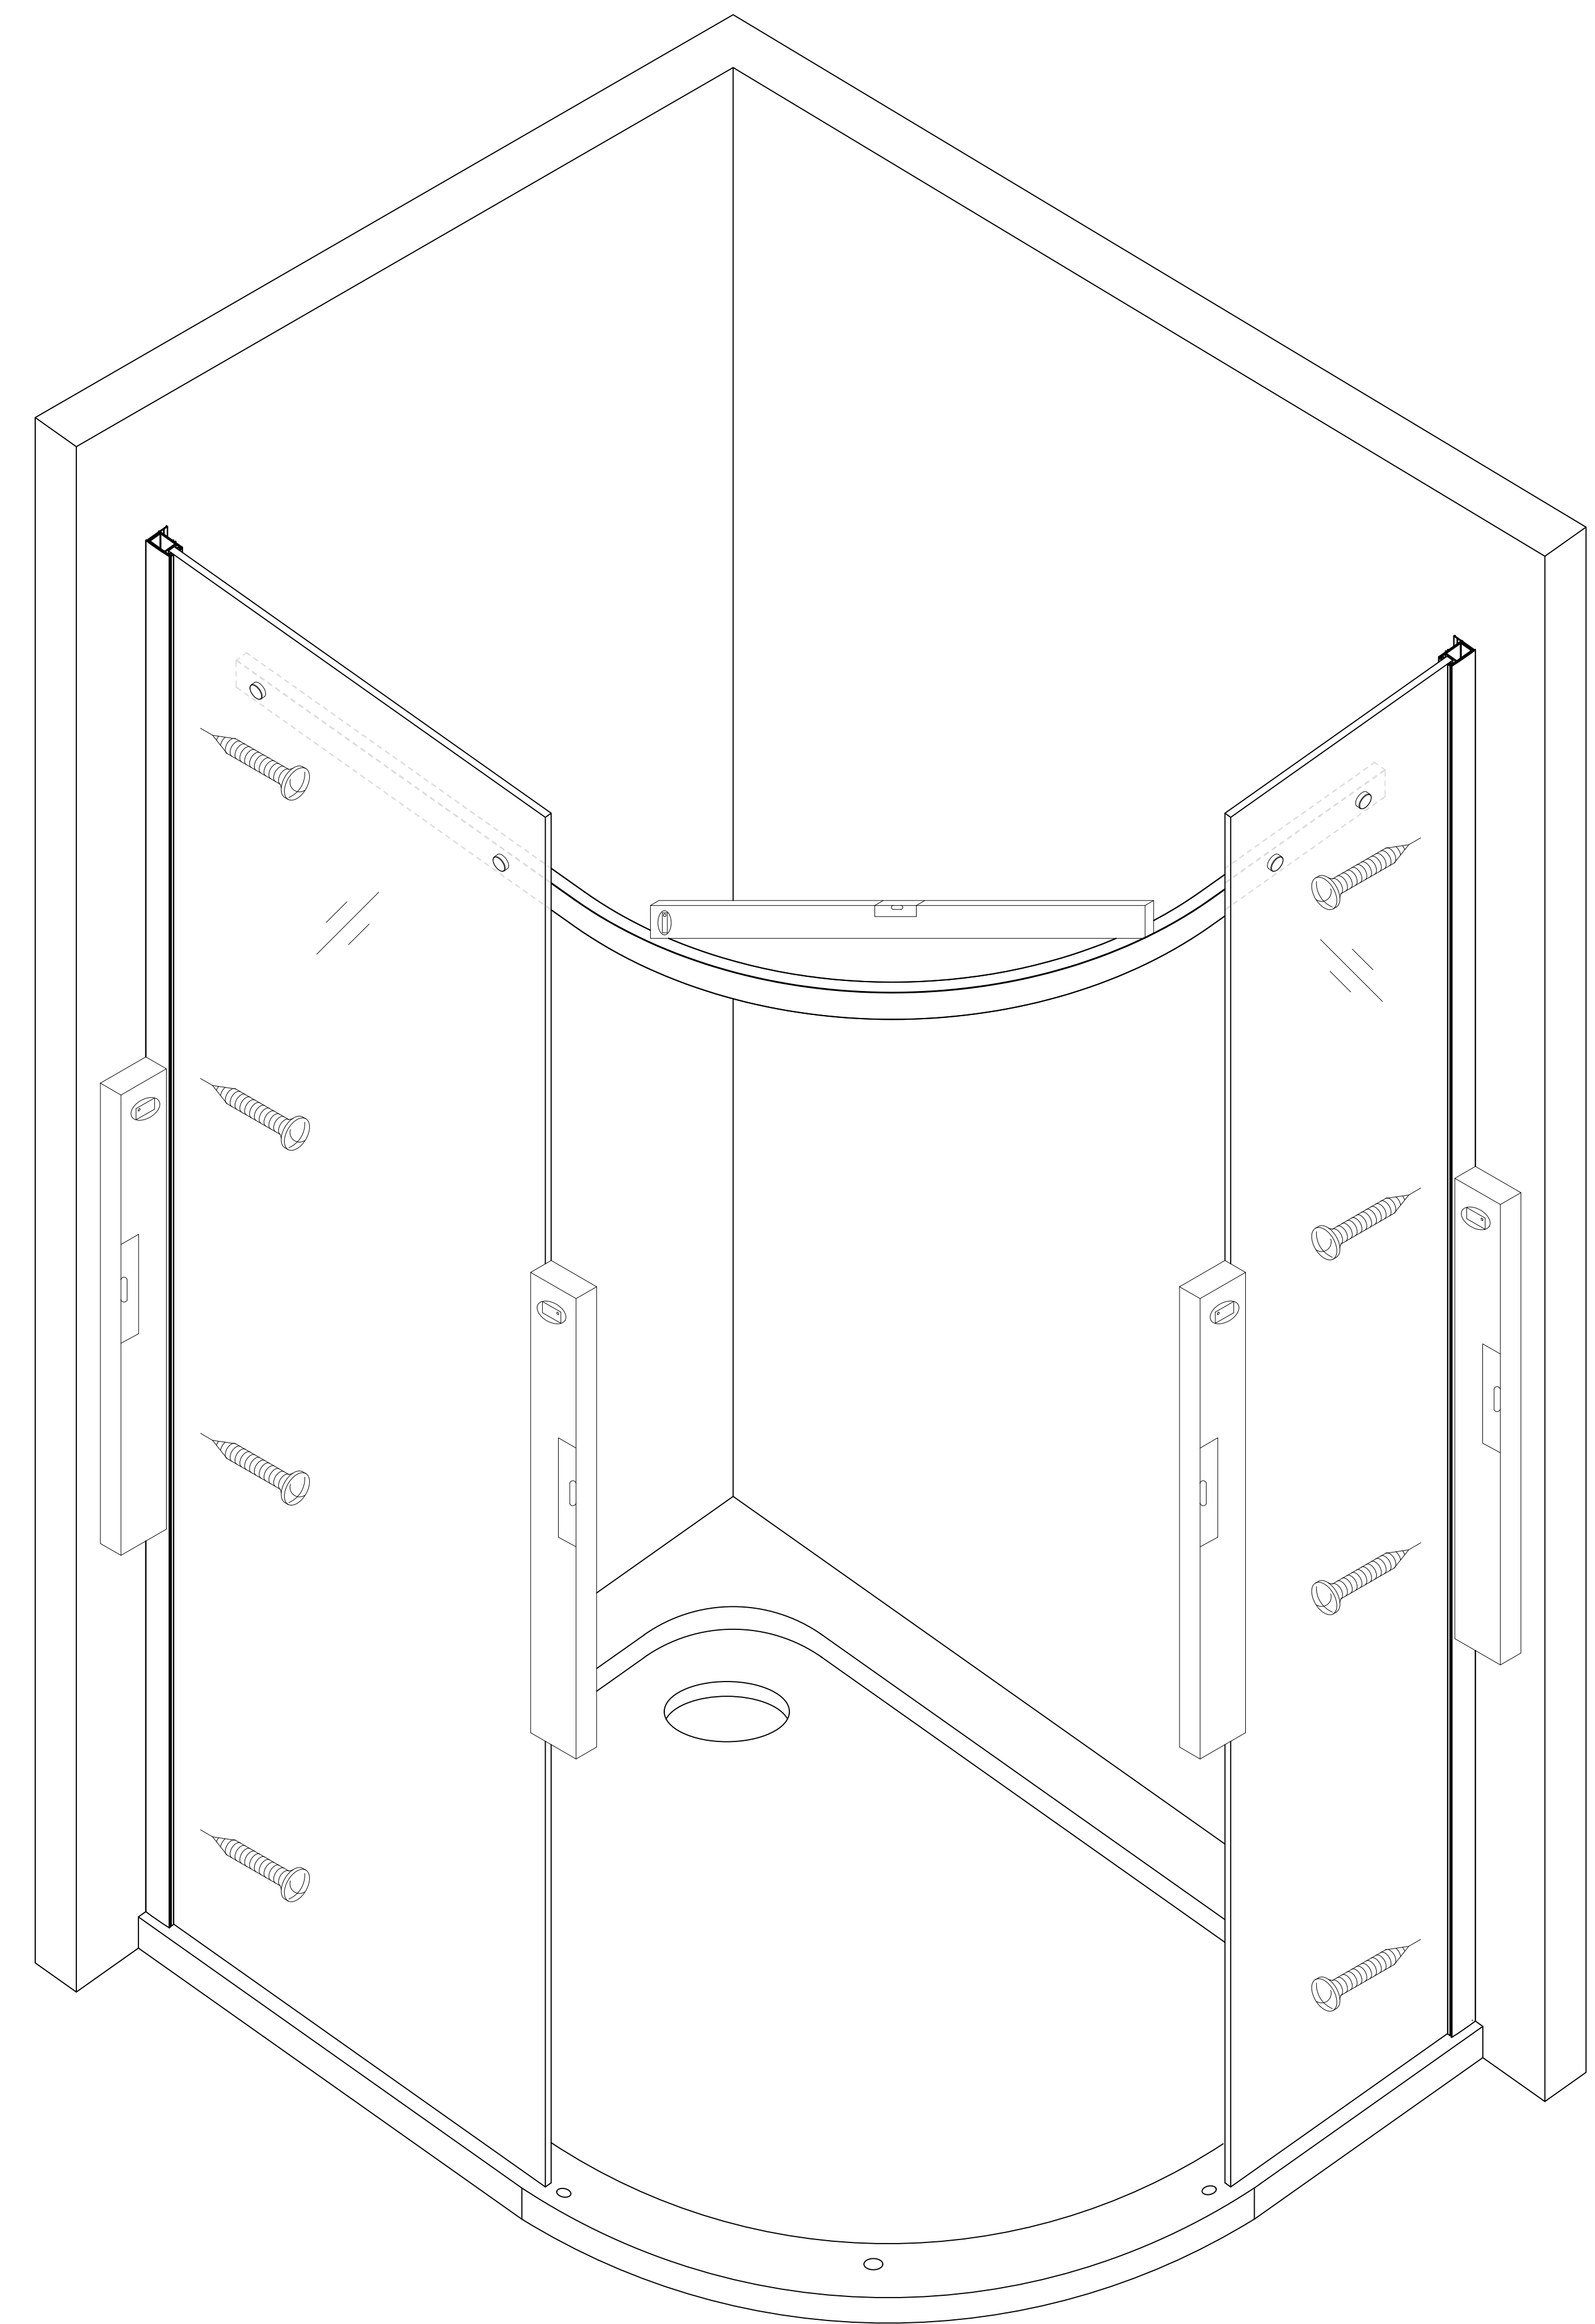

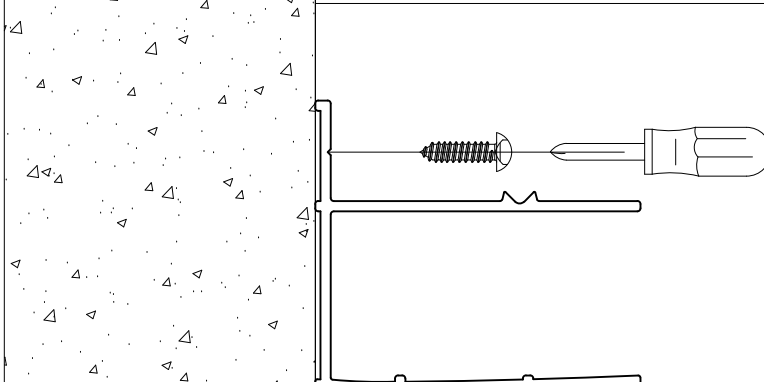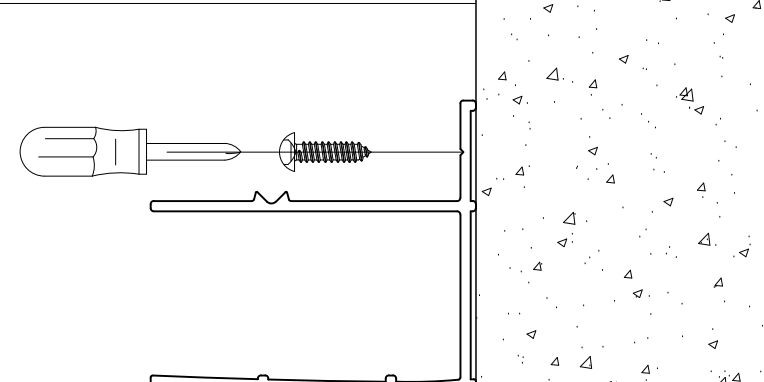
6-1	Inside	2x8	2x8	Inside	6-1
					
	Outside			Outside	

7L

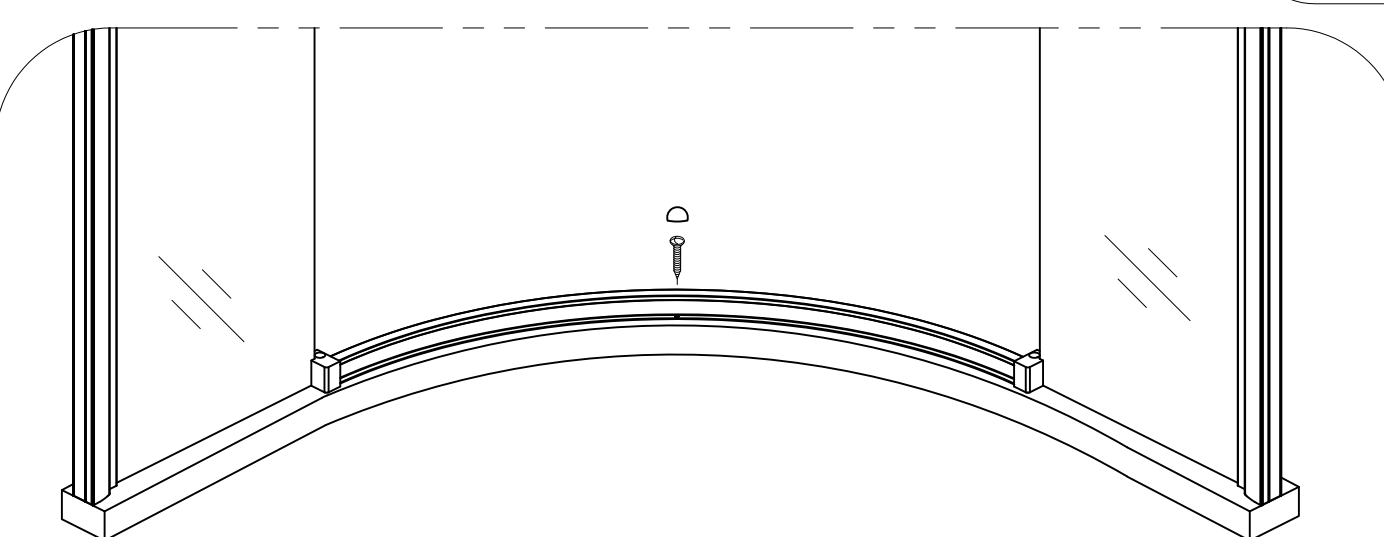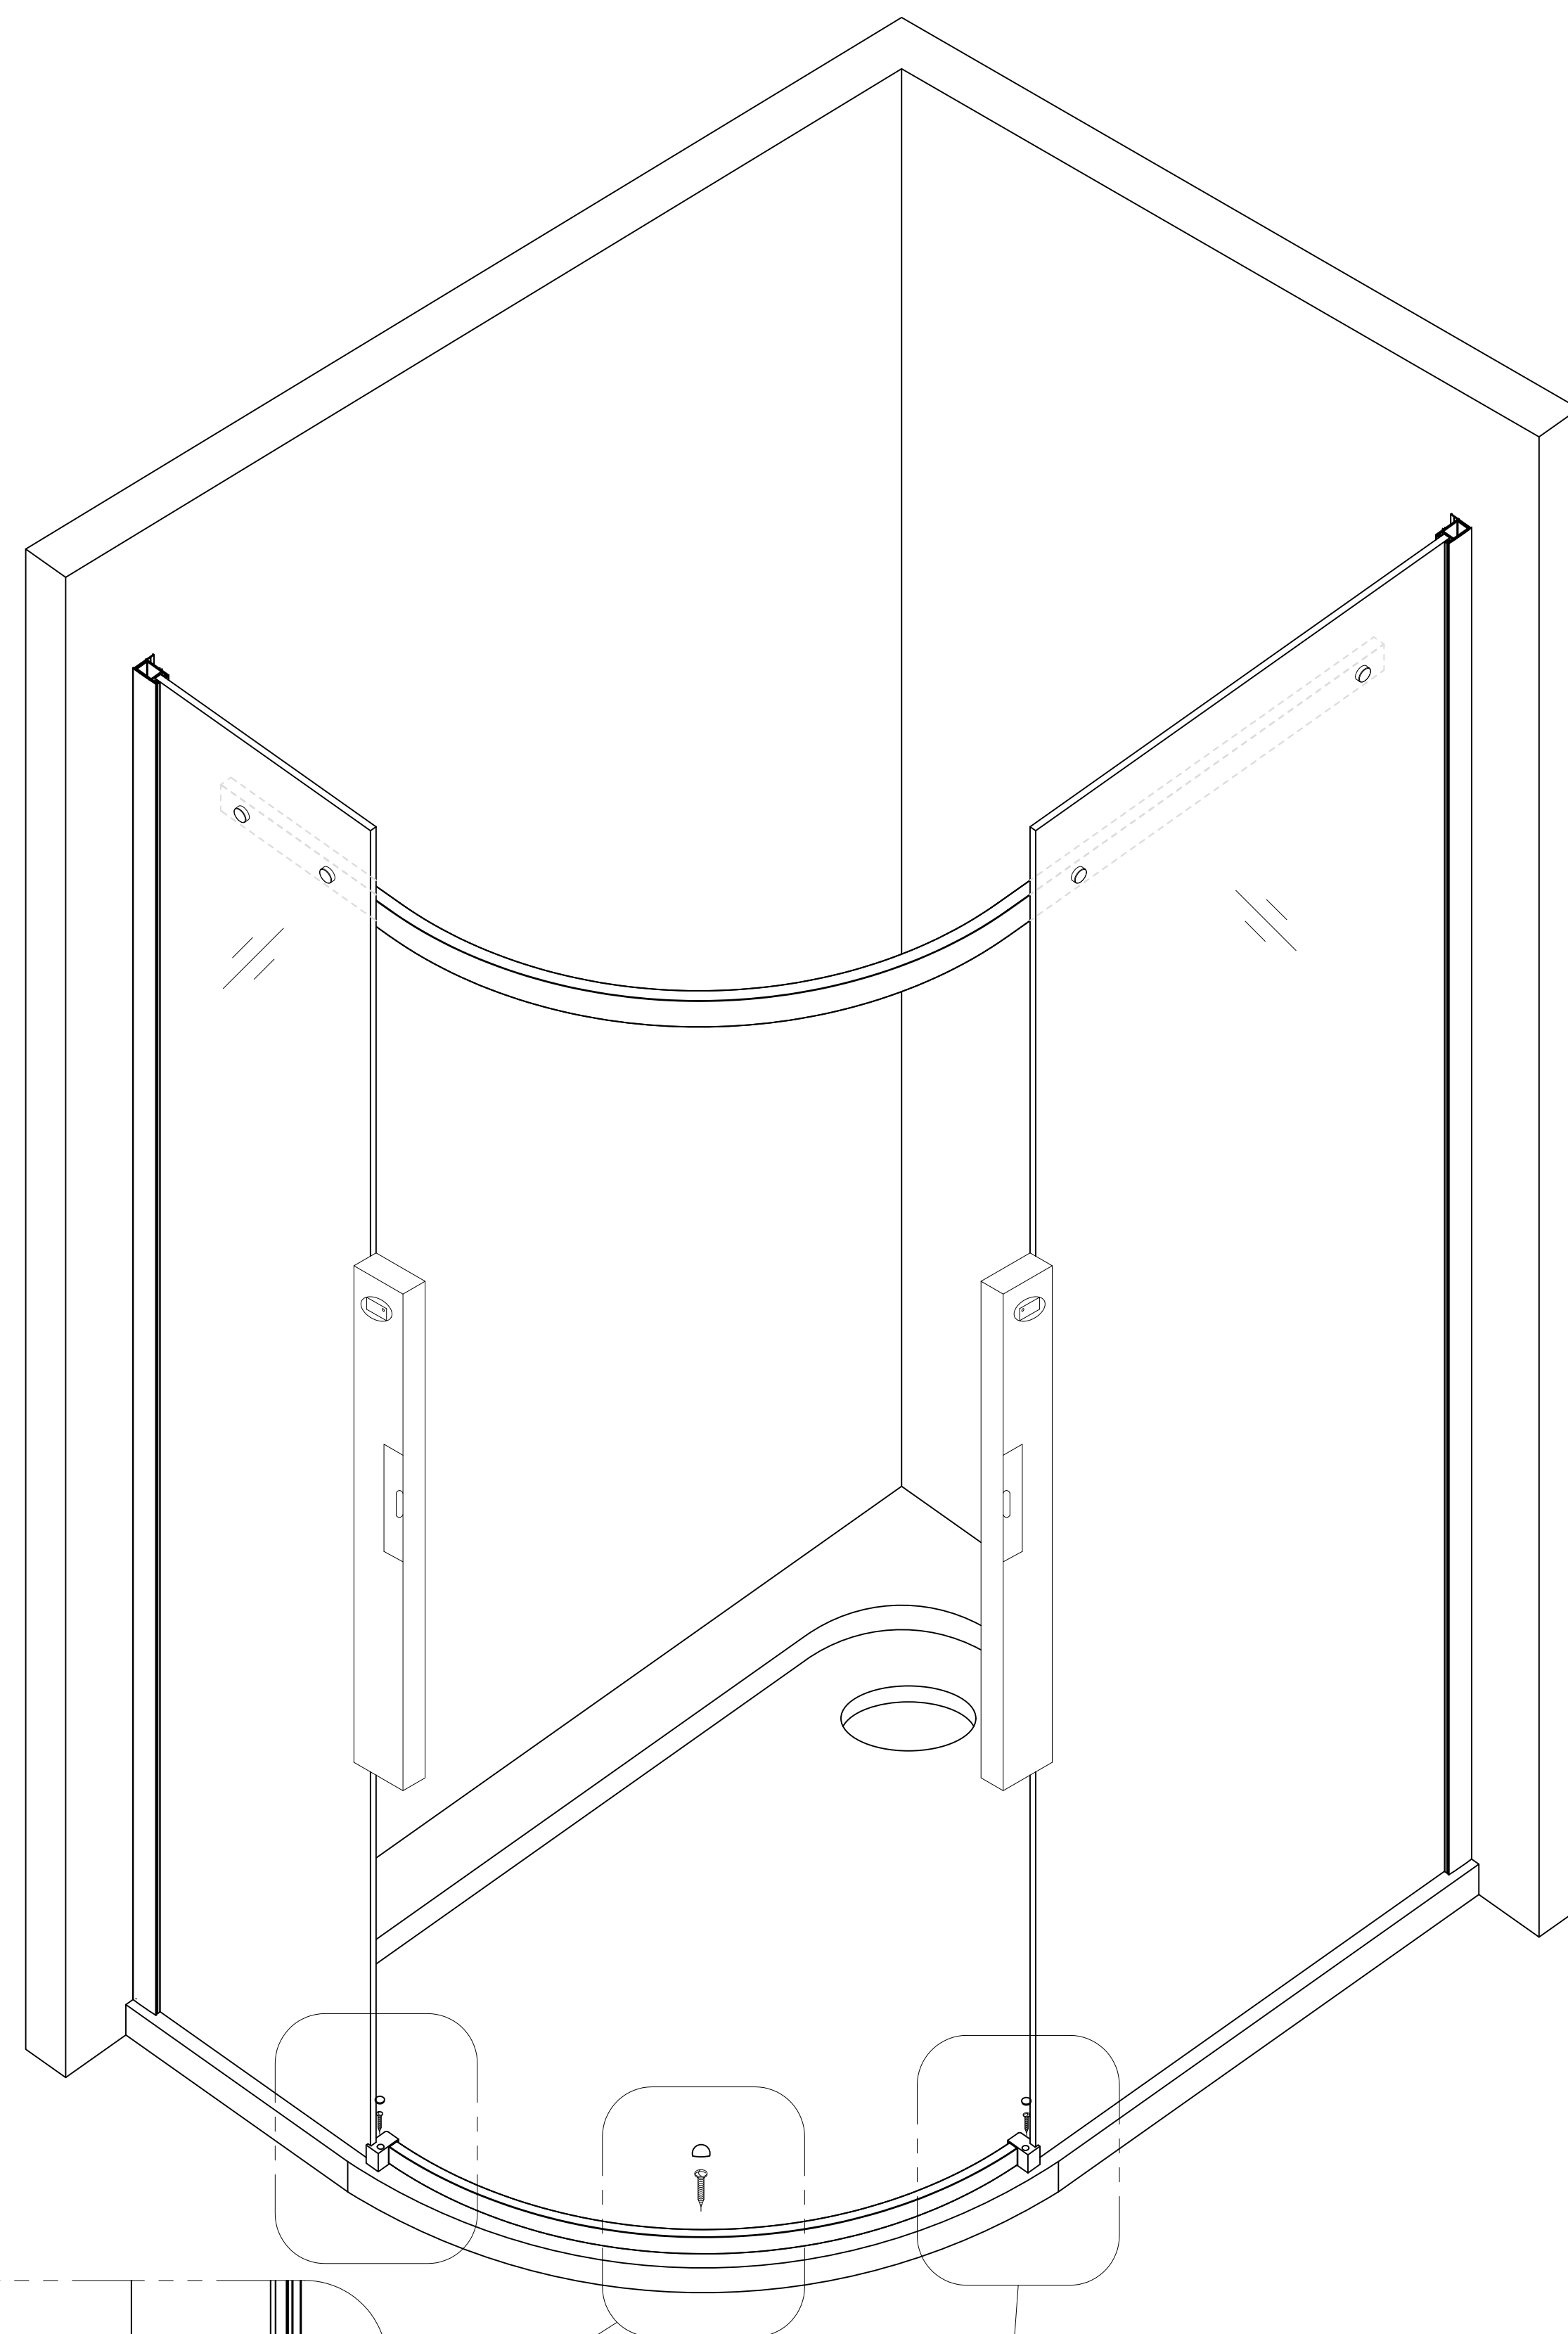


02 x1
25 x1

If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;

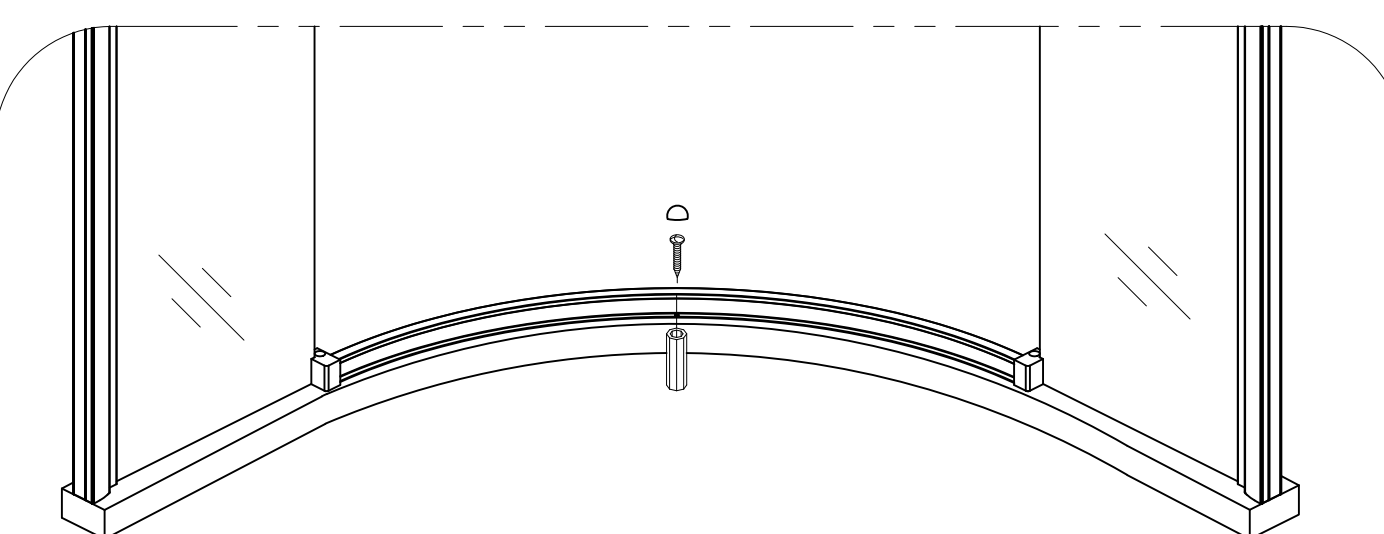


02 x1
25 x1
01 x1

If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;

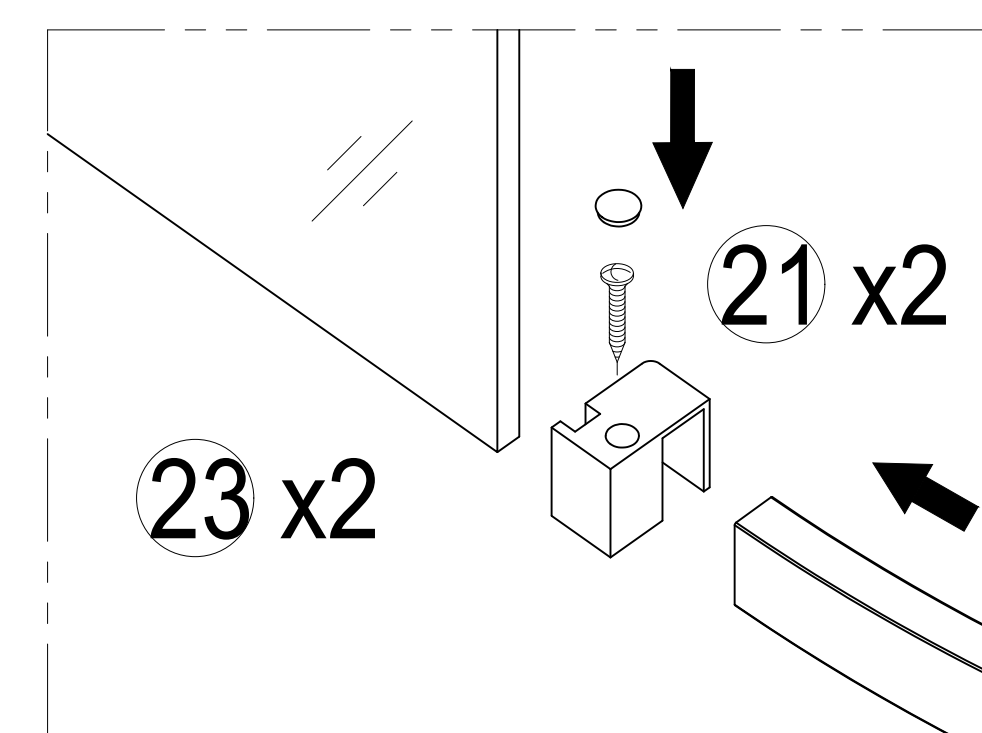

21 x2
23 x2

If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;


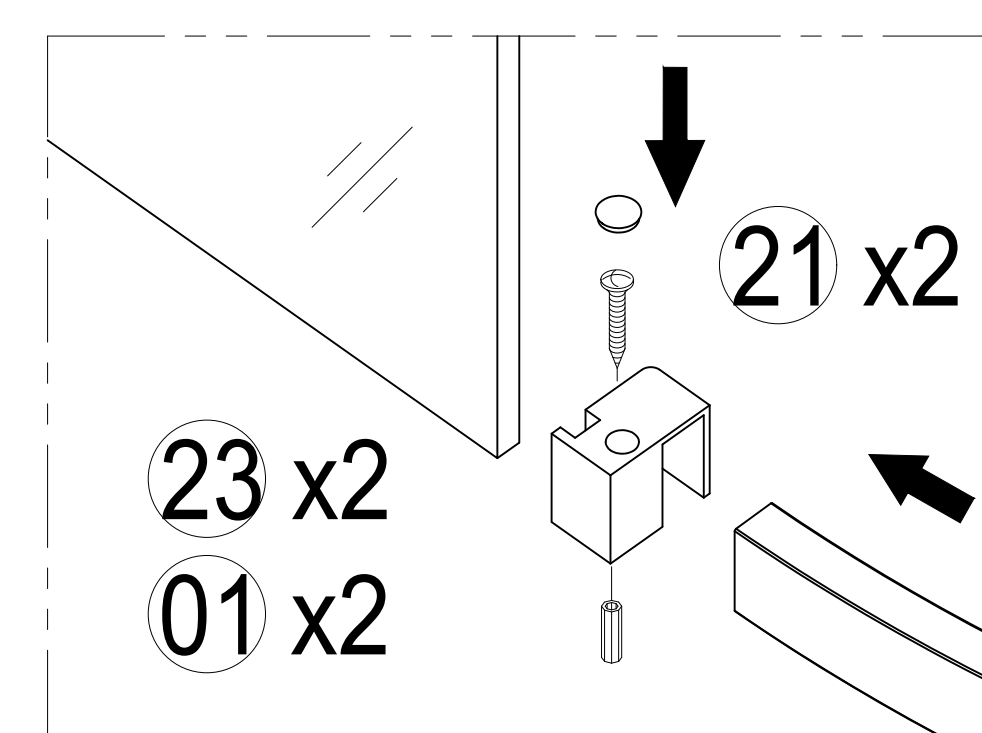


21 x2
23 x2
01 x2

If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;


Install panels + frame ensuring fixing for bottom frame are screwed to the tray.

7R

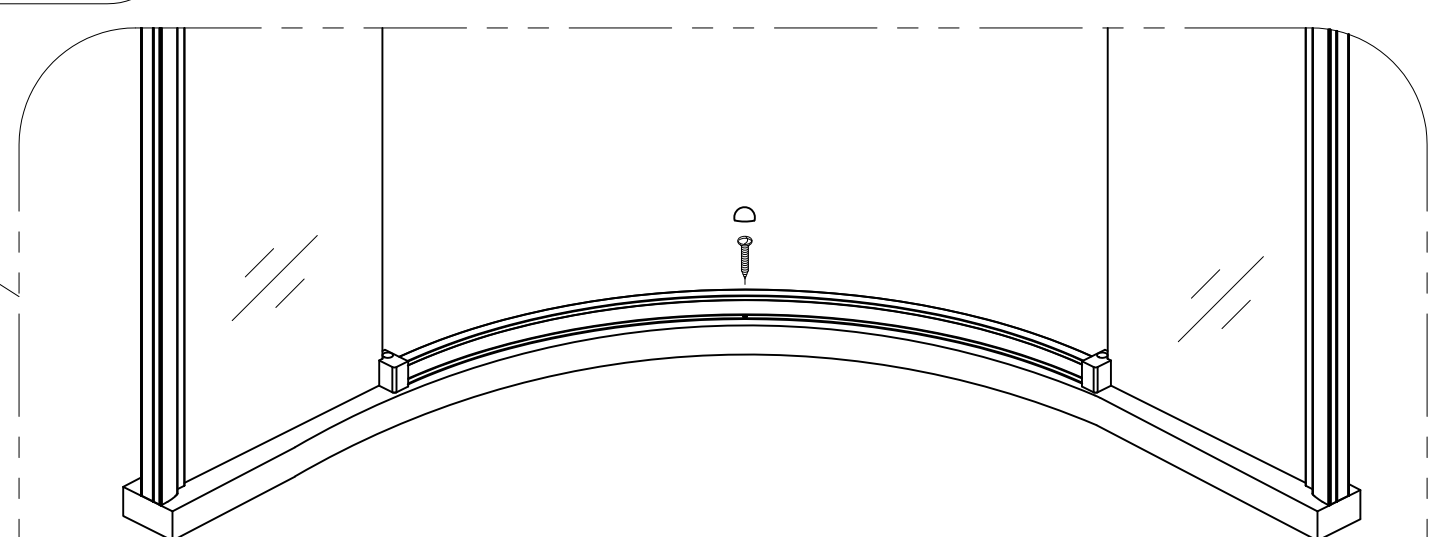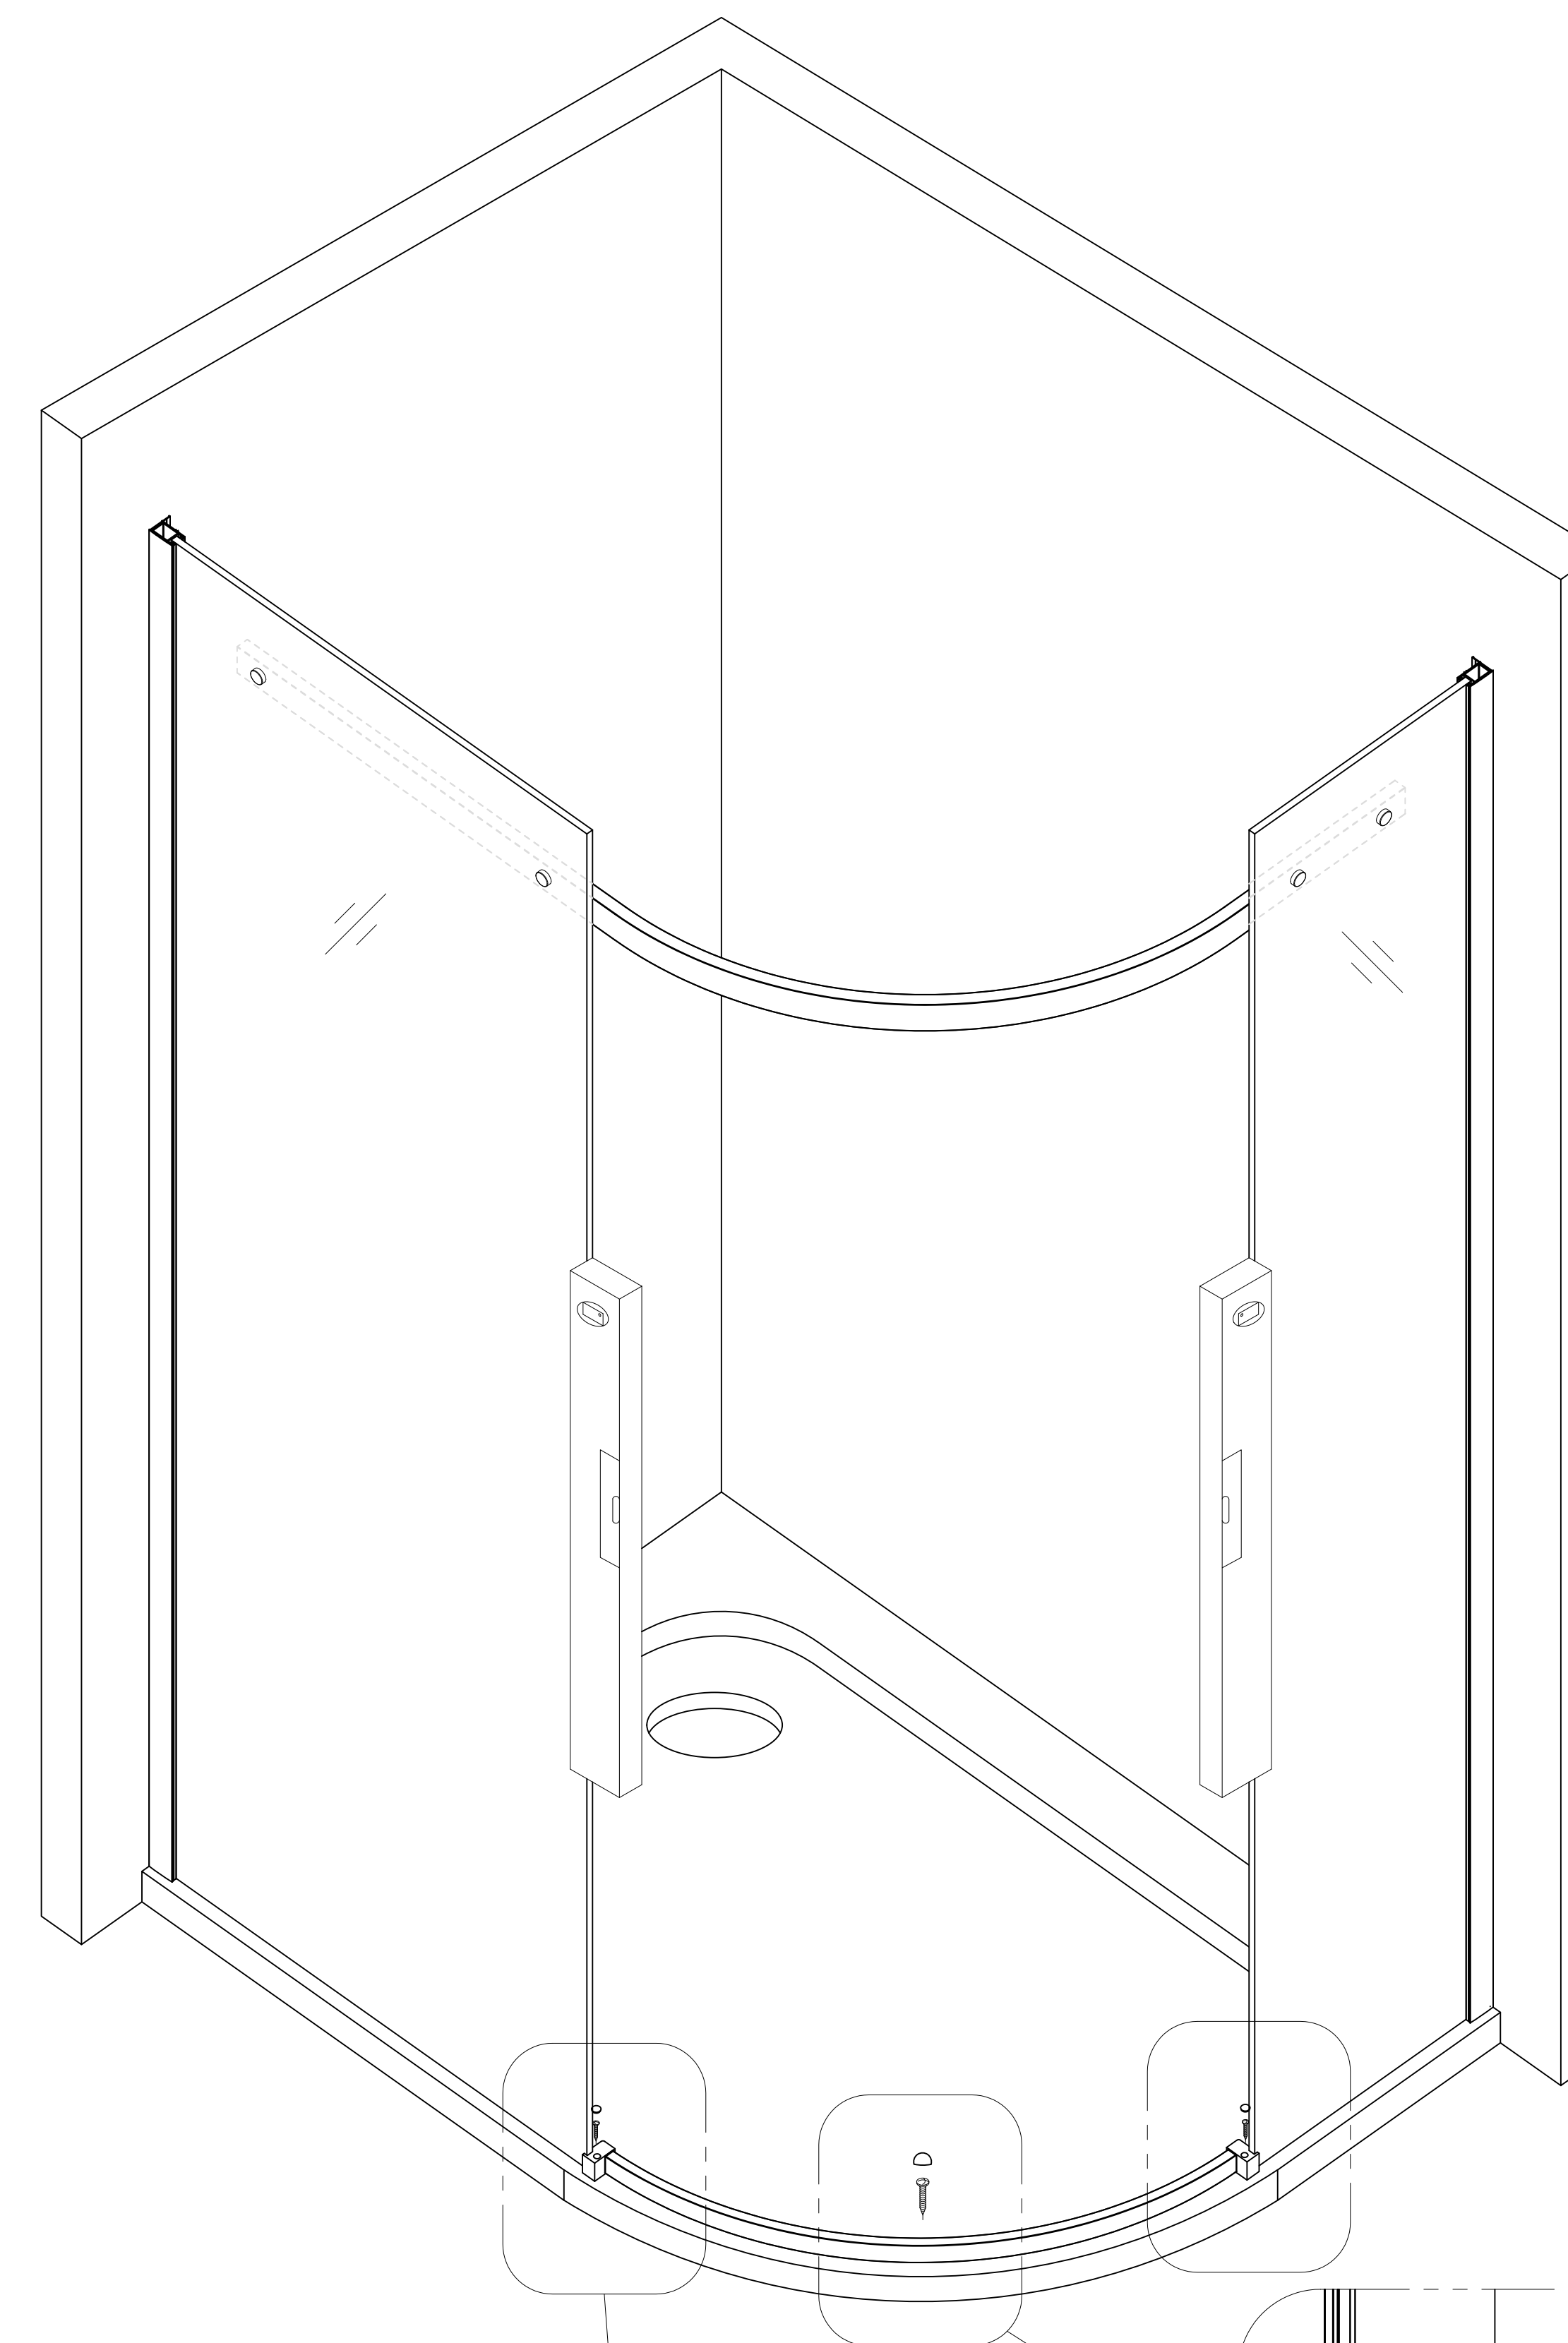


02 x1
25 x1

If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;

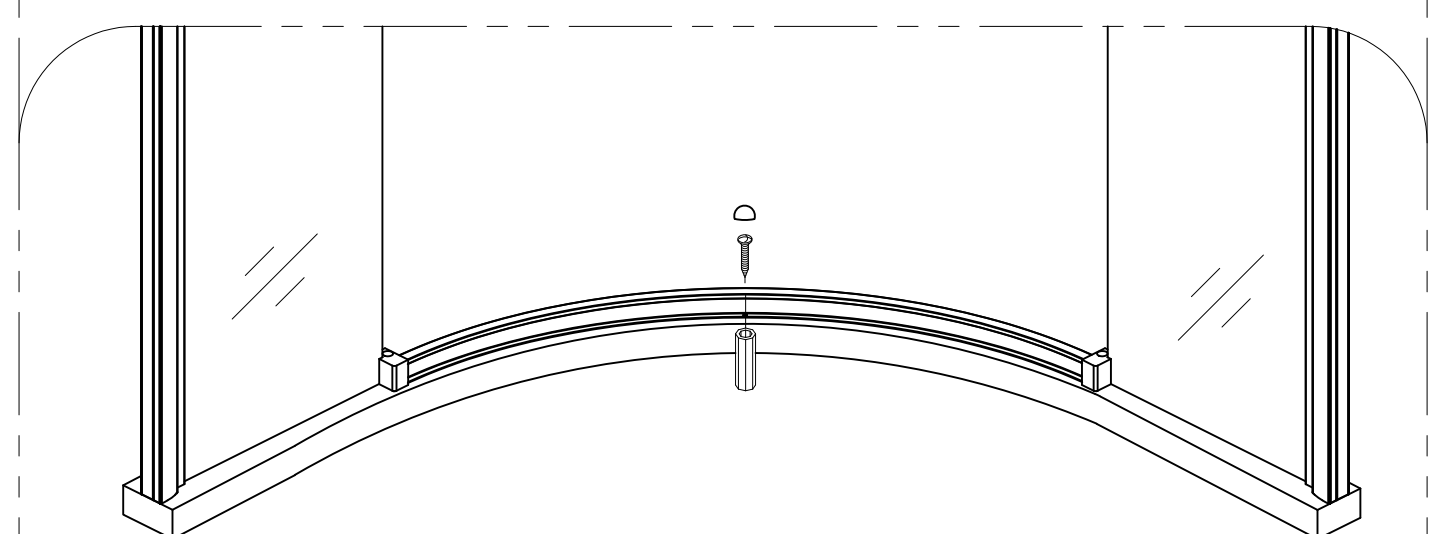


02 x1
25 x1
01 x1

If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;

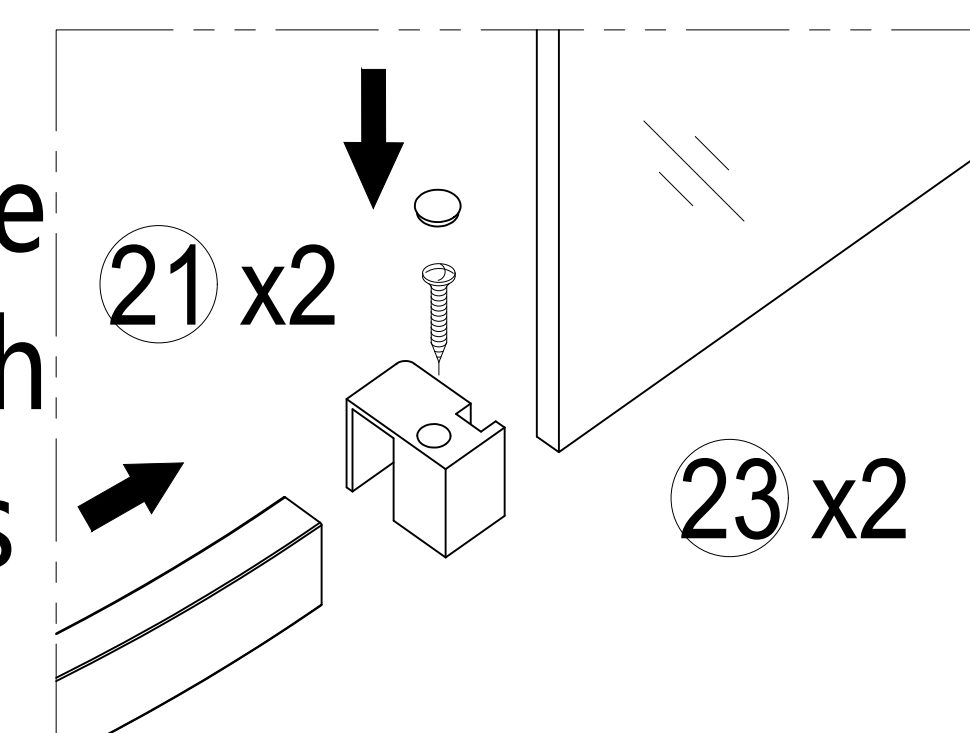

21 x2
23 x2

If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;

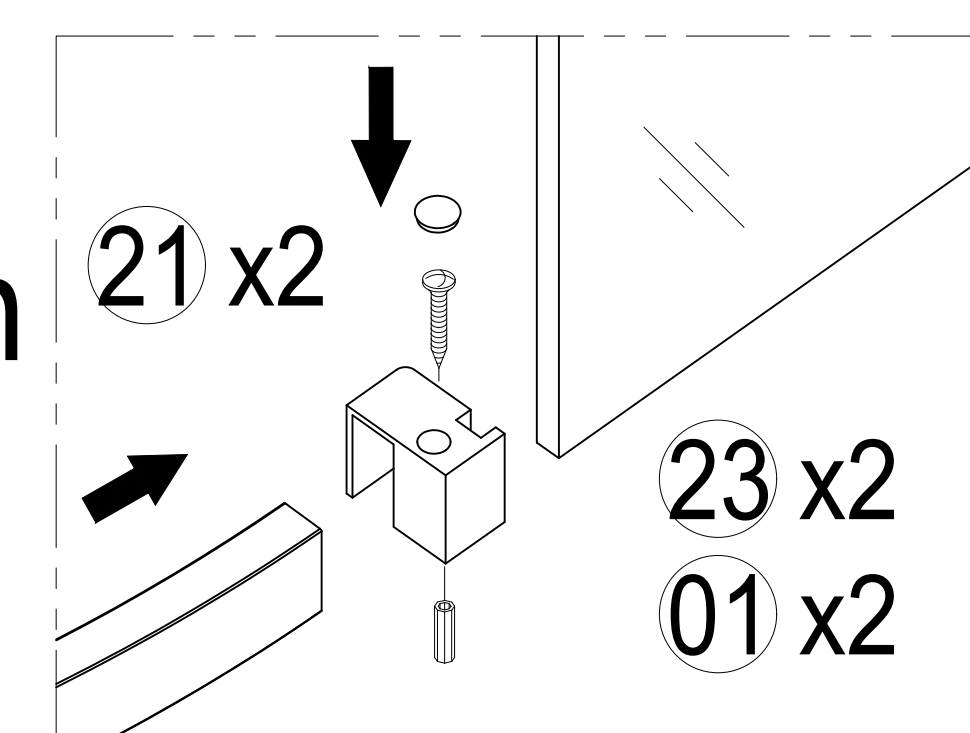

21 x2
23 x2
01 x2

If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;


Install panels + frame ensuring fixing for bottom frame are screwed to the tray.

8L

Pls don't fully
tighten the roller
screws.

15 x4

This side
faces
downward

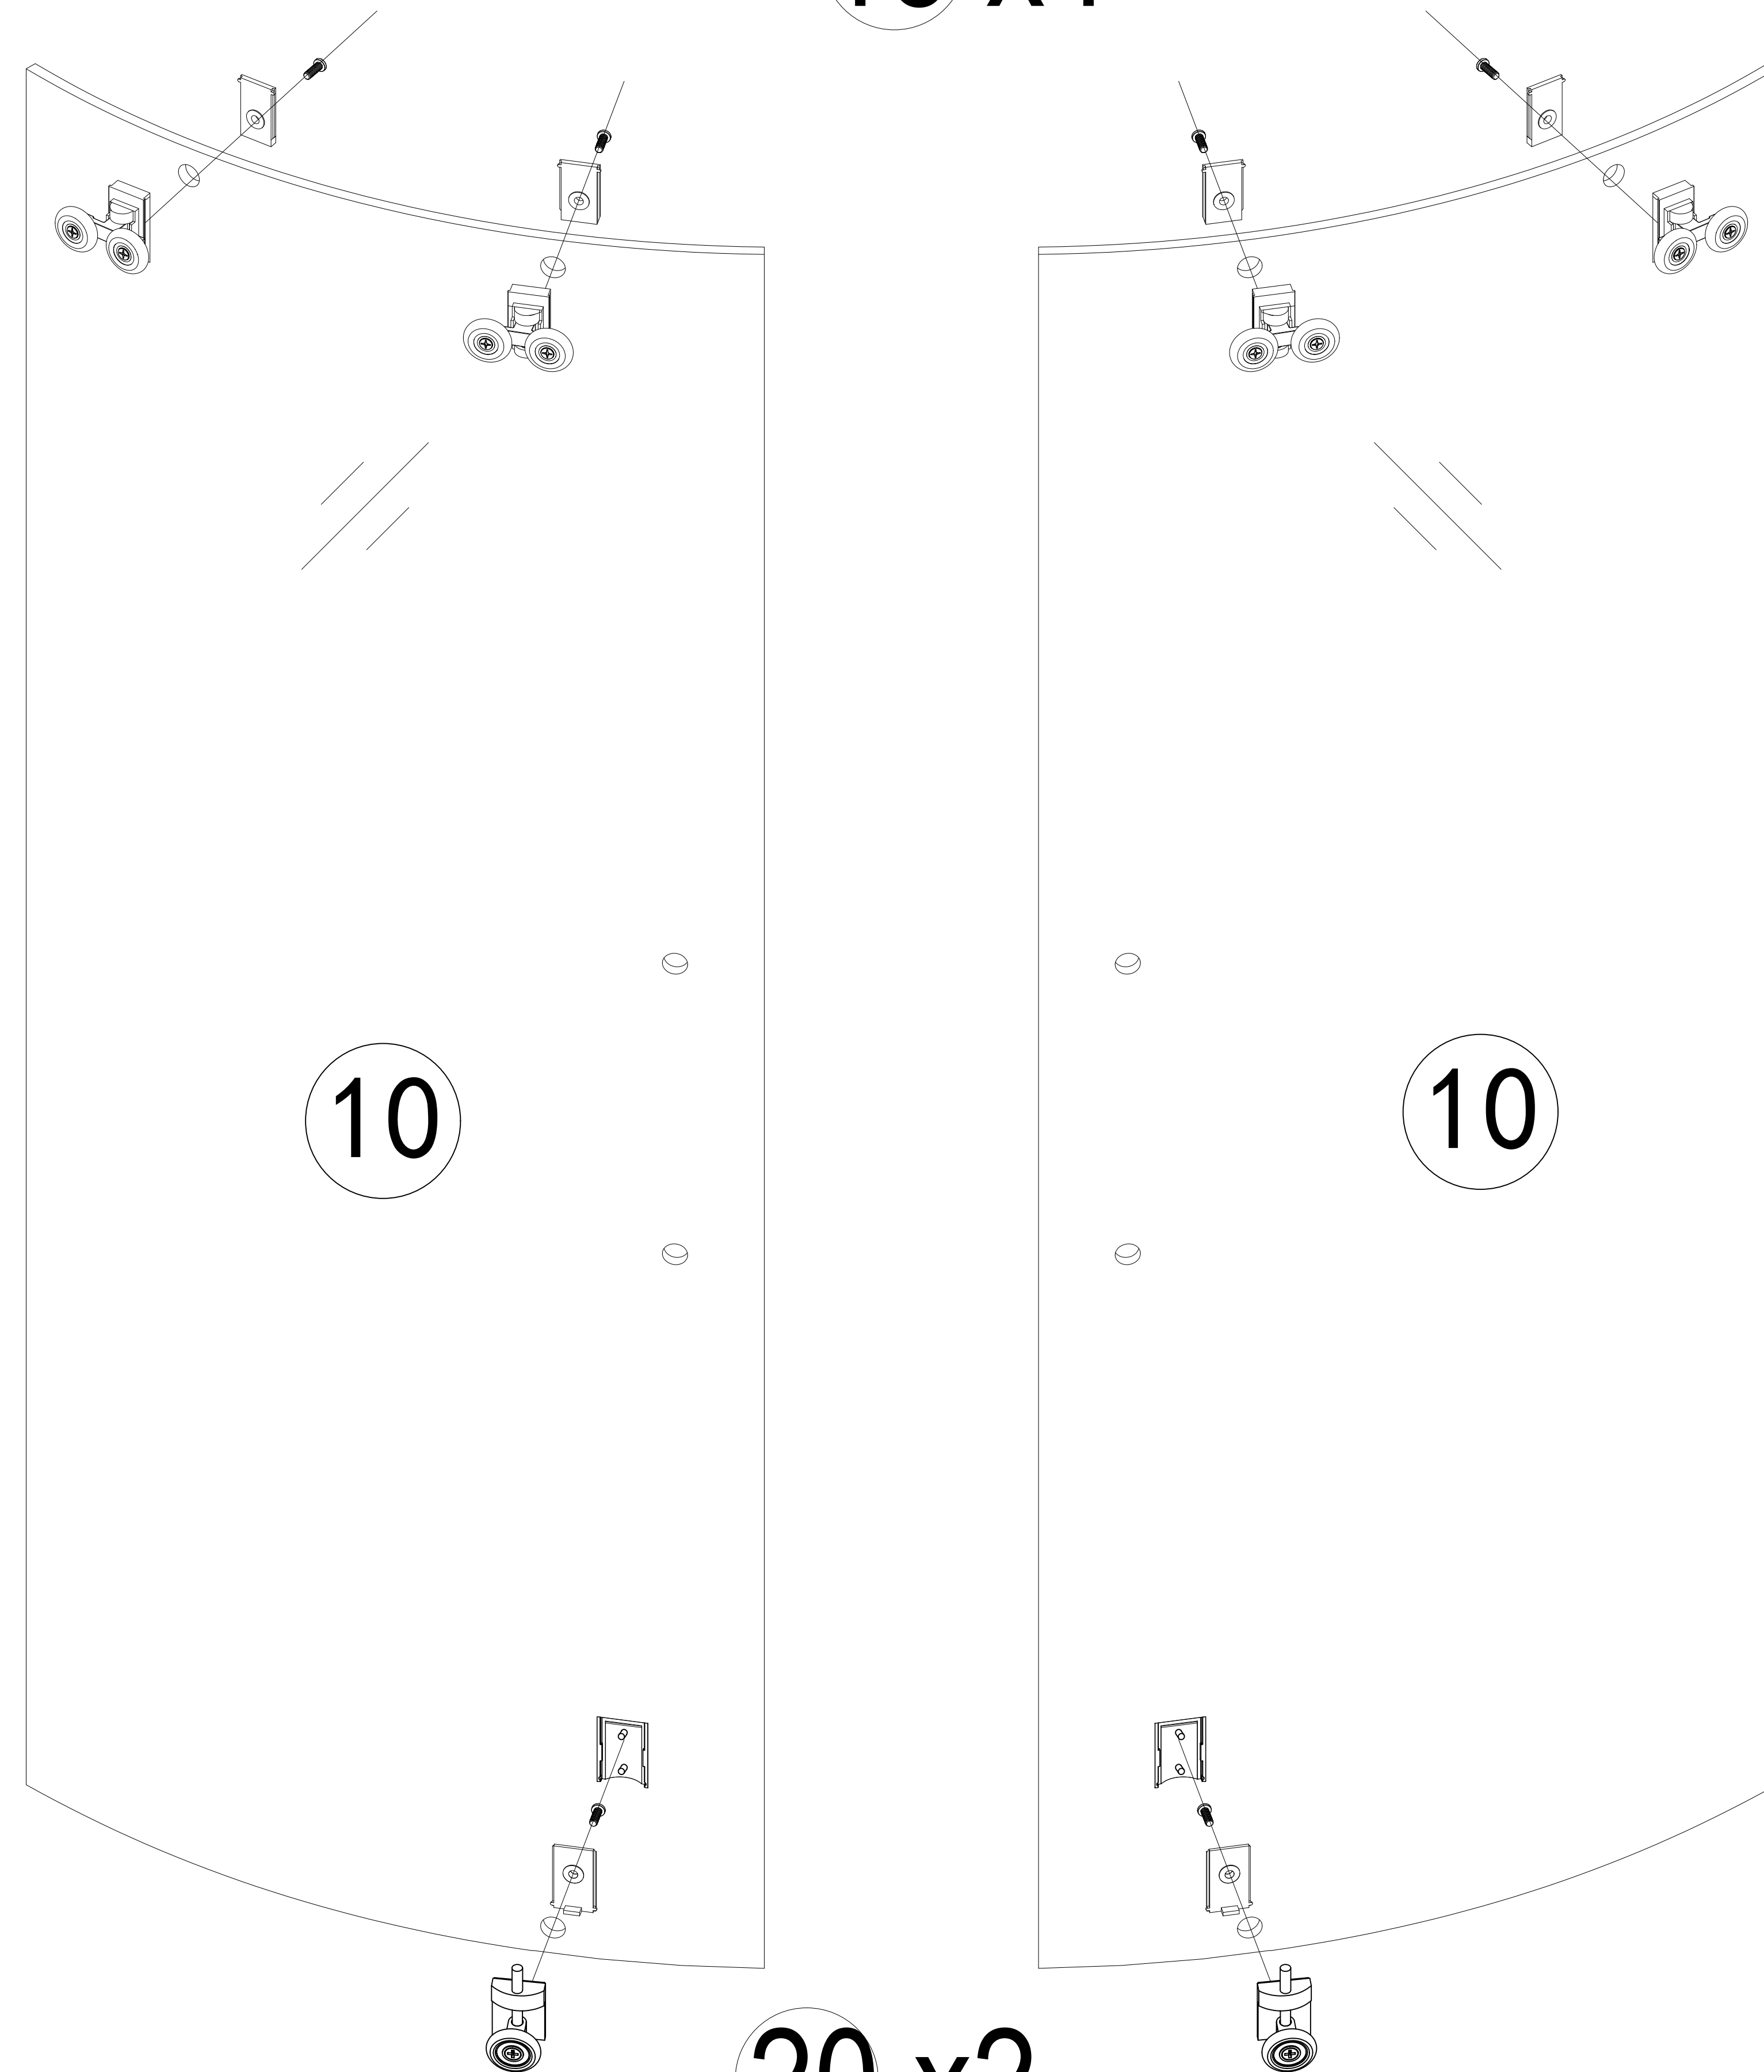

20 x2


Fit rollers to door

8R

Pls don't fully
tighten the roller
screws.

15 x4


This side
faces
downward

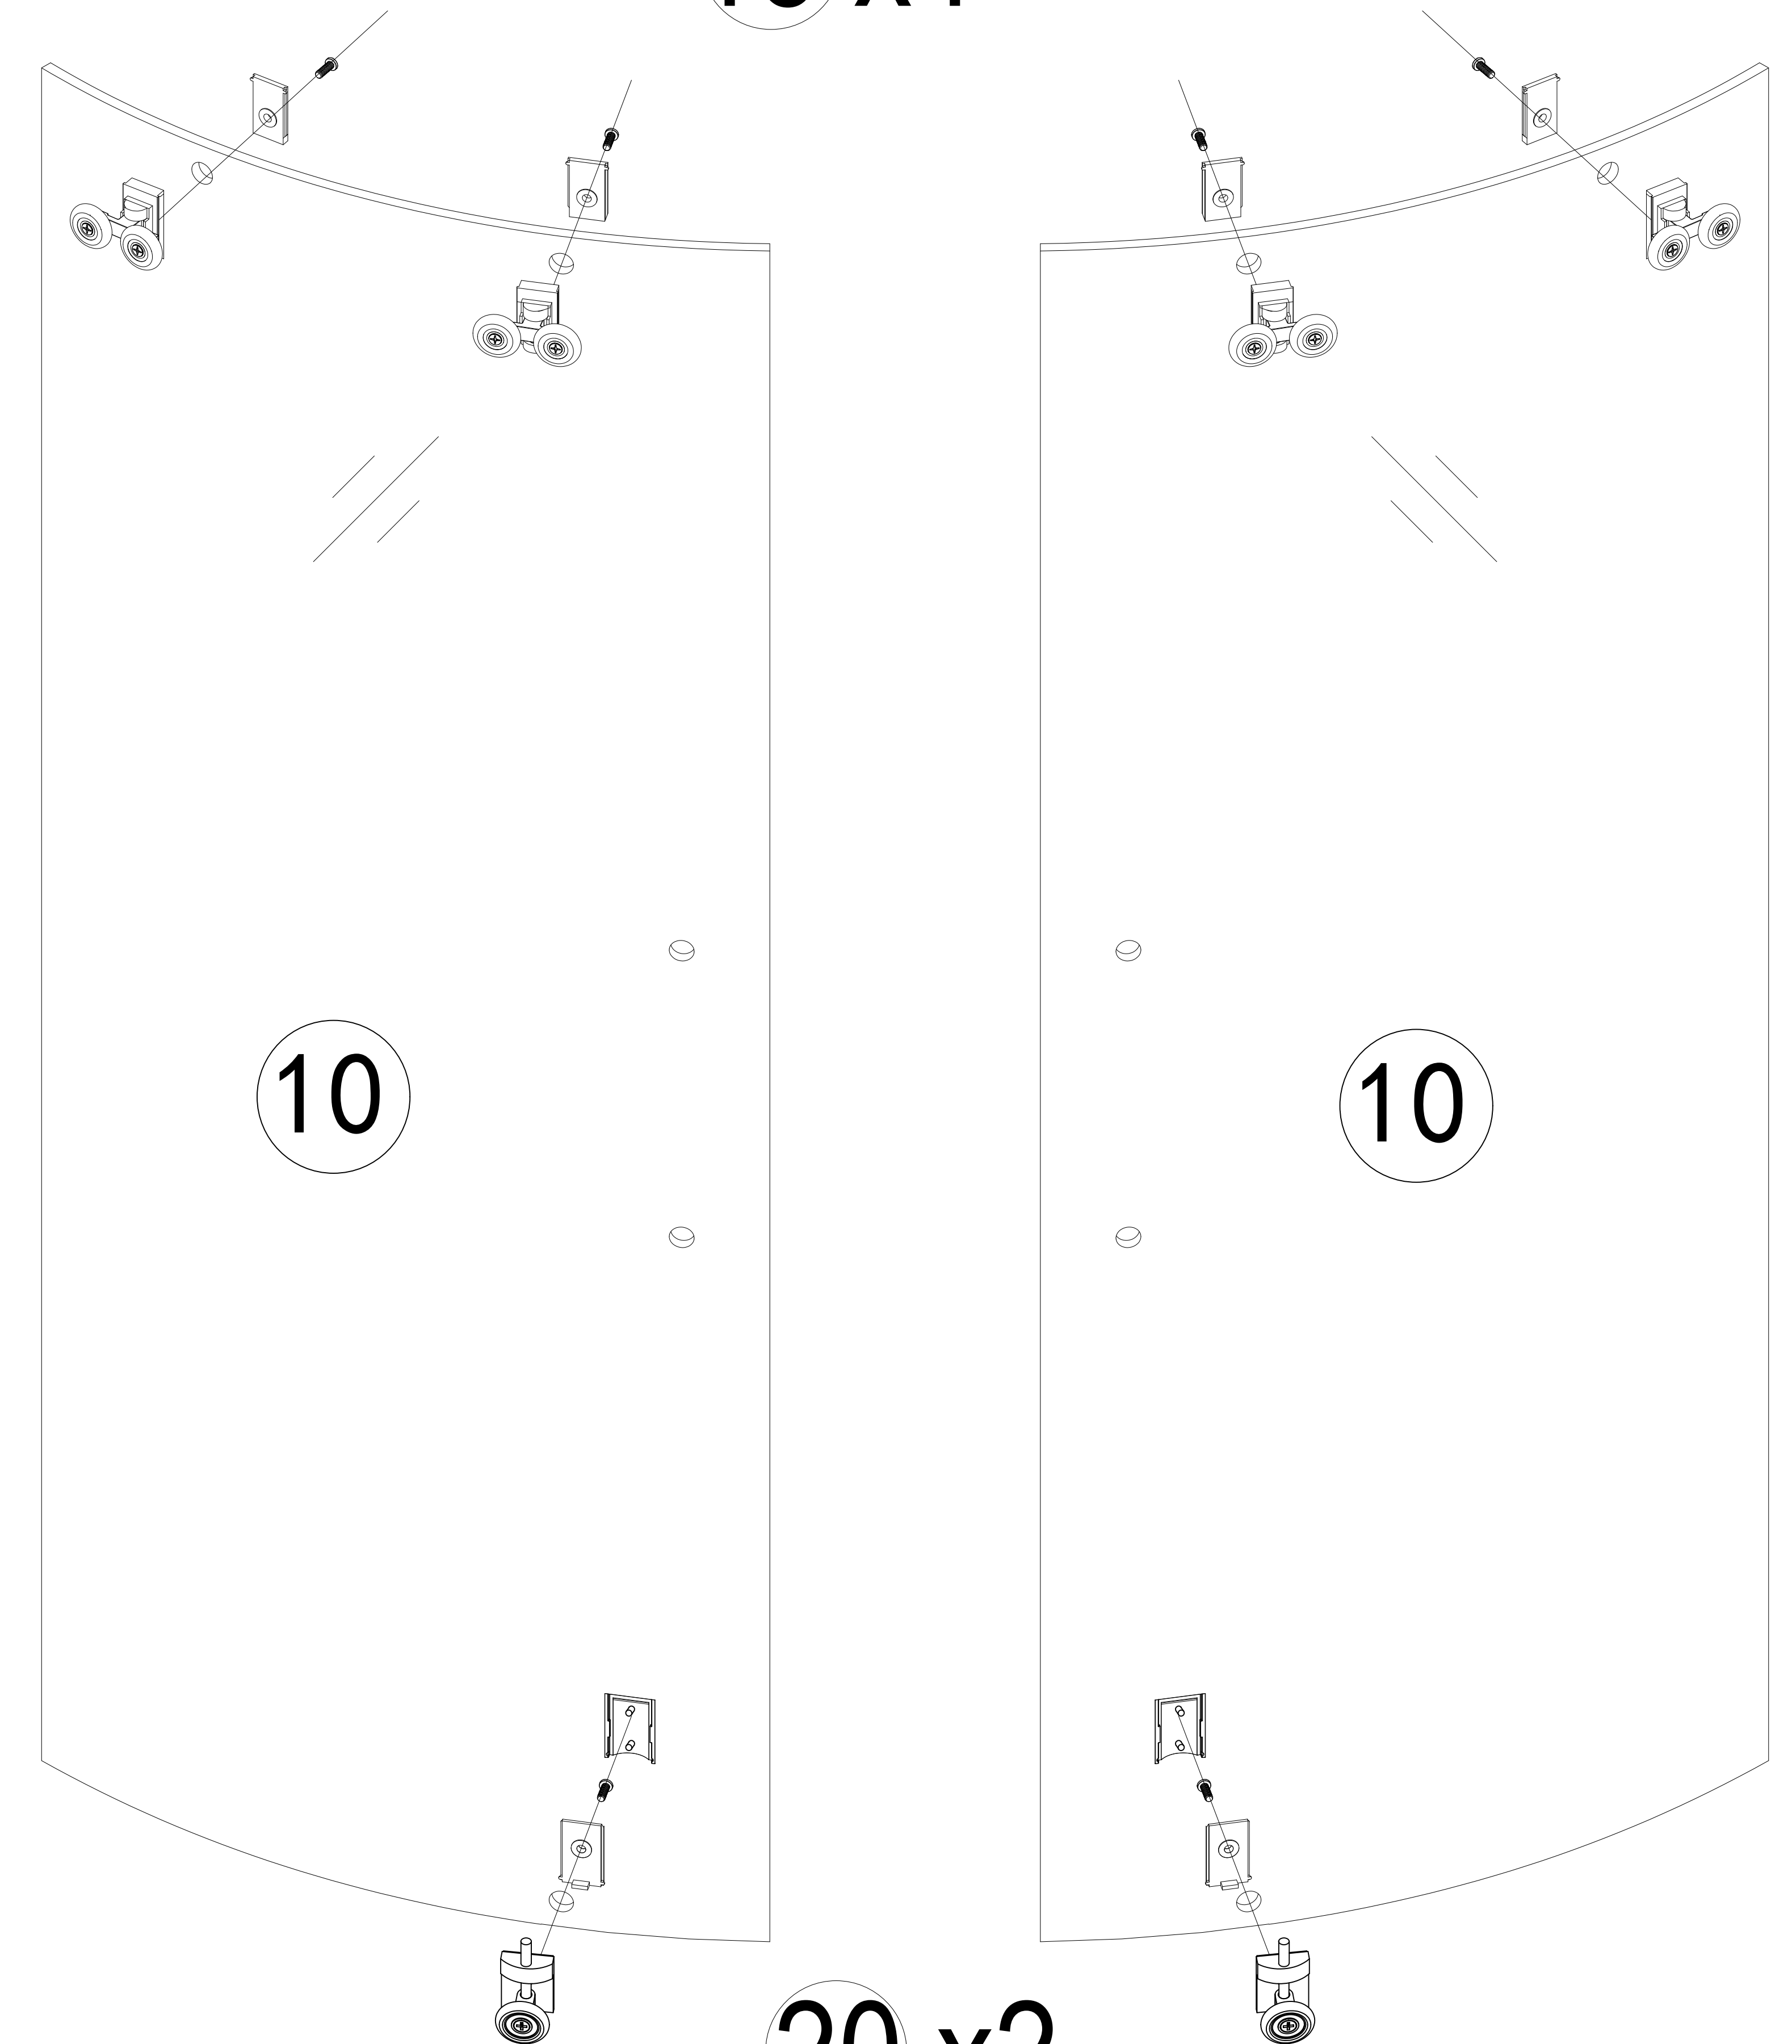


20 x2

Fit rollers to door


9L

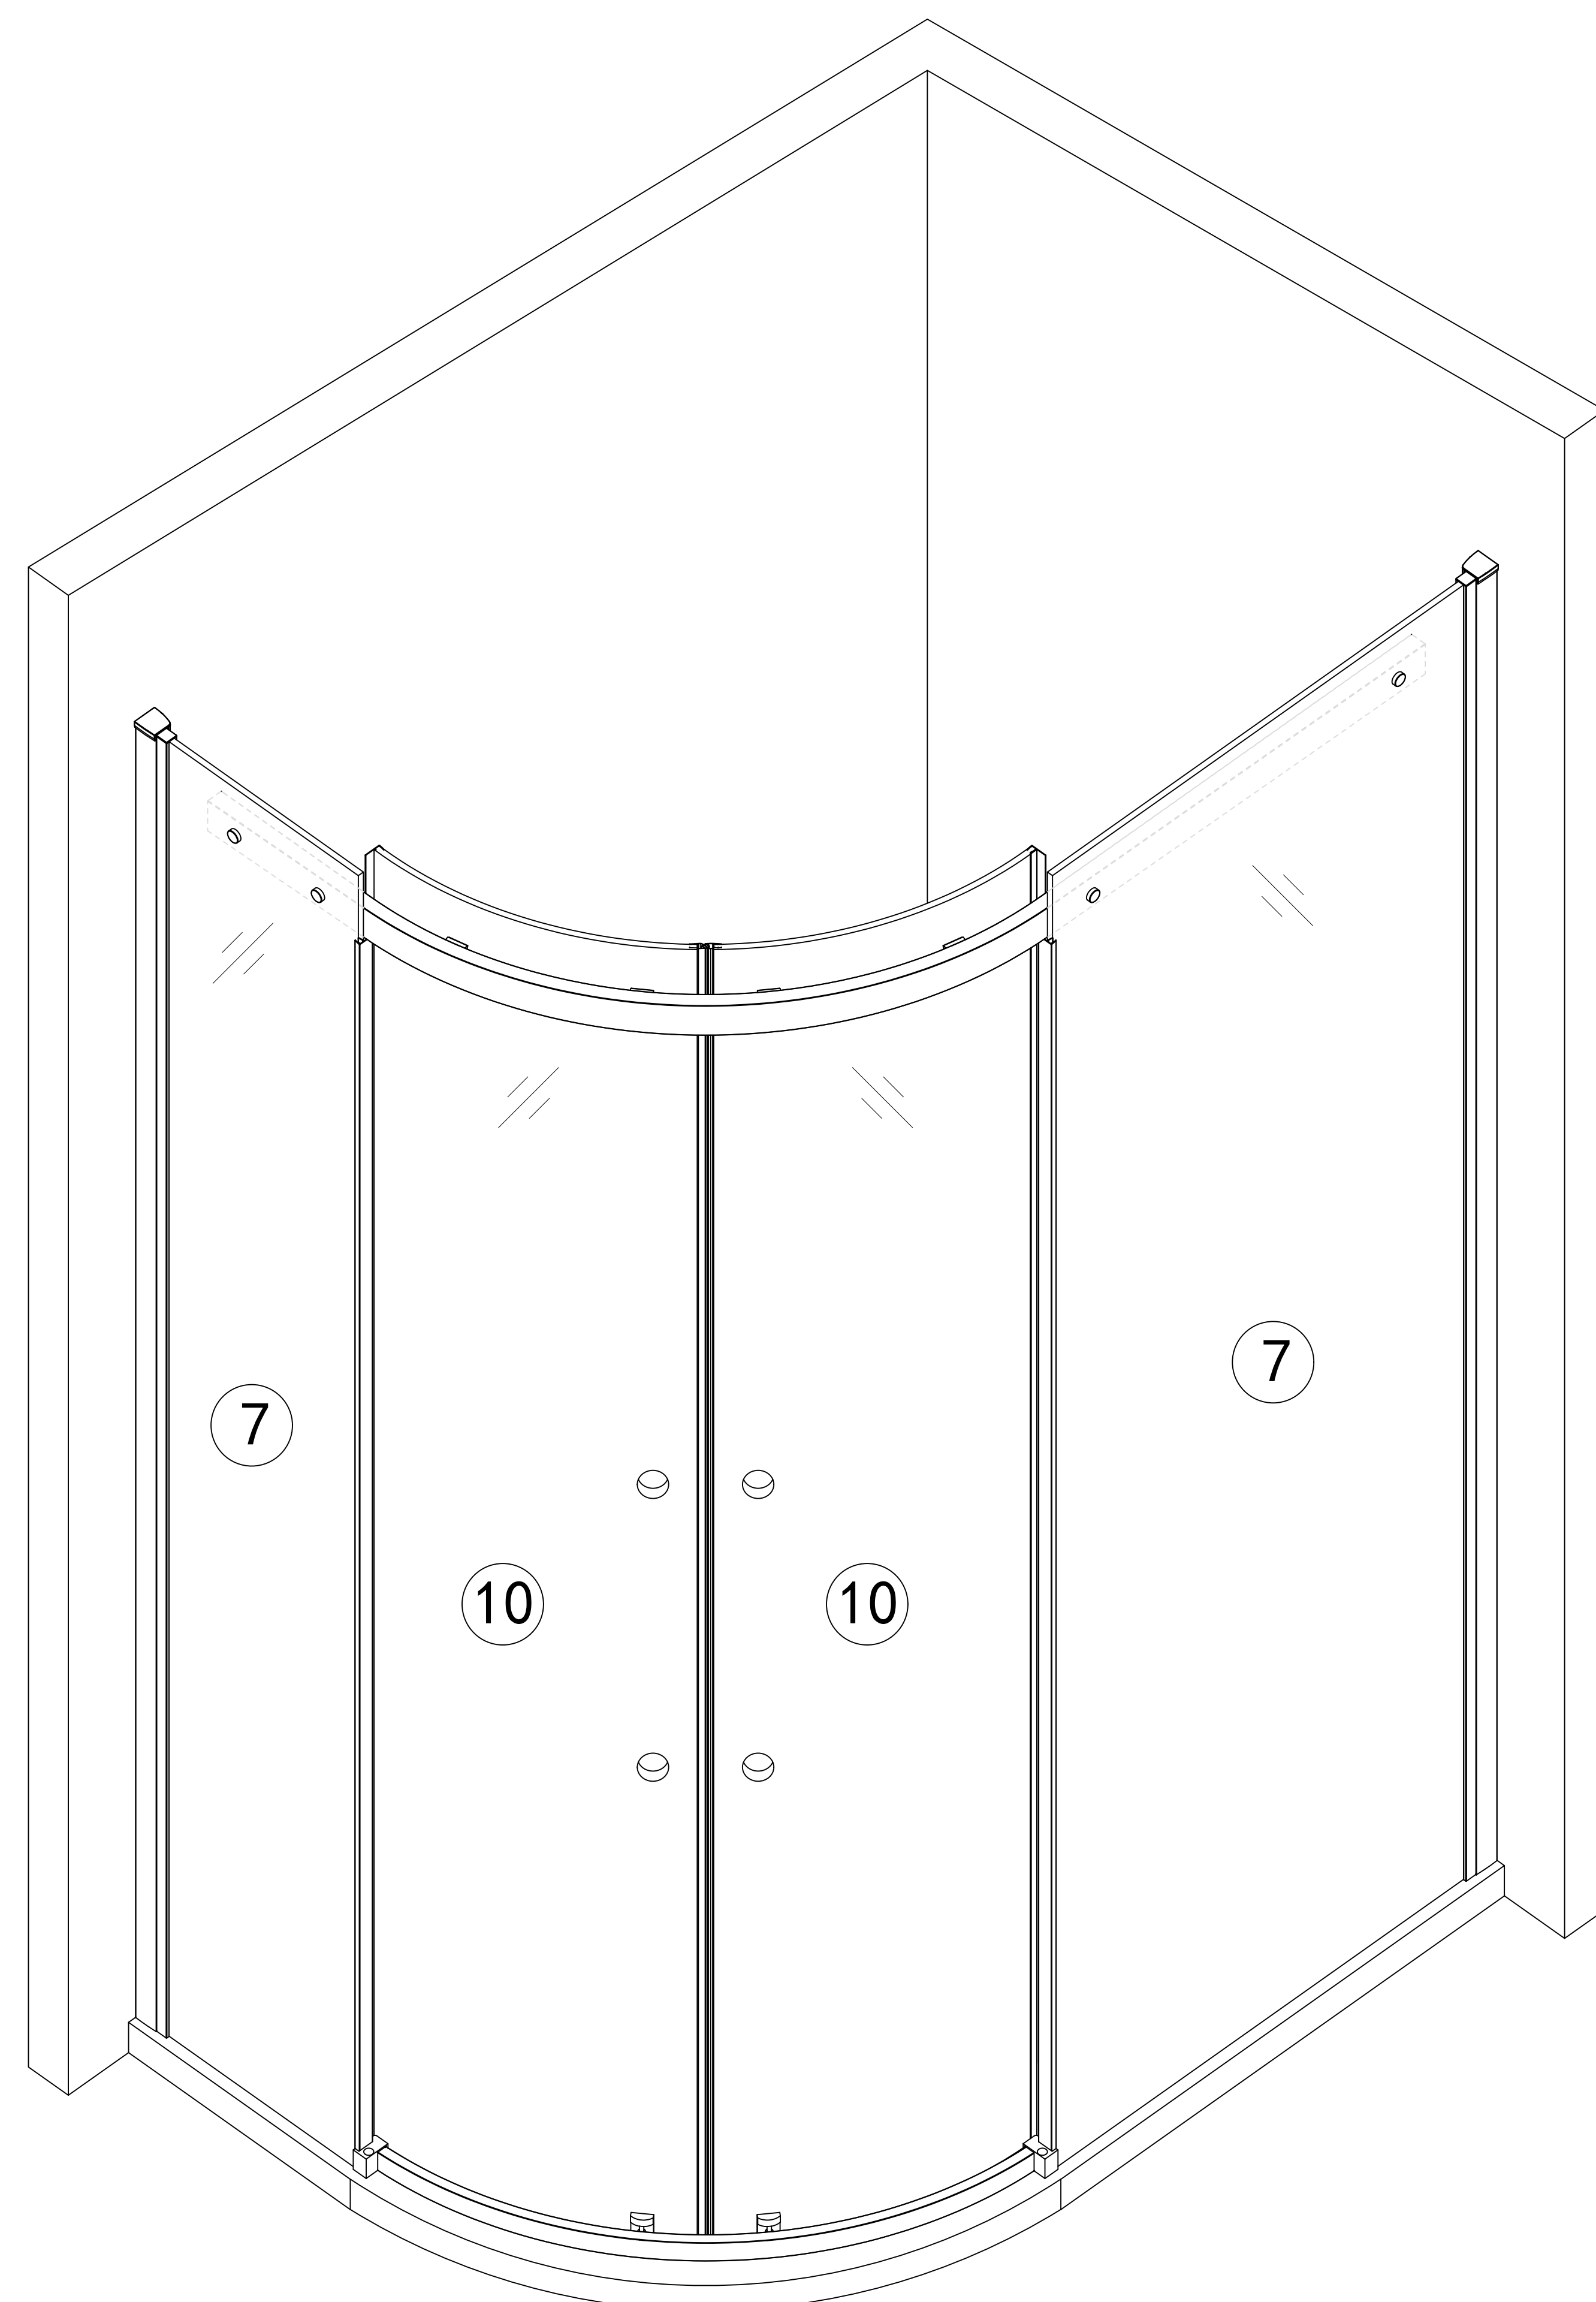


9R

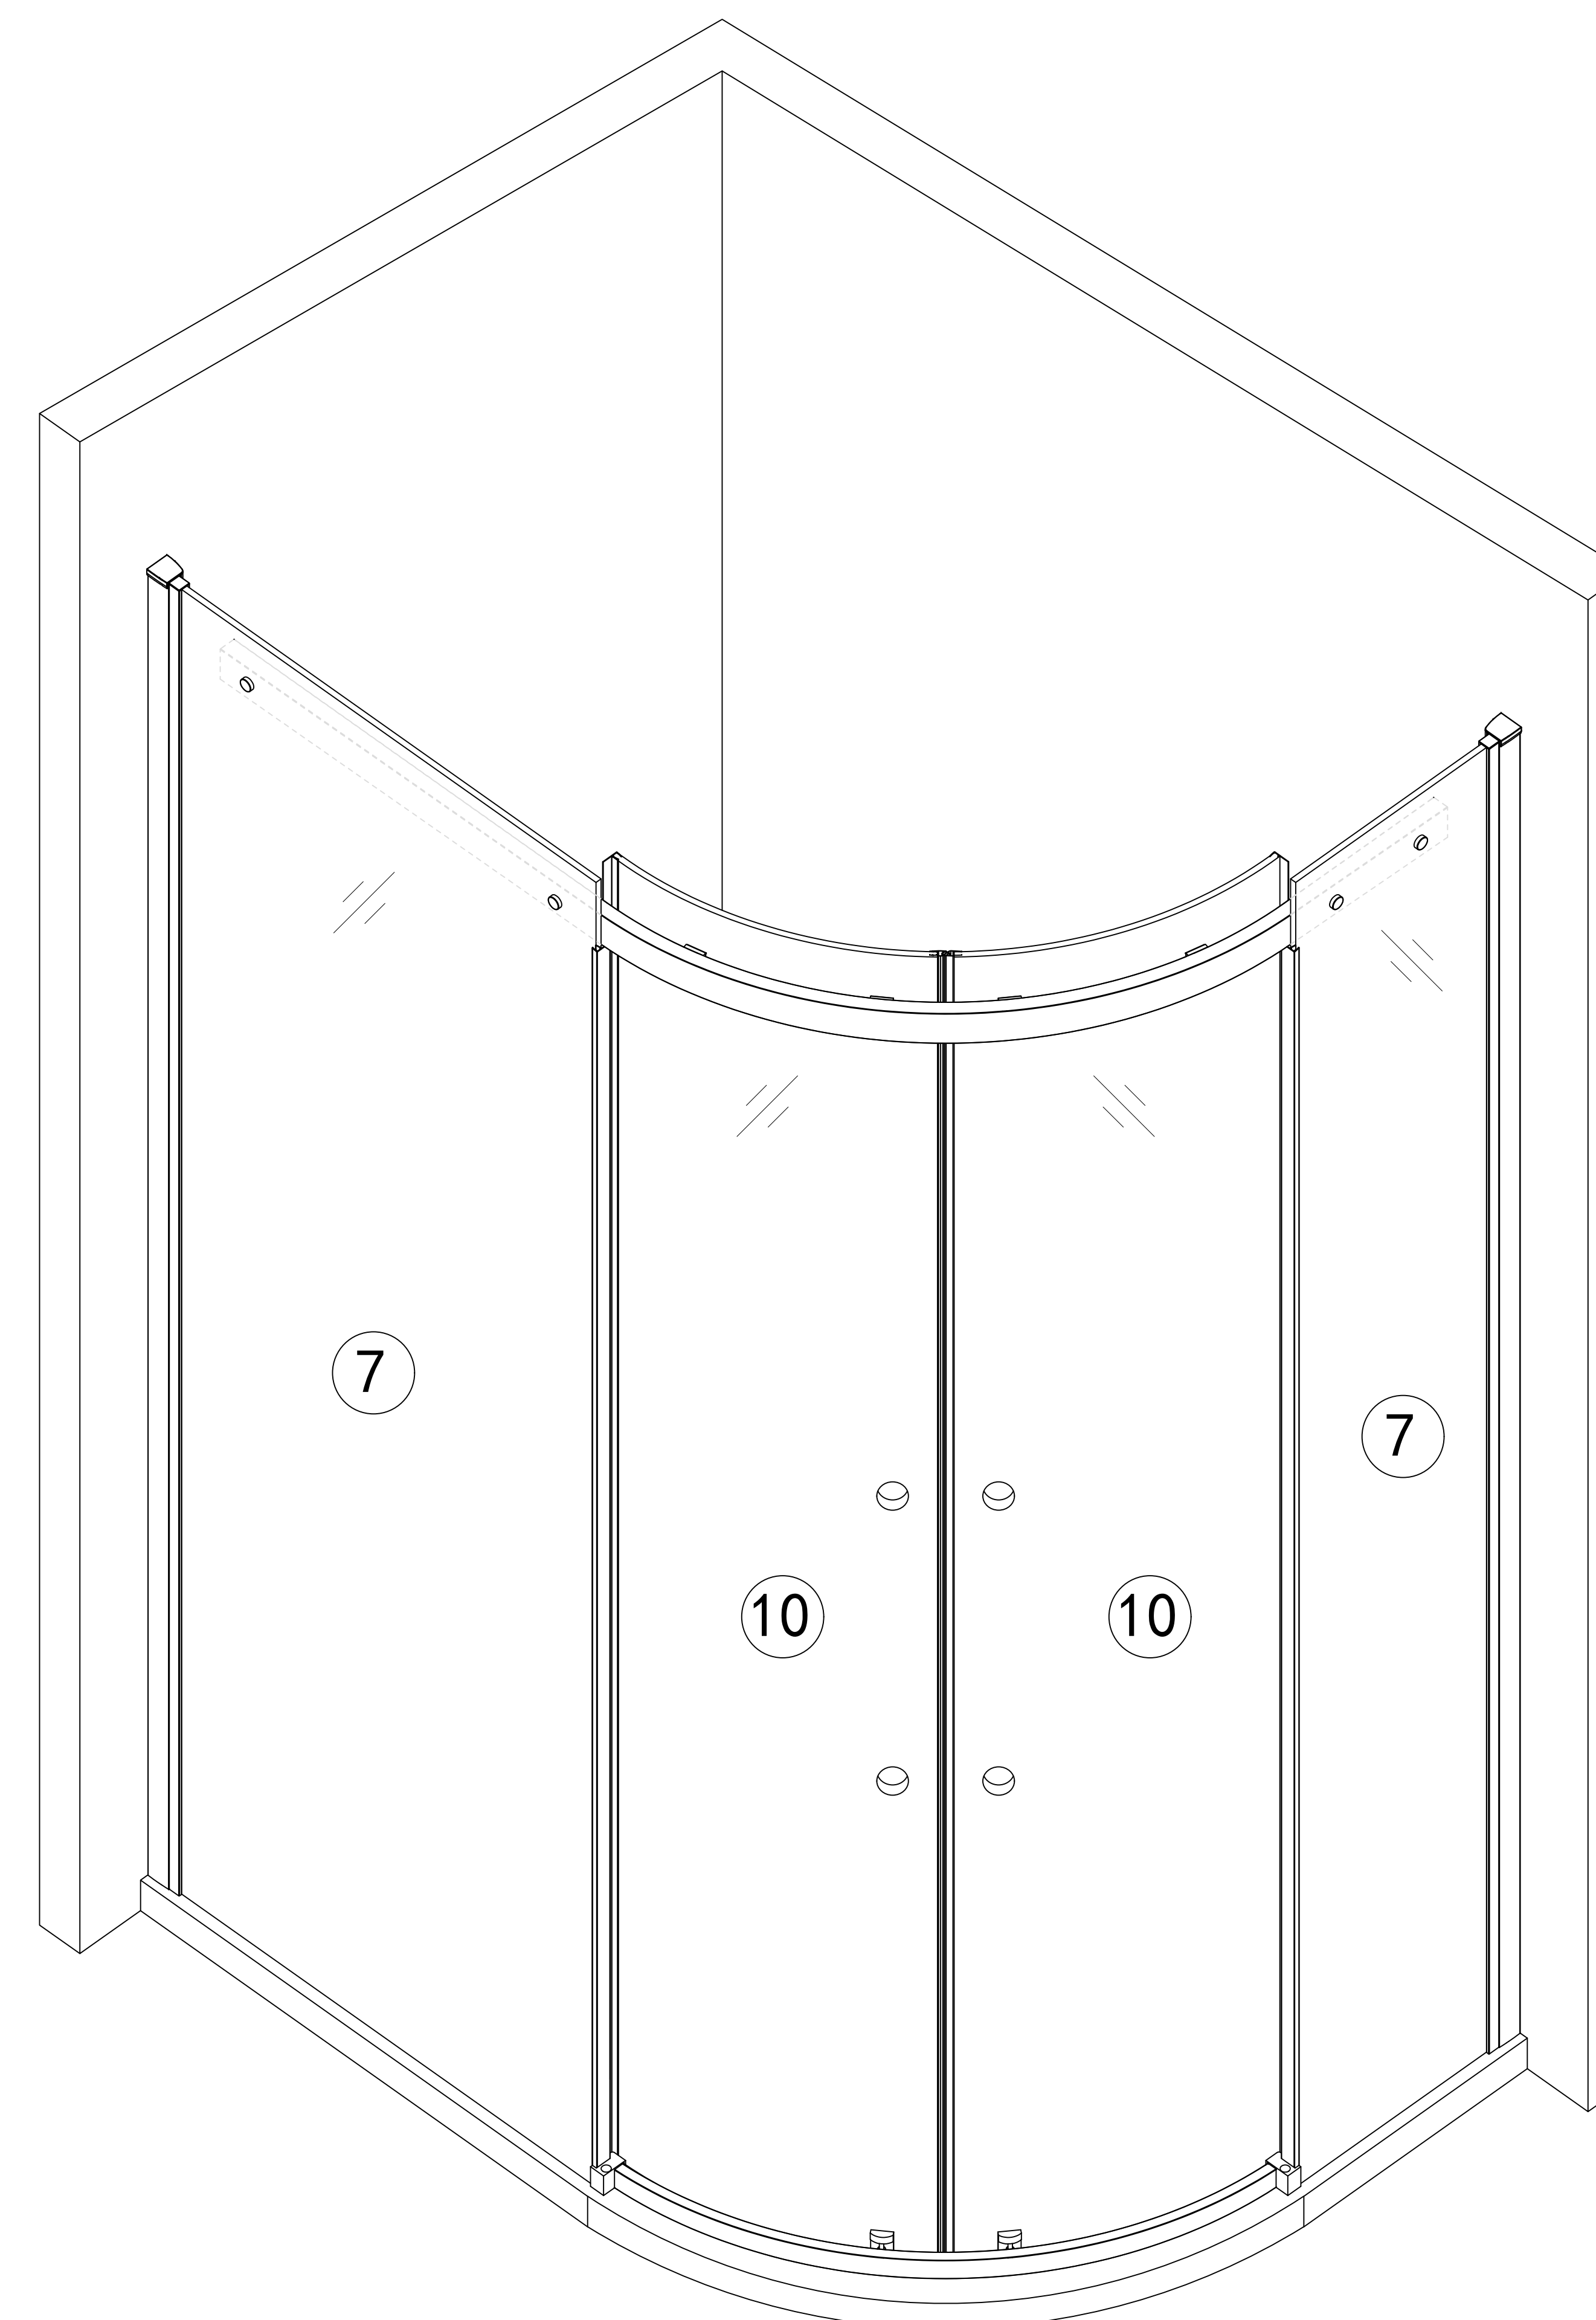


9-1

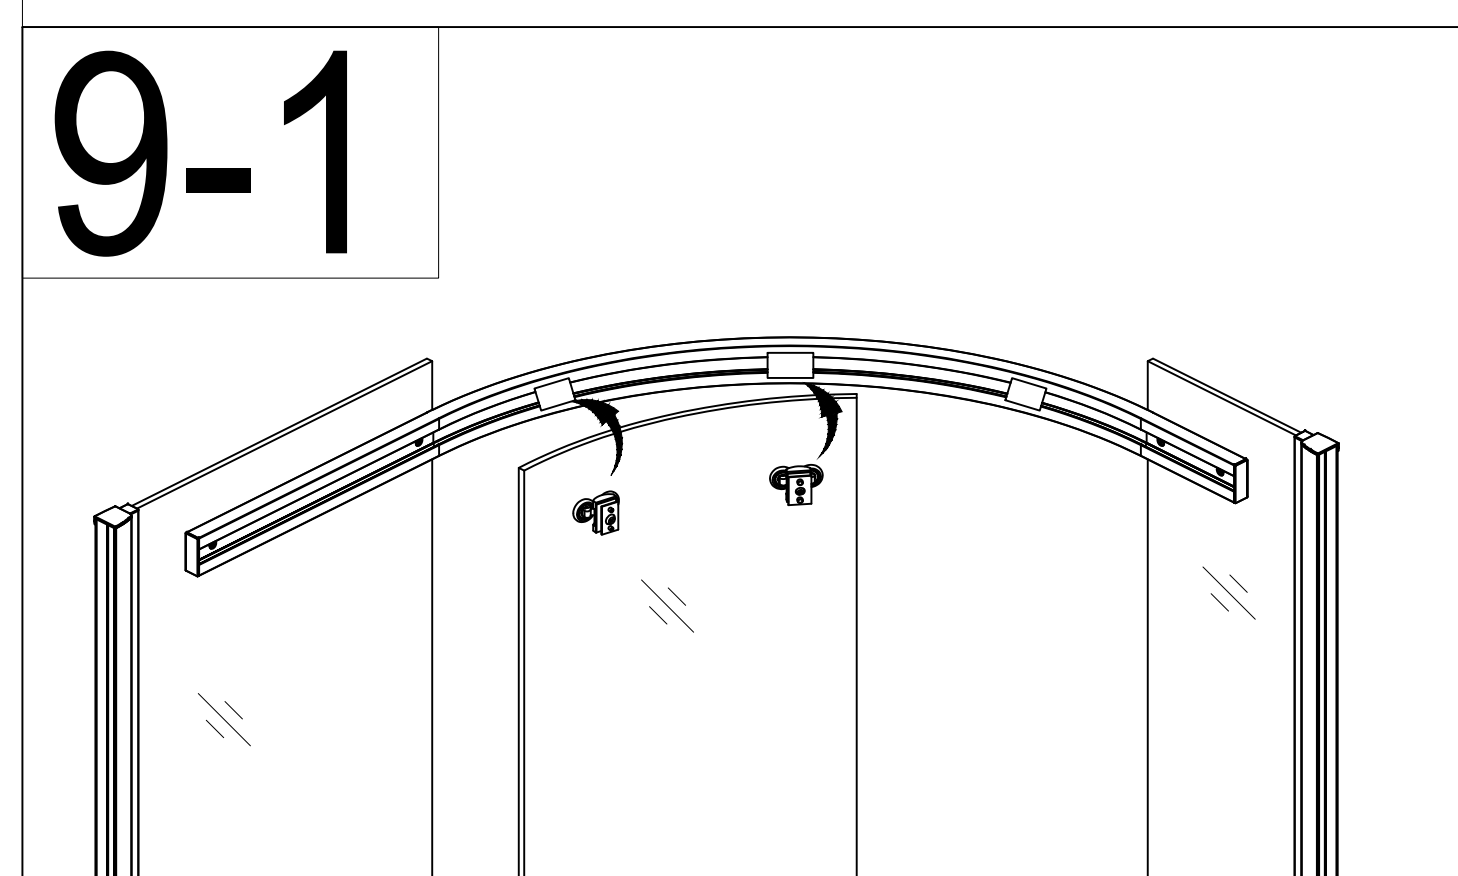

9-2

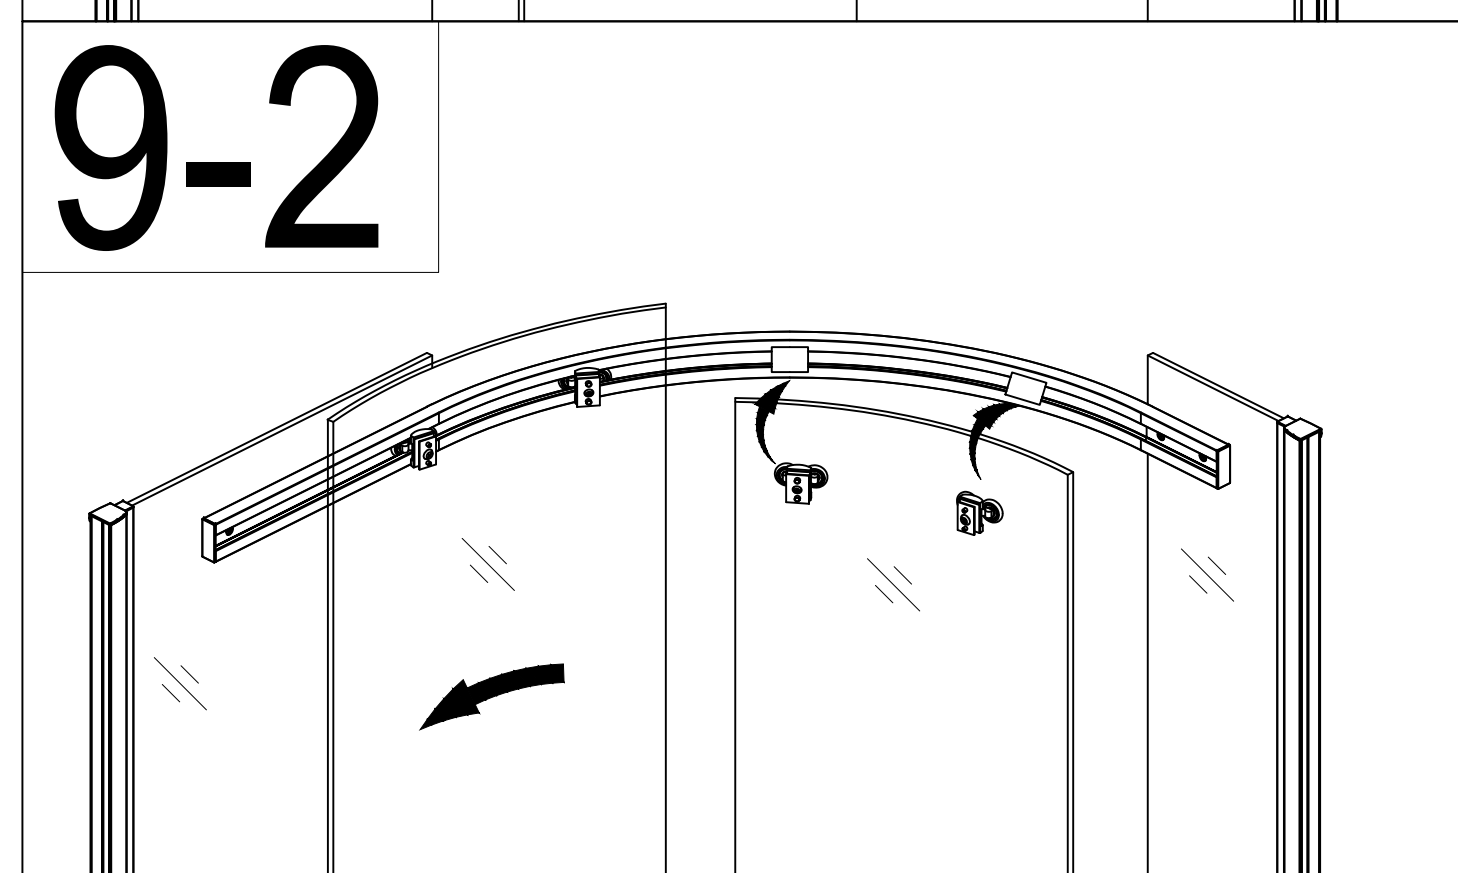


Fit doors onto frame

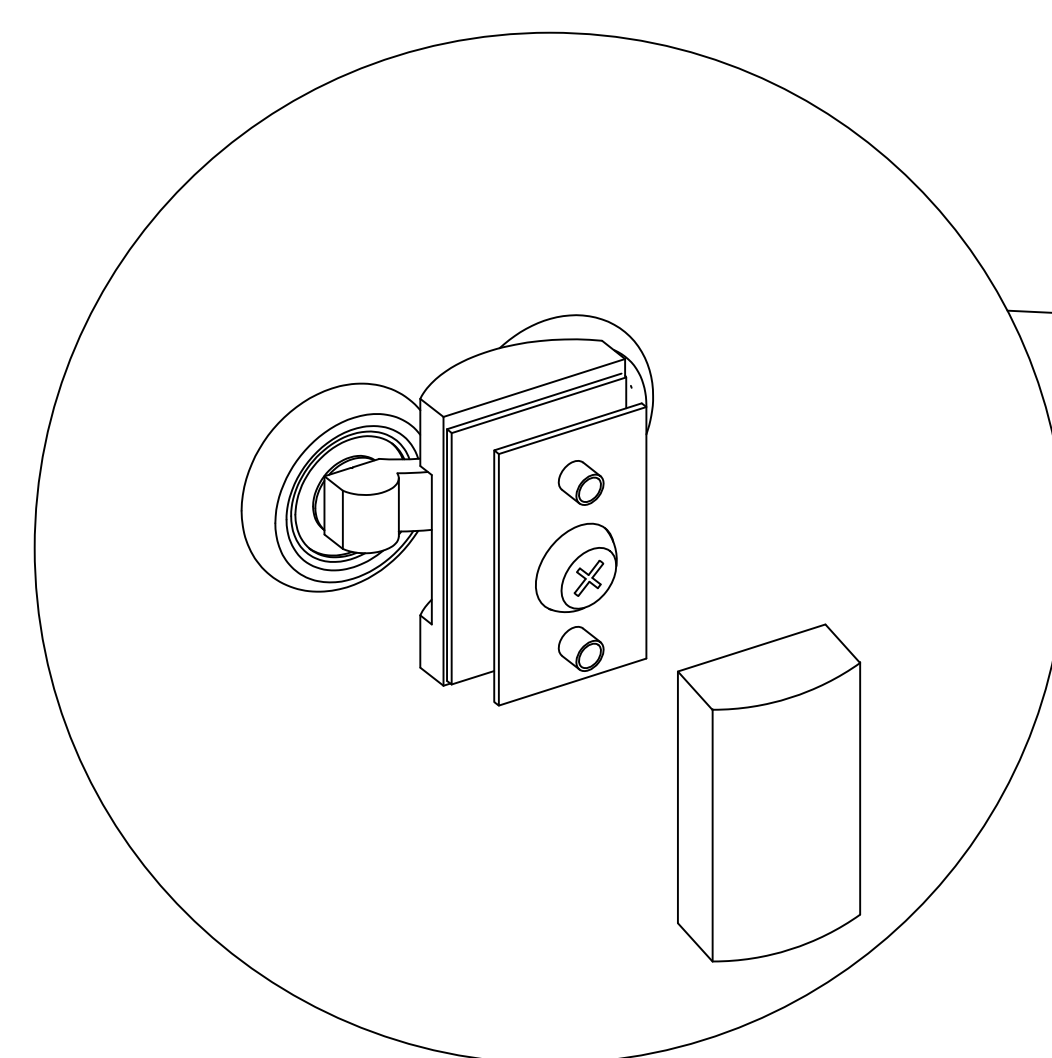


9-3

Pls make sure the rollers are level before well tightened the screws.

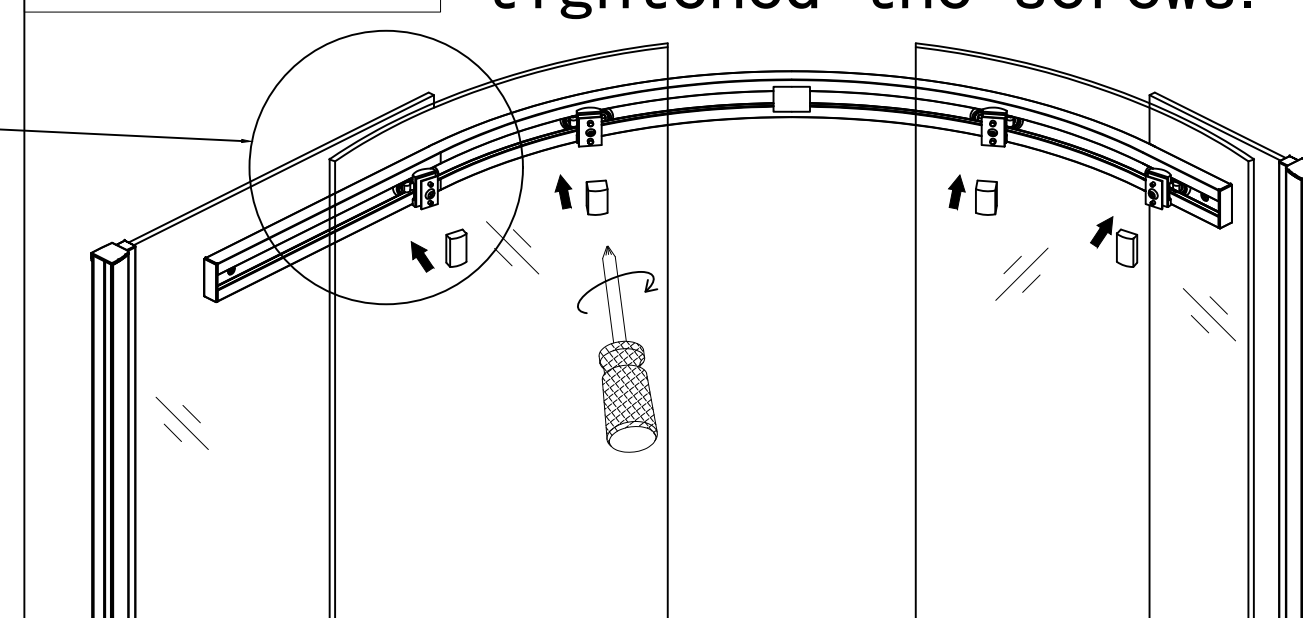


9-4

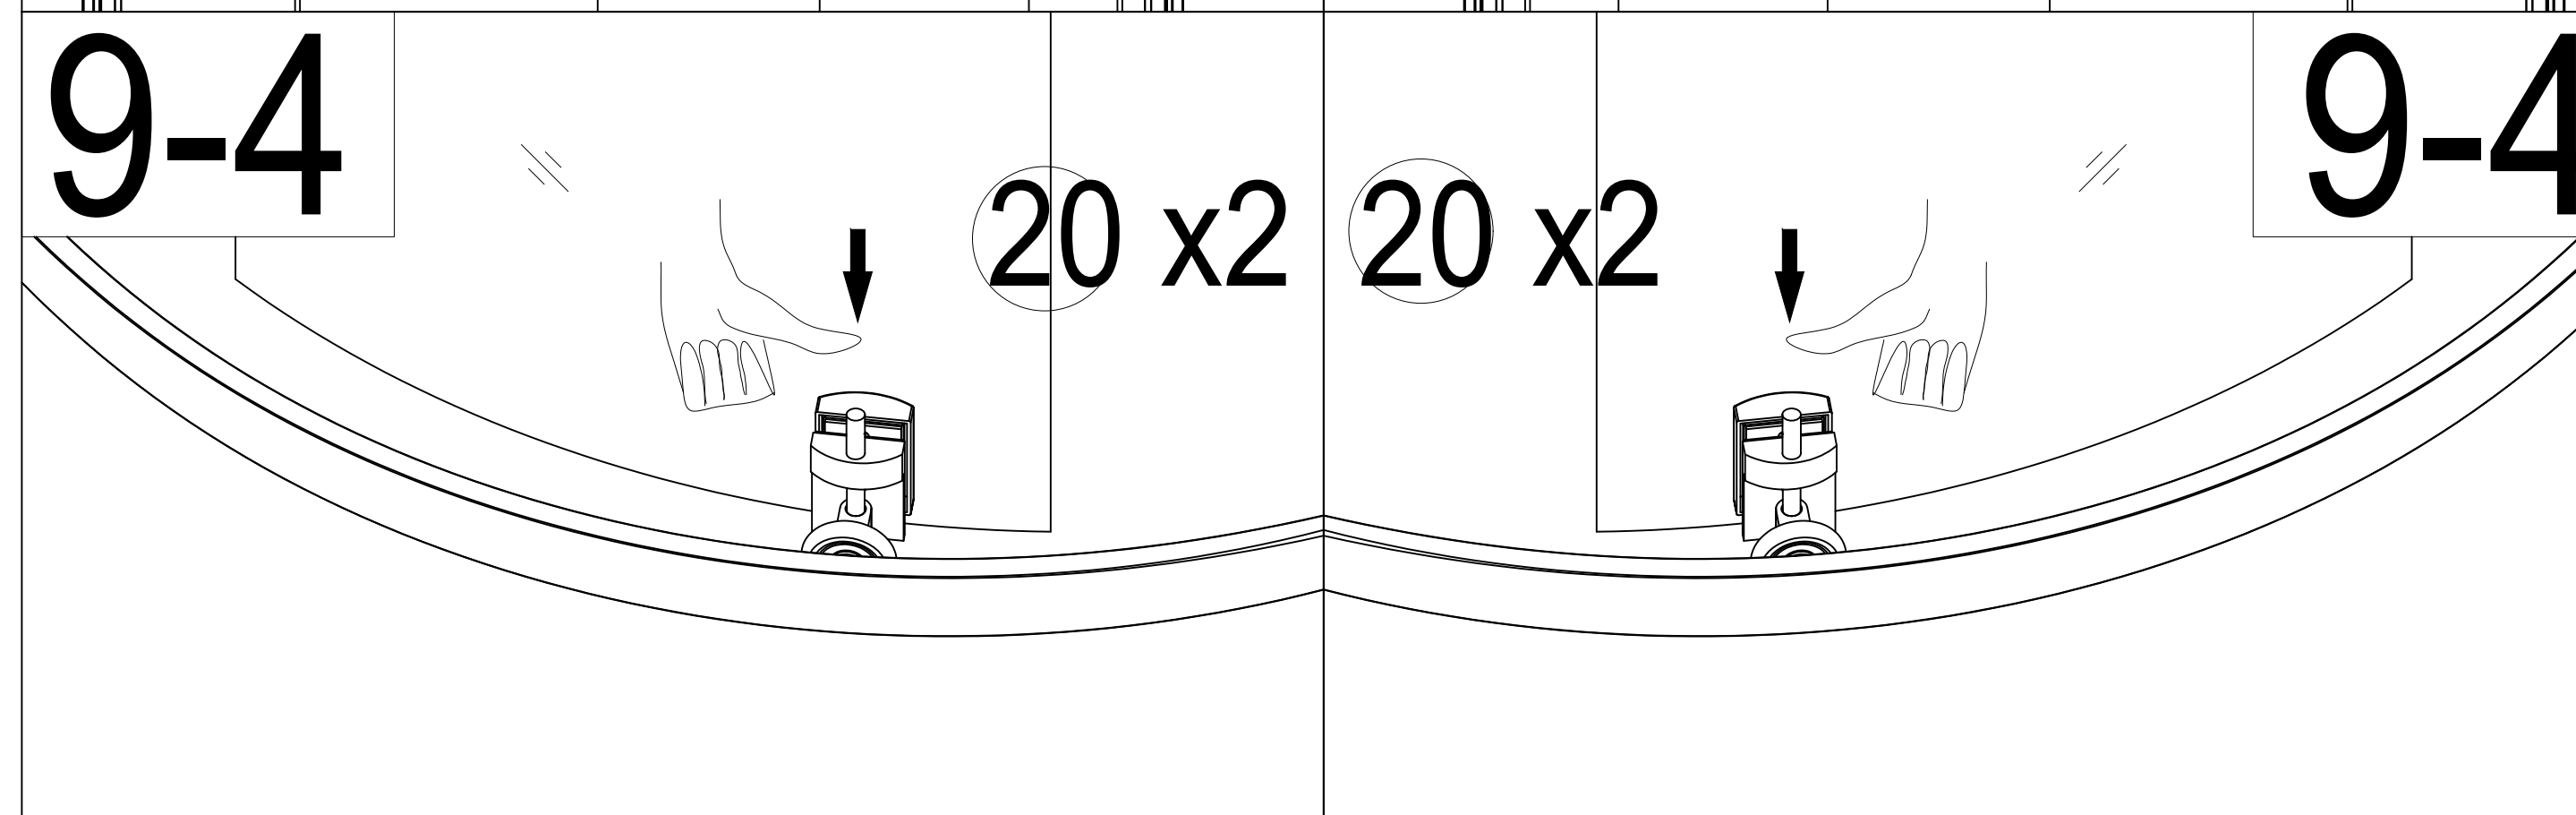


9-3


Pls make sure the rollers are level before well tightened the screws.

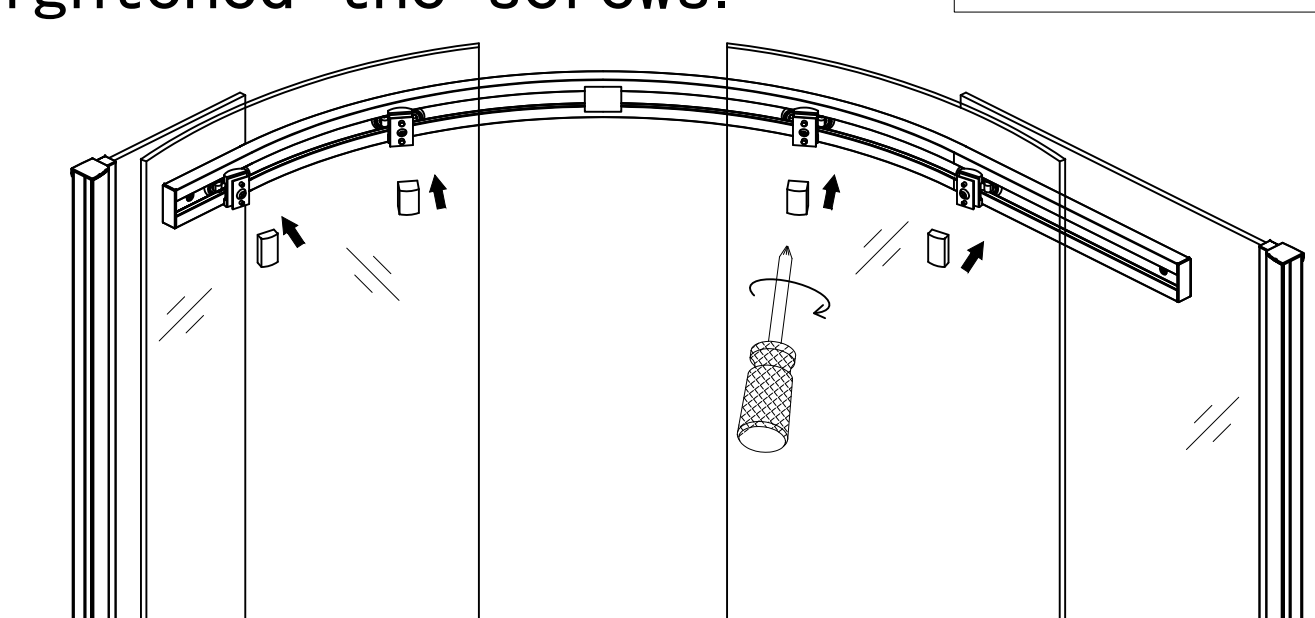

9-4

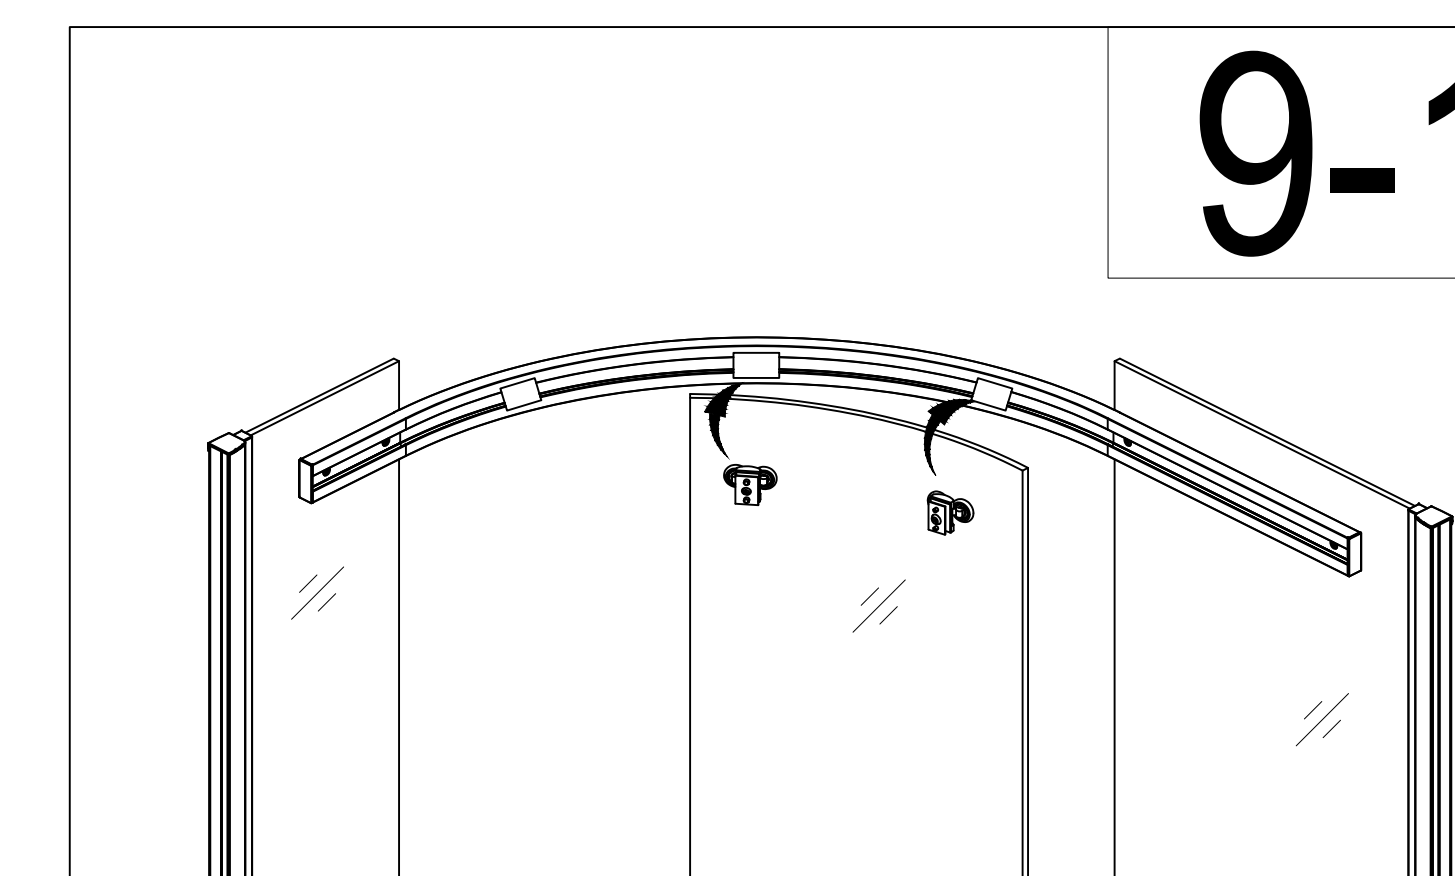



9-1

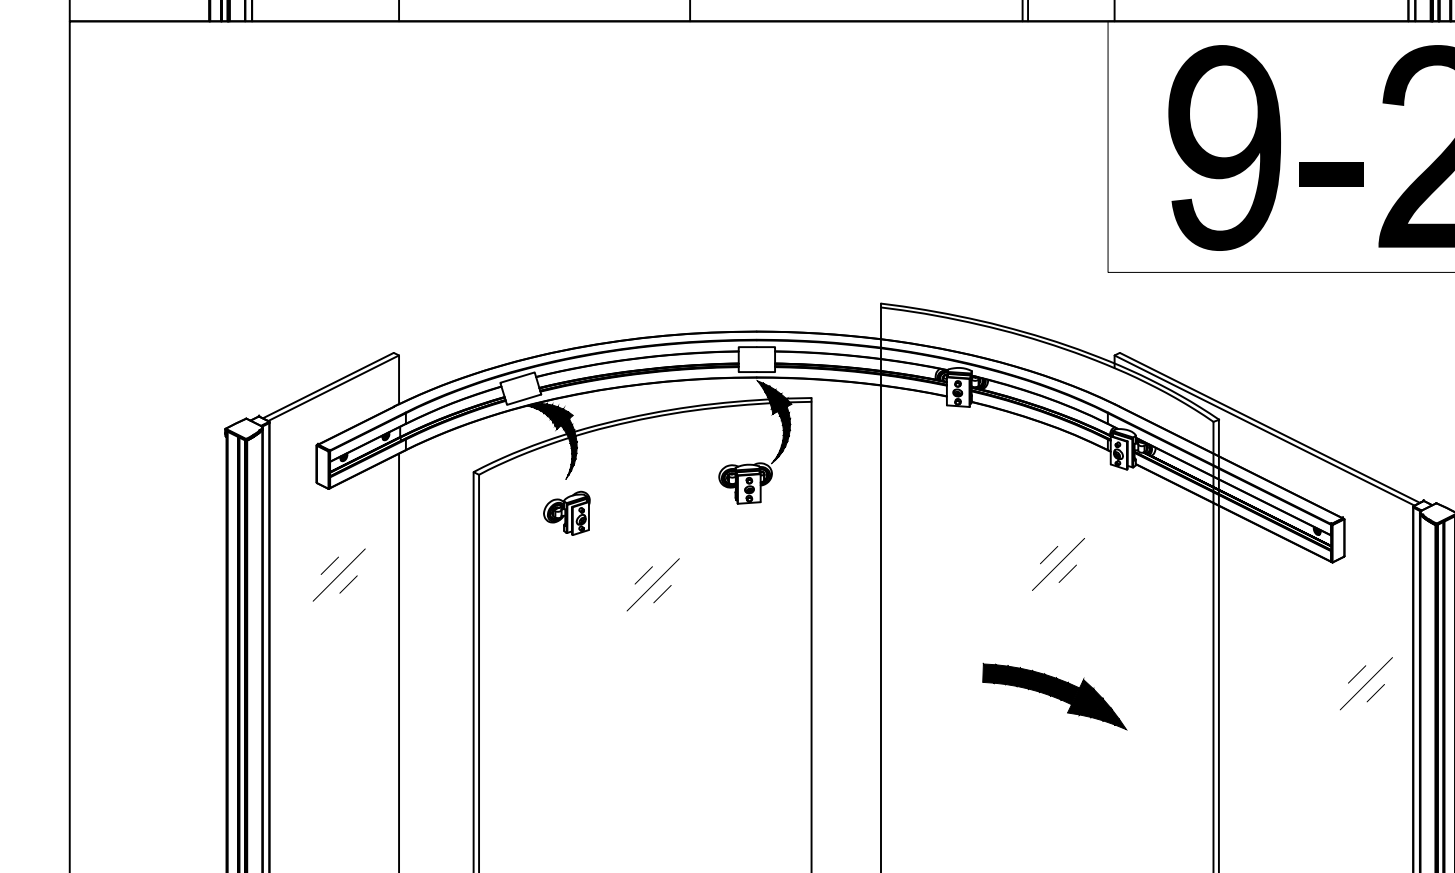

9-2



Fit doors onto frame

10L

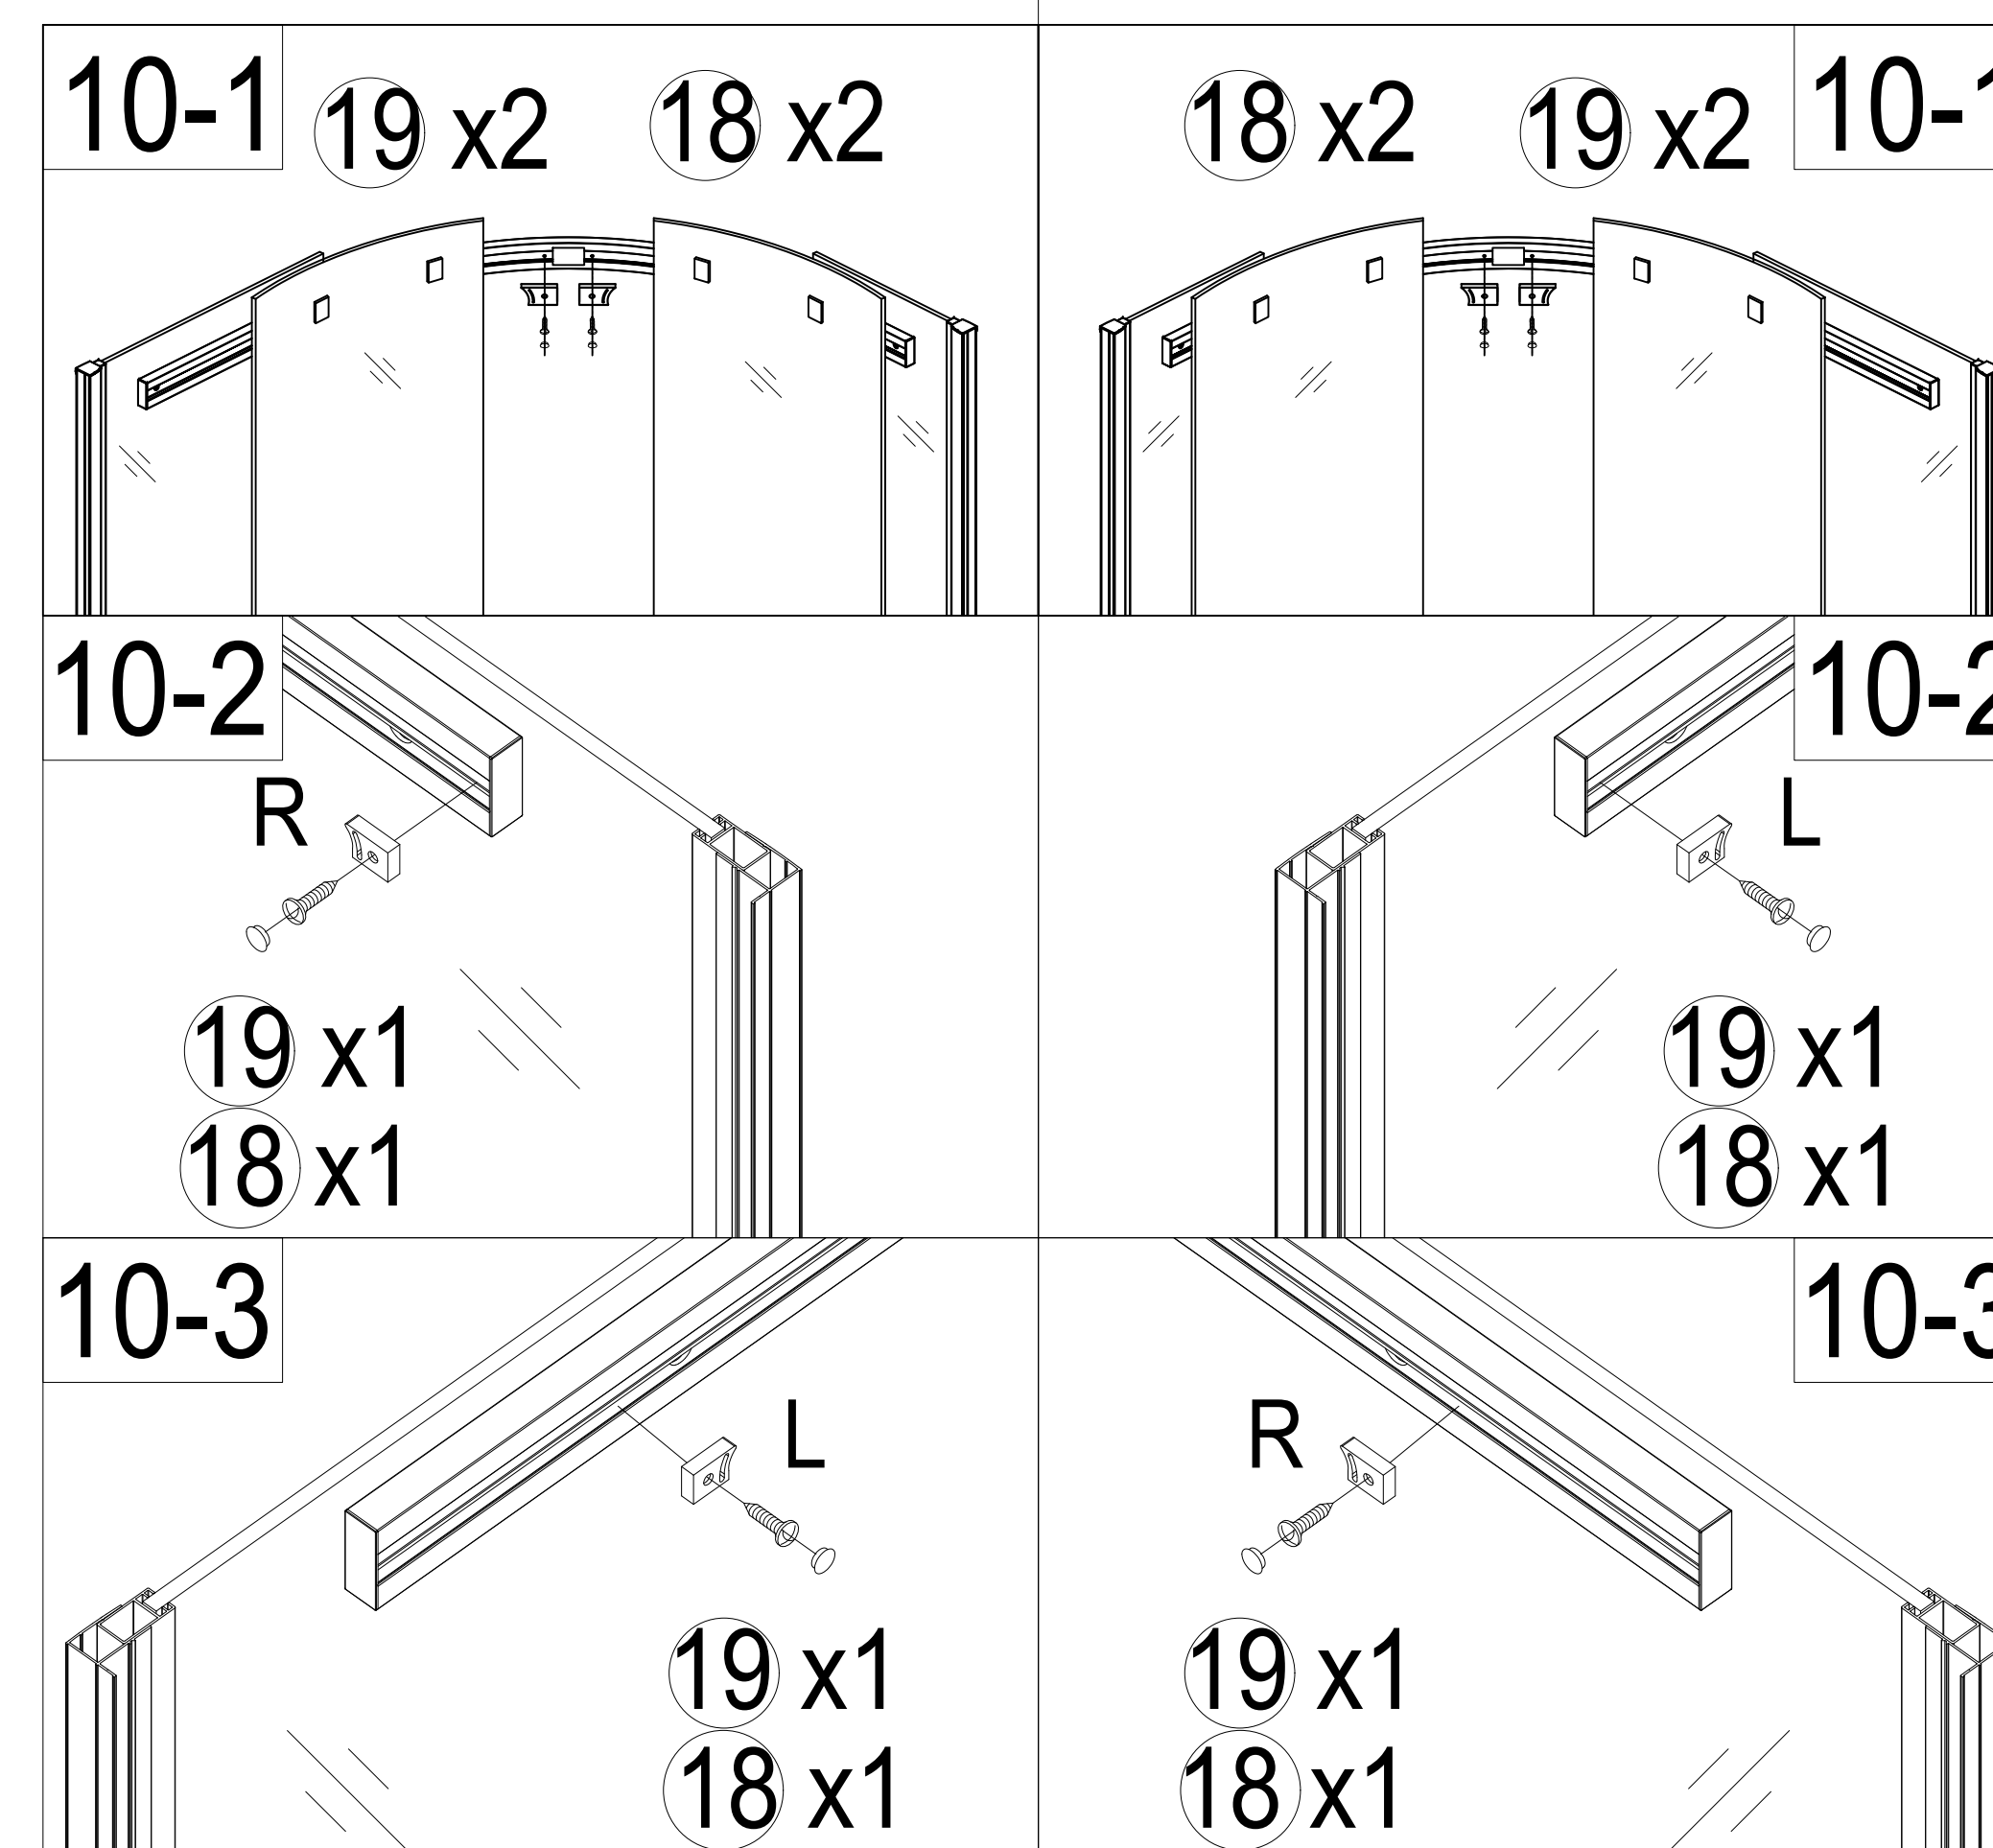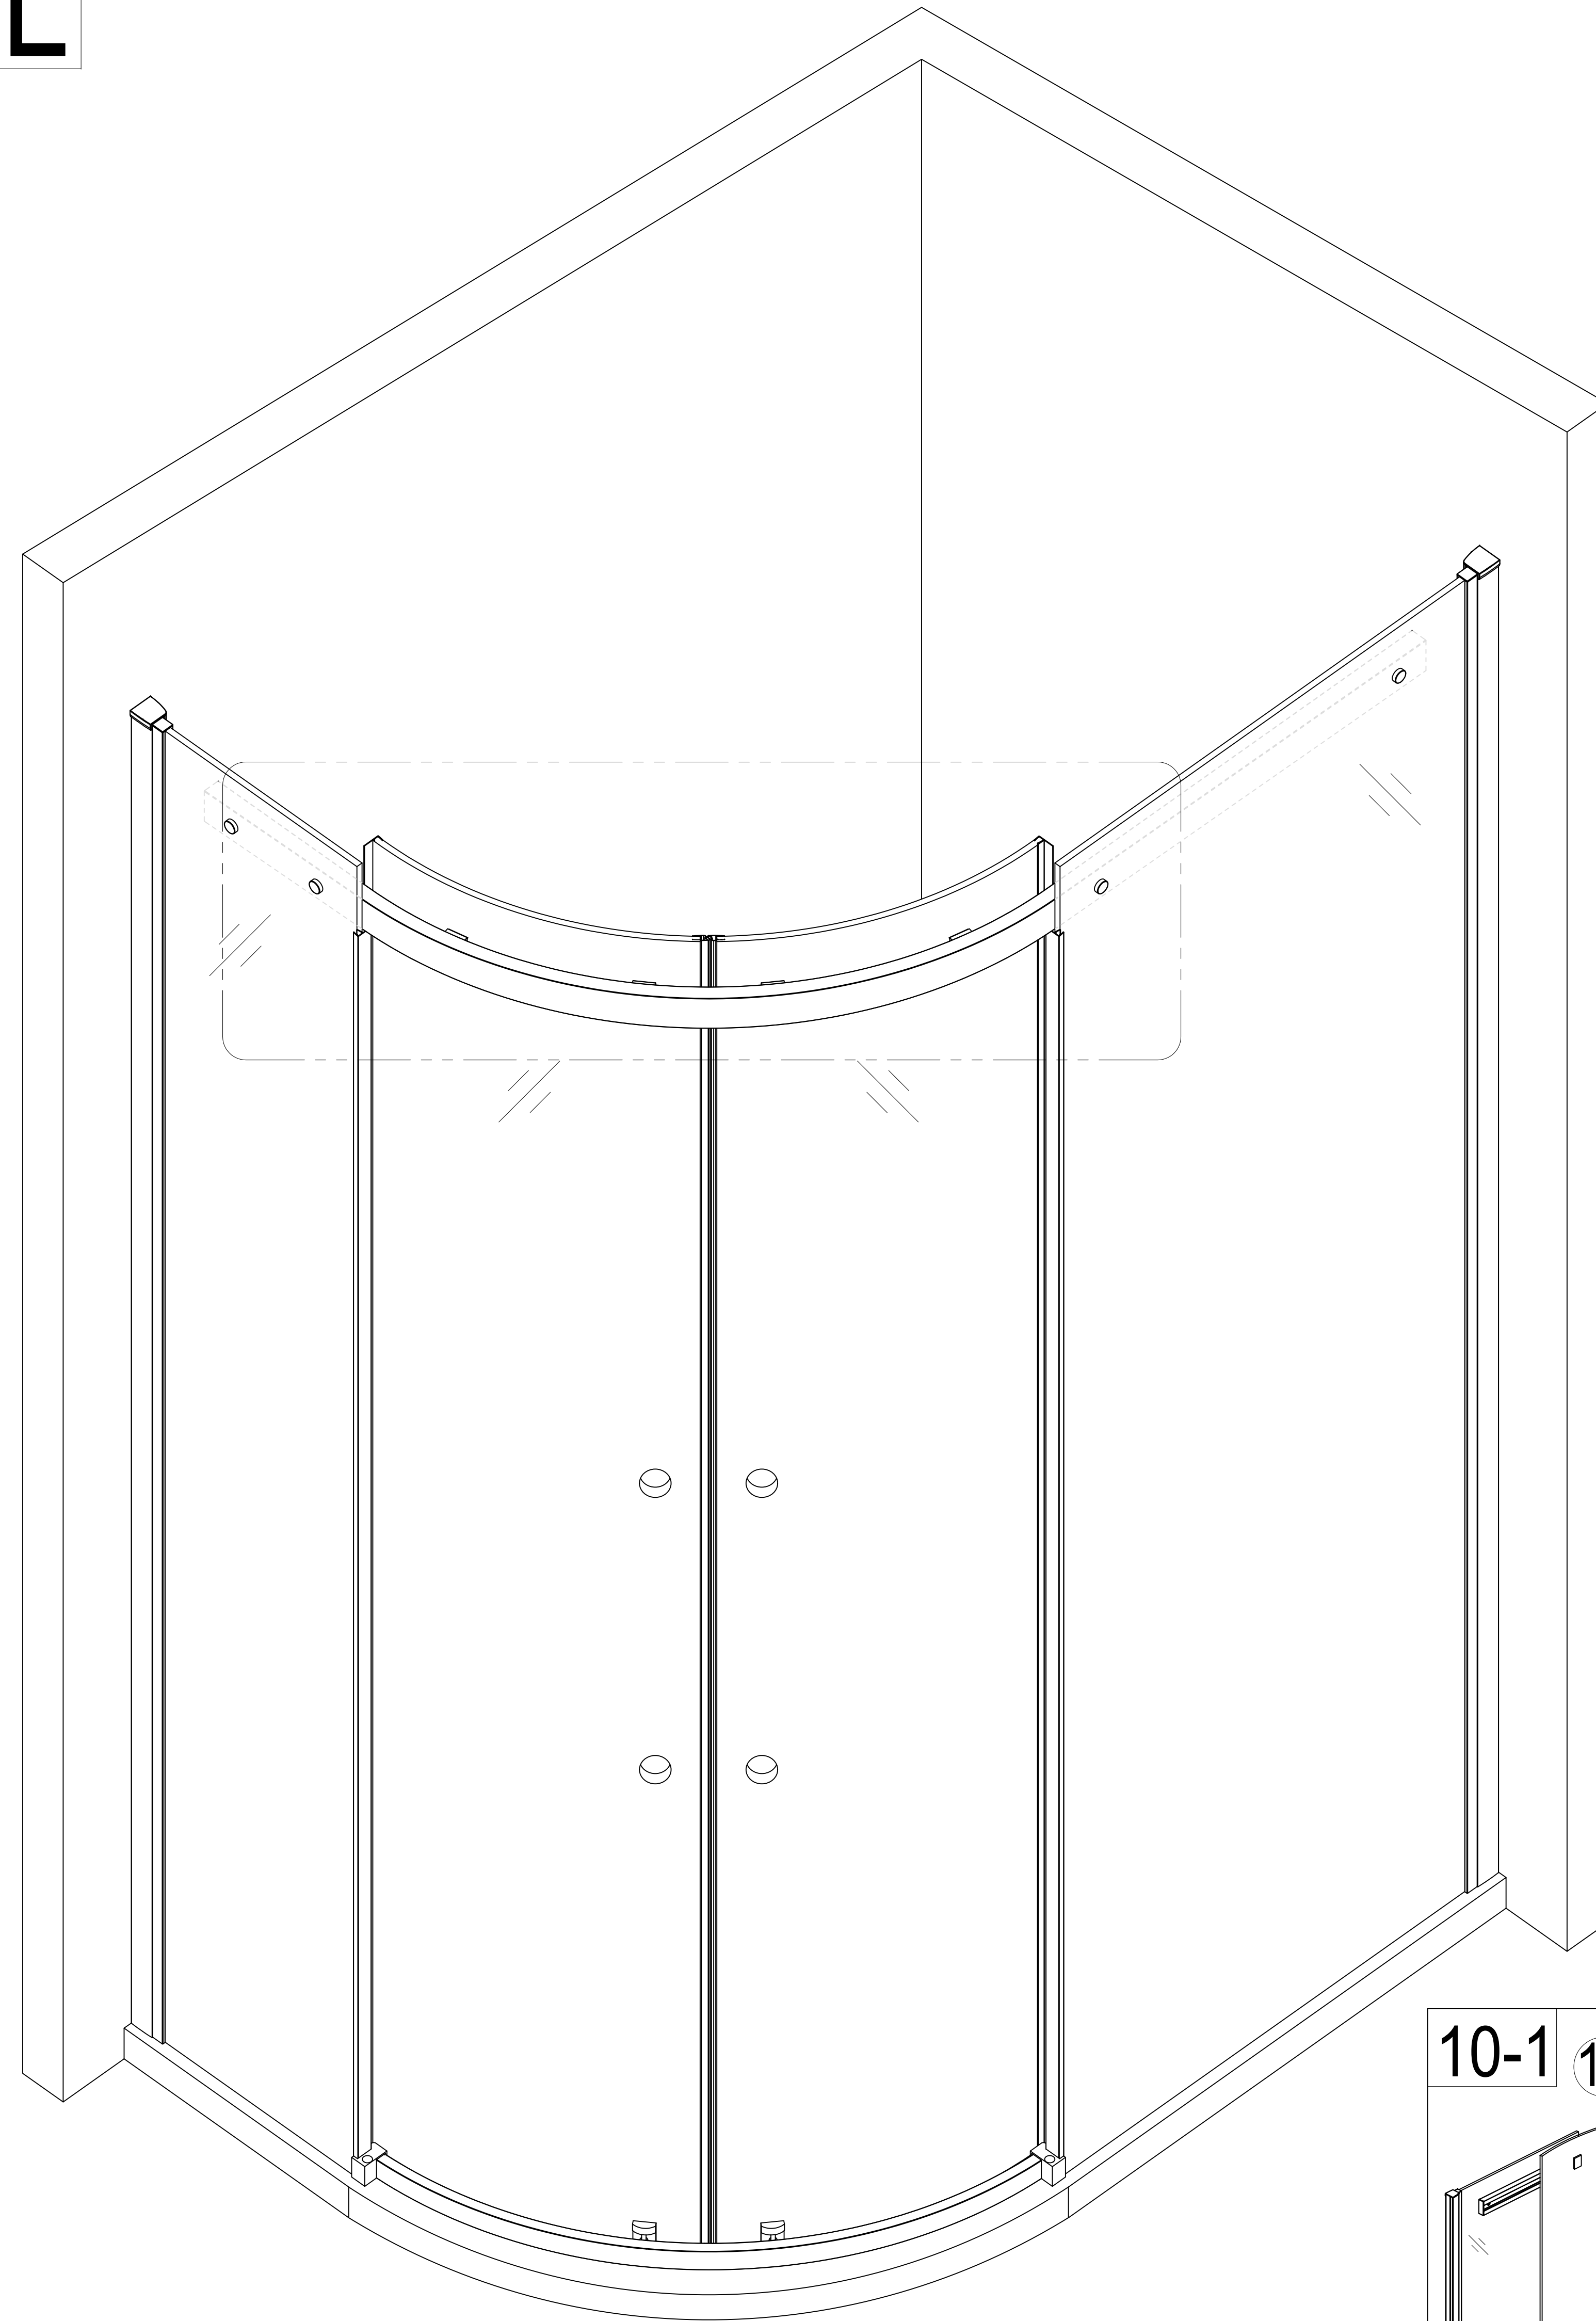



Add door stops to top rail

10R

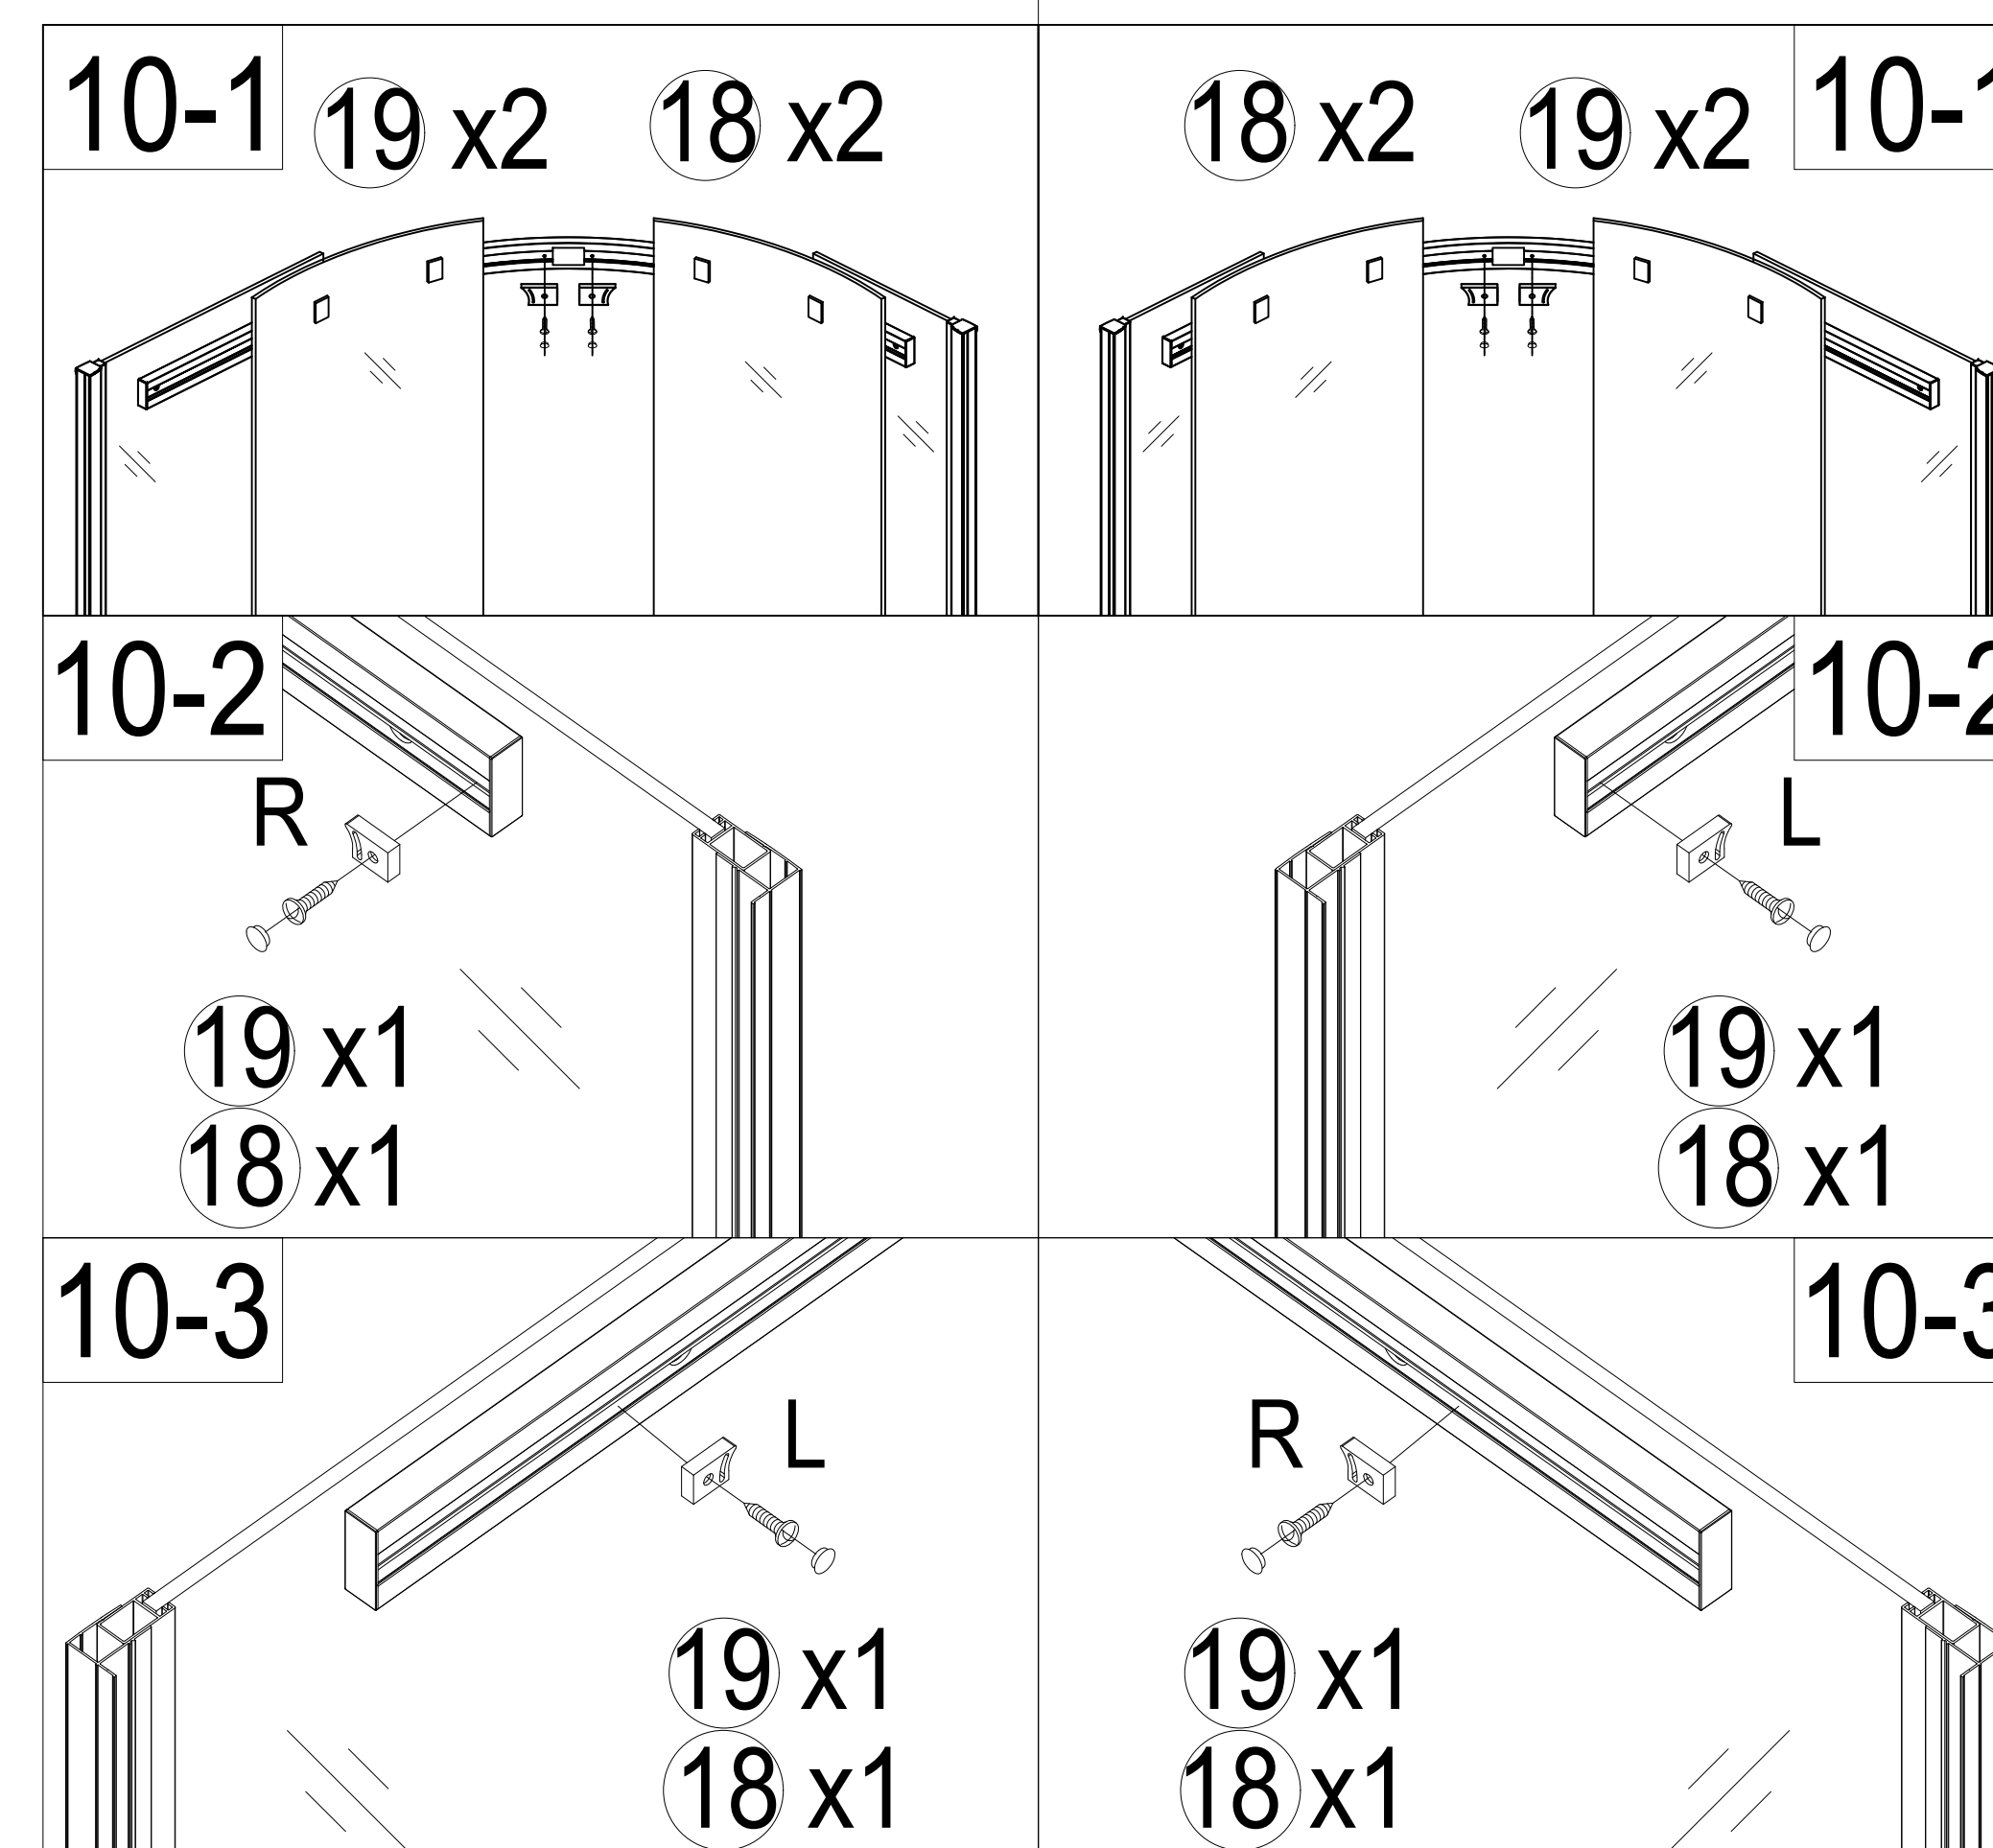
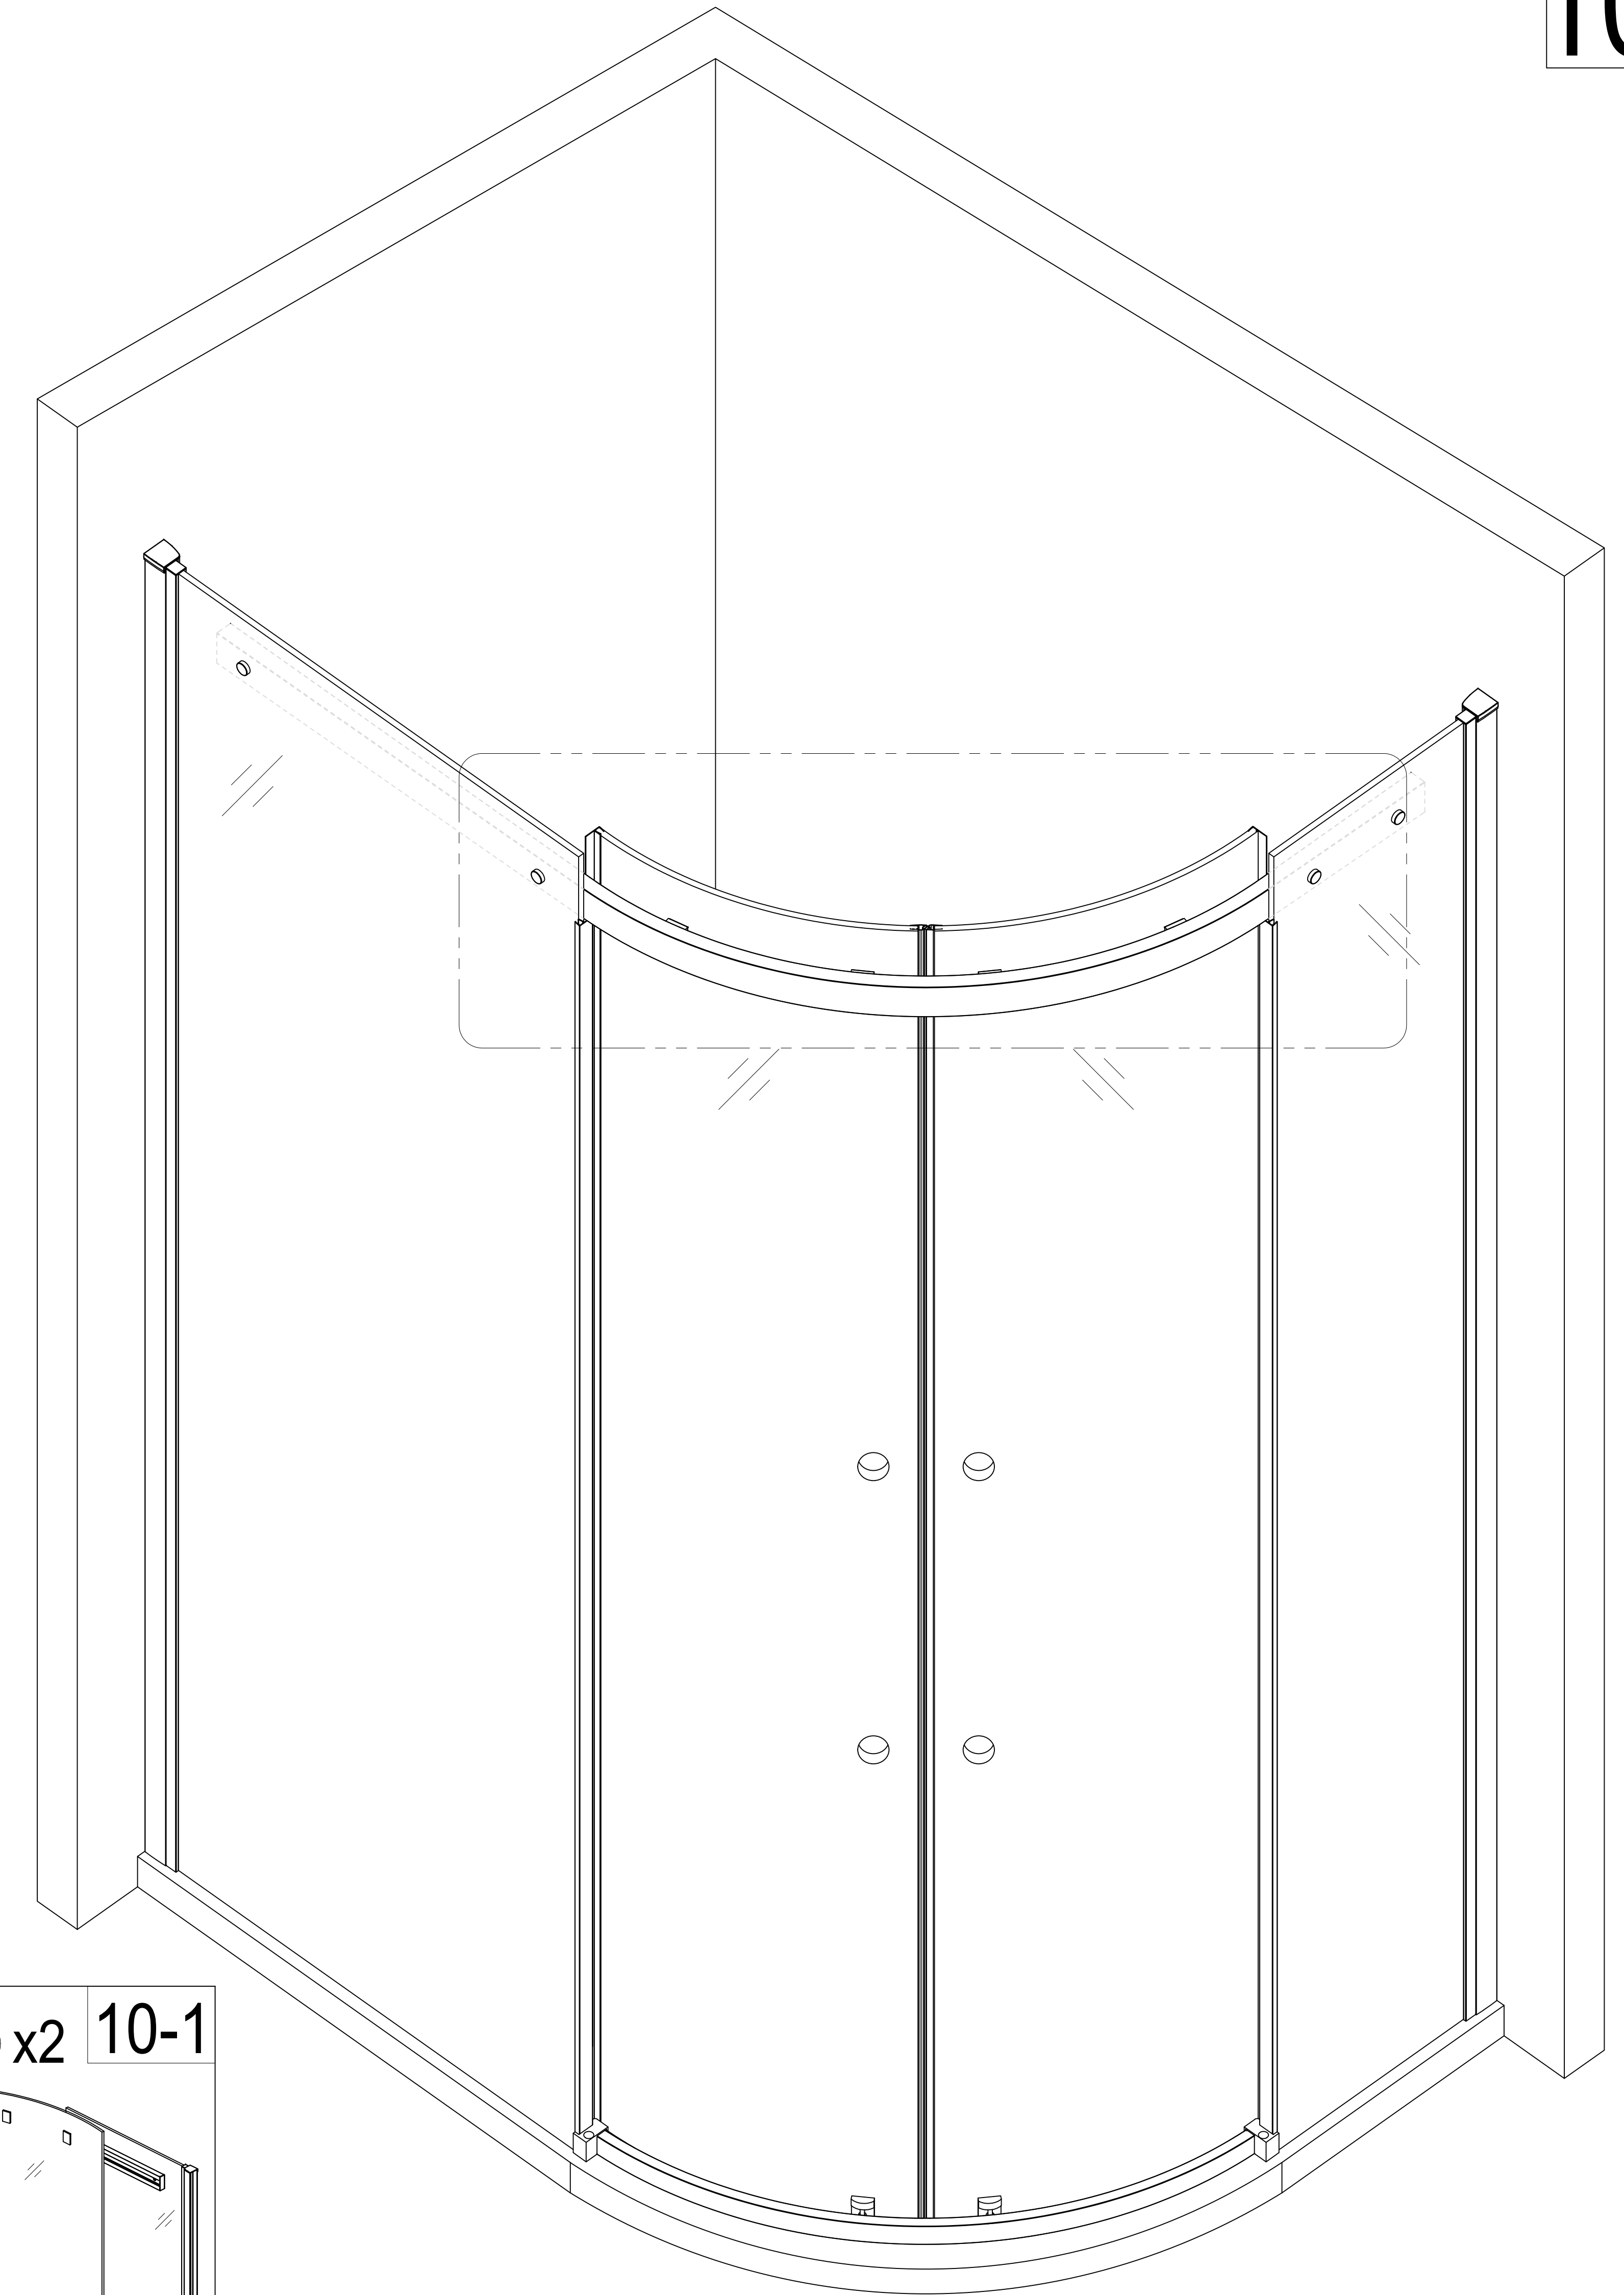


Add door stops to top rail









11L

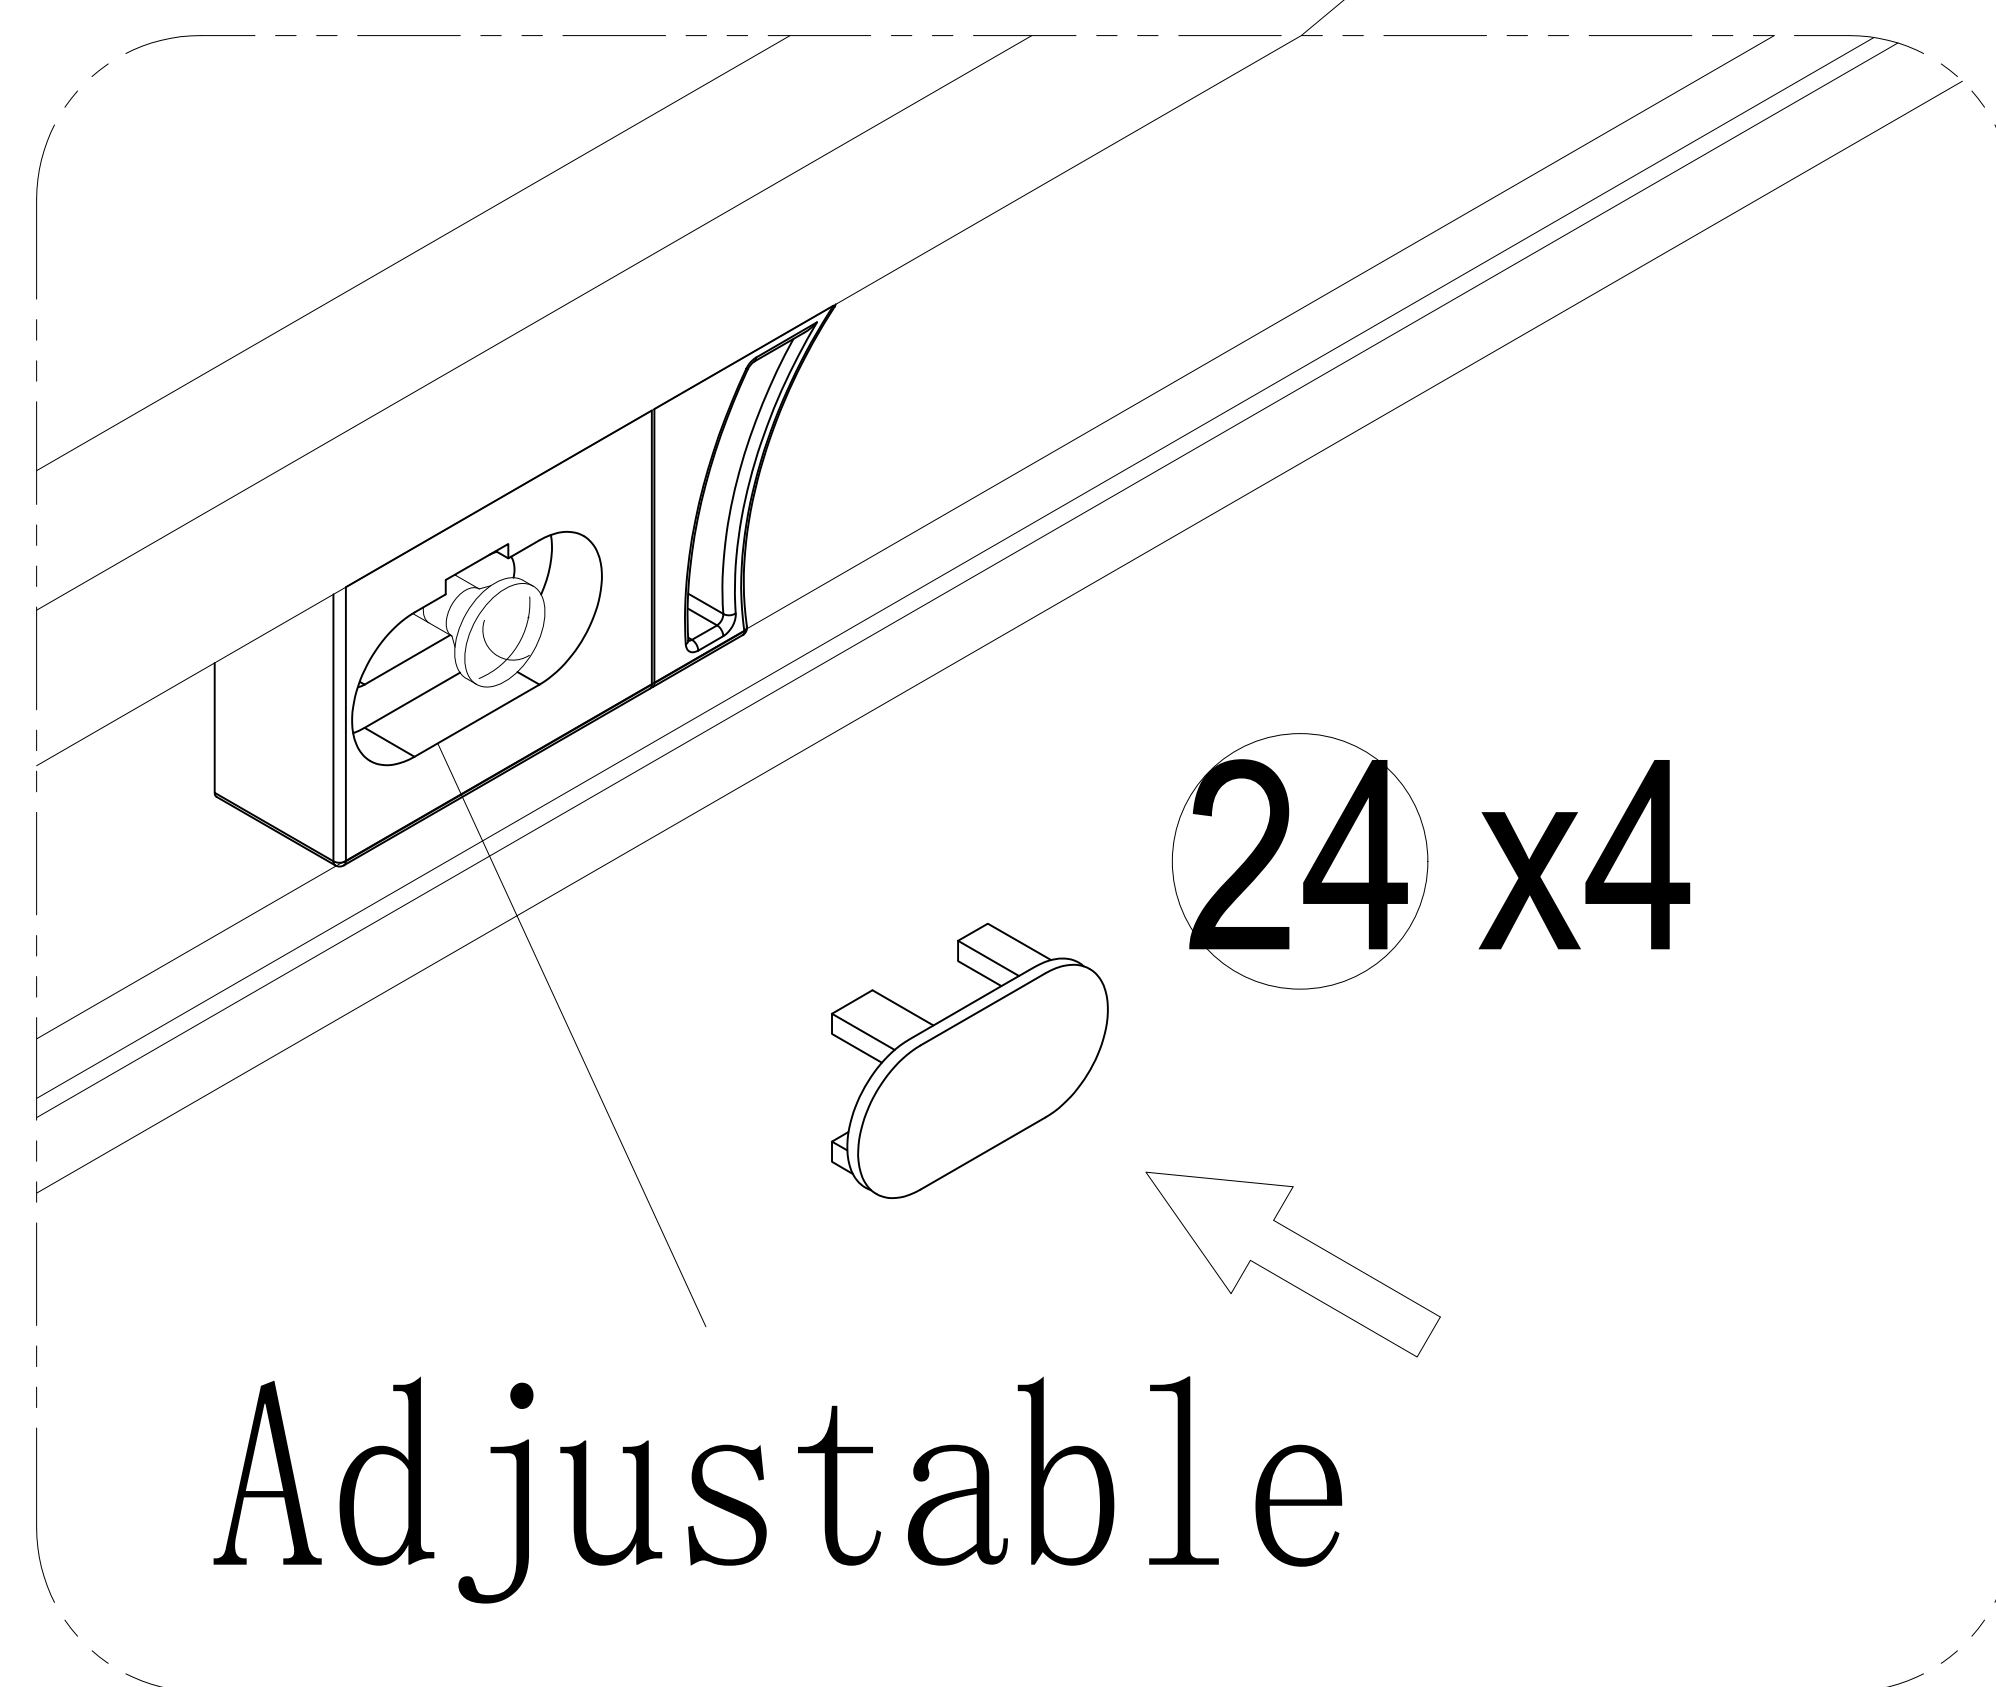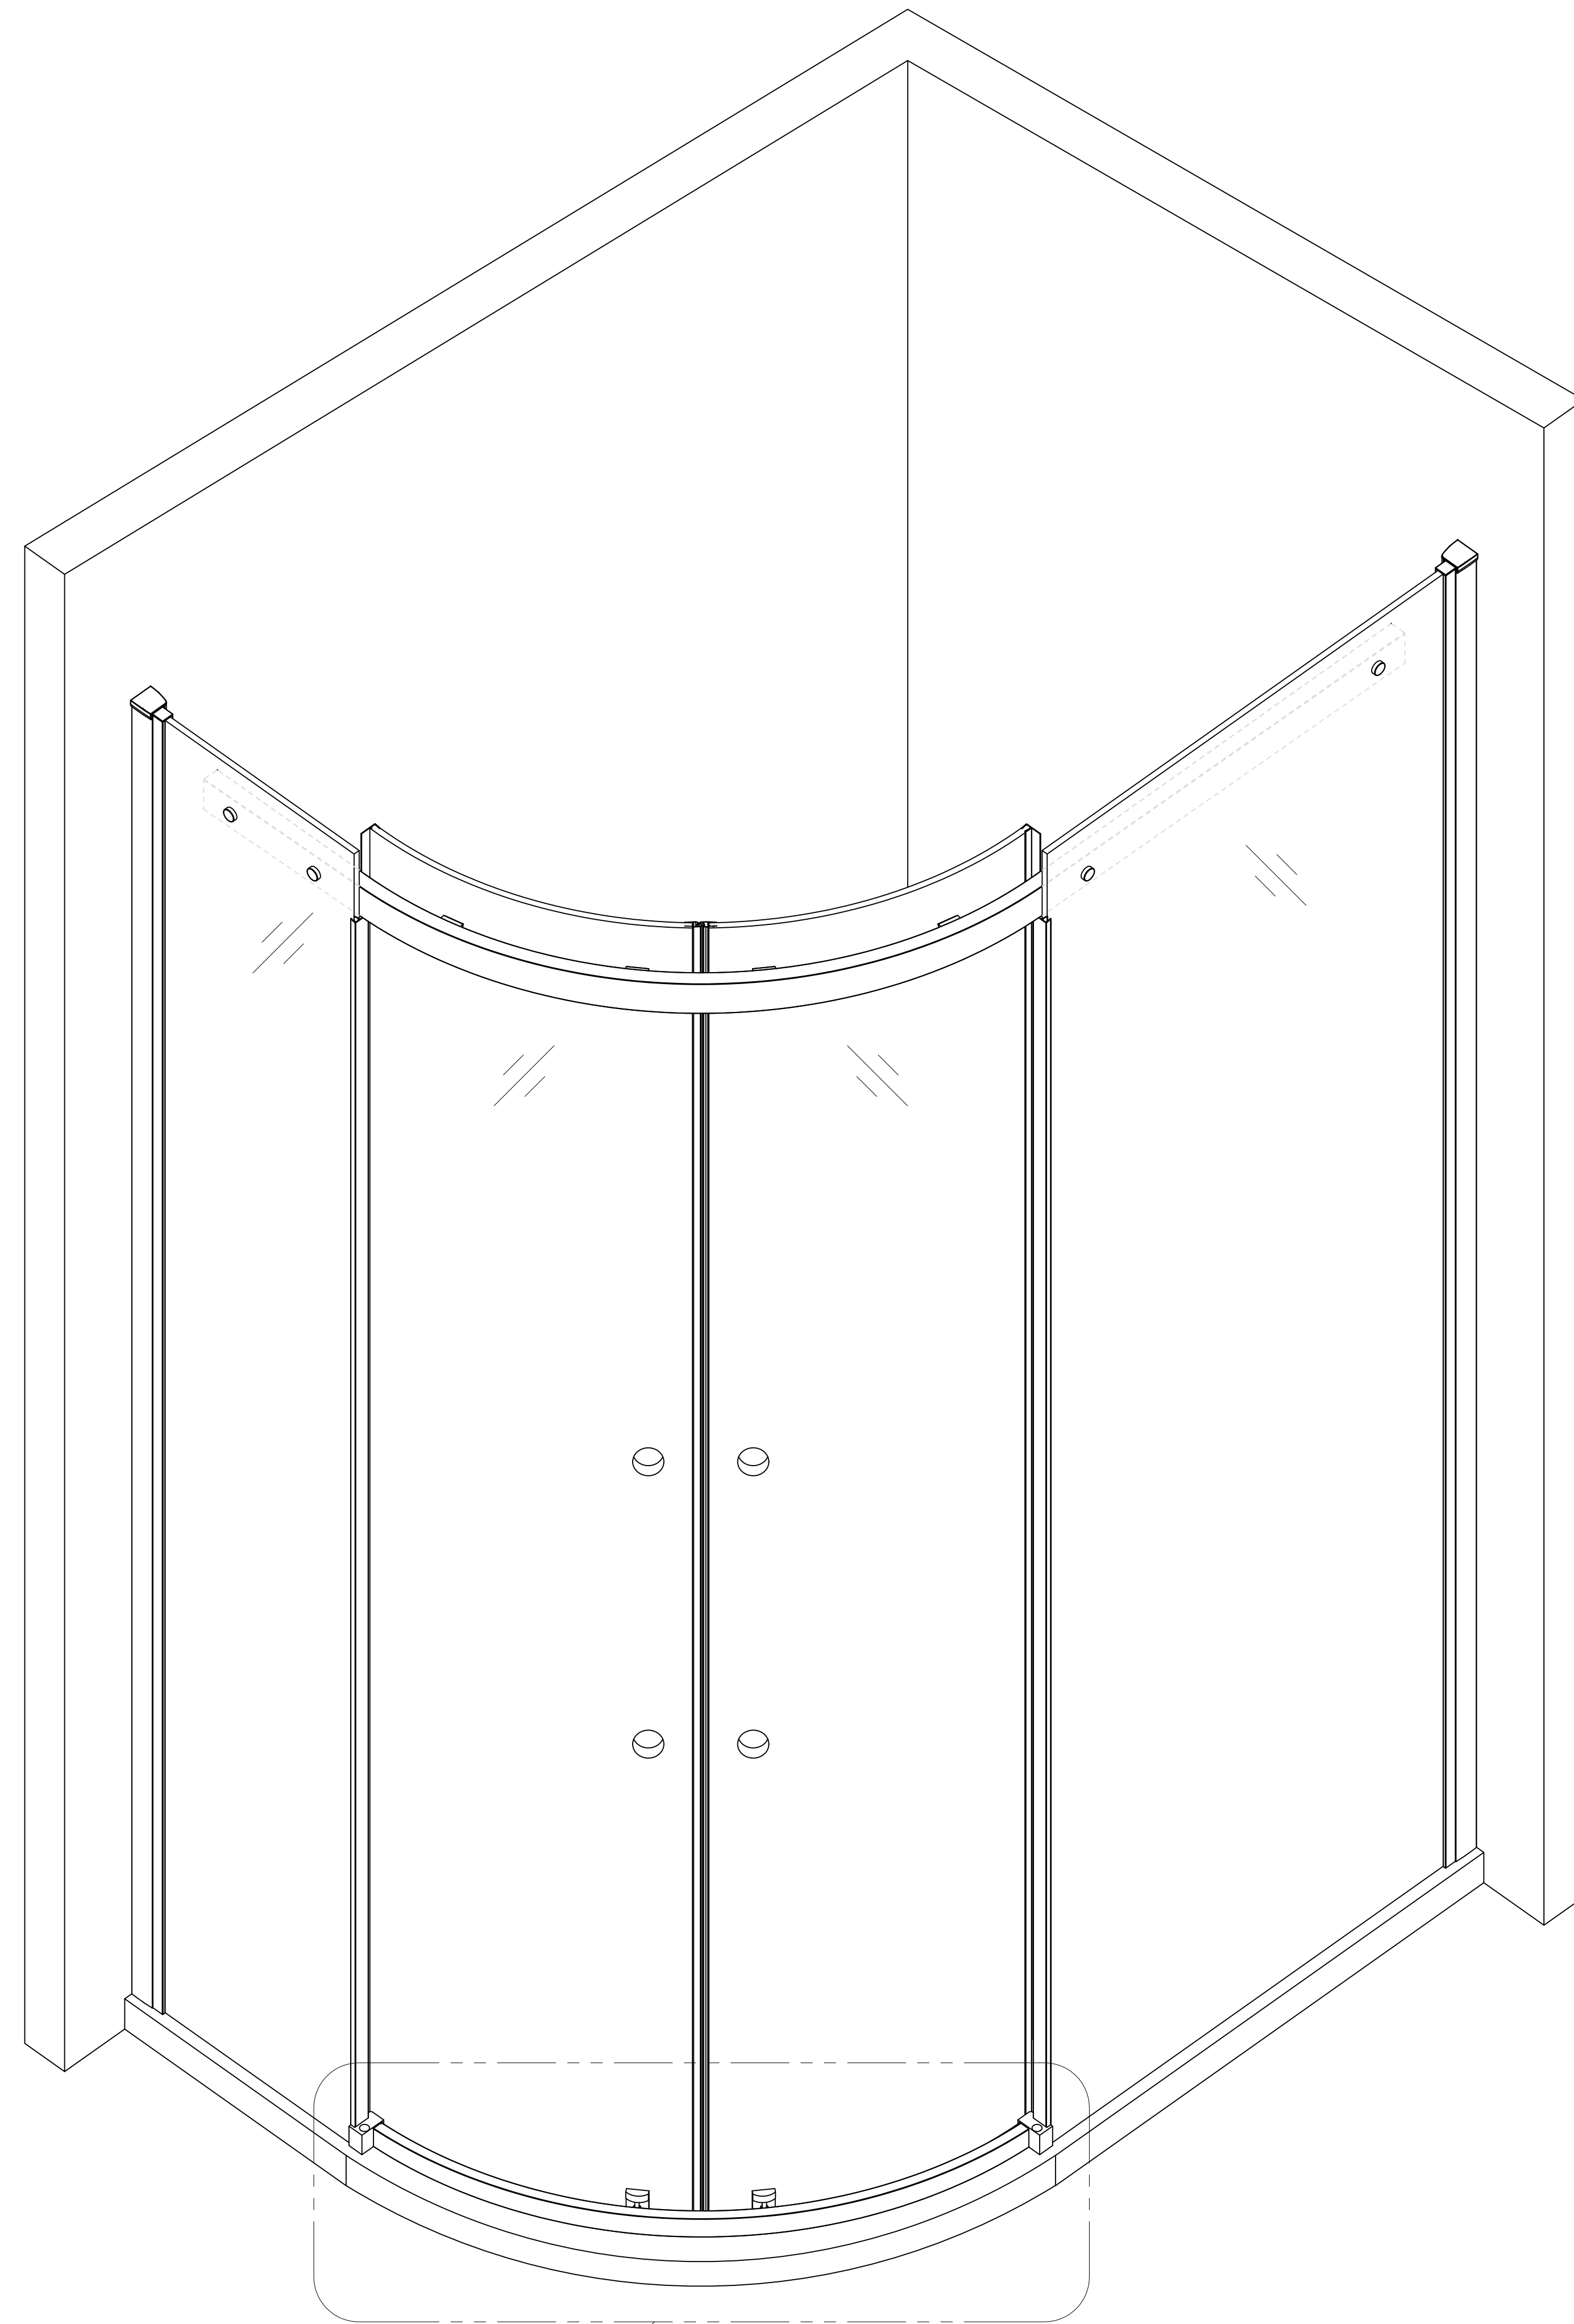

11R

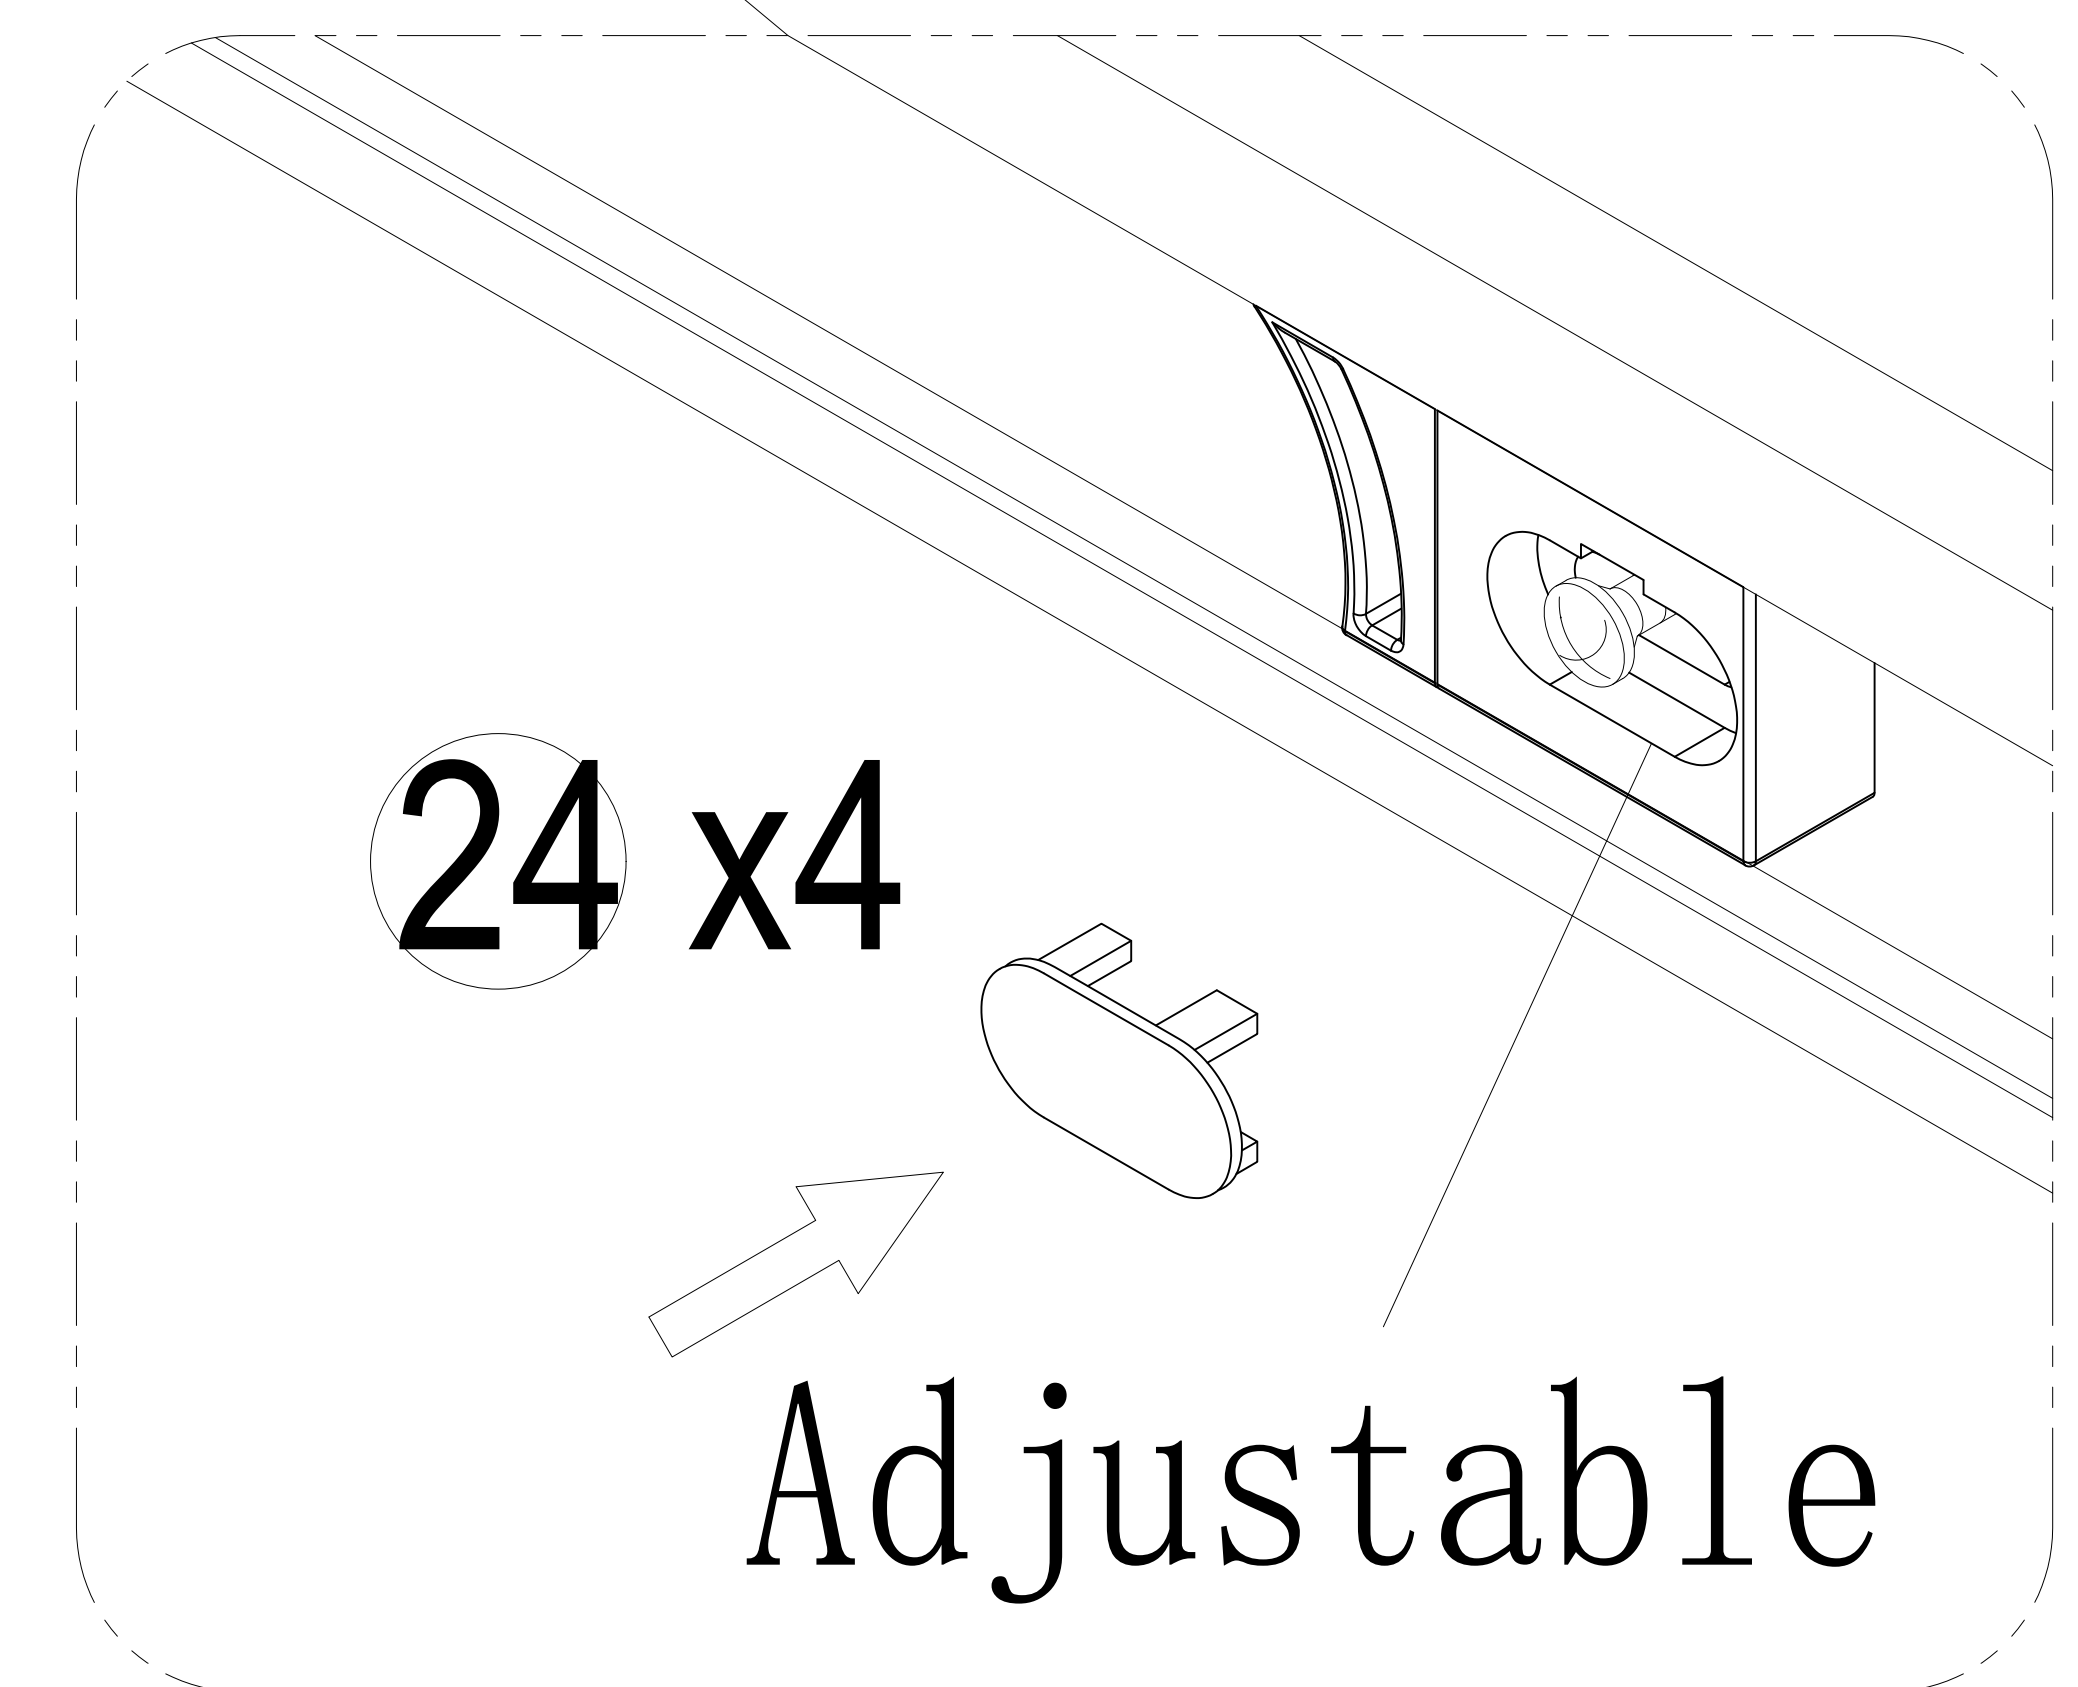
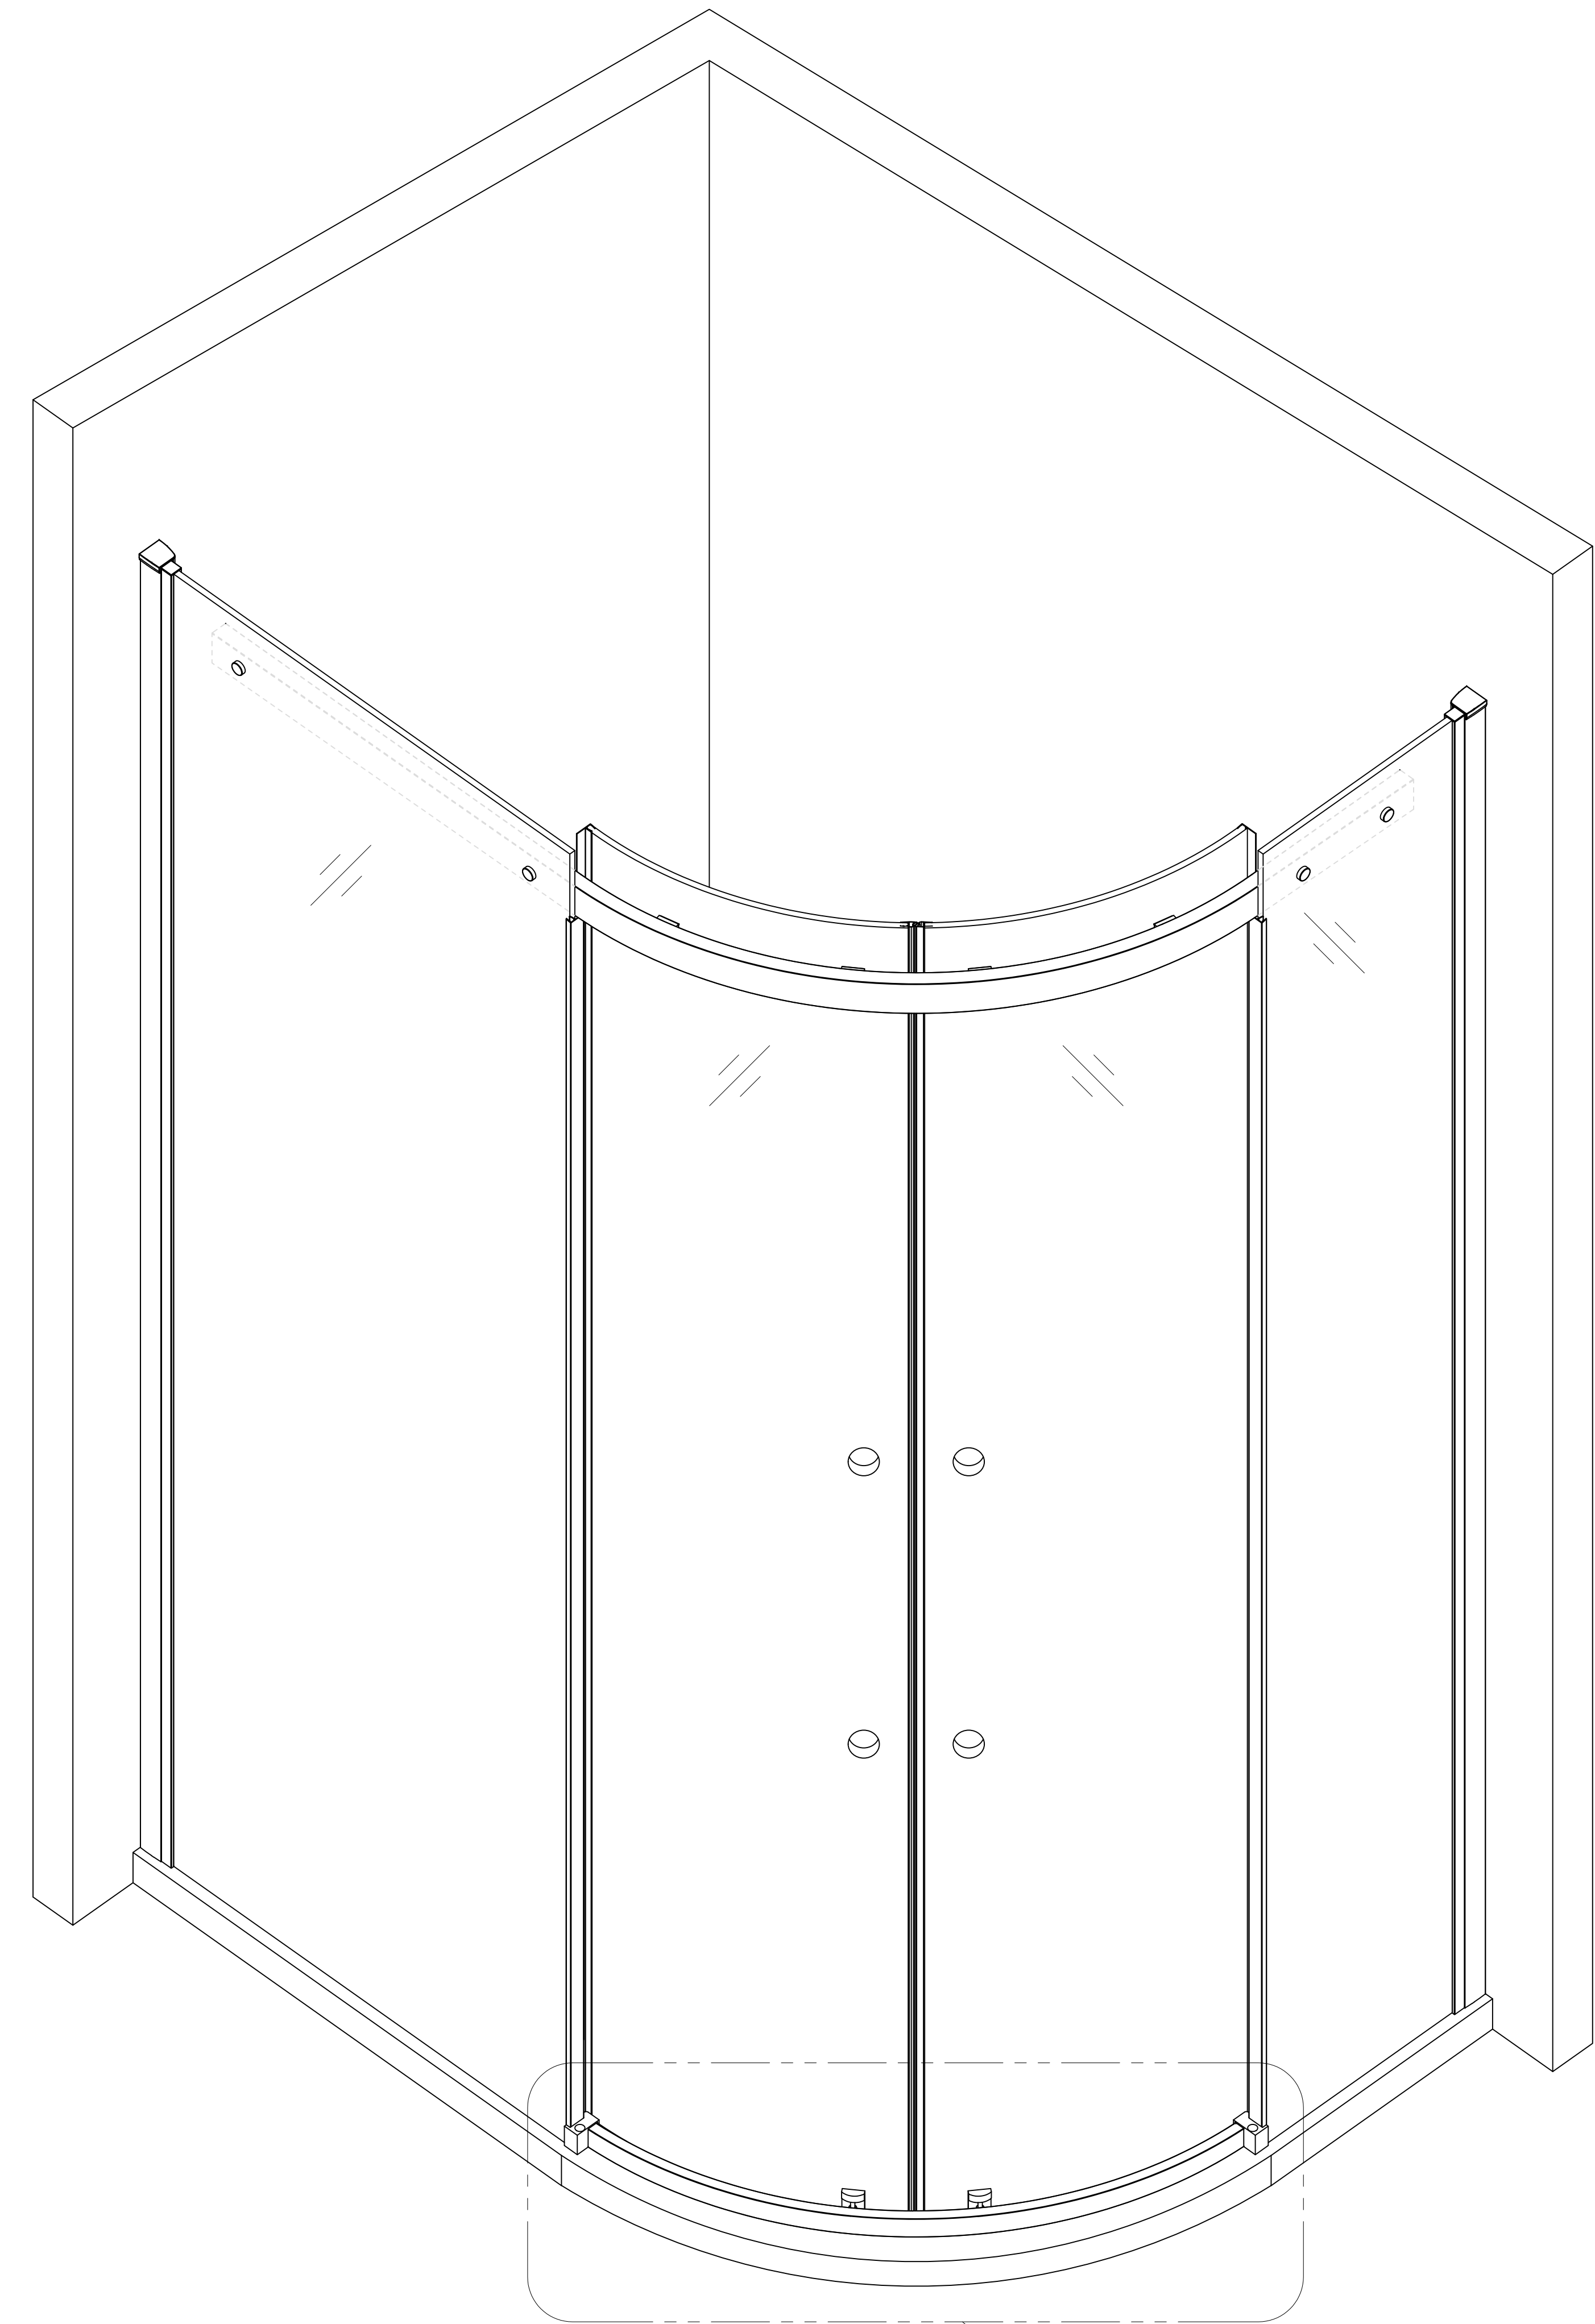


12L

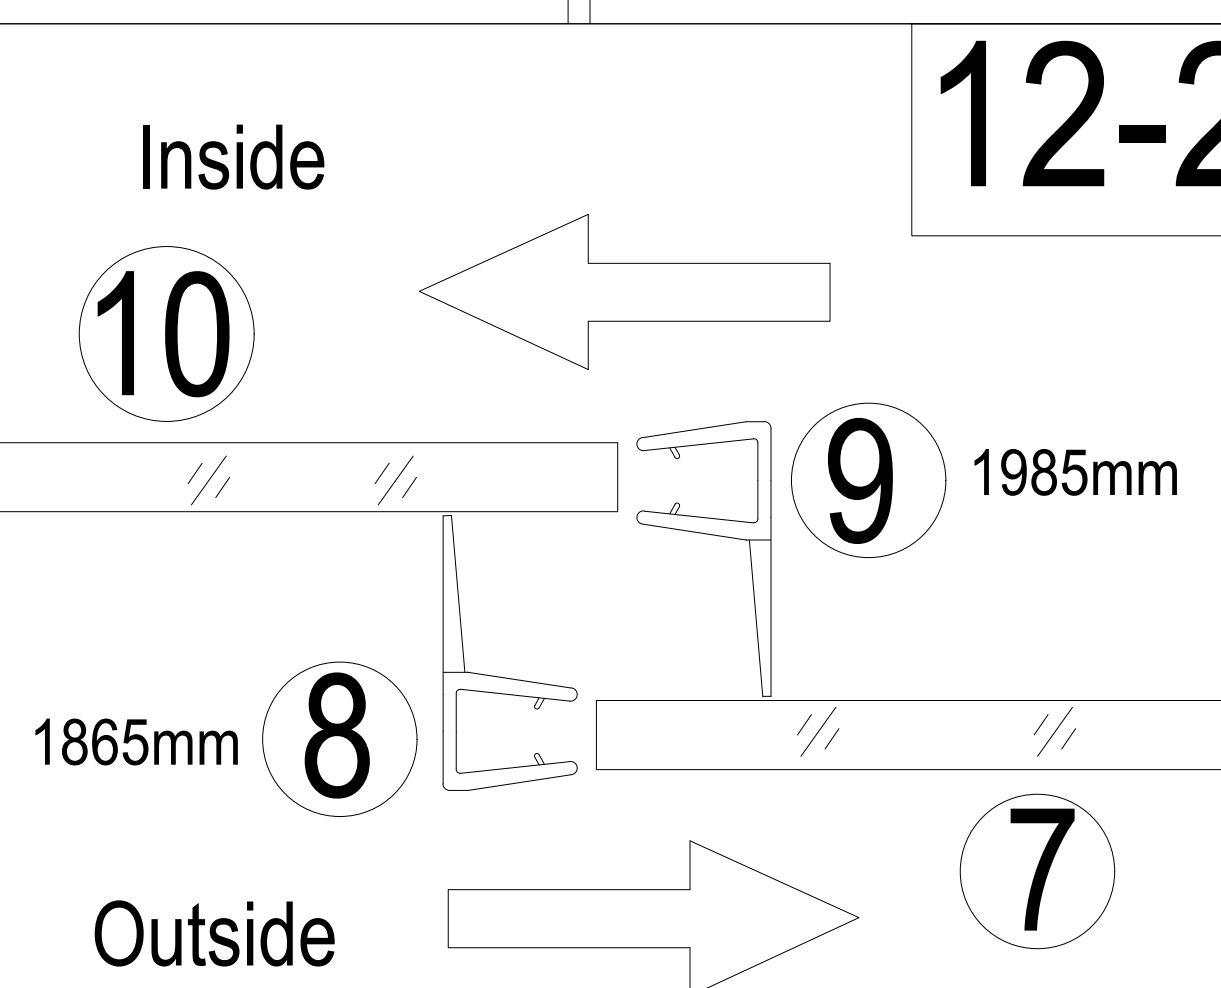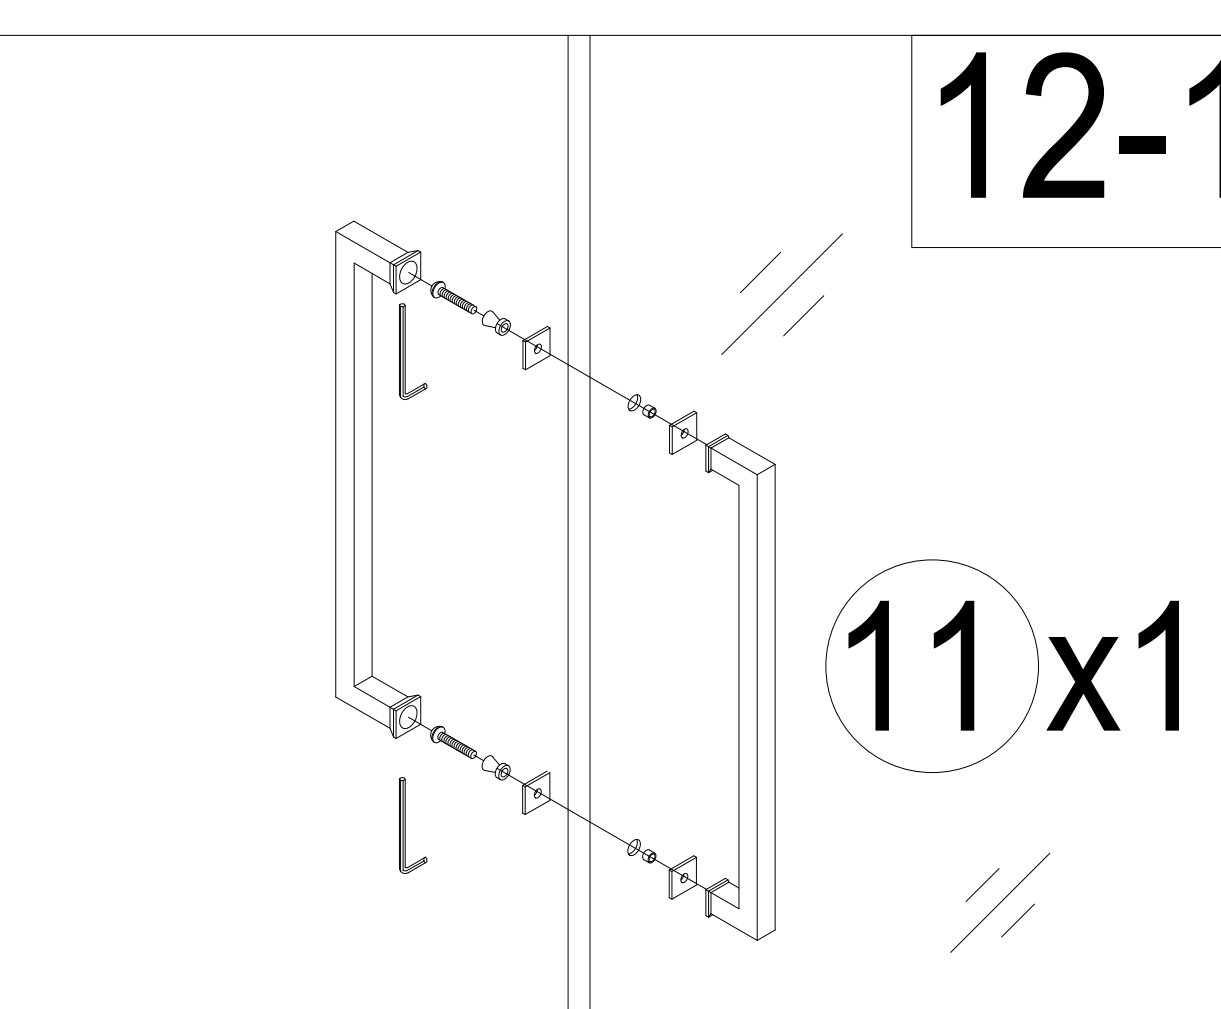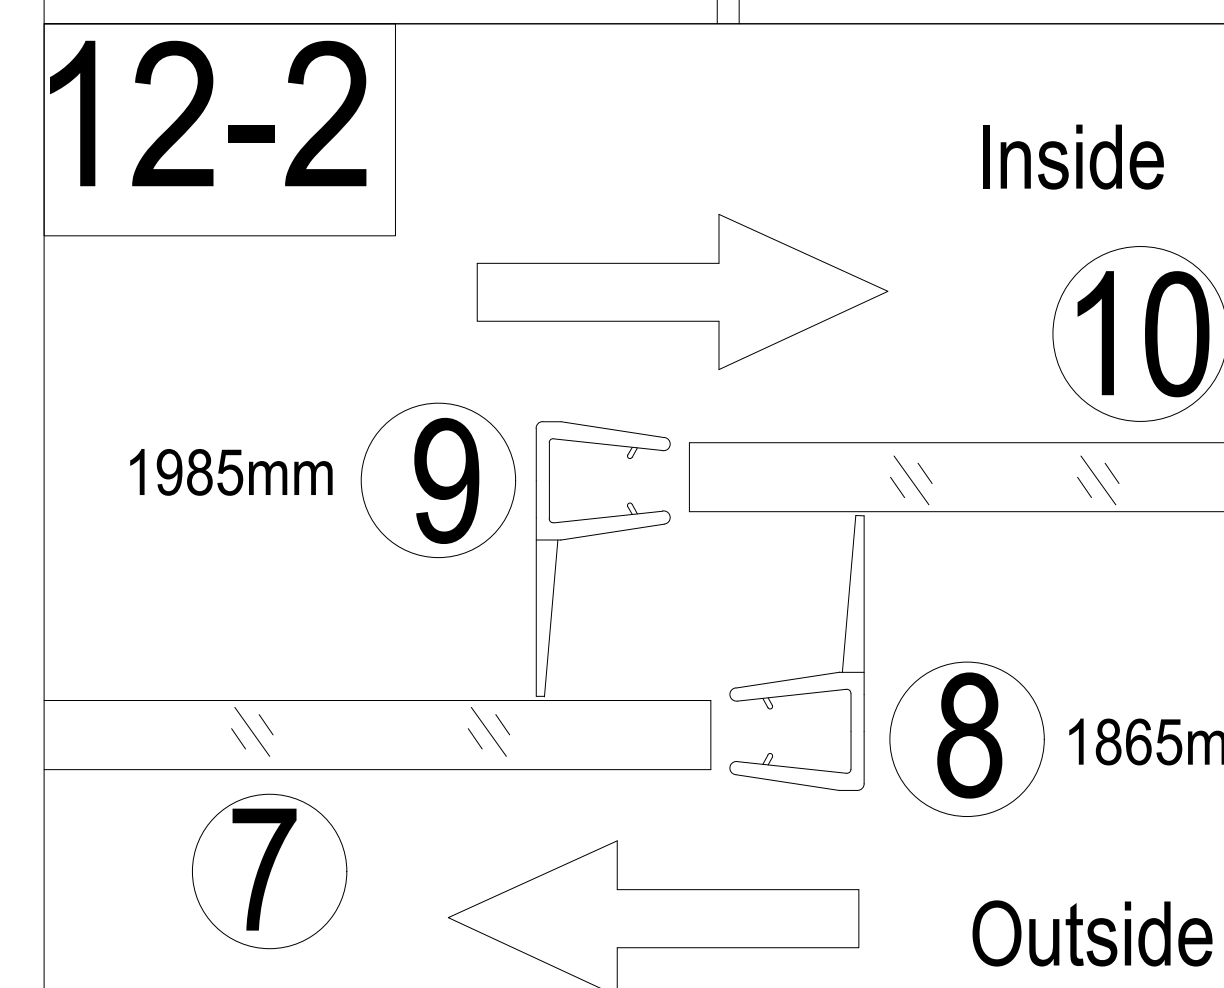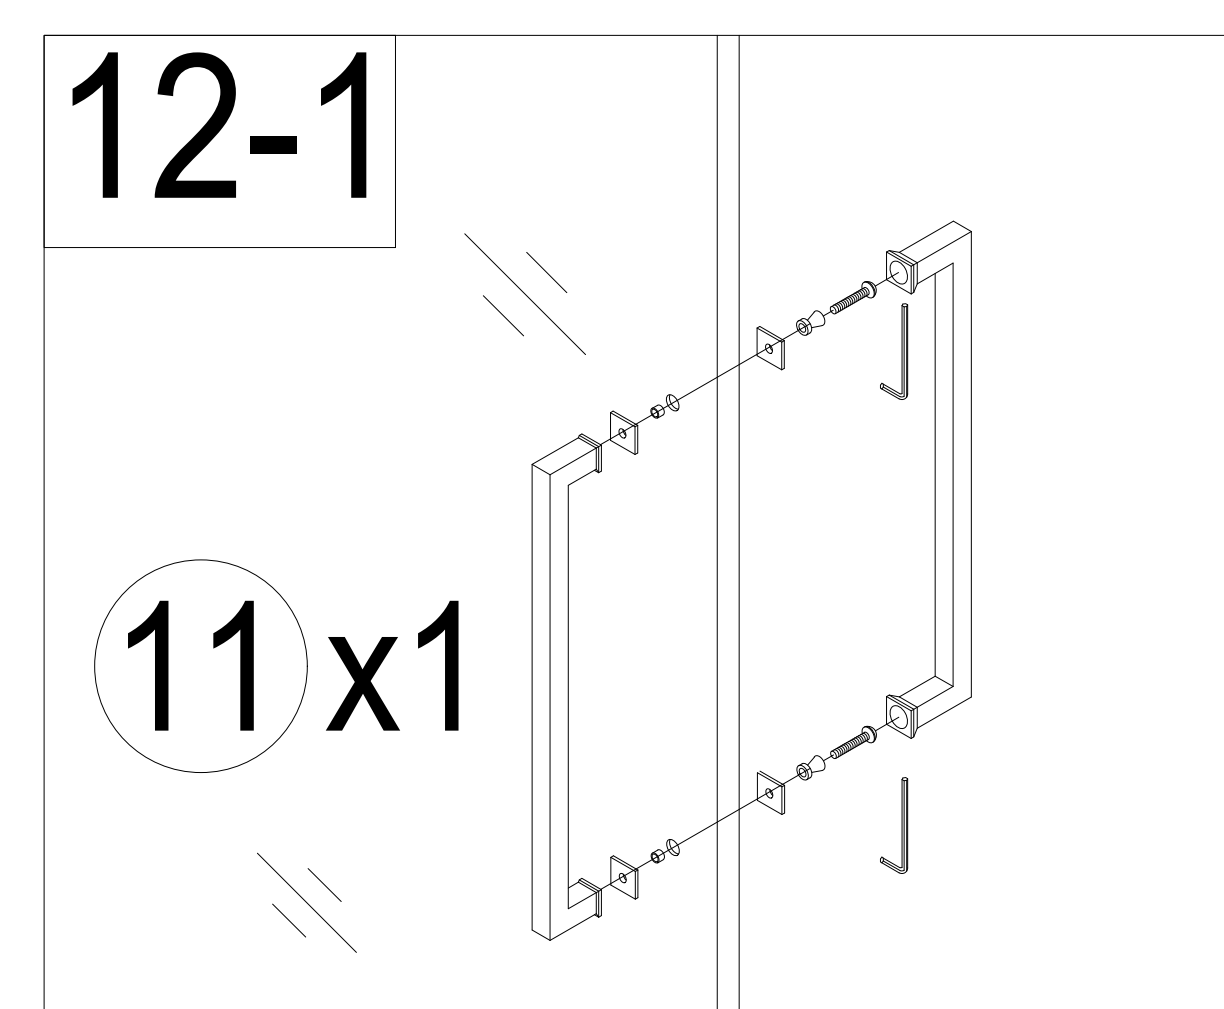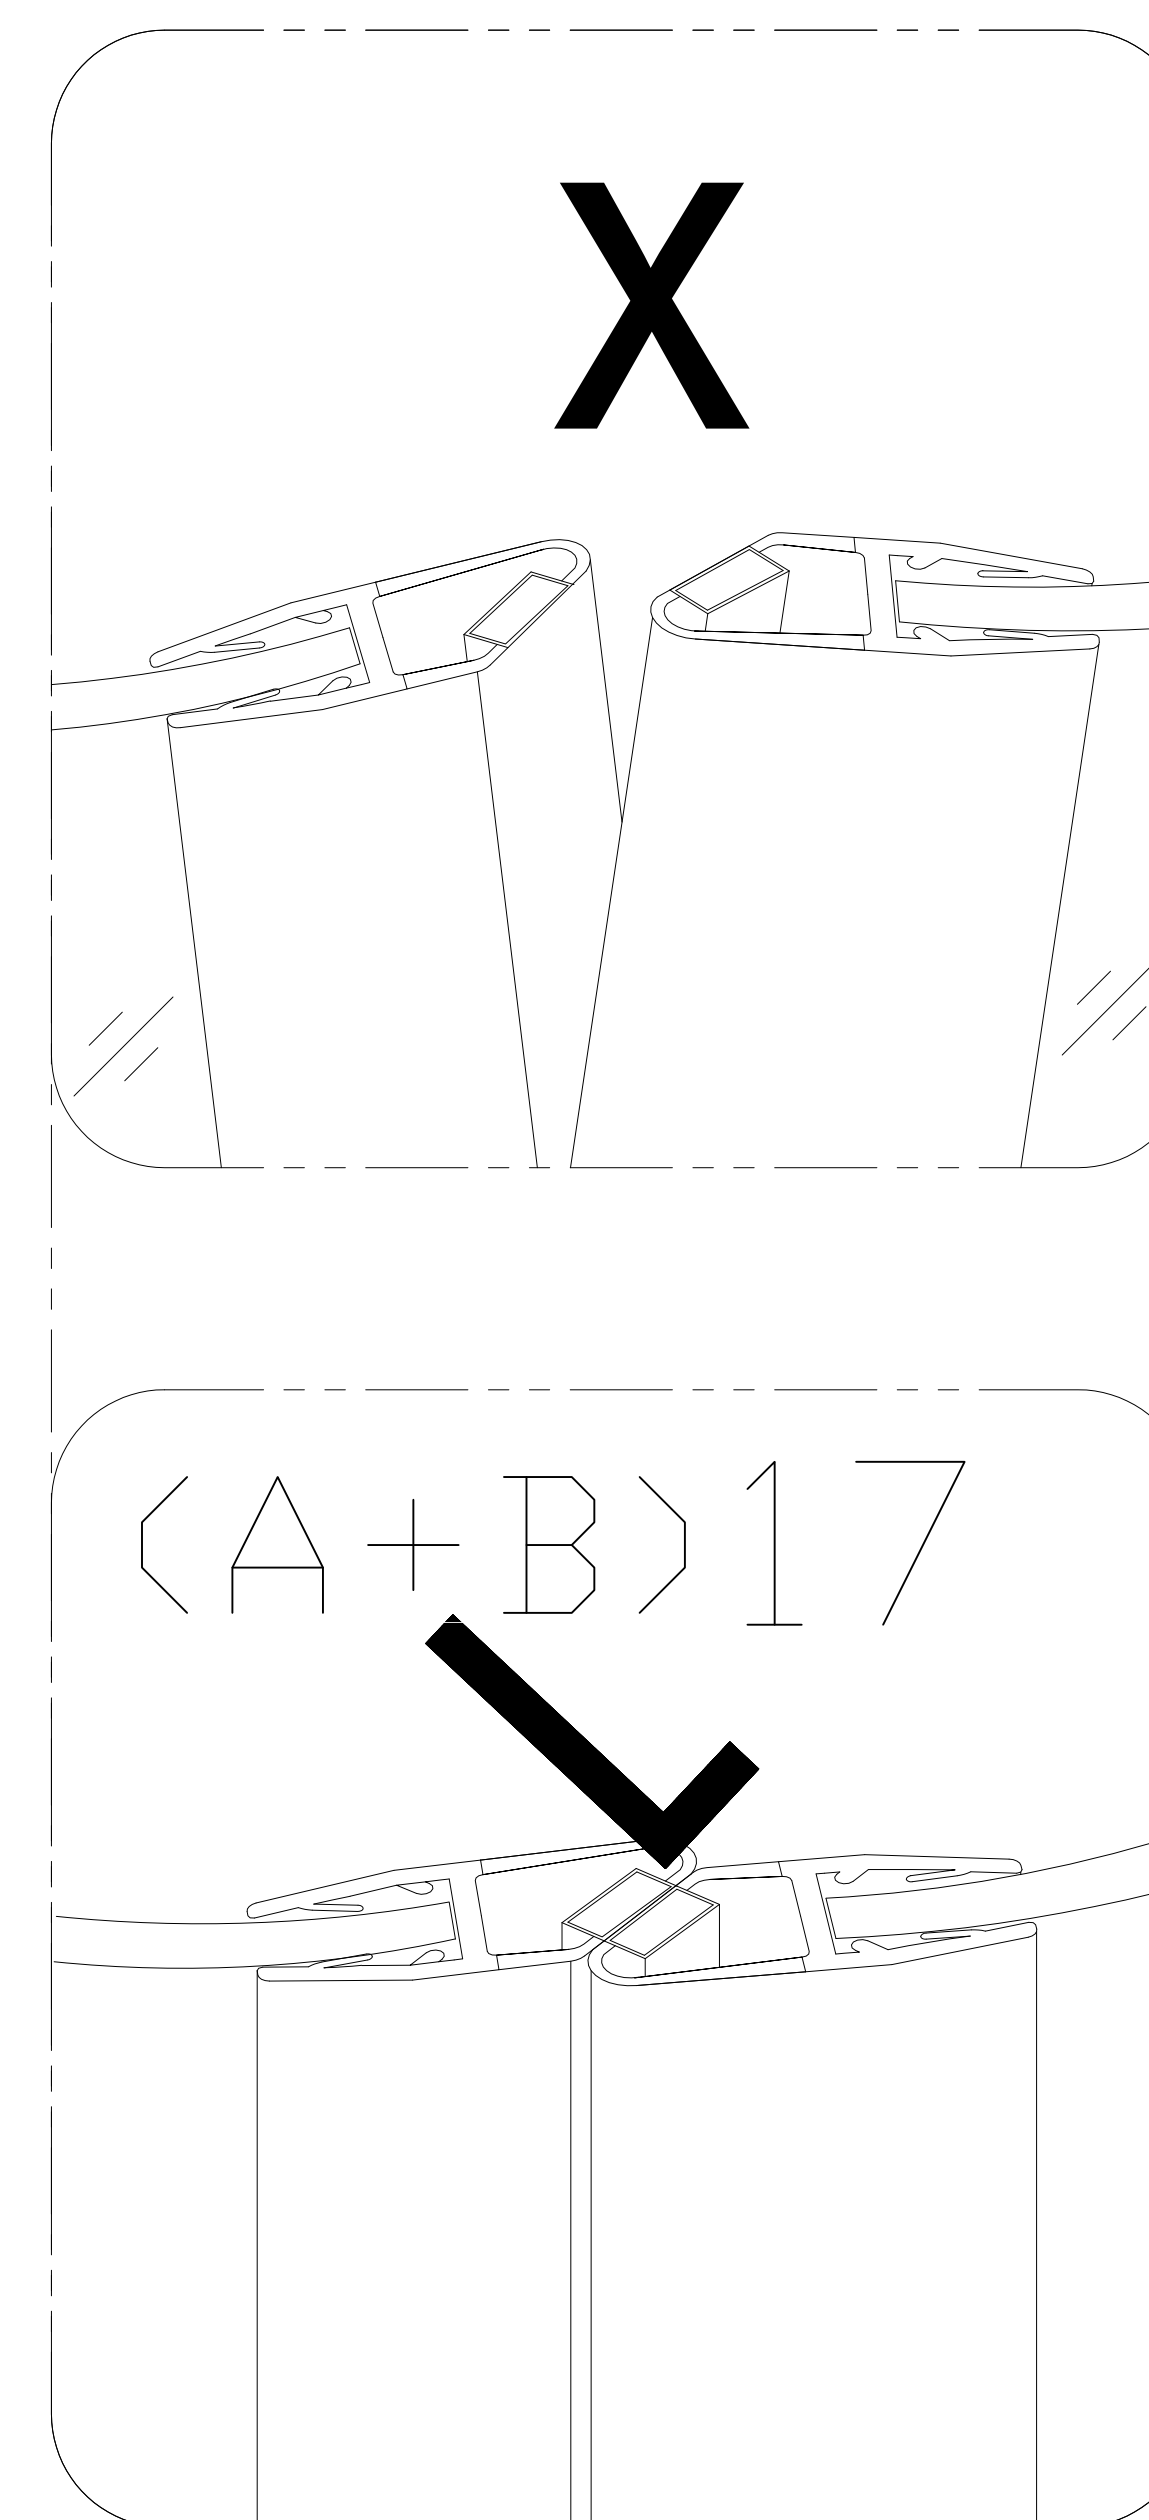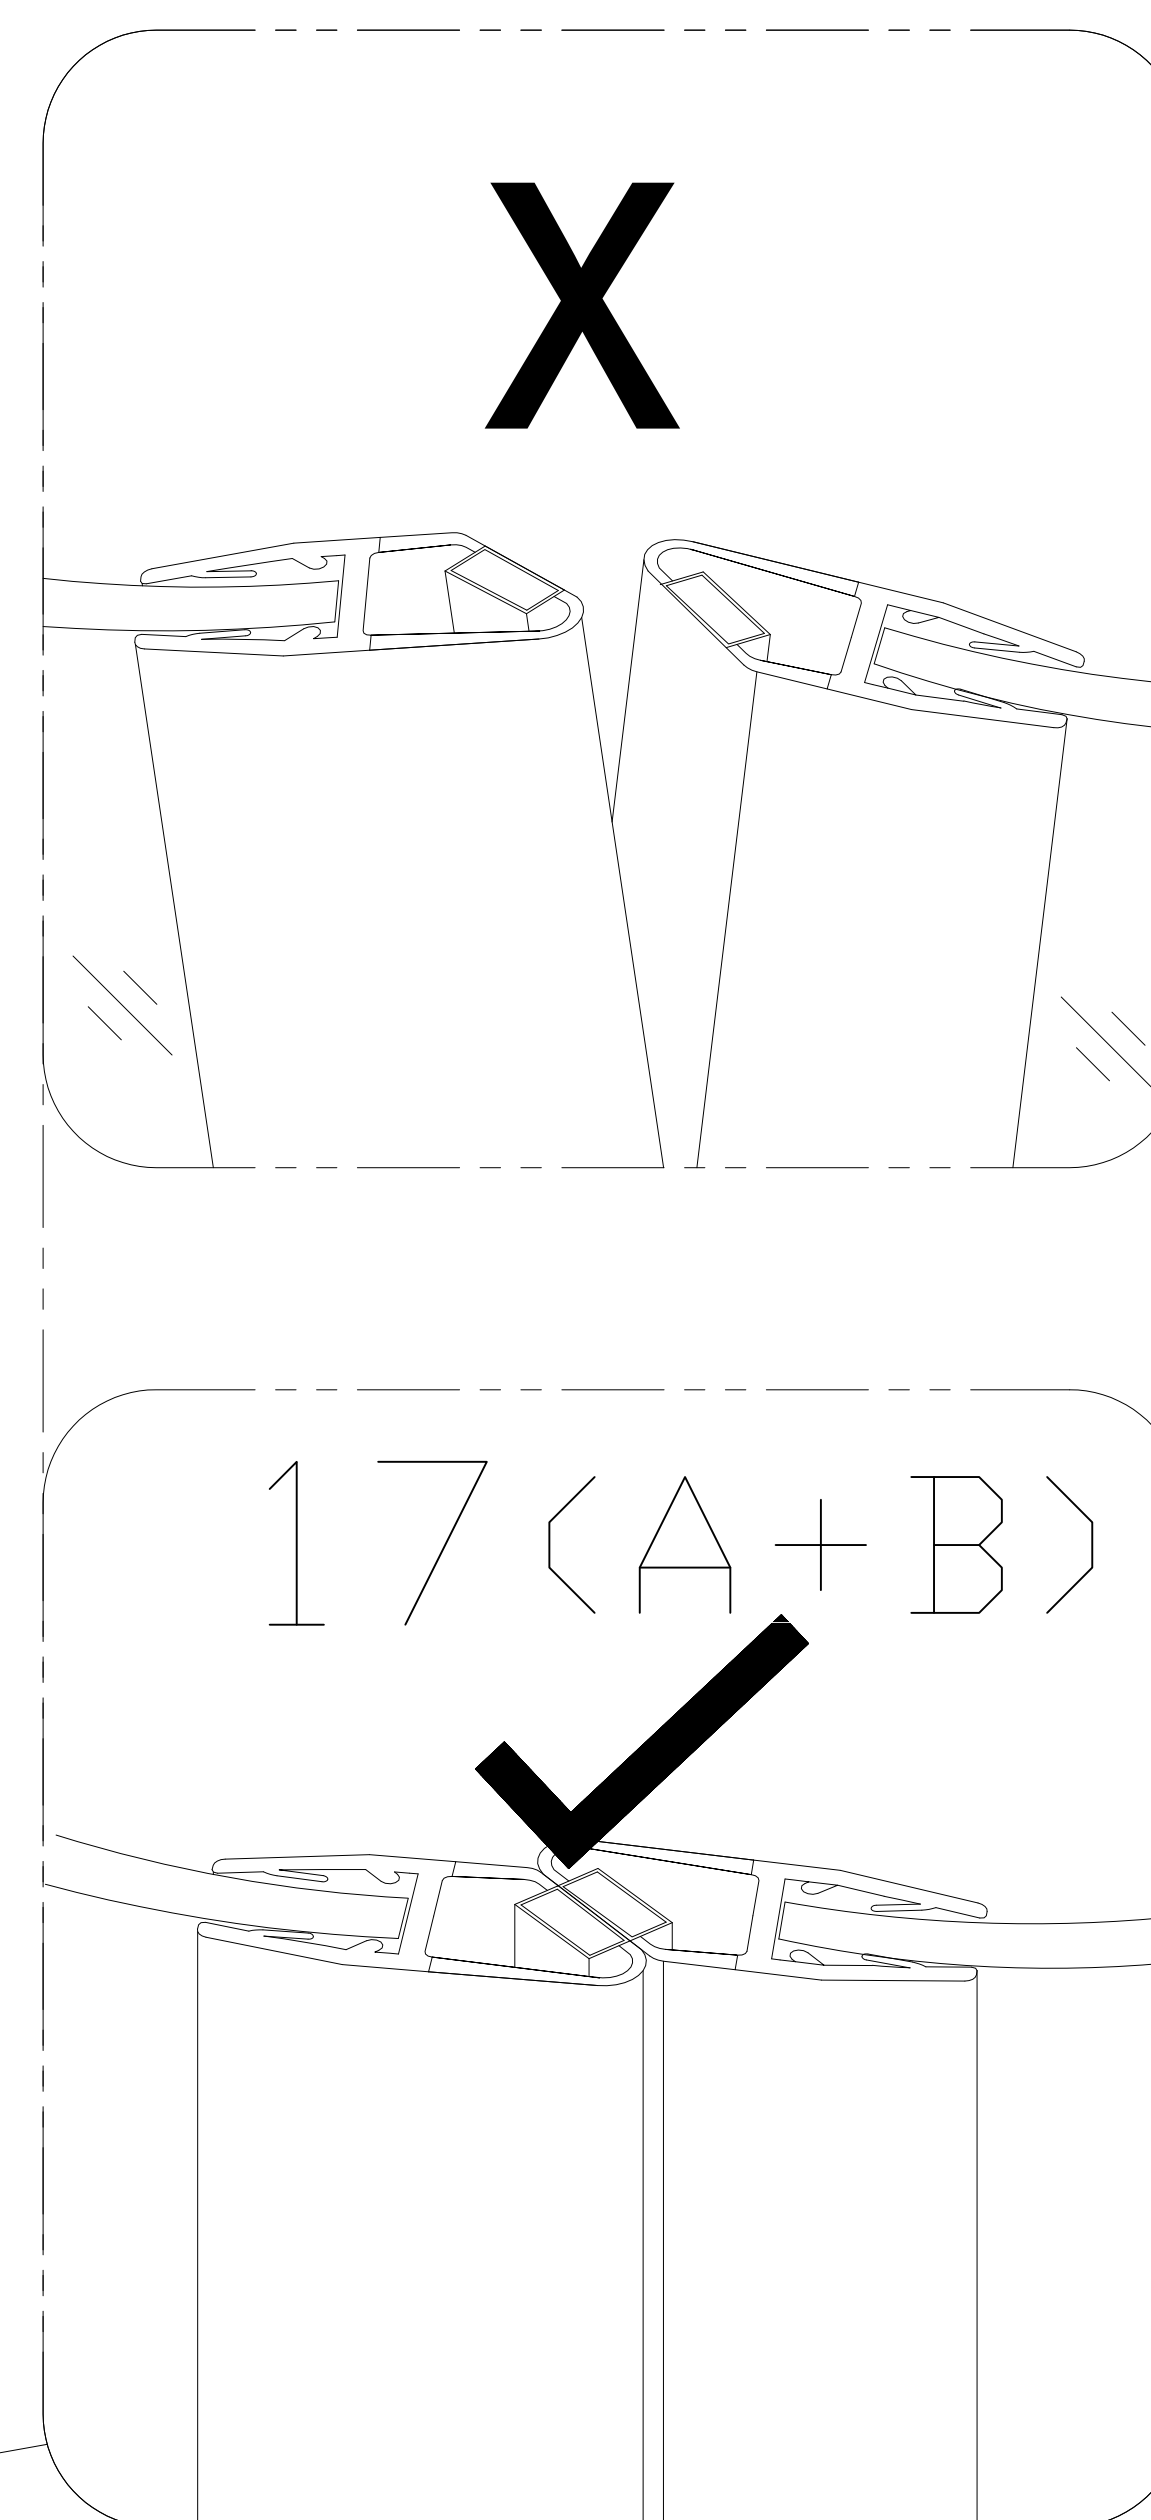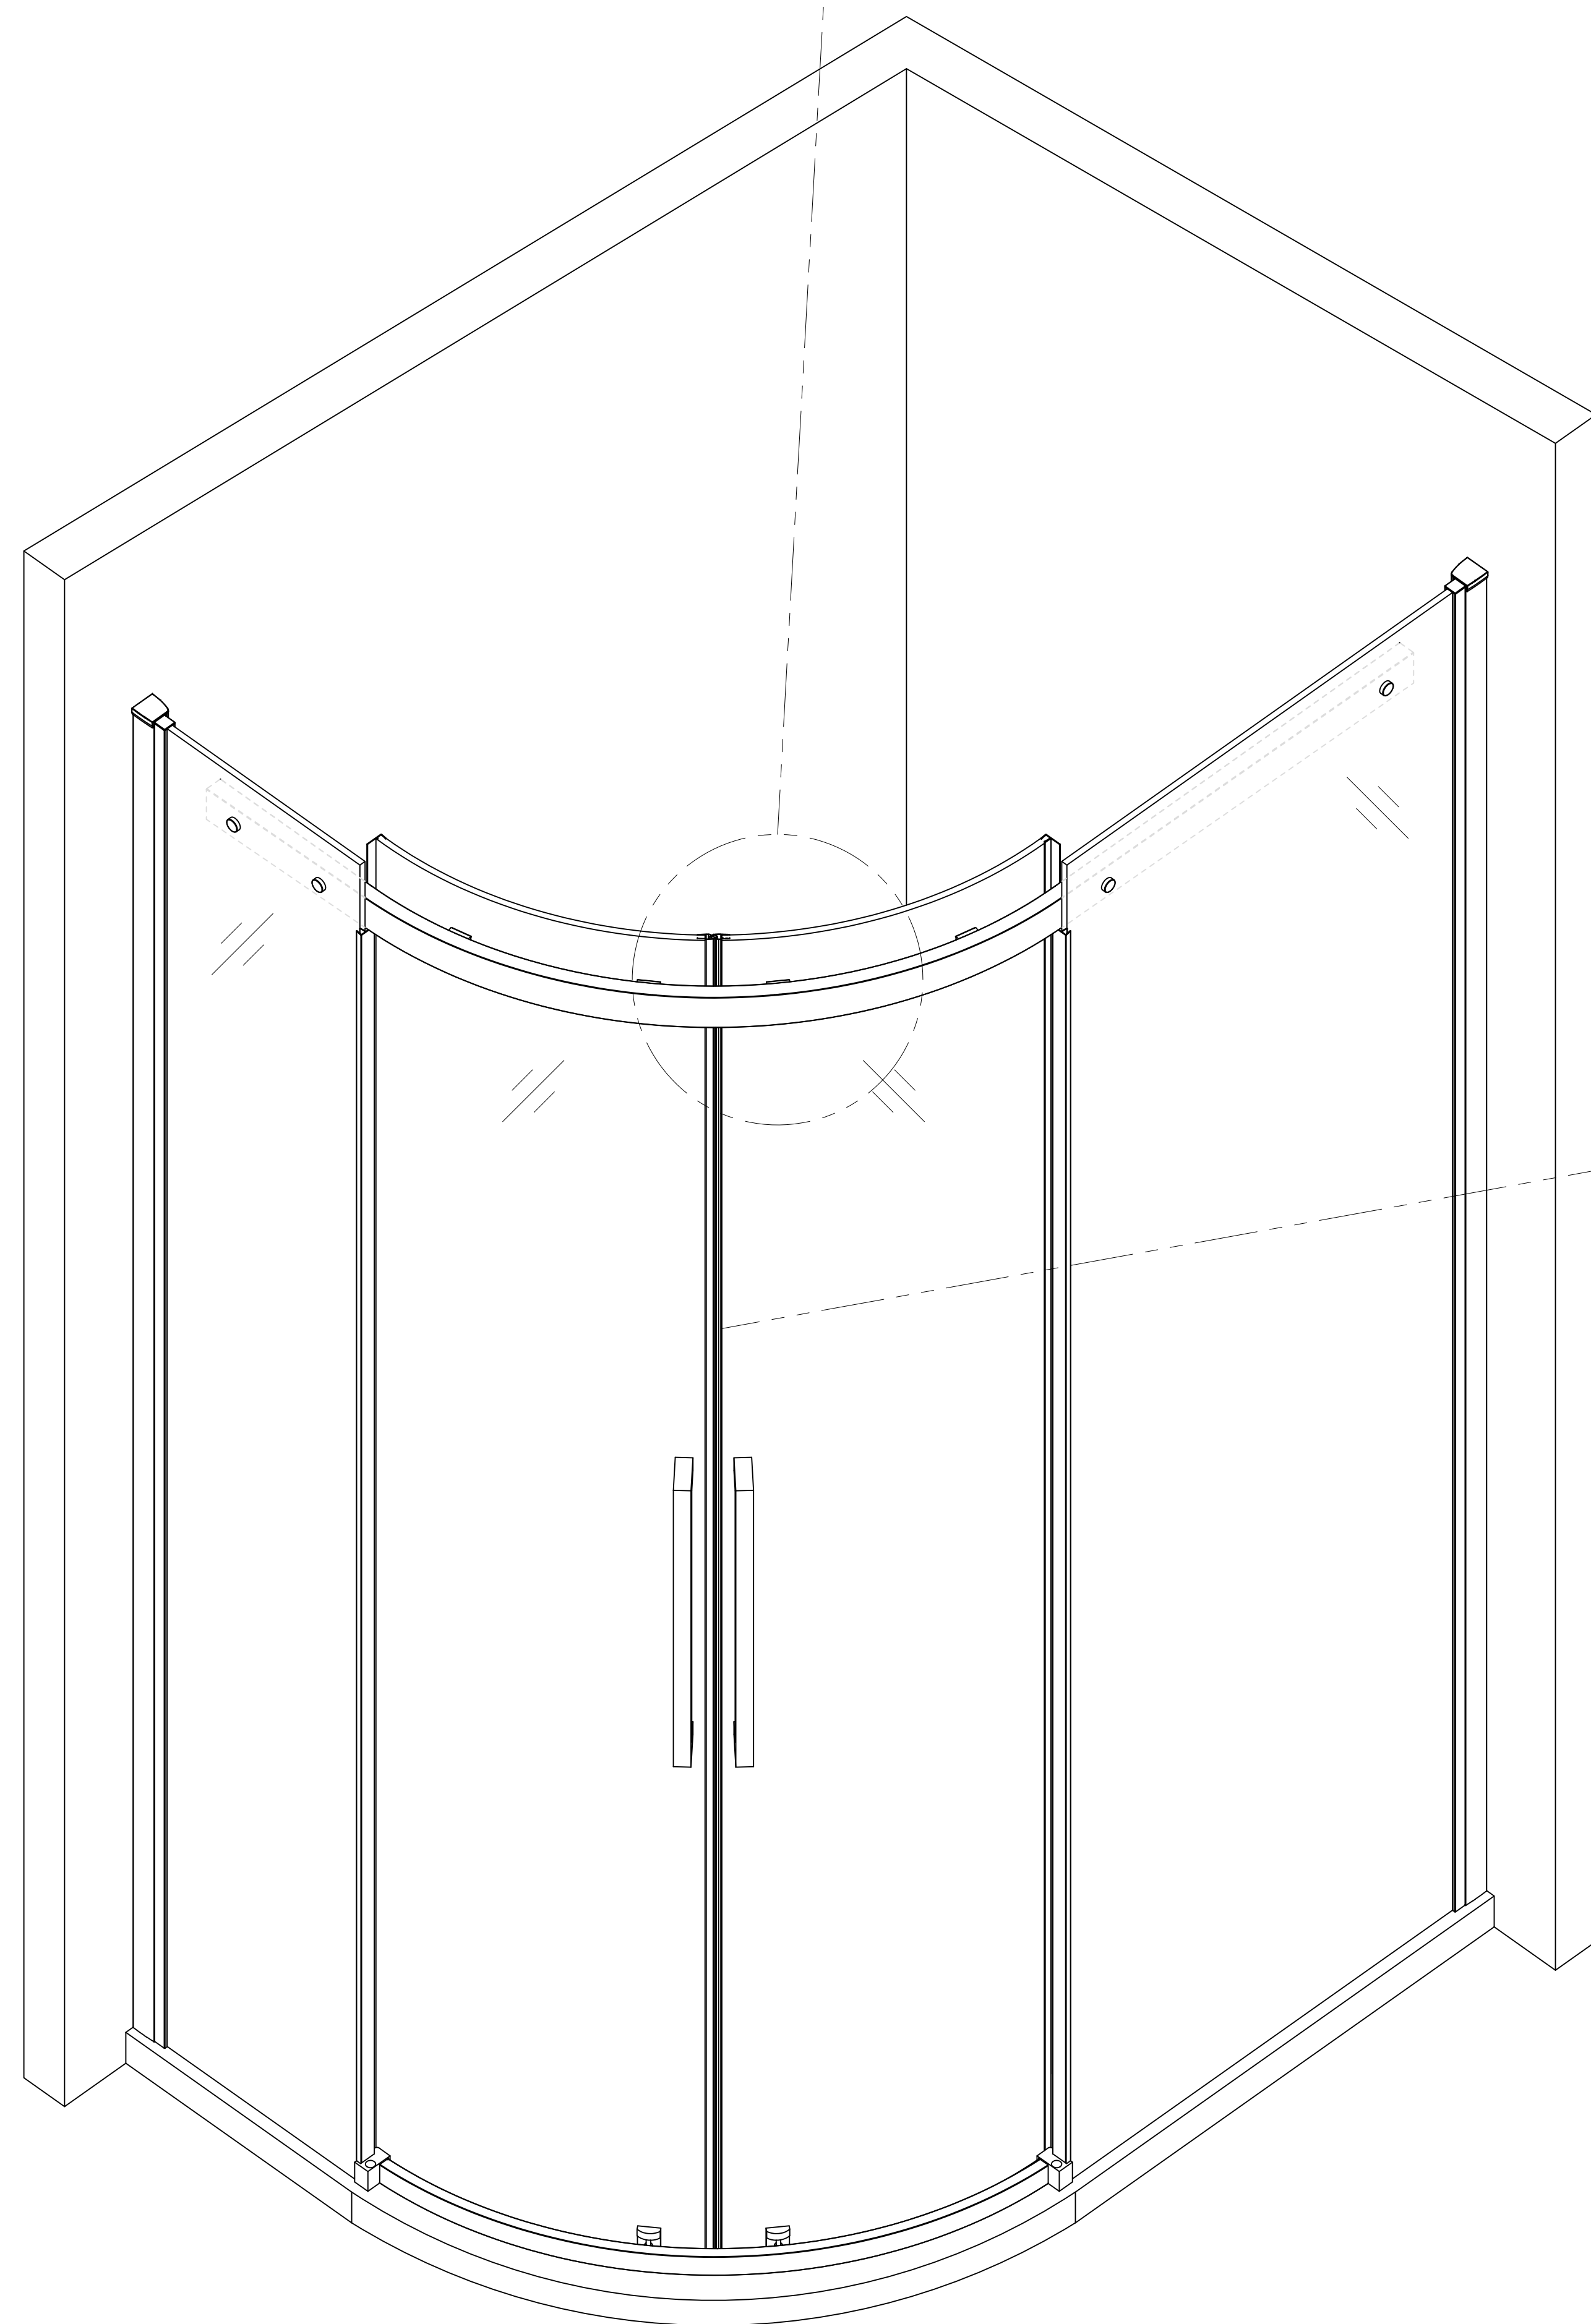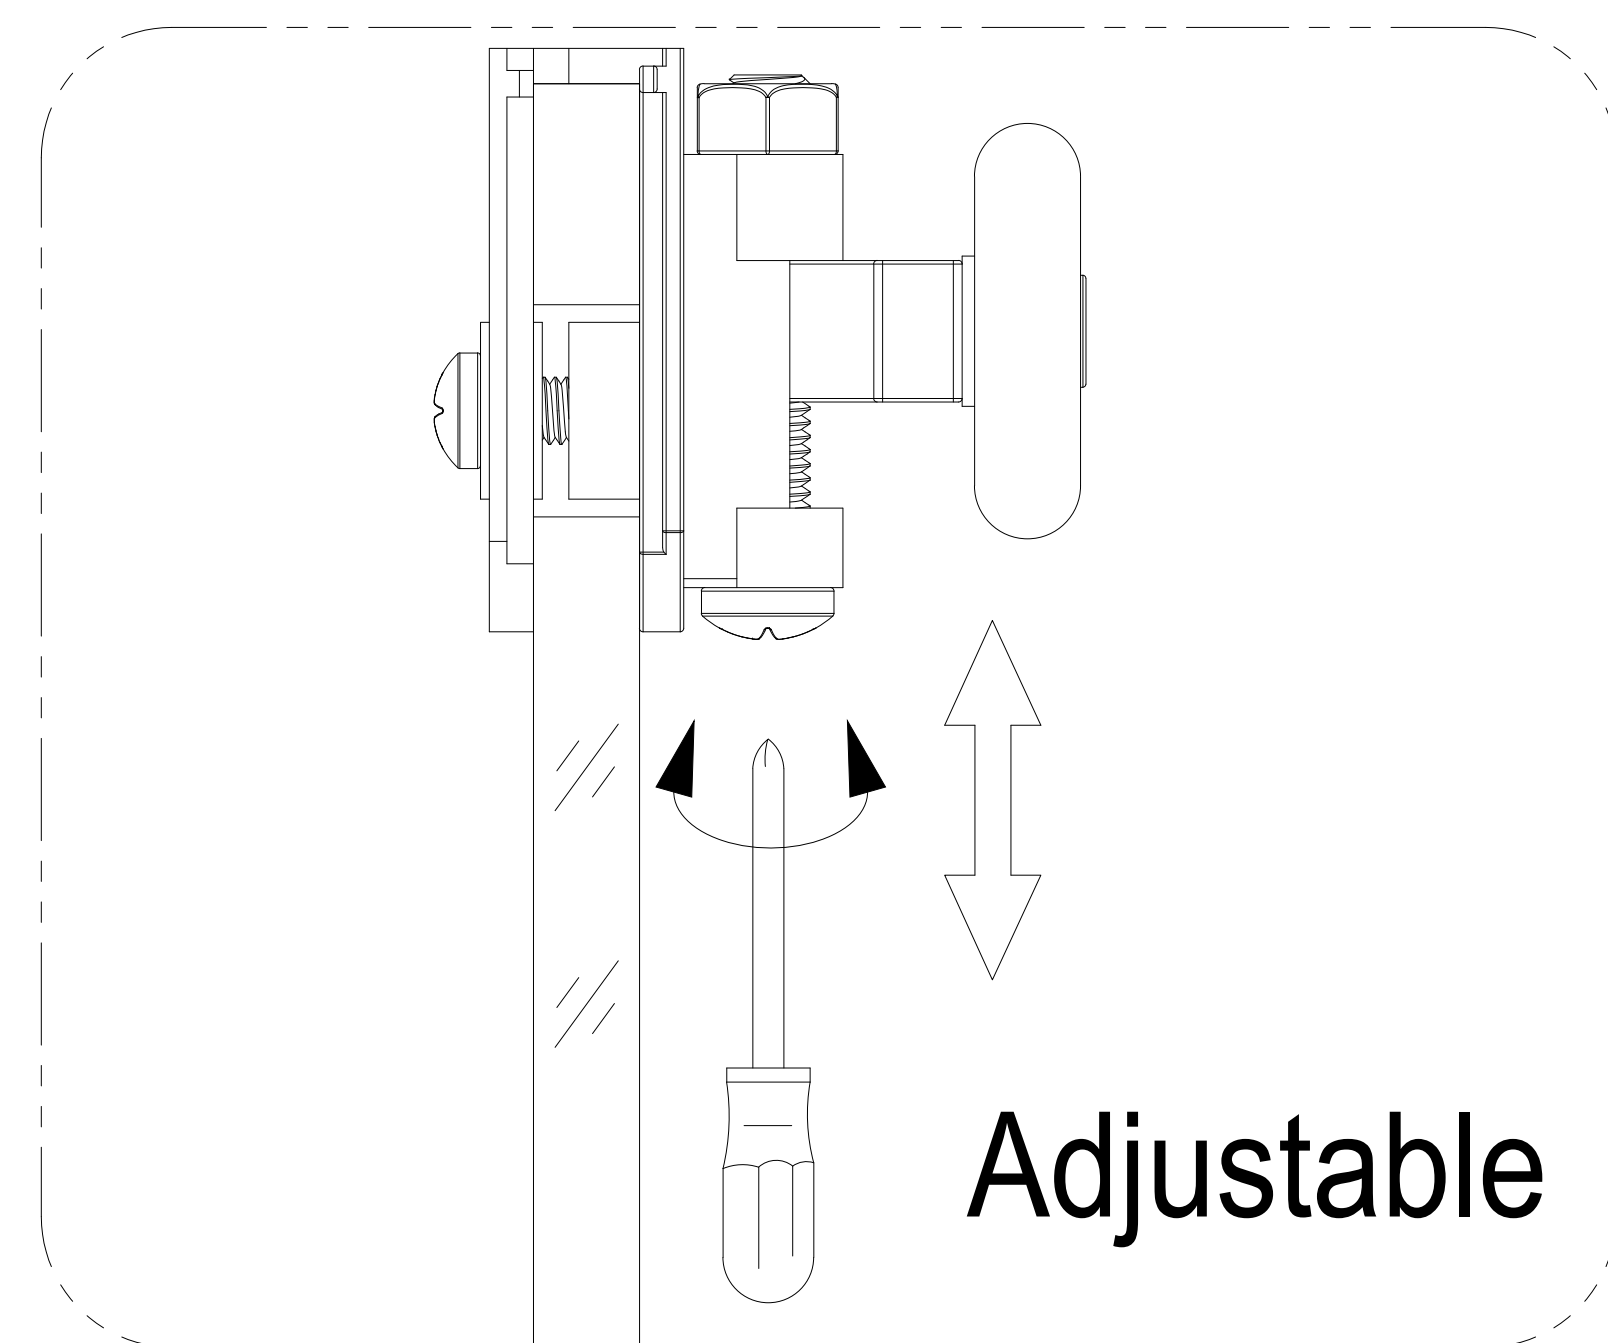

Fit magnetic seals and handles



12R

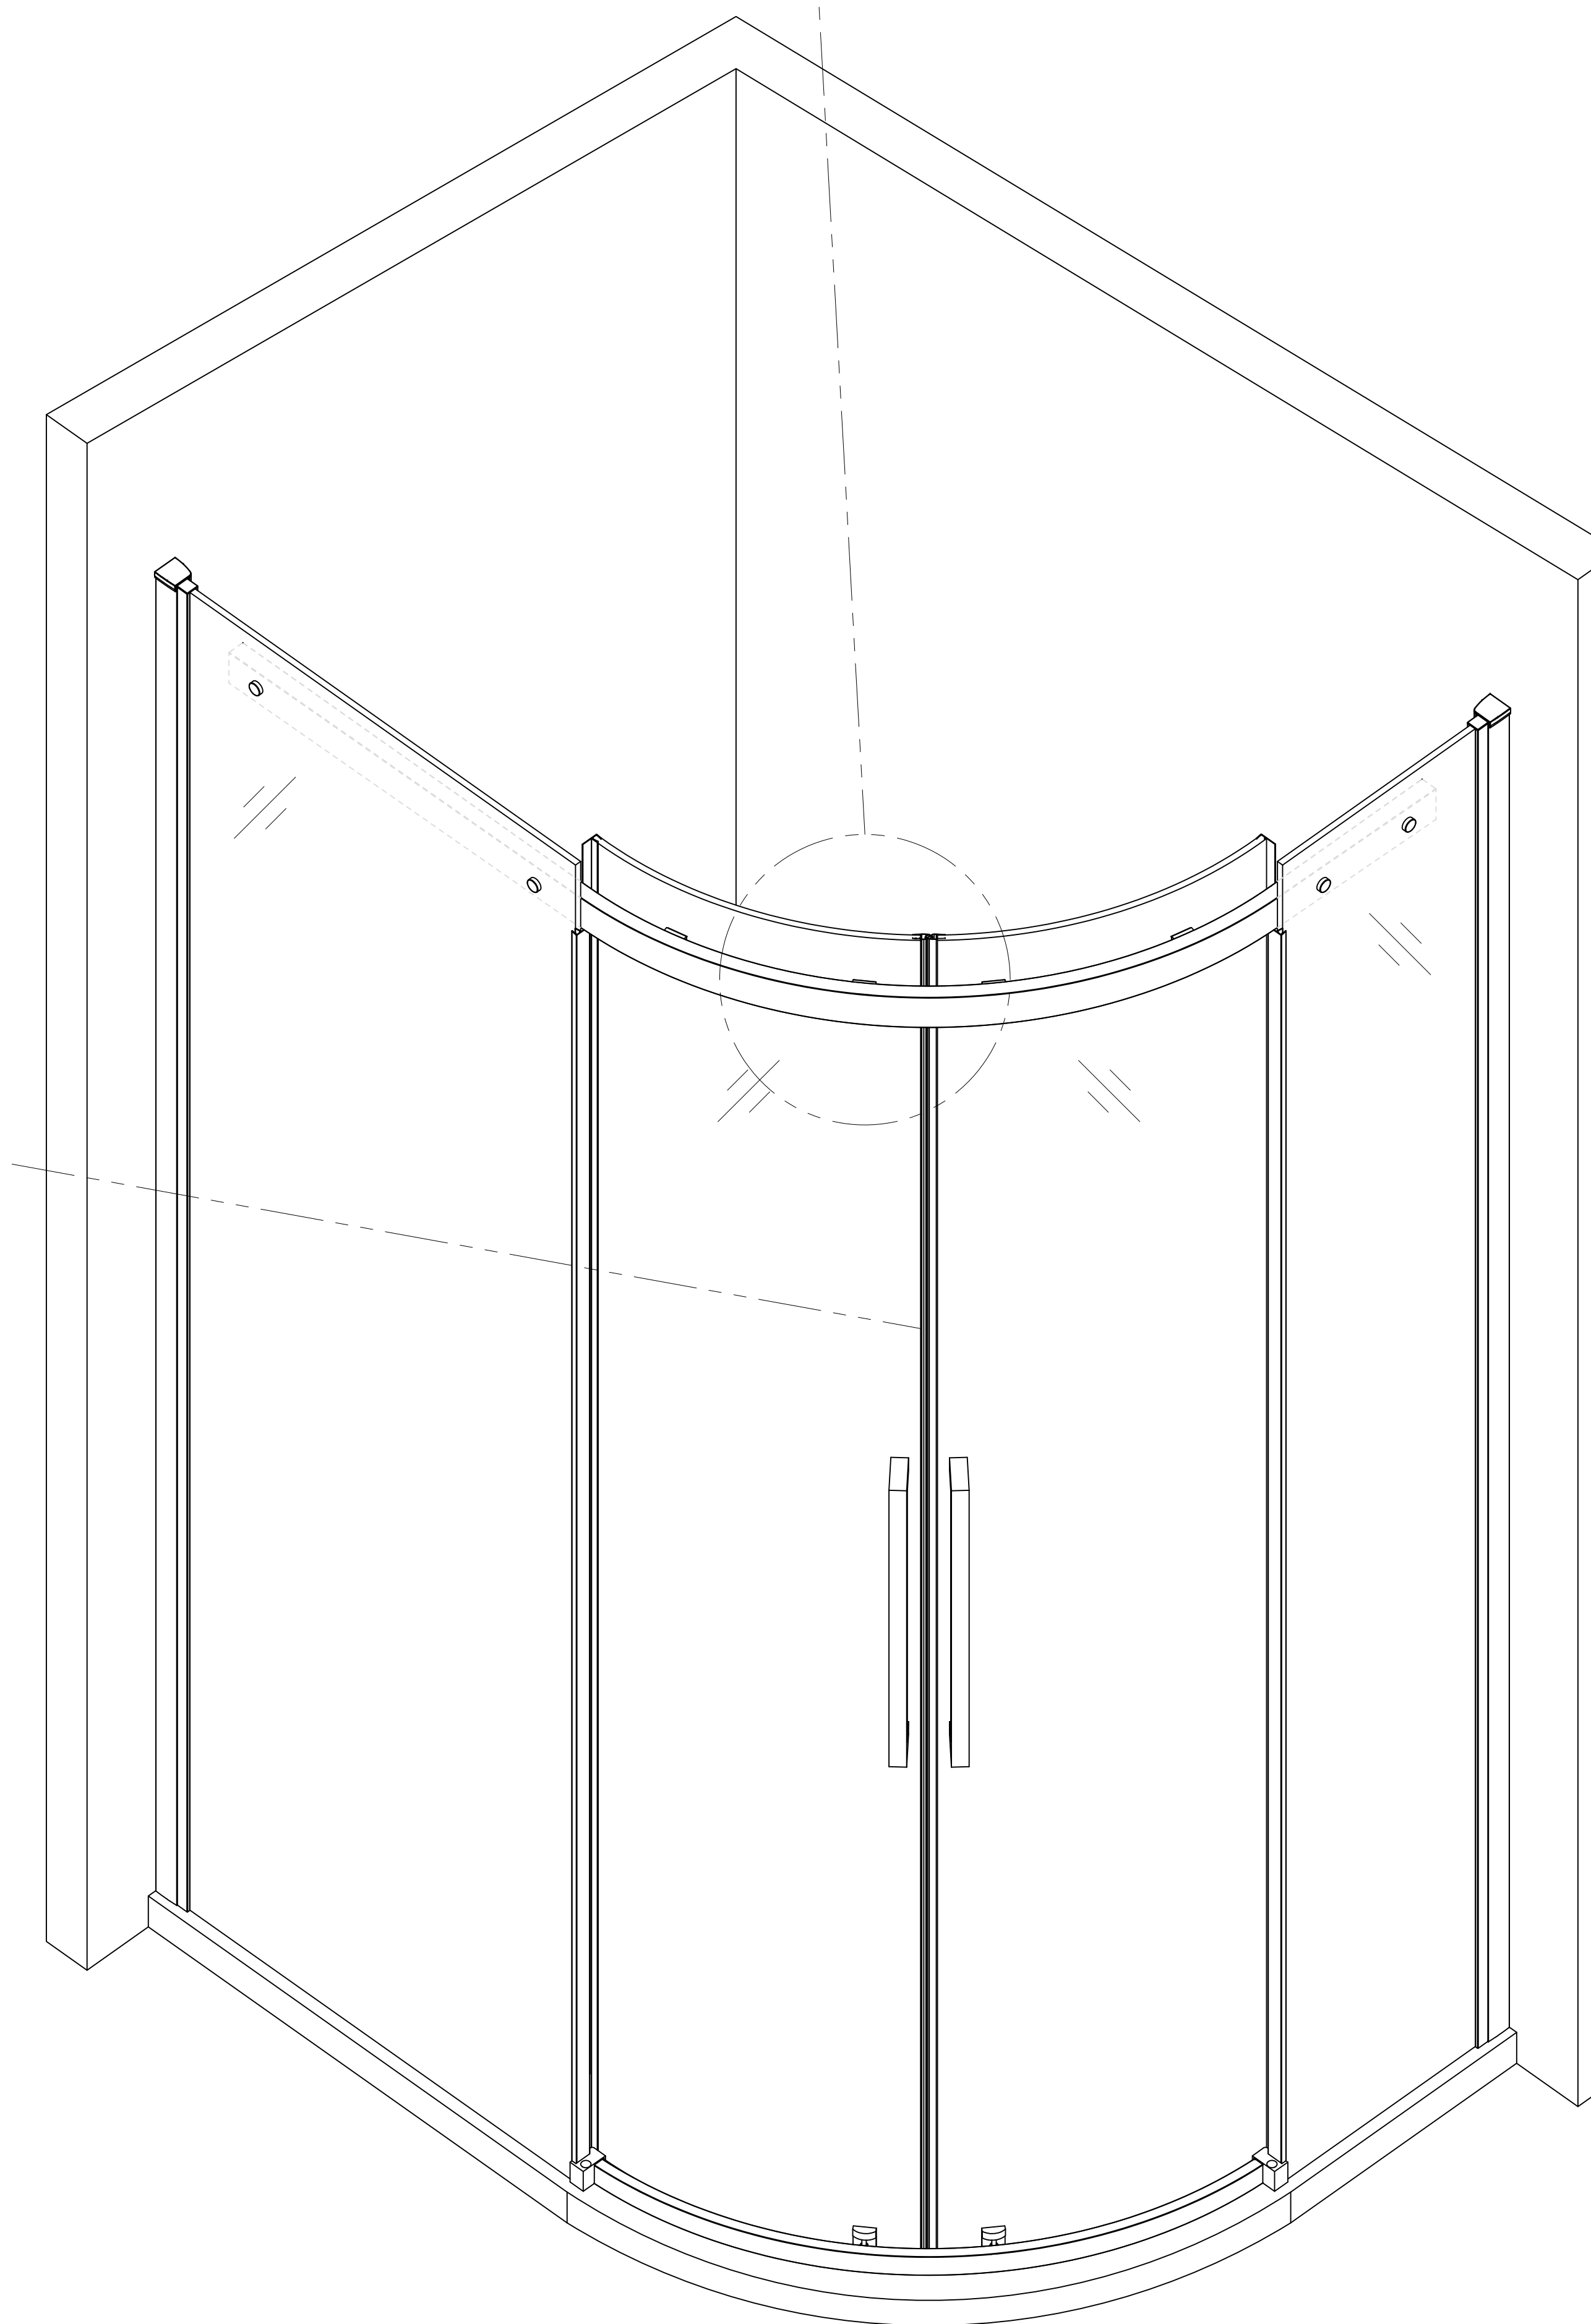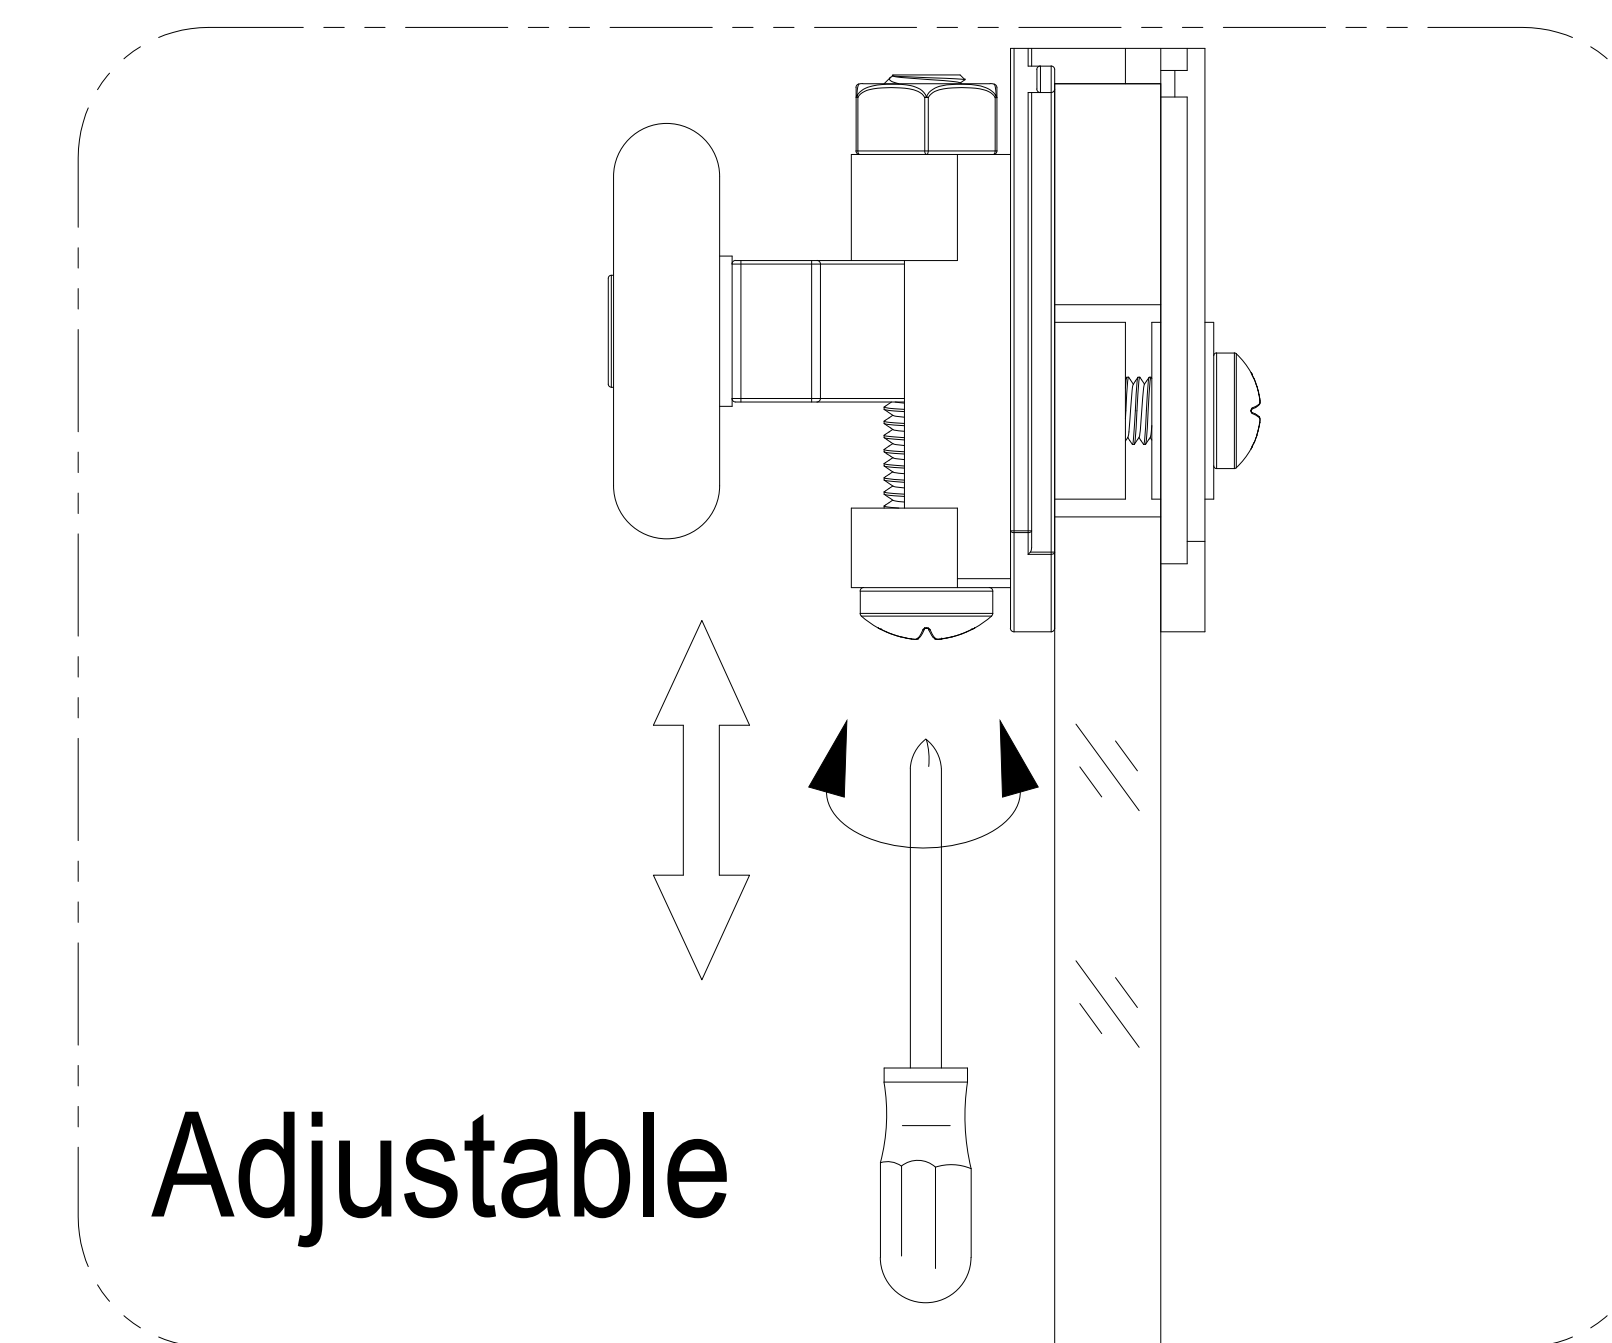


Fit magnetic seals and handles

13L

13R

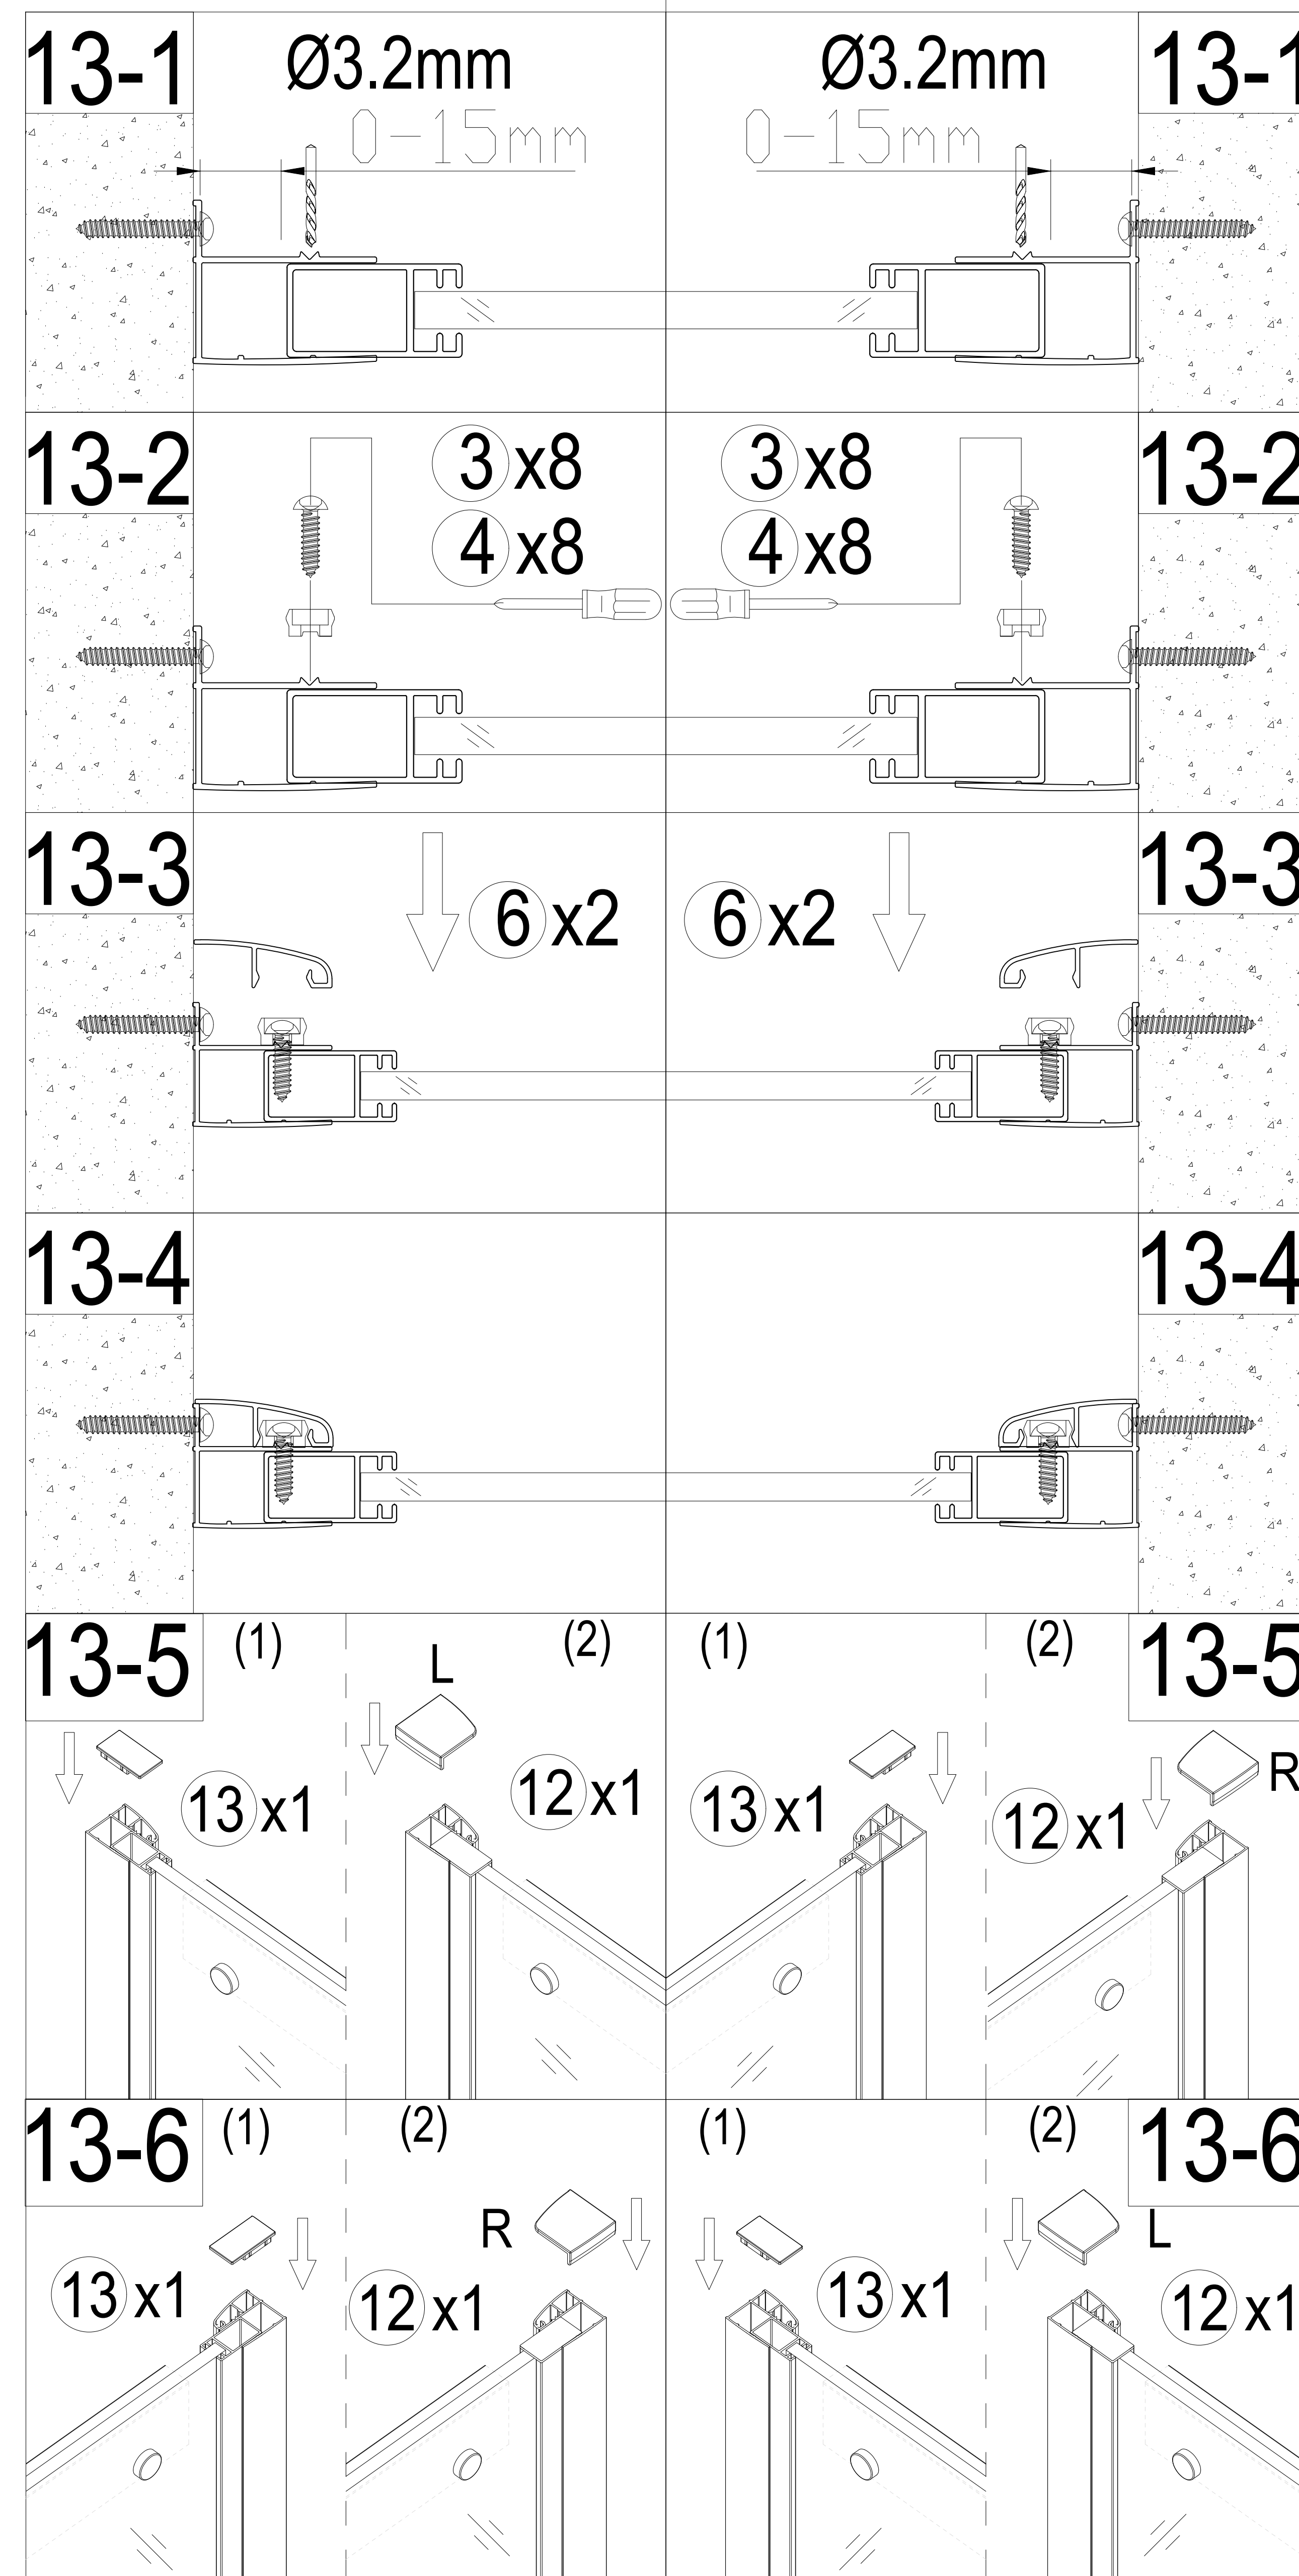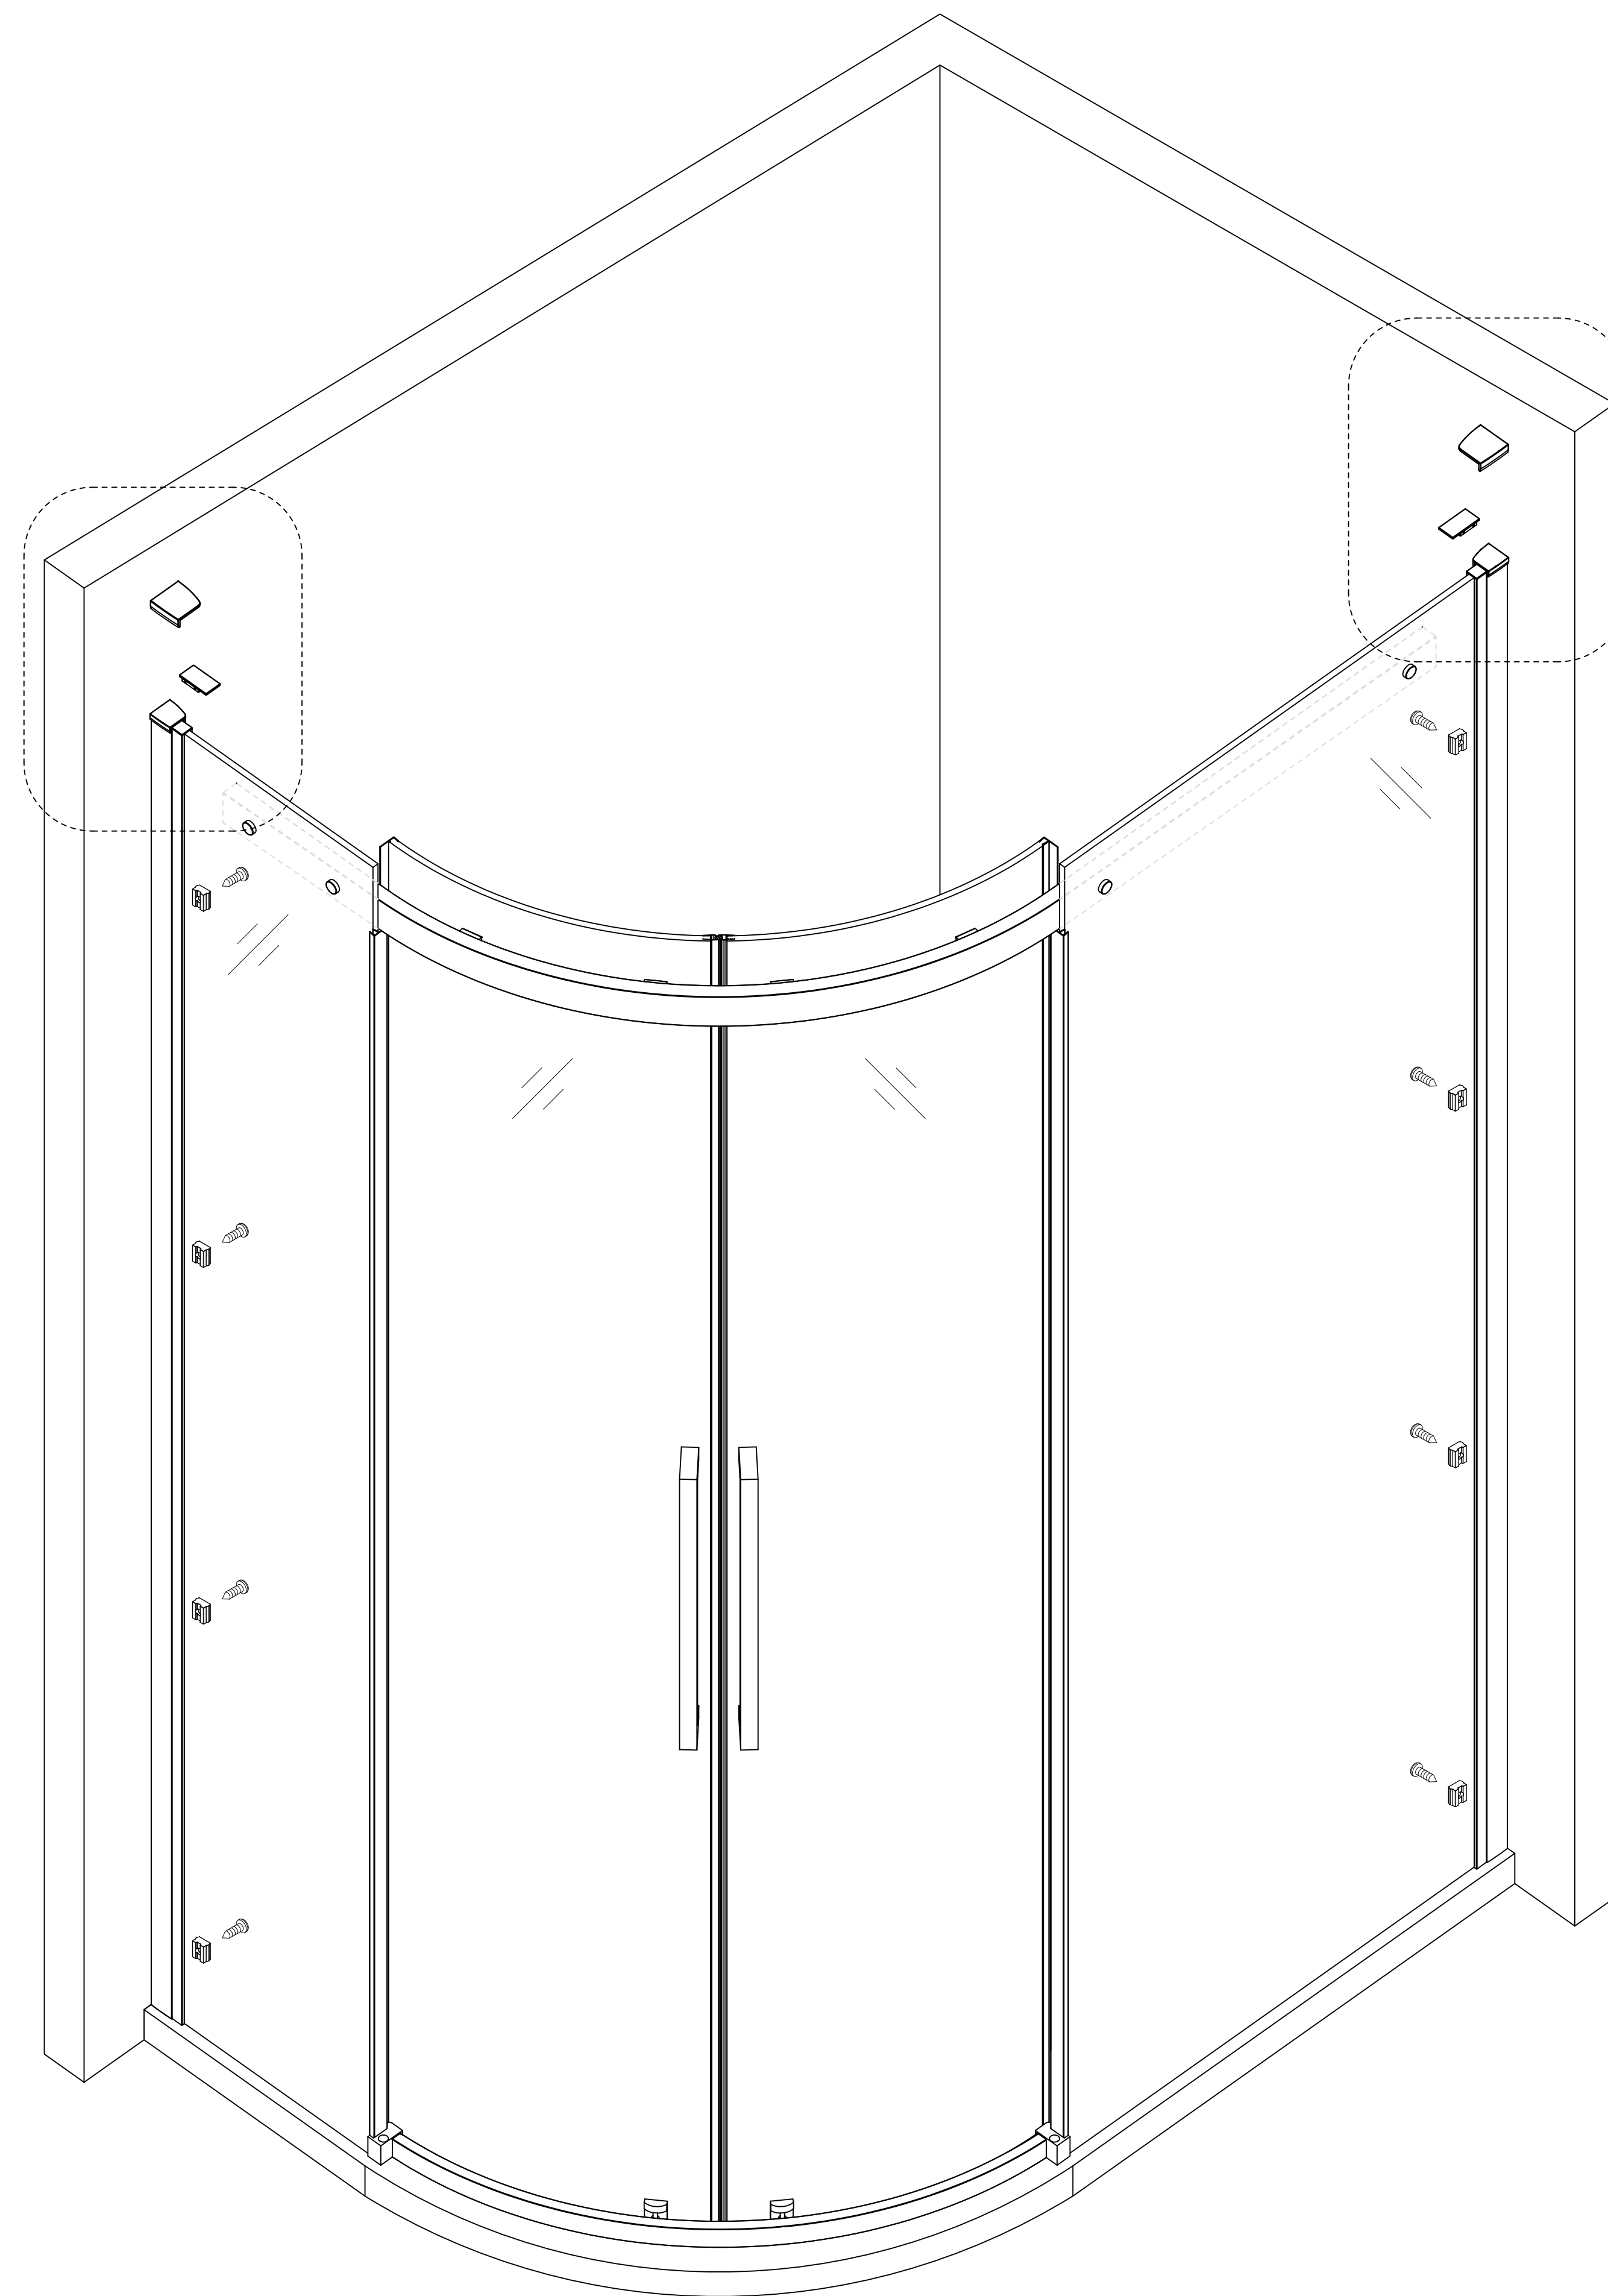

Install profile cover caps

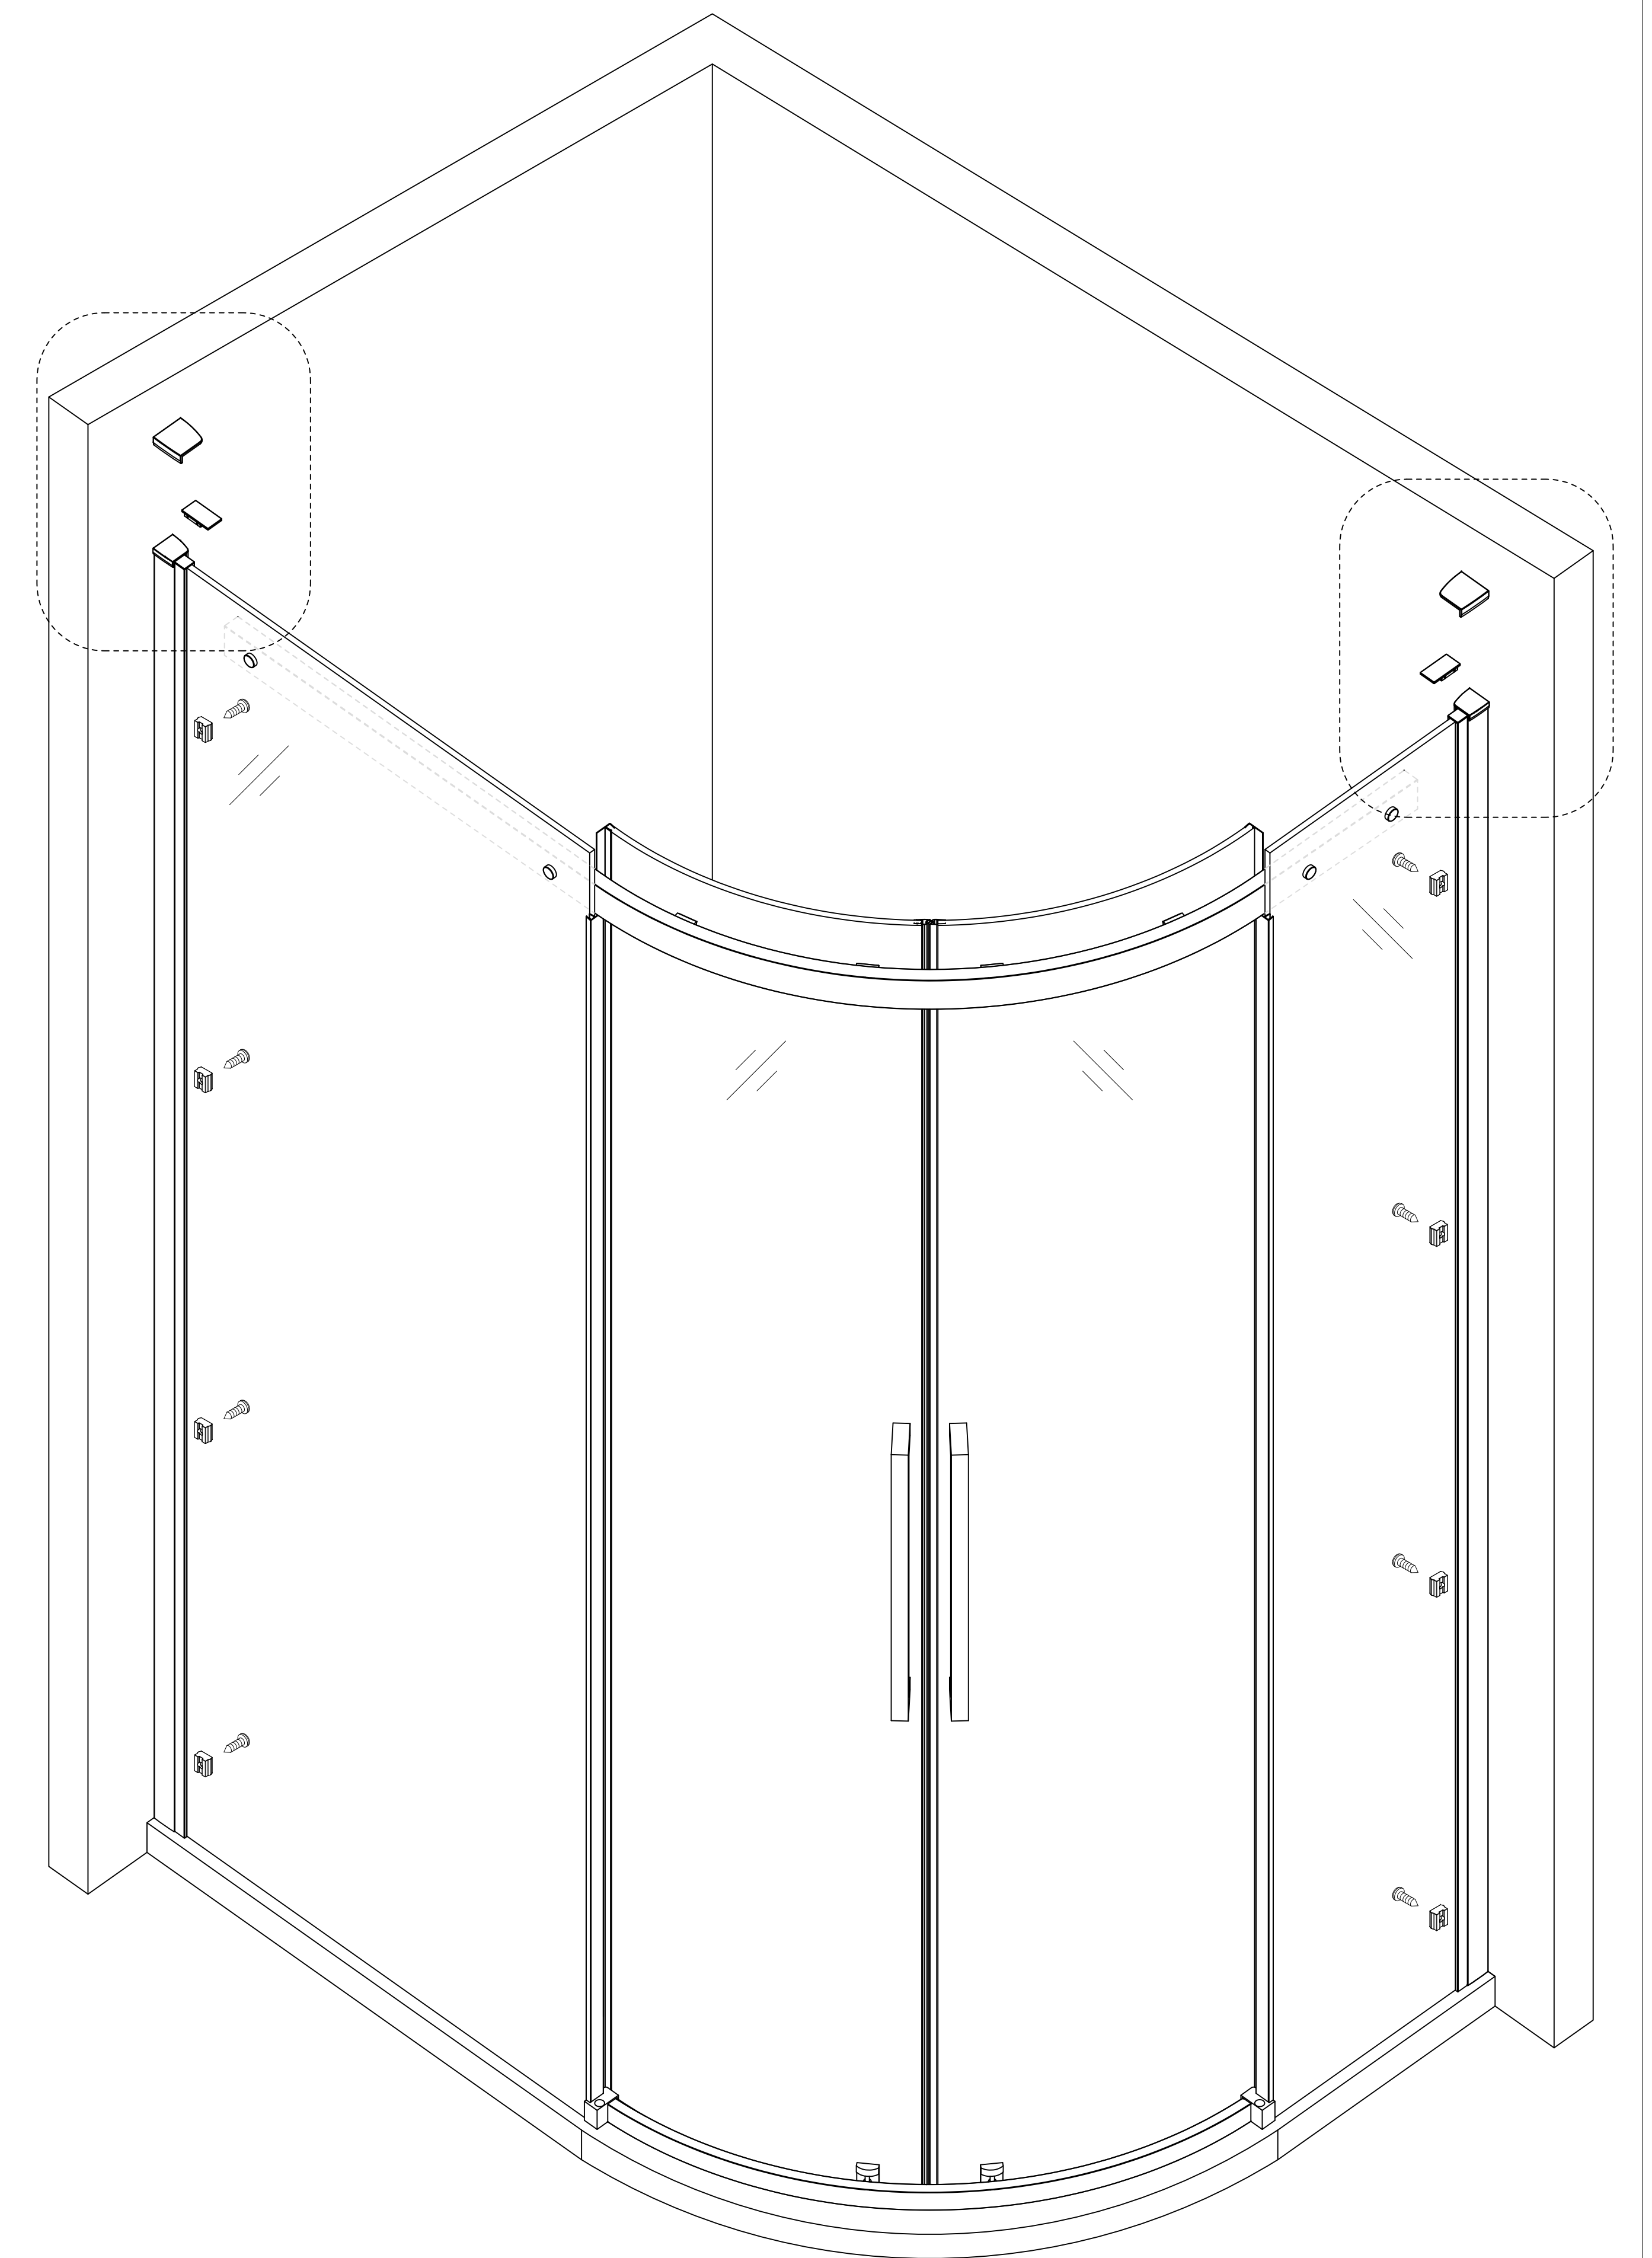


Install profile cover caps



Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

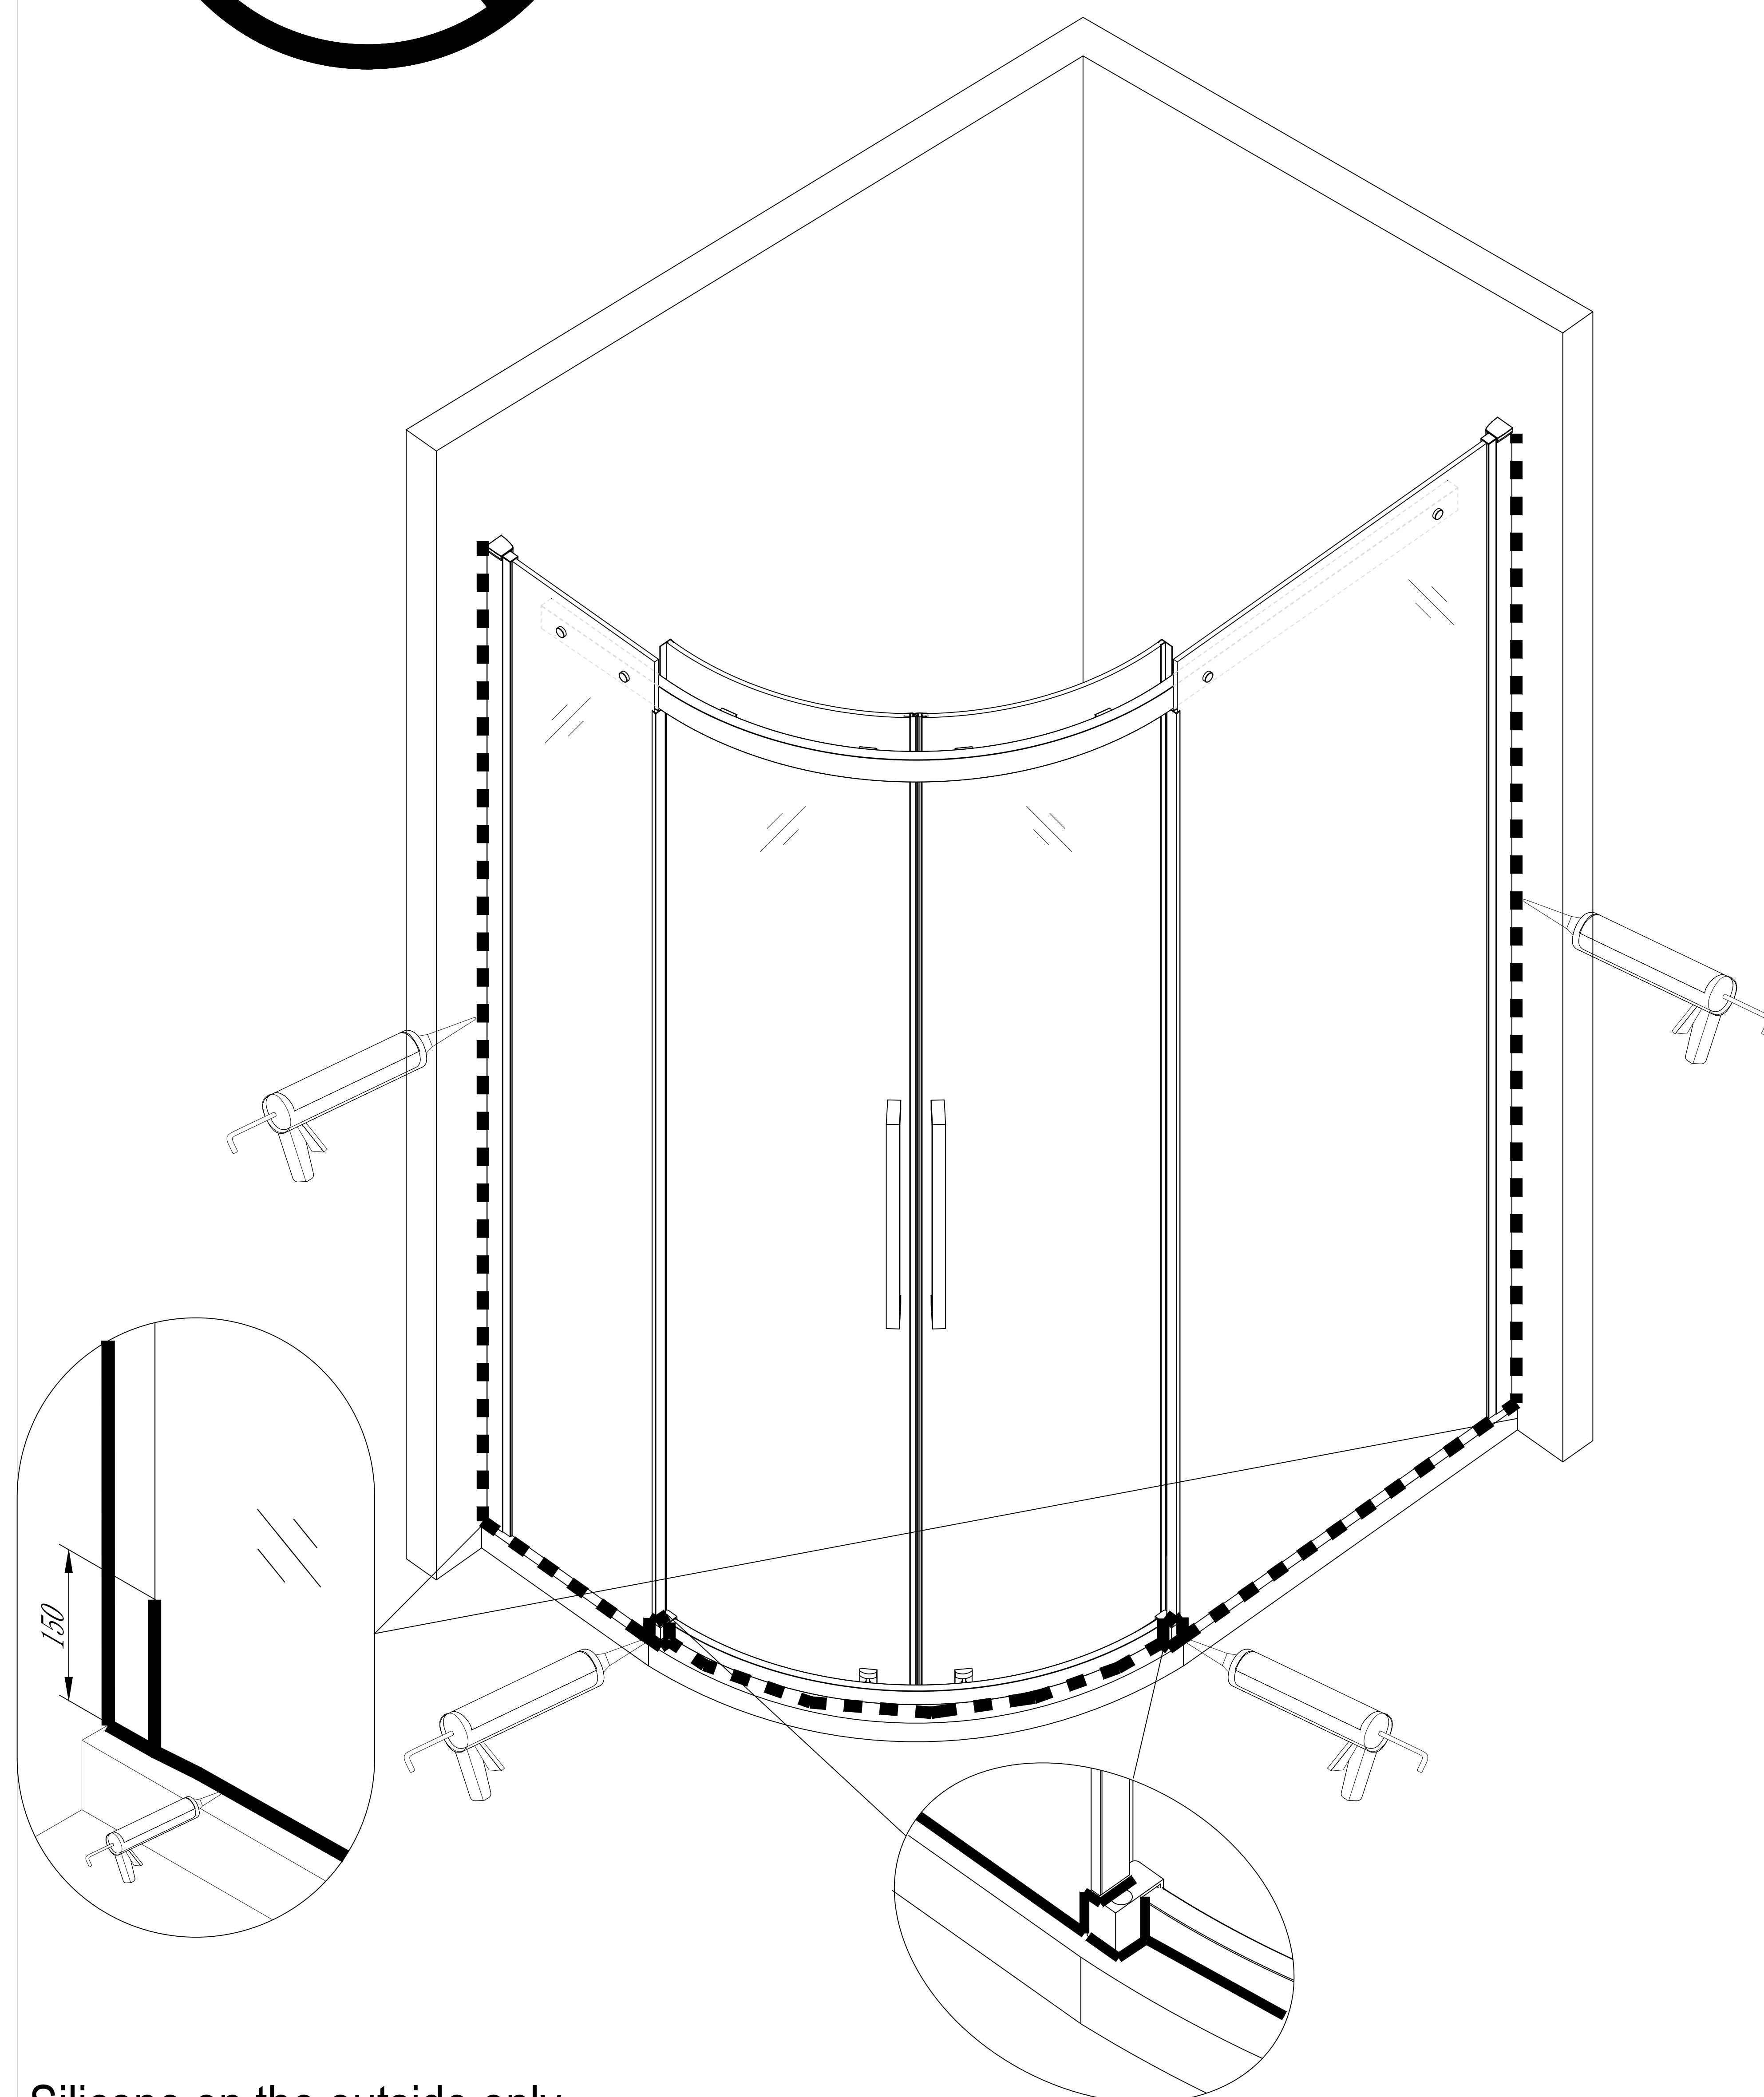


Silicone on the outside only



Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

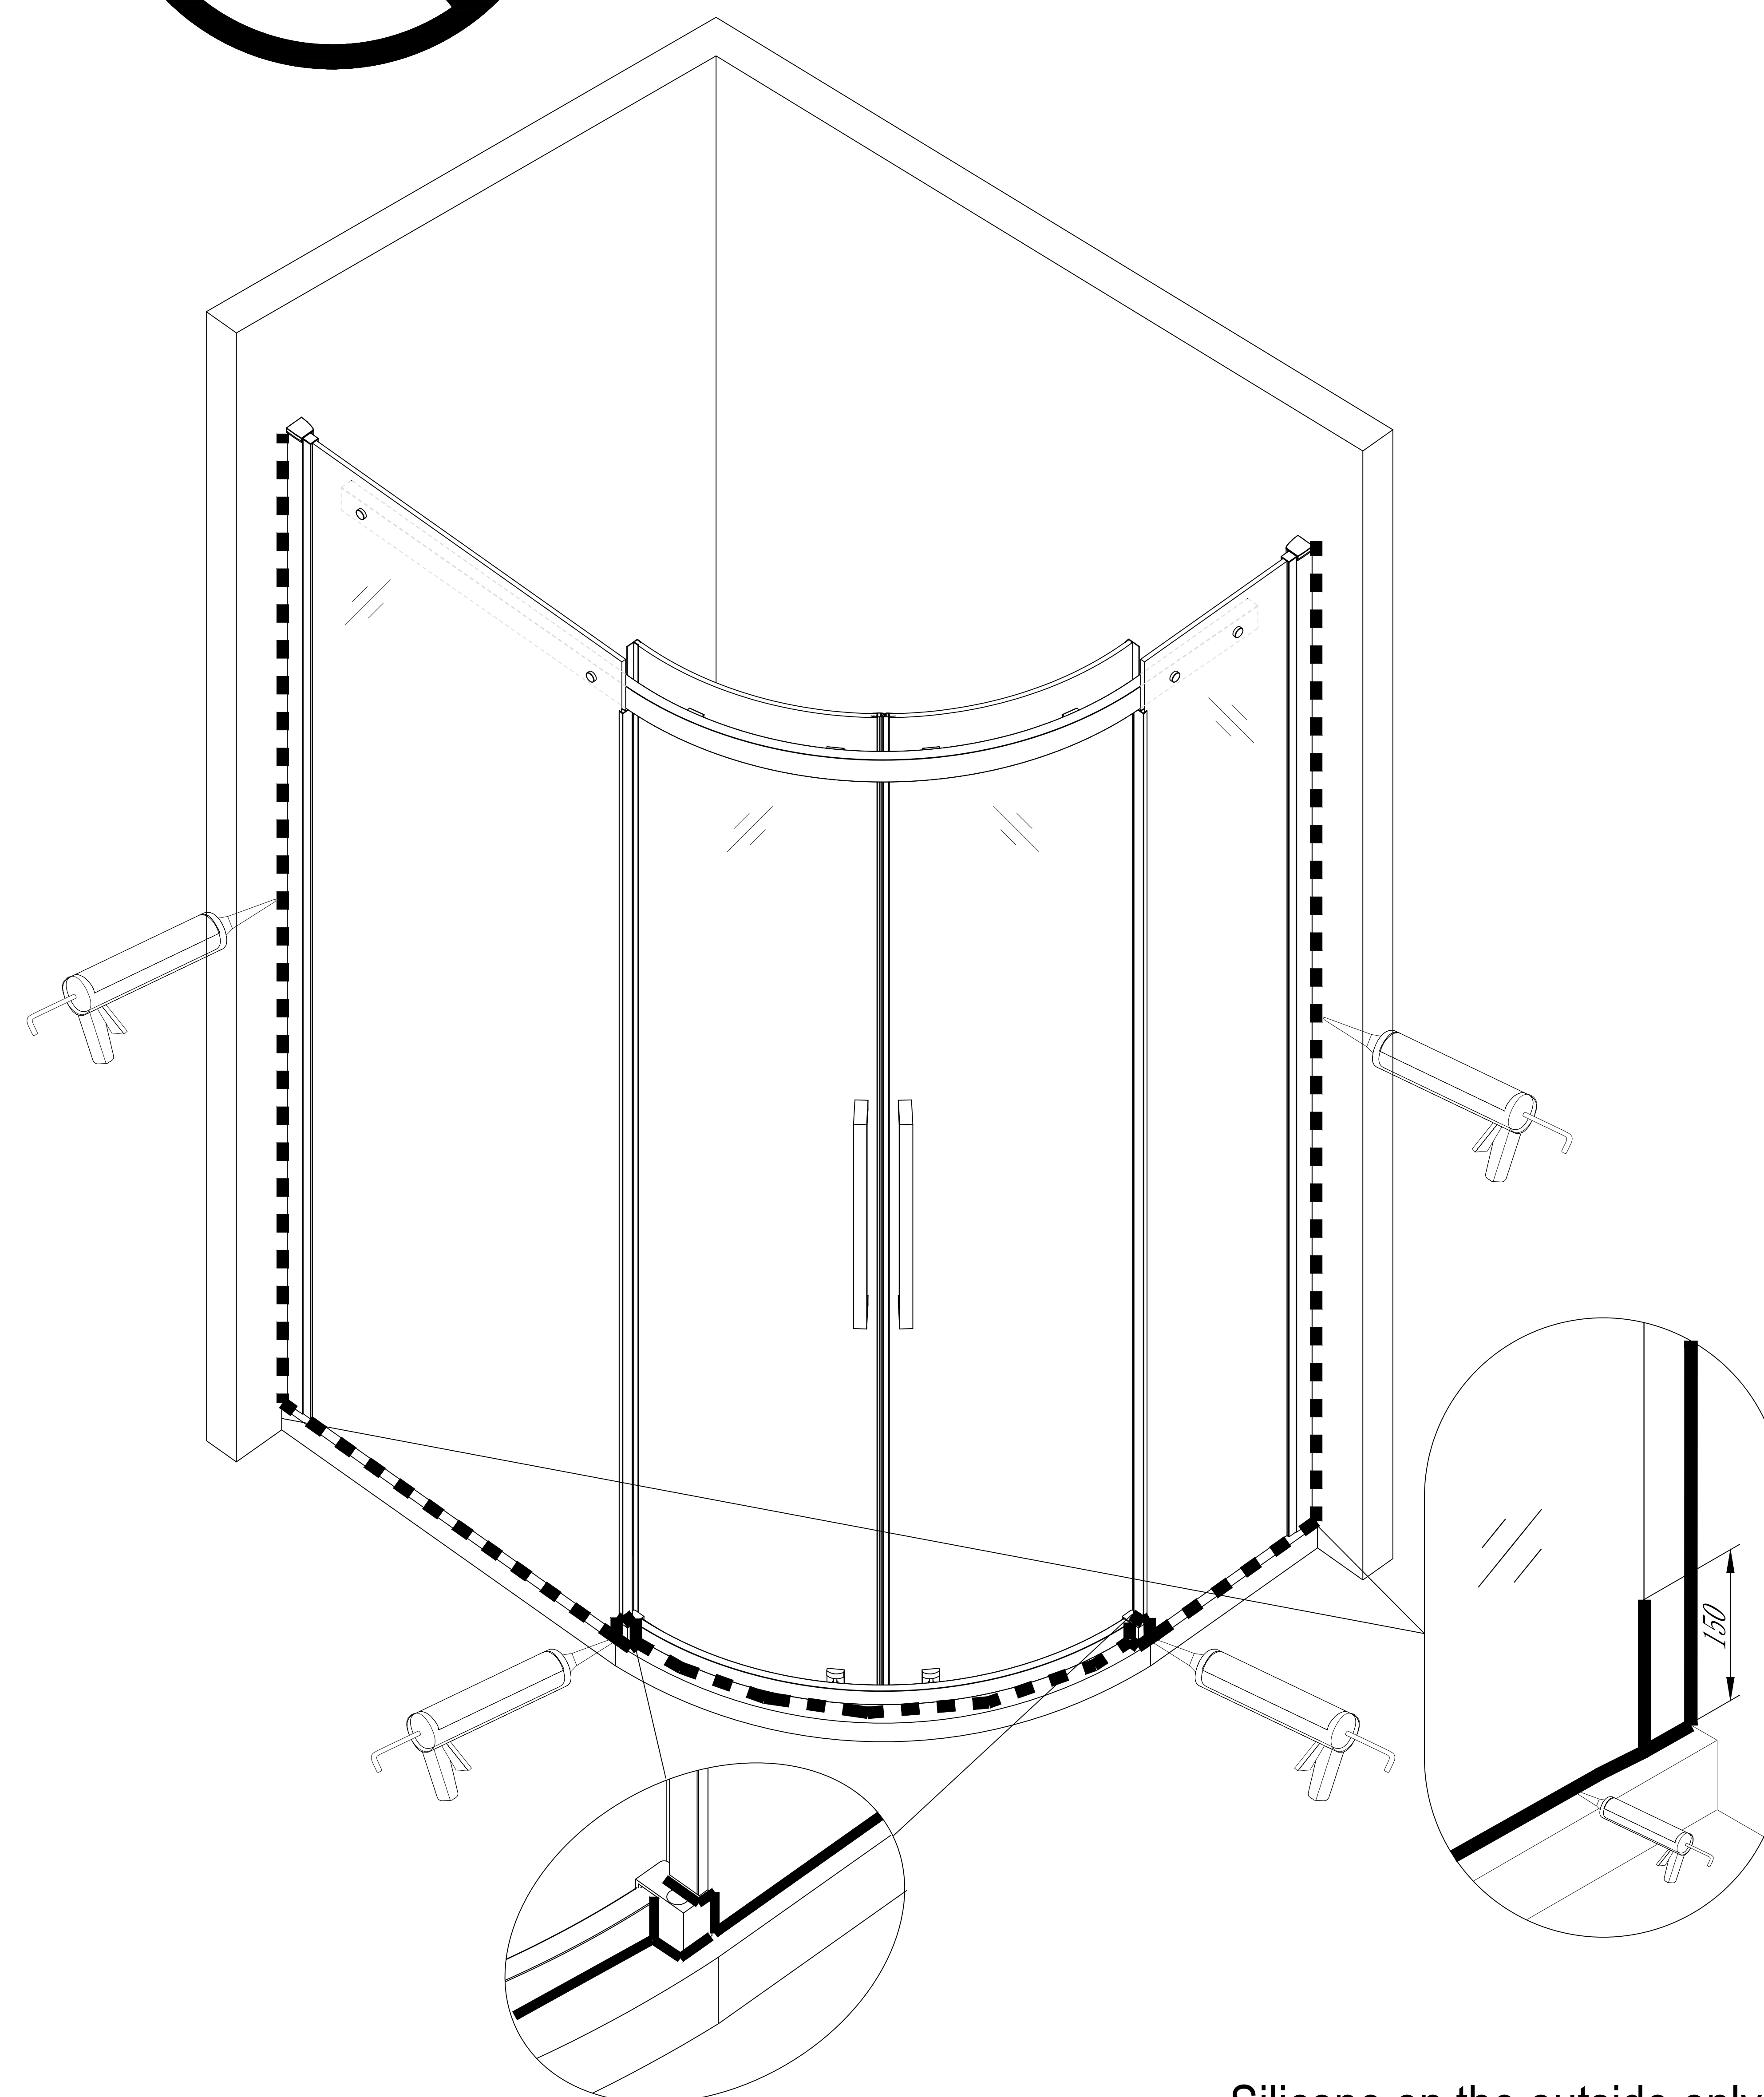

Silicone on the outside only



Eastbrook Road, Gloucester GL4 3DB

Technical Helpline: 01452 317890

Email: technical@eastbrookco.com

Cleaning and Maintenance of Shower Enclosures

Do not clean the shower enclosure with irritant detergents such as alcohol, bleach or other chemical cleaners.

Only clean with mild soapy water or a proprietary cleaner where the label advises it is suitable for the materials the enclosure is constructed from. Test on a small area first.

For treating limescale we would recommend distilled vinegar in a half and half solution with water.

Following installation should you find that there is a notable noise when the glass door moves you may add a small amount of silicon lubricant onto the roller wheels and tracks, hinges or clips.

It is the responsibility of the product owner to maintain the product as recommended above. Also, to check for parts which have broken or become loose to protect against failure of the enclosure.