




**CARRONITE  
INSTALLATION  
INSTRUCTIONS**

# Showerbath Guide


Only With Kit  
AK-05c

Metal  
Channel

Self Tapping  
Screw, 19mm

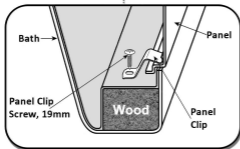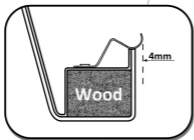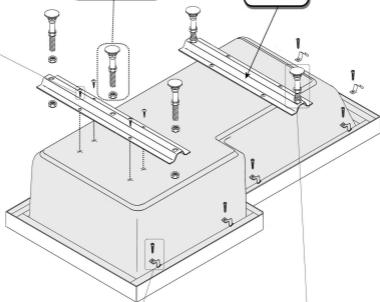


Encapsulated Baseboard

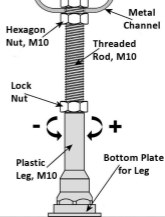

Make sure lock nuts are in  
place after the bath has  
been levelled.

## CONTENTS

- 2 Metal Channel
- 4 Threaded Rod M10
- 12 Hexagon Nut M10
- 8 Self Tapping Screw 19mm
- 4 Screw 48mm
- 4 Wall Plug
- 4 Plastic Leg M10 65mm (Black)
- 4 Bottom Plate for Leg (Black)
- 4 Wall Brackets
- 6 Panel Clip
- 6 Panel Clip Screw 19mm

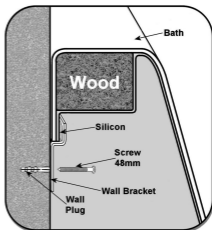

**\* Refer to height  
of panel chosen.**

