


**CARRONITE INSTALLATION
INSTRUCTIONS**

RECTANGULAR BATH


CONTENTS





- 2 Metal Channel
 - 4 Threaded Rod M12
 - 12 Hexagon Nut M12
 - 8 Self Tapping Screw 19mm
 - 6 Screw 48mm
 - 6 Wall Plug
 - 4 Plastic Leg M12 65mm (White)
 - 4 Bottom Plate for Leg (White)
 - 3 Wall Brackets
 - 6 Panel Stop Tube
 - 6 Panel Stop Screw 40mm
- For L-Shape panels, clips are packed with panel
- 6 Panel Clip
 - 6 Panel Clip Screw 19mm

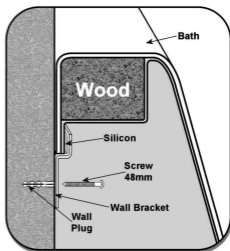

HALCYON-D MODEL

All 4 wall brackets are installed against the long wall.

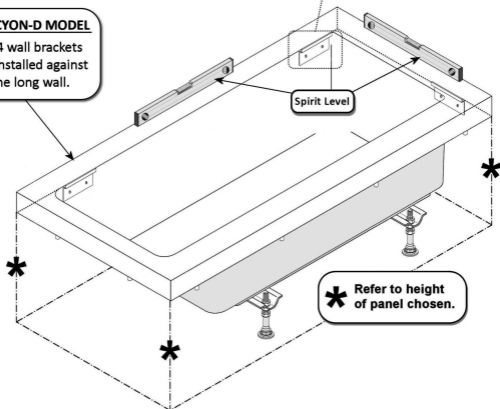

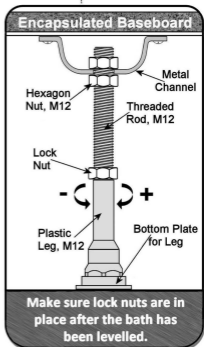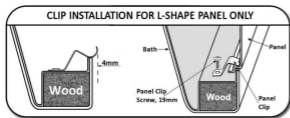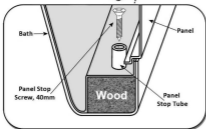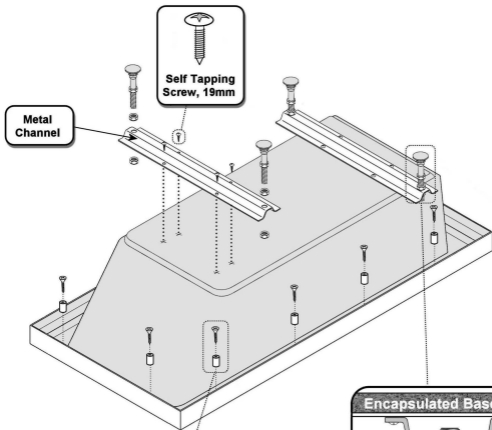

Make sure lock nuts are in place after the bath has been levelled.