

Eastbrook Road, Gloucester GL4 3DB Technical Helpline: 01452 317890 email: technical@eastbrookco.com

INSTALLATION GUIDE


AS-1682S Wallhungbasin


56.0055 Corner basin 450mm 1Tap Hole



5) Install the basin aimingly to the bolt , then fix the gasket tray,nut orderly,and tighten it

6) Smear mouldproof glue on connections where basin and wall fix the inlet and drain pine,better usage after 24 hours

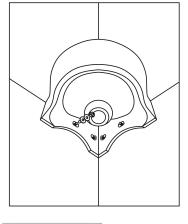

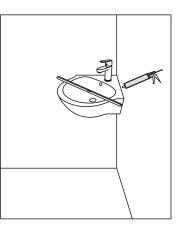

5、NOTE

1.Donot throw sundries (like paper, bumf) into the basin,

for it will jam the drain pipe.

2.Keep the basin clean.

3.using neutral cleanser with (warm)water to clean the basin, keep the abrasive cleanser away, for It will cause damage to the surface.


1, PREINSTALLATION

1. In order to get installation easily, please read this instrucment carefully before and follow it , which can avoid unnecessary loss.
2. According to the component list, please check the product and all the components available , prepare the tools for installation.
3. when local water pressure is over 0.4 MPa(0.4kg), better change alu-plastic pipe from the usual inlet pipe.


4.while installing, better co-operation between two persons is necessary.

5. Better usage after sealed silica gel dried (more than 24 hours).

2、TOOLS

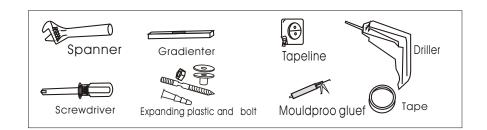


3, COMPONENT DRAWING

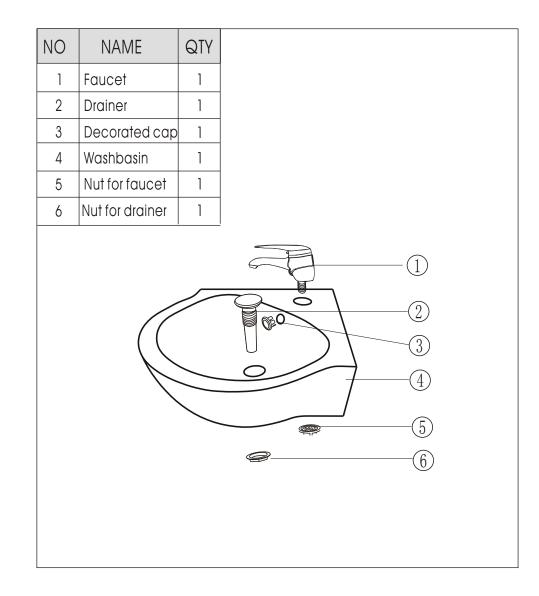


2

4, INSTALLATION


1) Fix the faucet and drainer followiing to step 3, try to fix the washbasin on the right place and keep it stand balanced.

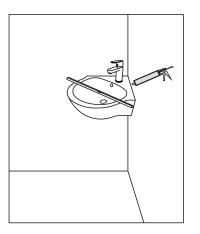


3) Take away the basin, use Ø10mmdriller to make four 60mm depthholes following the marks.

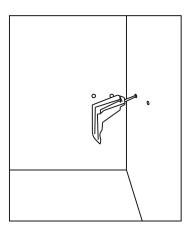

2) Someone holds the bsain on its place ,the other one remove the pedestal away,then put marks on the wall for the installing holes (two).

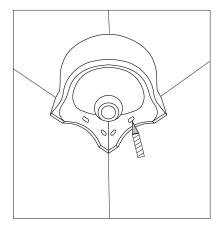

4) Put the expanding plastic into the hole, then fix the bolt with 60mm out of the hole.

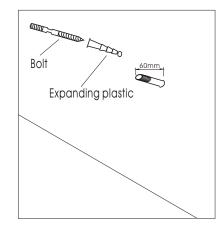

INDEX

1,	PREINSTALLATION ·······1
2、	TOOLS···································
3、	COMPONENT DRAWING
4、	INSTALLATION
5、	NOTES5