


26.0085 Installation Guide To Screws



1) Installation Fittings



2) Put the semi pedestal on wall and mark the installation sites

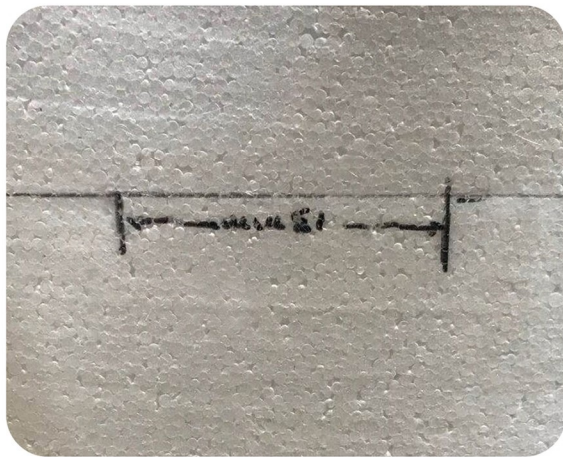

2) Put the semi pedestal on wall and mark the installation sites



3) Installed the fittings on the marked positions



4) Installed the semi pedestal



5) Cover the fittings

Eastbrook 

Eastbrook Road, Gloucester GL4 3DB

Technical Helpline : 01452 317890

Mon - Fri / 8am - 5pm

Email : technical@eastbrookco.com