



#### Bath front panel


#### Parts supplied





#### Tools required




01

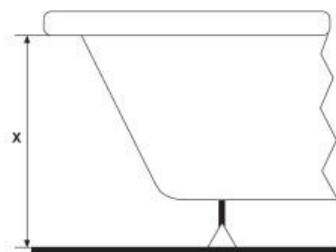


02

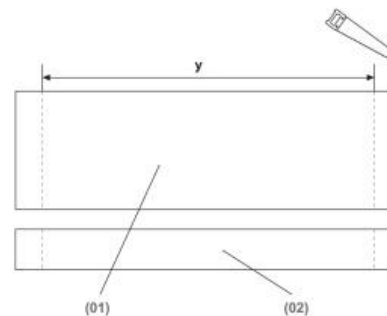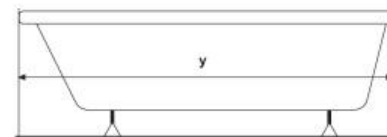

03

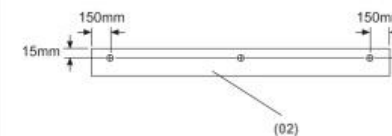


04

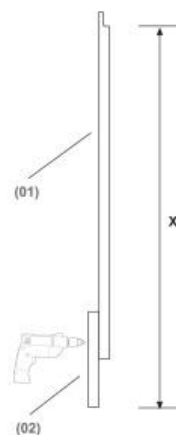


05



(03) x 3

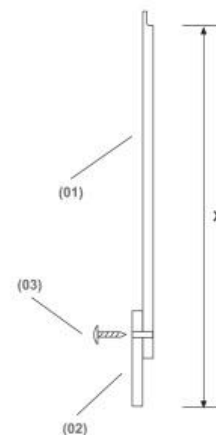

06

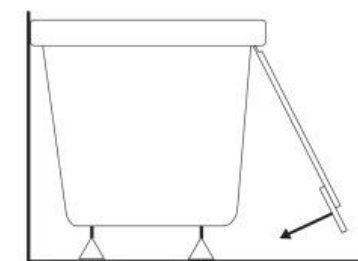

#### Safety

- ☒ For domestic use only
- ☒ Check the pack and ensure that you have all of the parts listed. If not, contact your local B&Q store who will be able to help you
- ☒ When you are ready to start, make sure that you have the right tools to hand, plenty of space and a clean, dry area for assembly

#### The four golden rules for care

- 1 To clean, use a clean damp cloth and dry with a soft dry cloth
- 2 Do not use any solvents, scourers, abrasives, bleach, acids, strong detergents, aggressive chemical cleaners or solvent type cleaning solutions on the product
- 3 Dry the product after use. Do not allow standing water to pool on the product
- 4 If the product is cut down, it must be sealed prior to installation with a waterproof sealant suitable for MDF material  
If not sealed, this will cause the panel to expand and would invalidate the guarantee

#### Please note:

Although these instructions are comprehensive, it is always recommended that a technically competent installer should undertake installation. Always ensure that the wall plugs or fixings are correct for the wall type. Plasterboard or stud walls may require specialised fixing. If this product is required to be cut to size, ensure that the room is well ventilated and that you use appropriate personal protective equipment. Retain these instructions for future use.

# Eastbrook

Eastbrook Road, Gloucester GL4 3DB  
Technical Helpline: 01452 317890  
email: [technical@eastbrookco.com](mailto:technical@eastbrookco.com)