

## Extendable Flexi Waste Pipe

---

- 1 Attach the flexi pipe to the plumbing outlet ensuring you have space to make the connections to the shower tray. This must be a watertight seal.
- 2 The flexi waste pipe will extend up to approx 1000mm. When using ensure a downward angle of the pipe is maintained for water flow, the pipe should be extended using smooth curves to avoid any blockages.



Eastbrook Road, Gloucester GL4 3DB  
Technical Helpline: 01452 317890  
email: [technical@eastbrookco.com](mailto:technical@eastbrookco.com)

## Extendable Flexi Waste Pipe

### 90mm & 50mm High Flow Waste

## Installation Instructions

### Before You Start:


- Please note that although these instructions are comprehensive we always recommend that a technically competent installer undertakes the installation.

**657FR - V1 - 08/2011 LH**

## 50mm High Flow Waste

- 1 Remove upper assembly and seals from the bottle trap.
- 2 Re-assemble onto the shower tray as shown opposite. (The upper seal is optional to fit and if preferred, because of aesthetics can be left out. A suitable quality silicone sealant should be used on all surfaces that are to go against the shower tray).
- 3 To clean the trap, remove the dome then twist and remove the inner section. Wipe clean, re-assemble and fit.

**NB** The grille or domed top (supplied) can be used.

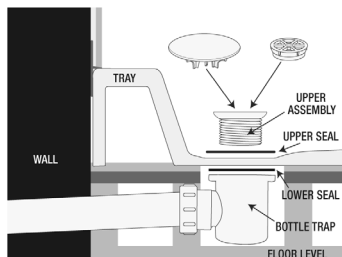

## 90mm High Flow Waste

- 1 Remove upper assembly and seal from the bottle trap.
- 2 Re-assemble onto the shower tray as shown below. (A suitable quality silicone sealant should be used on all surfaces that are to go against the shower tray).
- 3 To clean the trap, remove the dome then twist and remove the inner section. Wipe clean, re-assemble and fit.

