


We recommend that the installation is carried out by a qualified tradesman. The Halcyon Freestanding bath is only suitable for floor or wall taps. The floor or plinth, which the bath sits on, must be as level as possible to avoid any movement.

CONNECTING THE WASTE PIPE TO THE DRAIN PIPE

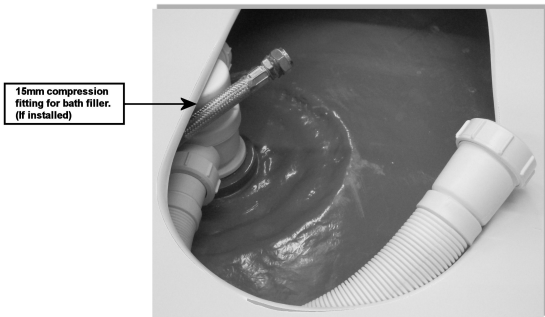

The connection can be made by means of a flexible pipe. (Not included)

This will enable you to tilt the bath upwards in order to make the connection and allow you to move the bath into the correct position.

To avoid water retention in the trap, the flexible pipe should have a continuous downward flow.

SECURING THE BATH TO THE FLOOR

Once all the plumbing is complete, it is important to check the connections for any leaks.

In order for the bath to be secured in it's final position, it is recommended that silicone sealant is applied between the base of the bath and the floor to stop any movement.

**CARRON BATHROOMS LTD
North Carron Works, Stenhouse Road, Carron, FALKIRK
Tel: 01324 638407 Fax: 01324 611490 Email: info@carronbathrooms.com**