


## Fitting instructions

- 1. Prepare circular hole in floor 100mm (4") minimum, 150mm (6") maximum, 75mm (3") deep.
- 2. Push the decorative cover (1) onto the lower portion of the upright tube (2). and screw the locknut (3) on to the thread as far as it will go.
- 3. Screw the mounting flange (4) onto the upright tube.
- 4. Tighten the locknut (3) on to the mounting flange (4).
- 5. Pass the feed pipes (5) through the hole in the floor and screw the mounting flange (4) to the floor.
- 6. Push the decorative cover (1) onto the floor.
- 7. Fit spout in top of upright tube (2)
- 8. Screw the collar (7) into the top of the tube (1), hand tightened only.
- 9. Remove the O ring (8) from the spout.
- 10. Fit the hose (9) to the outlet, and the handset (11) to the hose, ensuring sealing washers (10) are in place.
- 11. Connect the feed pipes to supply and check thoroughly for leaks

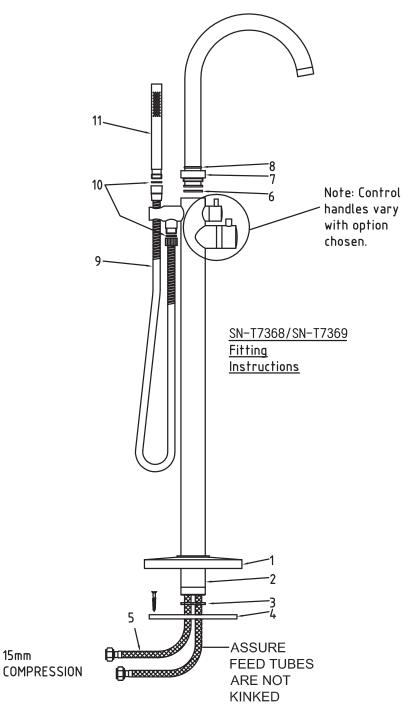

15mm