

Sanitary fixing sets WD 10

Eastbrook

Eastbrook Road, Gloucester GL4 3DB
Technical Helpline: 01452 317890
email: technical@eastbrookco.com



Usage

Suitable for:

- Concrete
- Natural stone
- Solid bricks
- Solid plasterboard
- Hollow blocks
- Plasterboard (only KM 10)
- Gypsum fibreboards (only KM 10)
- Chipboards (only KM 10)

Description

WD, WST, UST, BO

- Fixing sets consisting of UX-Plugs, stud screws, nylon nuts or flanged bushes with hexagon nut.

KM and WDP

- Specially designed for fixing washstands and urinals to plumbing units and cavity walls.


Examples of use









Installation

Installation tips

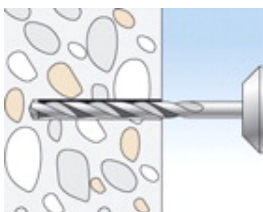

- For perforated building materials and aircrete, we recommend anchoring with the FIS VS 150 C injection system in the combination with the WST 10 x 140 FIP.
- Maximum load-bearing capacity is only achieved if the screw projects through the tip of the plug by at least 1 x screw diameter and the plug expands in the load-bearing anchoring base with its whole anchoring depth.
- Tiles and plaster are not classed as load-bearing.

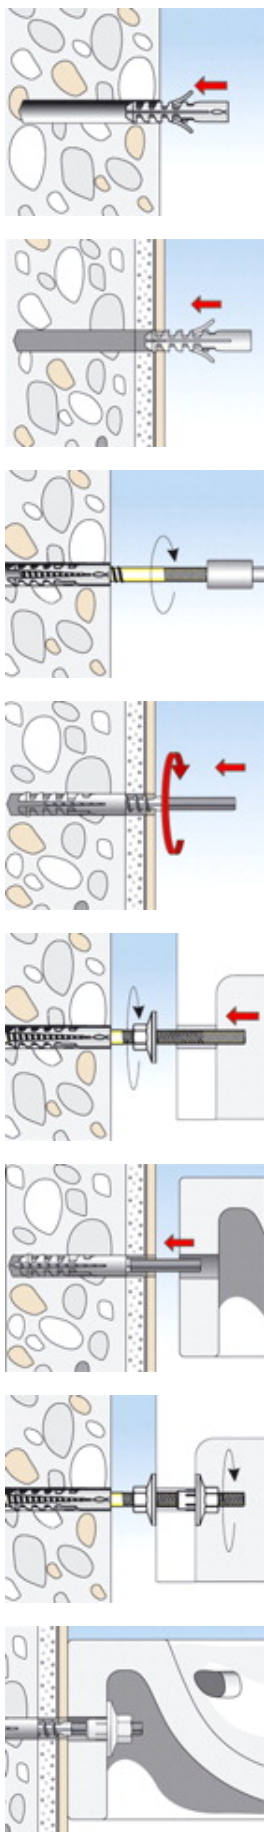

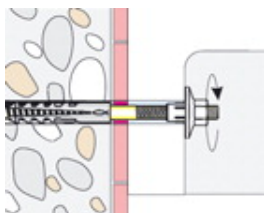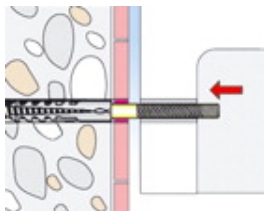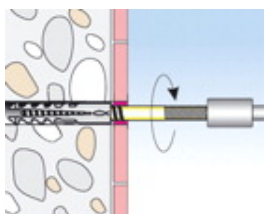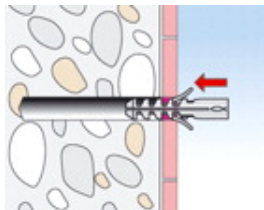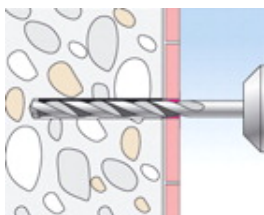



Technical data

Type	Art.-No.	 ETA  DIBt	ID	Contents per plastic bag [pcs]	Sales unit [pcs]	Outer carton [pcs]	GTIN (EAN Code)
WD 10 x 120	080655	-	5	2 wall plugs UX 14 x 75, 2 stud screws M 10x120 zinc-plated, 2 flanged nuts BU M10, installation instructions	50	50	4006209806555
WD 10 x 140	080656	-	2	2 wall plugs UX 14 x 75, 2 stud screws M 10x140 zinc-plated, 2 flanged nuts BDH M10, 2 hexagon nuts M10, installation instructions	50	50	4006209806562