
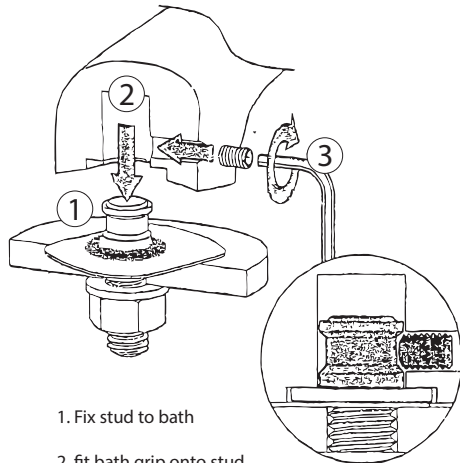


# TOP FIX BATH GRIP INSTALLATION INSTRUCTIONS

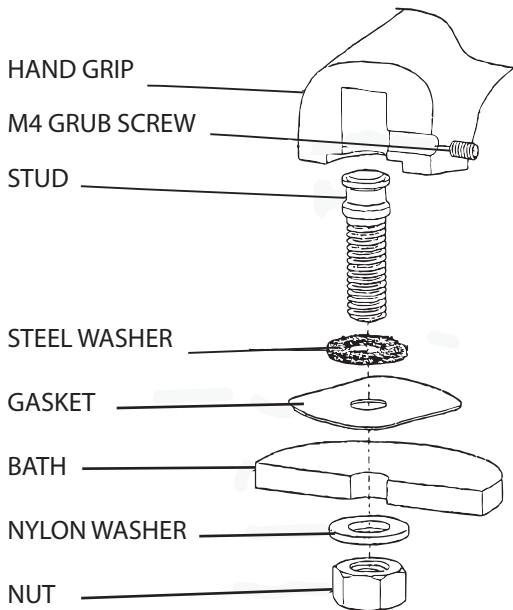

1. Fix stud to bath

2. fit bath grip onto stud

3. Secure bath grip using M4 grub screw

**IMPORTANT:** Ensure the M4 grub screw locates correctly into the stud channel as shown. Do not use power tools.