



Eastbrook Road, Gloucester GL4 3DB

Technical Helpline: 01452 317890

Email: technical@eastbrookco.com

INSTALLATION MANUAL

VOLENTE DOUBLE SLIDING DOOR

Eastbrook Code	Adjustment	Eastbrook Code	Adjustment
58.210	1160-1200	58.213	1560-1600
58.211	1360-1400	58.214	1660-1700
58.212	1460-1500	58.215	1760-1800
58.216	1960-2000		

This product should only be fitted by a fully qualified installer.




The product should be unpacked and checked for quality prior to install.


Any missing parts or damage must be reported to your supplier within 10 days of purchase and before installation.

No claims can be enforced outside of these terms.


TOOLS REQUIRED



TAPE MEASURE




RUBBER HAMMER



FLAT AND CROSS
HEAD SCREWDRIVERS




SPIRIT LEVEL




SILICONE & GUN



PENCIL




ELECTRIC DRILL

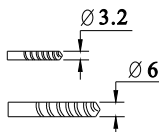


DRILL BIT




LIST OF SPARE PARTS

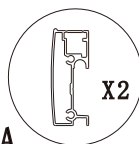


A

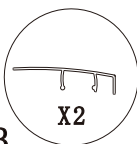


B

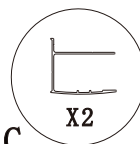


C

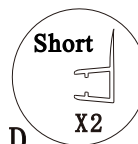


D

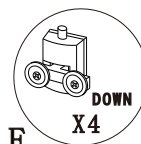


E

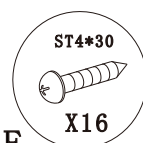


F

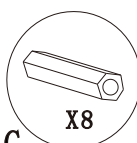


G

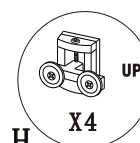


H

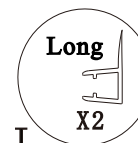


I

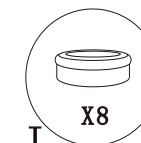

J

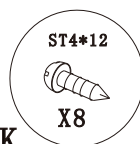


K

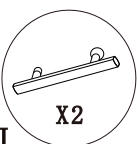


L




M

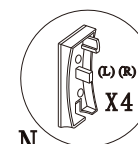


N

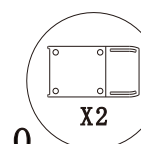

O

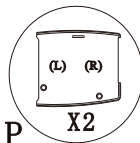


P

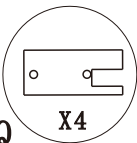

Q


PRODUCT SCHEMATIC DIAGRAM

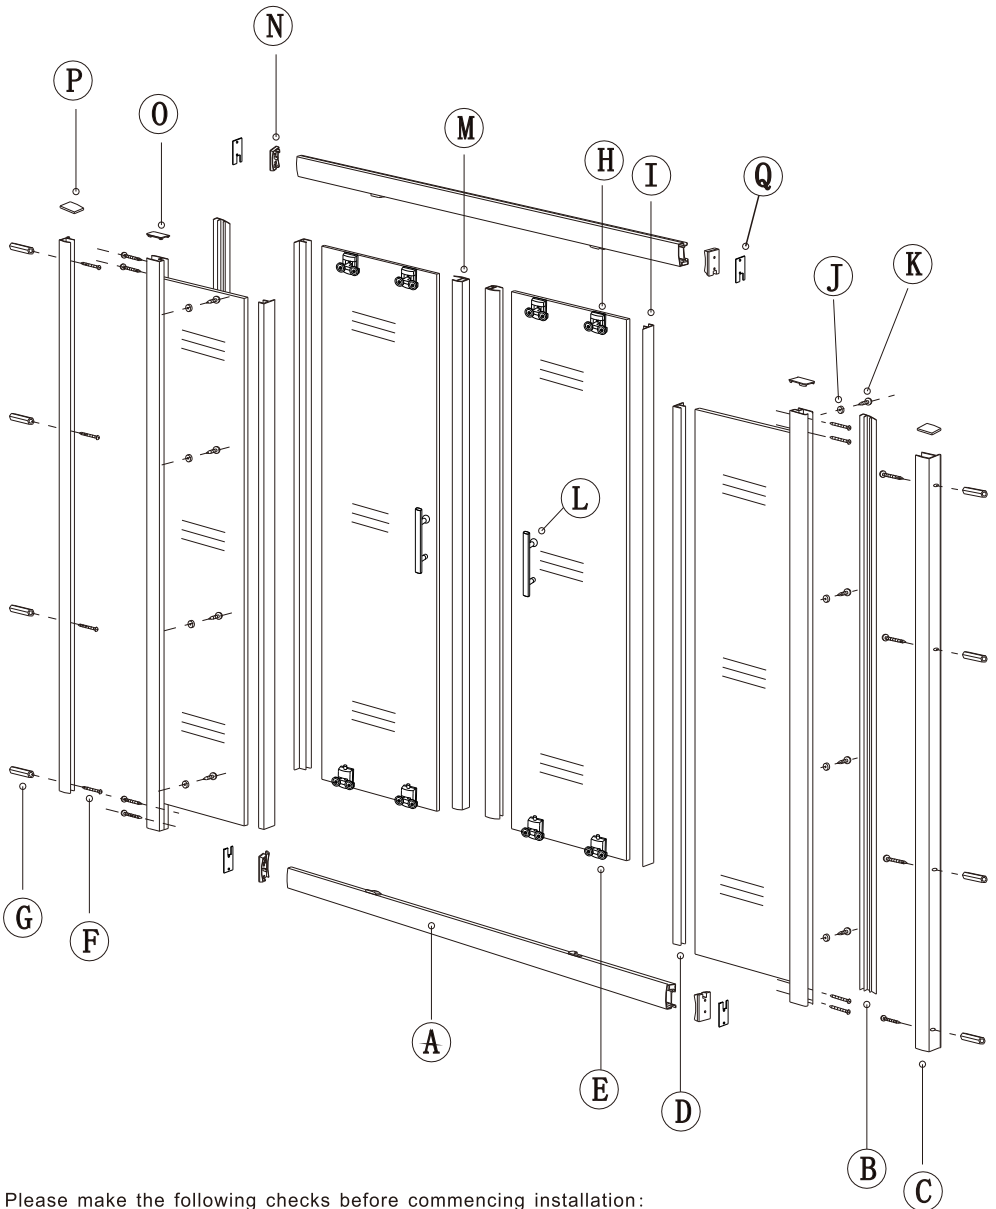

Please make the following checks before commencing installation:


- The product supplied is the required size and adjustment is compatible with the site situation
- Check all component parts are present; see packing list and product schematic diagram for reference.
- Make sure you have all the tools required.

1

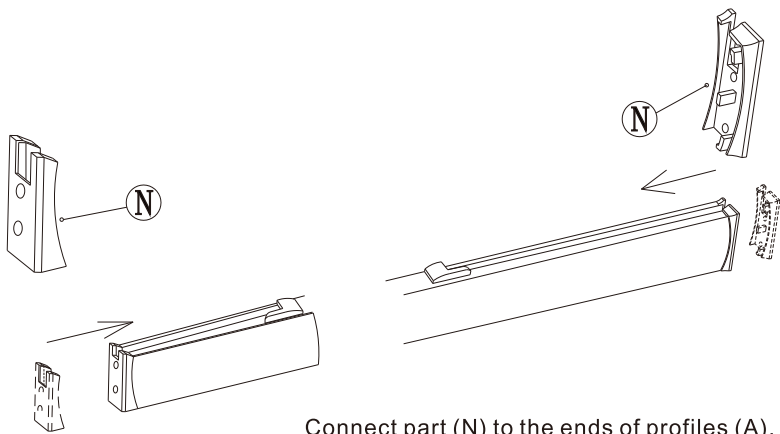


Connect part (N) to the ends of profiles (A).

2

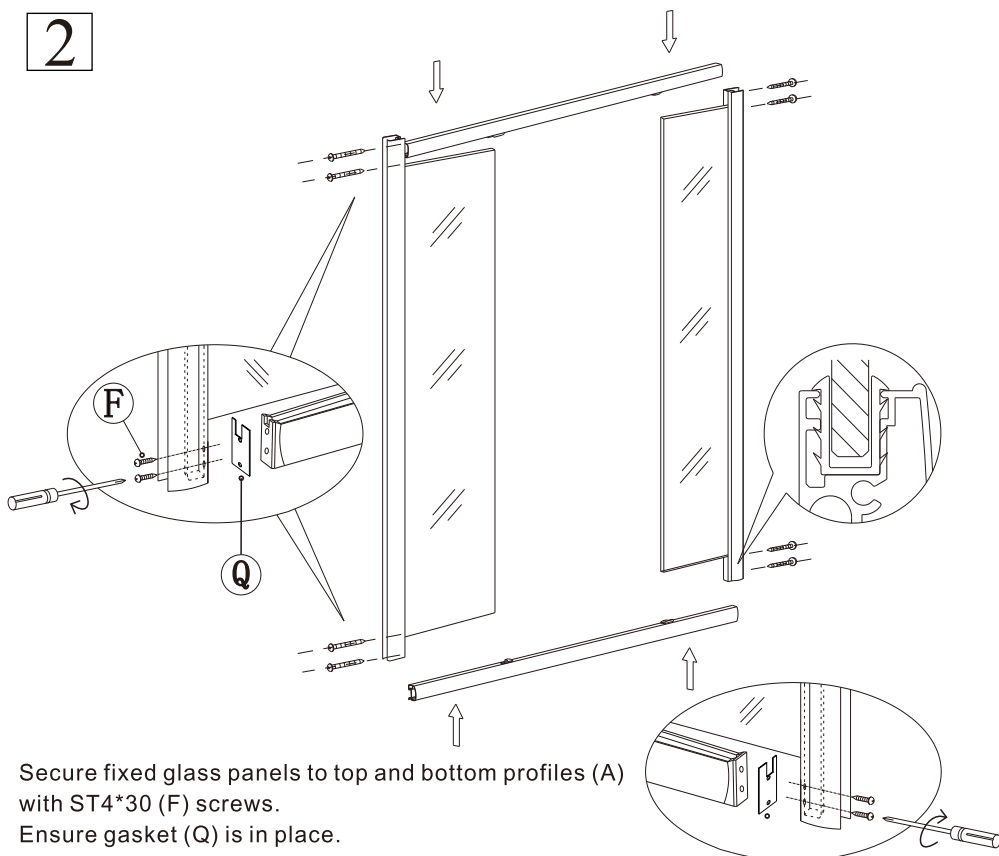


Secure fixed glass panels to top and bottom profiles (A) with ST4*30 (F) screws.
Ensure gasket (Q) is in place.

3

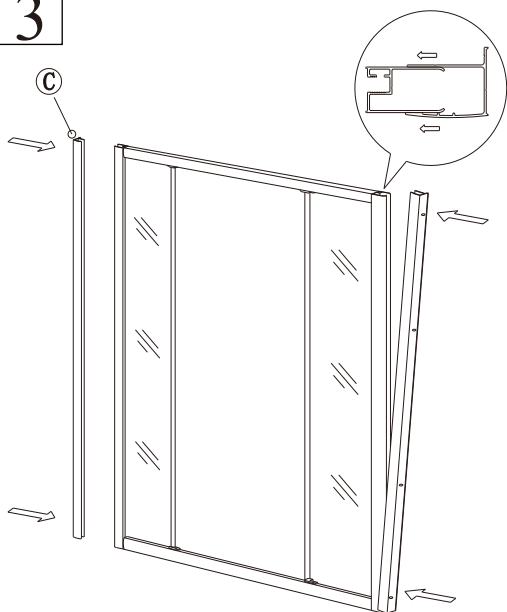


Place wall profiles (C) onto slider and lift onto tray.

4

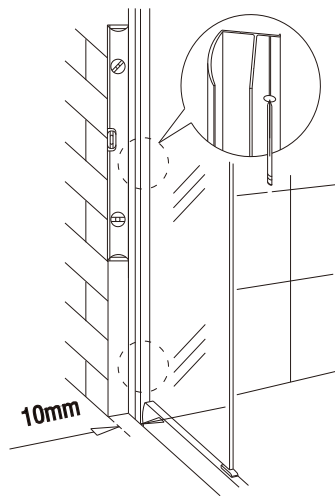

Level and mark wall profile fixing holes.


5

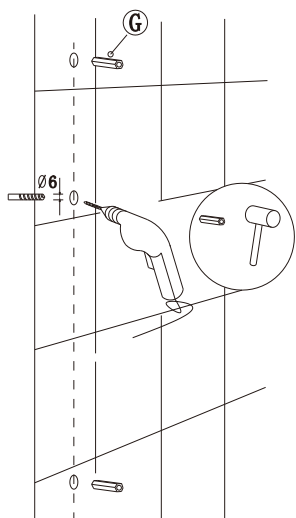

Drill fixing holes in wall with 6mm bit.


Fit wall plugs (G) into holes. Suitable hollow wall fixings if installing onto a stud wall.

6

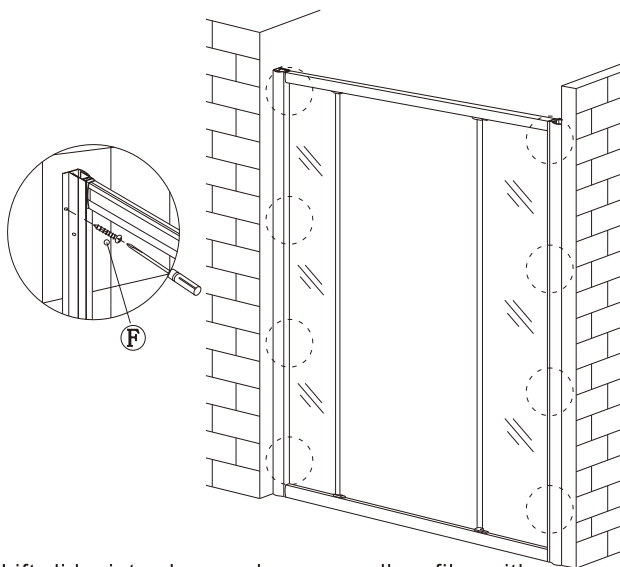


Lift slider into place and secure wall profiles with ST4*30 (F) screws.

7

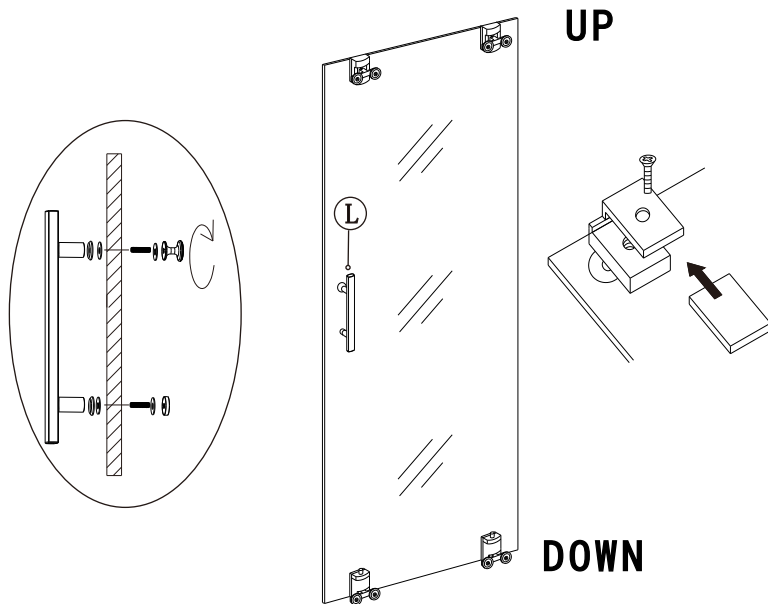


Fix top rollers (H) and bottom rollers (E) to both doors.
Fix handle (L) to both doors.

8

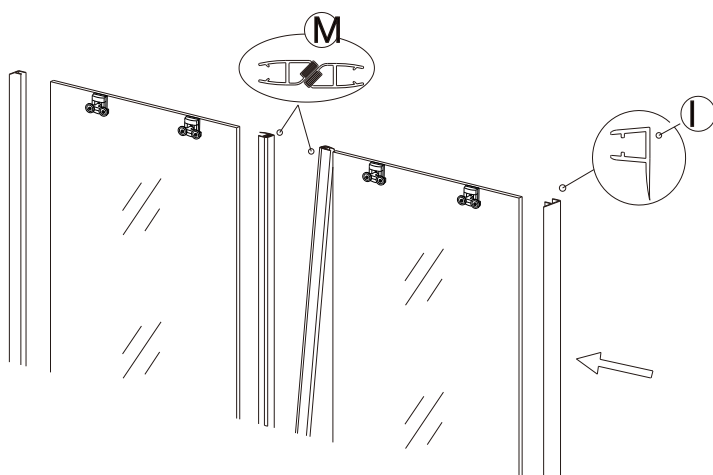


Fix magnetic strips (M) and anti-water strips (I) to the doors.


9

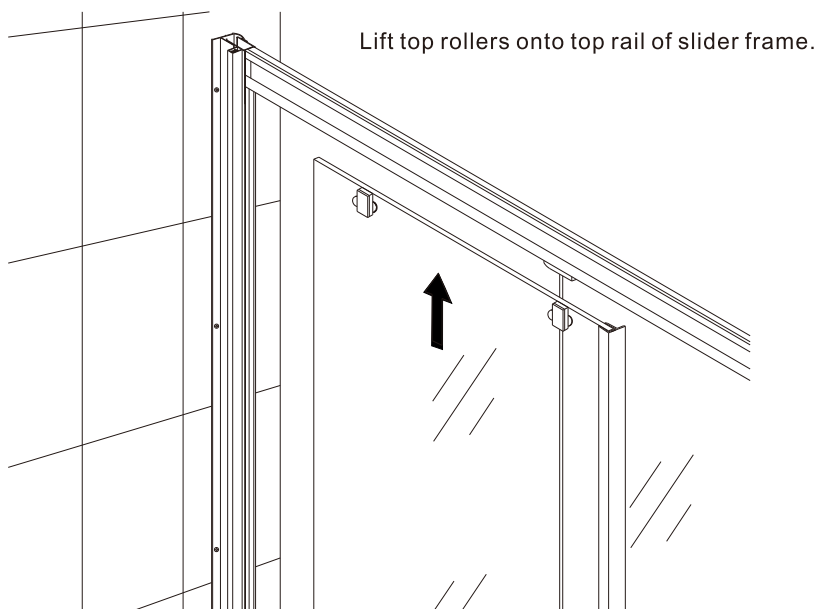

10

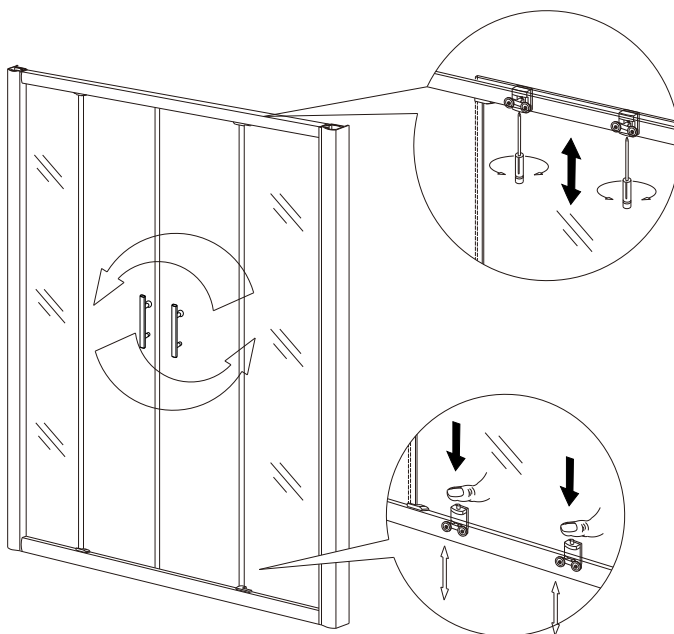


11

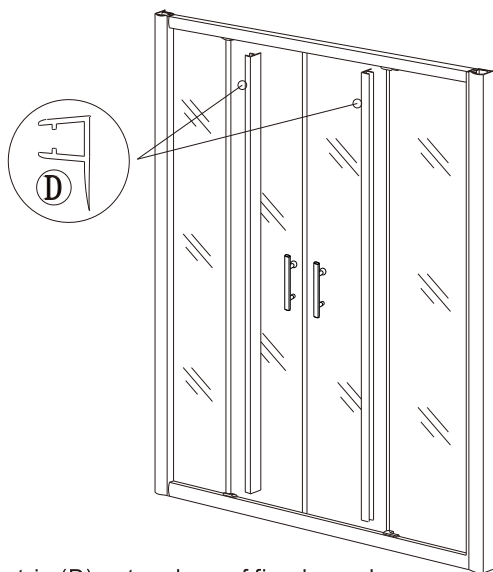

Fit anti-water strip (D) onto edges of fixed panels.


12

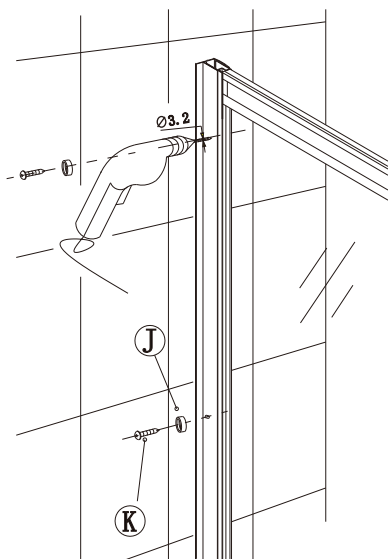

Adjust as required.


Drill frame with 3.2mm bit and secure with ST4*12 (K) screws and washer (J).

13

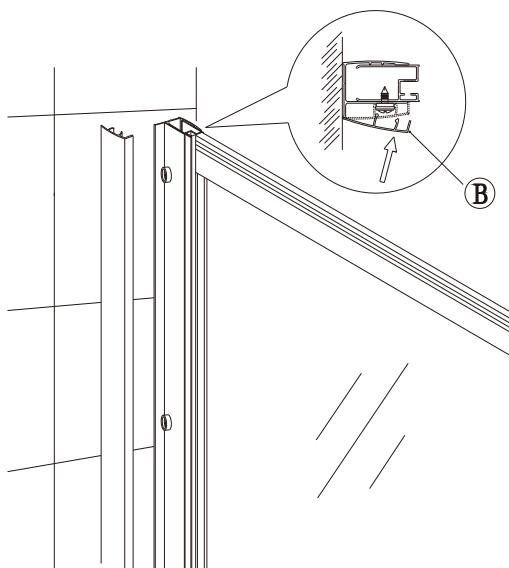

Clip screw cover profiles onto washer (J).

14

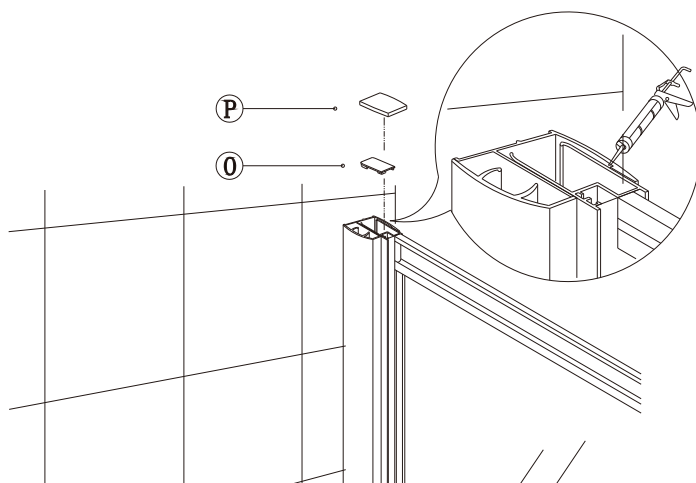

Put a small bead of silicone around the top of the wall profile and frame and secure caps (P) and (O) as shown.

15



Please ensure silicone sealant is on the outside only as shown.



Eastbrook Road, Gloucester GL4 3DB

Technical Helpline: 01452 317890

Email: technical@eastbrookco.com

Cleaning and Maintenance of Shower Enclosures

Do not clean the shower enclosure with irritant detergents such as alcohol, bleach or other chemical cleaners.

Only clean with mild soapy water or a proprietary cleaner where the label advises it is suitable for the materials the enclosure is constructed from. Test on a small area first.

For treating limescale we would recommend distilled vinegar in a half and half solution with water.

Following installation should you find that there is a notable noise when the glass door moves you may add a small amount of silicon lubricant onto the roller wheels and tracks, hinges or clips.

It is the responsibility of the product owner to maintain the product as recommended above. Also, to check for parts which have broken or become loose to protect against failure of the enclosure.