


EASY ACCESS CONCEALED CISTERN

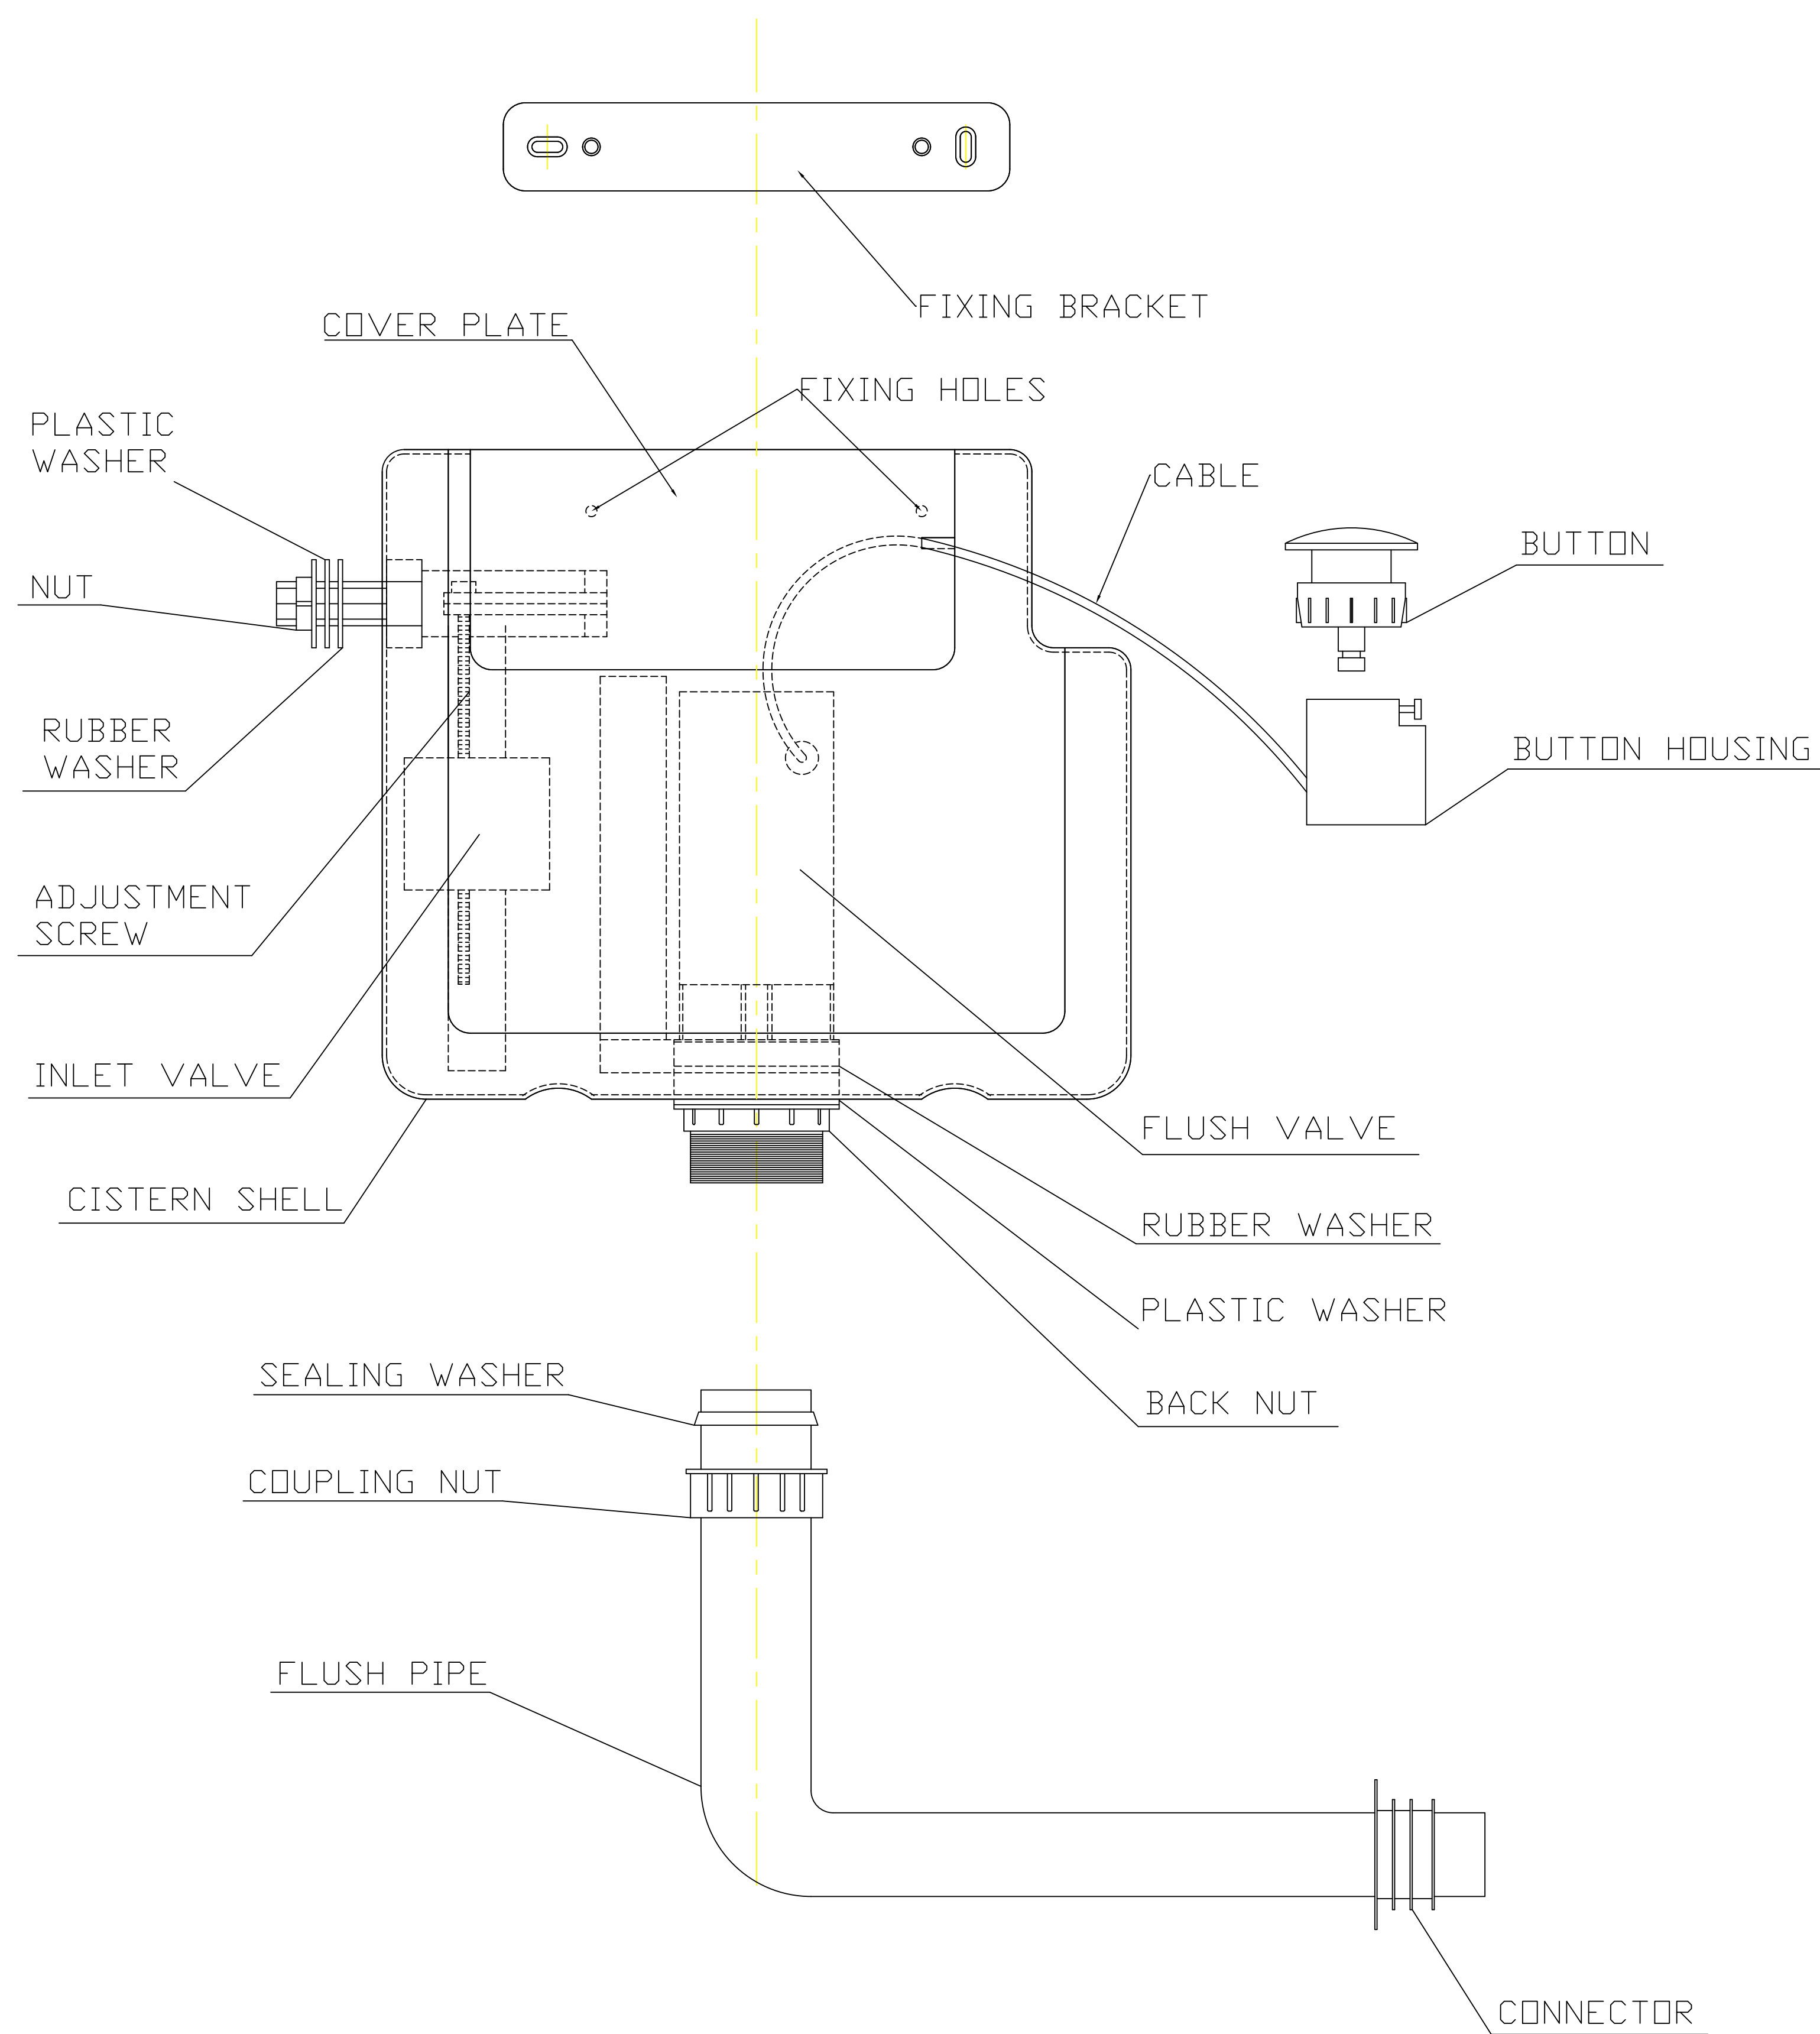

REMOVE THE EASY ACCESS COVER PLATE AND ASSEMBLE THE CISTERN AND FITTINGS AS SHOWN ABOVE, MAKING SURE THAT THE CABLE IS TO THE R.H SIDE AS YOU LOOK TO THE FRONT, THE CABLE CAN THEN BE PLACED INTO THE SLOT IN THE EASY ACCESS COVER PLATE AND CLIPPED INTO POSITION. (DO NOT KINK THE CABLE) .

MARK THE POSITION OF WHERE THE CISTERN IS TO BE FITTED, ENSURING THAT THERE IS AT LEAST A 20 mm GAP BETWEEN THE TOP OF THE CISTERN AND THE UNDERSIDE OF THE WORKTOP WHEN FITTING INTO A WC UNIT. USE THE FIXING BRACKET AND FIXING HOLES TO FIX THE CISTERN INTO W.C UNIT OR WALL CAVITY.

MARK OUT THE SIZE THAT THE FLUSH PIPE NEEDS TO BE AND TRIM USING A FINE TOOTHED SAW. CONNECT THE FLUSH PIPE TO THE CISTERN USING THE COUPLING NUT AND WASHER.

MARK POSITION OF THE BUTTON ON THE FRONT FASCIA OF THE W.C UNIT OR DUCTING AND DRILL A 40mm HOLE ENSURING THAT THERE IS ENOUGH ROOM FOR THE BUTTON HOUSING BEHIND THE FASCIA. FIX THE BUTTON INTO POSITION BY TIGHTENING THE BACK NUT, CLIP THE BUTTON HOUSING ONTO THE BUTTON ENSURING NOT TO BEND OR KINK THE CABLE.

THE WATER LEVEL IN THE CISTERN CAN BE SET BY TURNING THE ADJUSTING SCREW ON THE INLET VALVE IF REQUIRED.

CONNECT THE W.C PAN AND FIX ACCORDING TO THE MANUFACTURERS INSTRUCTIONS.