


Eastbrook

Eastbrook Road, Gloucester GL4 3DB
Technical Helpline: 01452 317890
email: technical@eastbrookco.com

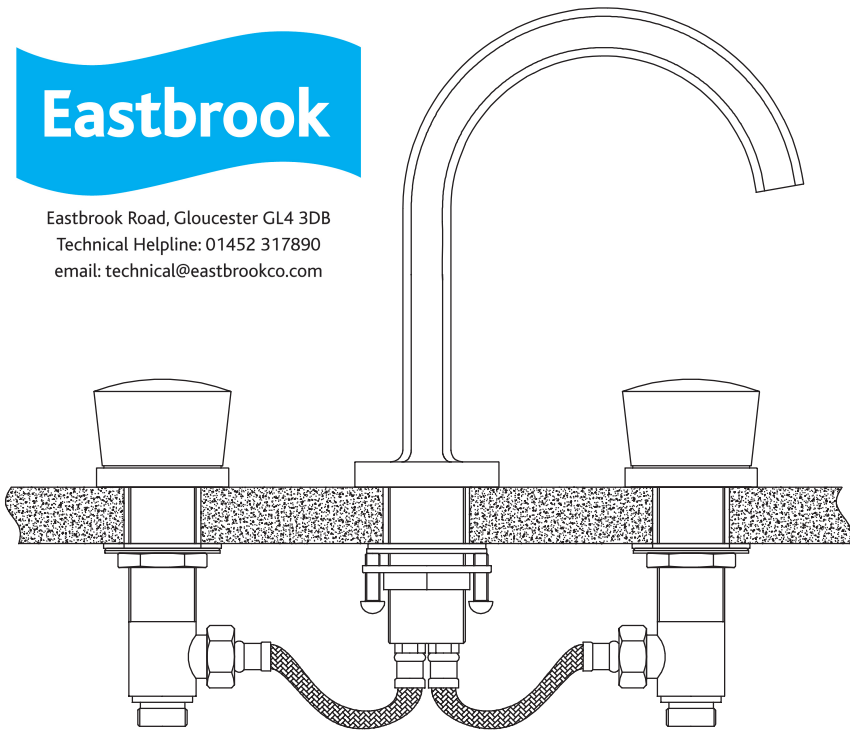

EB Code	56. 2051
Manufacturers Code	5212A-E1C
Item	Albermarle bath filler

1. Spout
2. Rubber gasket
3. Metal gasket
4. Fixing nut
5. Screw
6. Upper body
7. Fixing nut
8. Metal gasket
9. Flange O-ring
10. Flange
11. Handle

1. Screw the two inlet hose into the faucet, and put the spout (picture1) into the hole;
2. Use the bolt (picture 2, 3 and 4) to fix the faucet in the hole, and screw the two screws (picture 5) into the fixing nut (picture 4).
3. Unscrew the flange (picture 10) to pull the handle out.
(The same as to make the other handle)
4. Put the upper body (picture 6) into the hole and use the bolt (picture 9, 8 and 7) to fix the upper body (picture 6) in the hole.
5. Screw the flange (picture 10) into the upper body (picture 6), after that, fix the handle into the upper body (picture 6). (It have a colour circle inside the handle, and it is easy to differentiate hot and cold water).
6. Screw the inlet hose (red and blue inlet hose) into the upper body hose.

