
INSTALLATION GUIDE

AS-1663 /1763 Washbasin with pedestal 56.0036 Orba basin 569mm 1TH 56.0037 Orba pedestal





Eastbrook Road, Gloucester GL4 3DB Technical Helpline: 01452 317890 email: technical@eastbrookco.com 5) Install the basin and pedestal aimingly to the bolt, then fix the gasket tray, nut orderly, and tighten it.

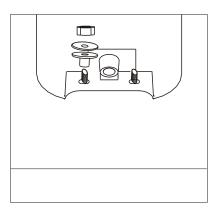

6) Smear mouldproof glue on connections where basin and wall, pedestal and foot meet fix the inlet and drain pine. better usage after 24 hours.




5, NOTE

- 1.Donot throw sundries (like paper, bumf) into the basin, for it will jam the drain pipe.
- 2. Keep the basin clean.
- 3.using neutral cleanser with (warm)water to clean the basin, keep the abrasive cleanser away, for It will cause damage to the surface.

1. PREINSTALLATION


- 1. In order to get installation easily, please read this instrucment carefully before and follow it, which can avoid unnecessary loss.
- 2. According to the component list, please check the product and all the components available, prepare the tools for installation.
- 3. when local water pressure is over 0.4MPa(0.4kg), better change alu-plastic pipe from the usual inlet pipe.
- 4. while installing, better co-operation between two persons is necessary.
- 5. Better usage after sealed silica gel dried (more than 24 hours).

2, T00LS

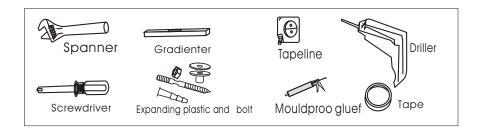

3, COMPONENT DRAWING

NAME	QTY
Faucet	1
Drainer	1
Decorated cap	1
Washbasin	1
Nut for faucet	1
Nut for drainer	1
Pedestal	1
	Faucet Drainer Decorated cap Washbasin Nut for faucet Nut for drainer

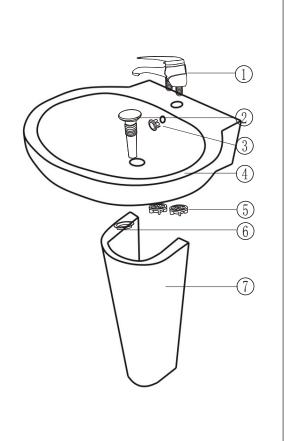


4. INSTALLATION


1) Fix the faucet and drainer followiing to step 3, try to fix the washbasin and pedestal on the right place and keep it stand balanced.




3) Take away the basin, use Ø10mm driller to make two 60mm depth holes following the marks.

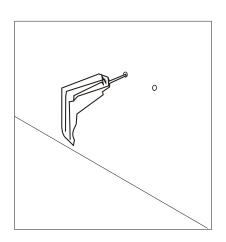

2) Someone holds the bsain on its place ,the other one remove the pedestal away,then put marks on the wall for the installing holes (two).

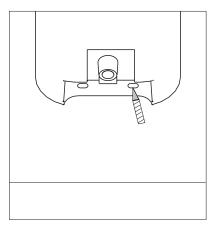

4) Put the expanding plastic into the hole, then fix the bolt with 60mm out of the hole.

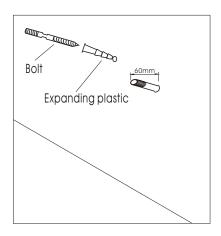

 $\overline{2}$

INDEX

1、	PREINSTALLATION	1
2、	TOOLS	۰]
3、	COMPONENT DRAWING	2
4、	INSTALLATION	3
5、	NOTES	.5