




The bath must be installed level and the distance from the floor to the underside of the roll must be set to a minimum of 540mm.

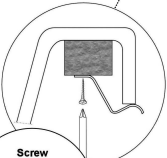

Screw  
the clips to the  
blocks underneath  
the bath roll.  
Screw locations  
are pre-drilled.

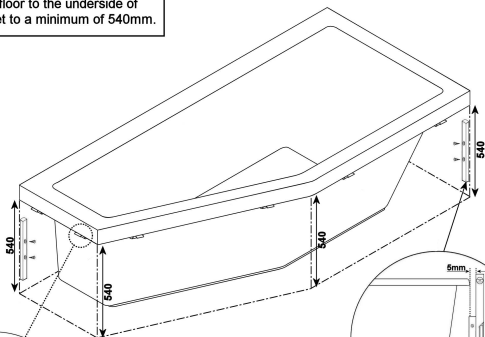

Insert the  
panel into  
the clip starting at  
one end of the bath  
and continue all the way  
round to the  
other end.

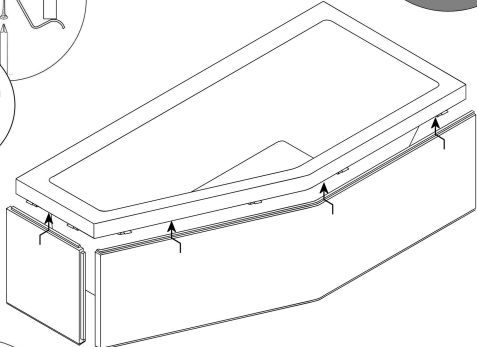

The panel is supplied  
to fit but if the walls are  
uneven or the walls are  
tiled making the panel too long,  
you may have to cut the  
ends of the panel to fit.  
This is done using a  
fine toothed saw.