

Eastbrook Road, Gloucester GL4 3DB
Technical Helpline: 01452 317890
email: technical@eastbrookco.com



Technical drawing of the 1000 Series water purifier showing front and side views with dimensions.

Front View Dimensions:

- Top width: 445
- Top panel height: 516
- Lower body height: 568
- Total height: 1109
- Lower body width: 135
- Bottom flange height: 220




Side View Dimensions:

- Top panel depth: 13 ~ 63
- Top panel height: 13
- Top panel width: 80
- Upper body diameter: $\varnothing 45$
- Upper body height: 56
- Lower body diameter: $\varnothing 93$
- Lower body height: 110

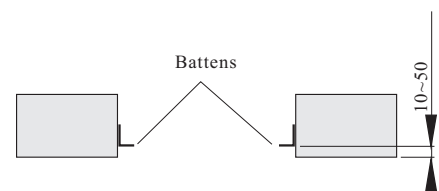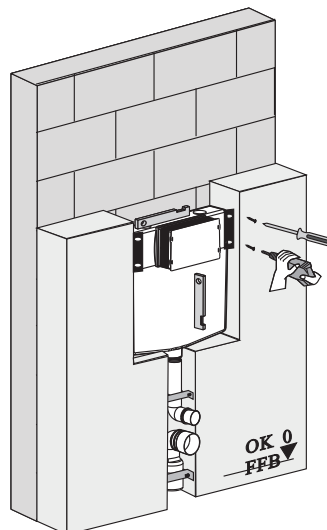





- (1) Fit partition wall spacer to hidden cistern;
- (2) Batten walls in position required by your installation
- (3) Attach cistern bracket to battens

5.

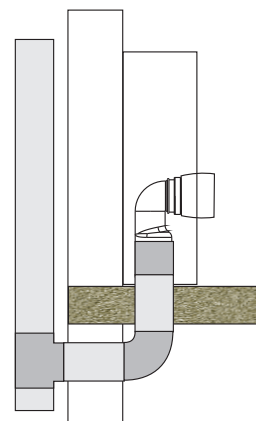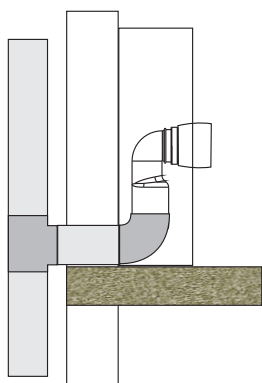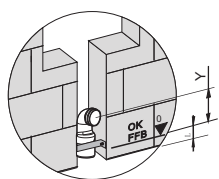





Fit soil pipe as required

6.

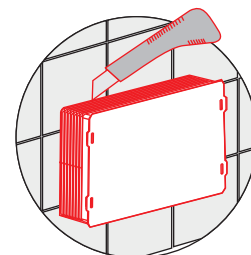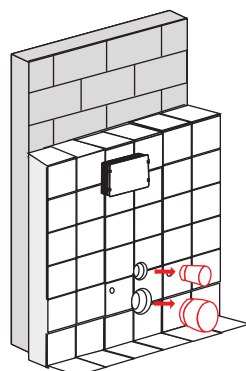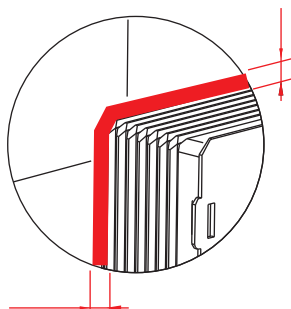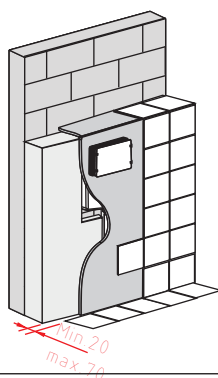









Trim wall spacer.

7. Install flush plate bracket, push rods should screw up to smooth shoulder, trim accordingly and install.
Fit flush plate(supplied separately).

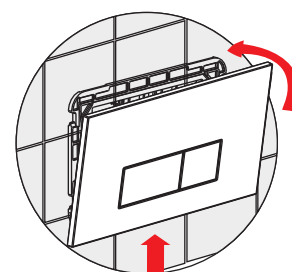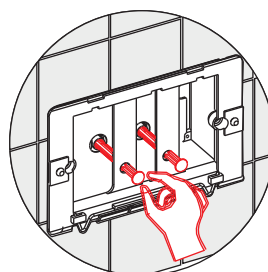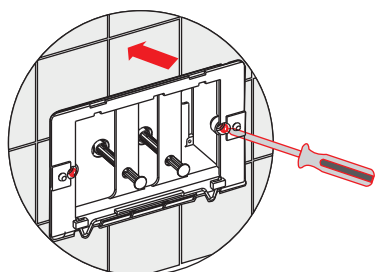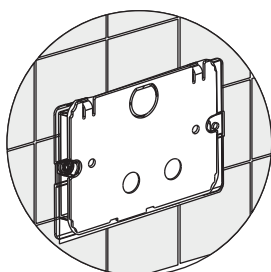

Flush plate not supplied


8. Install WC

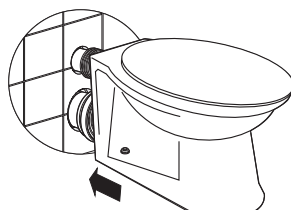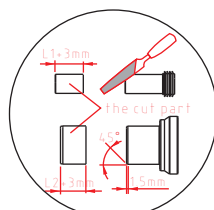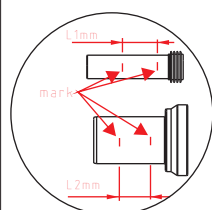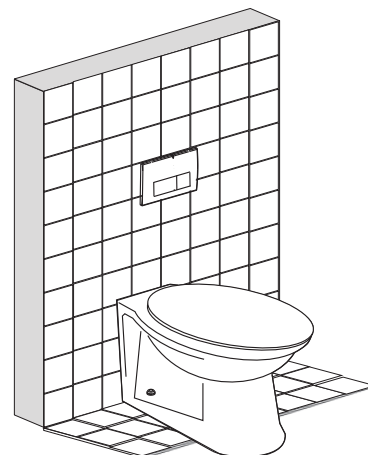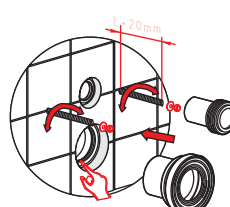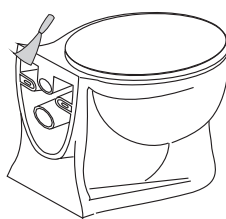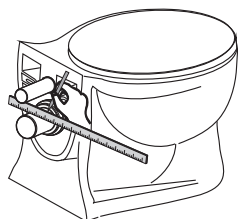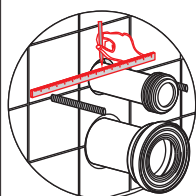


Product Installation

This product should only be filled by a fully qualified installer.

1. Dimensions

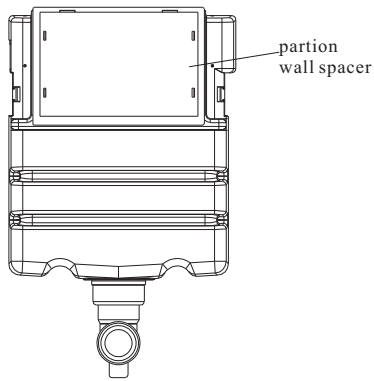


Flush plate and soil pipe are not supplied

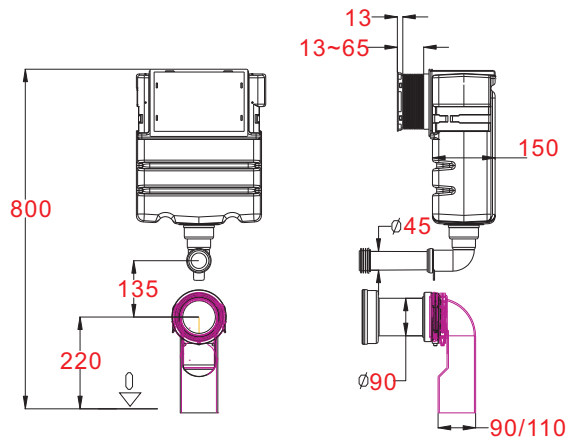


Height of soil outlet is depended on choosen pan

2


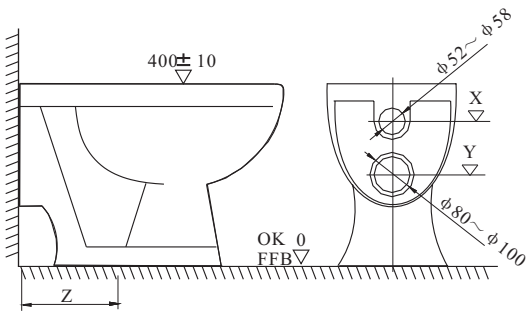


Measure the height from the centre of fill pipe to the floor X, the height from the centre of flush pipe to the floor Y before install.

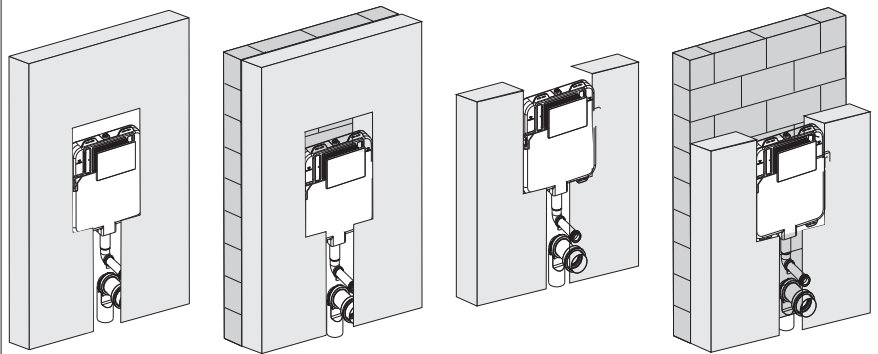




Examples of types of installation

3.

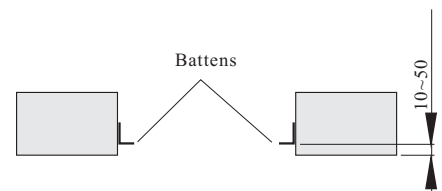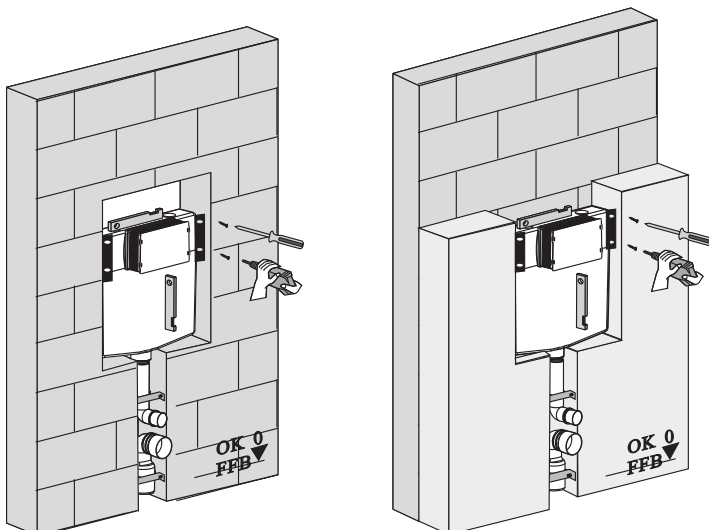





- (1) Fit partition wall spacer to hidden cistern;
- (2) Batten walls in position required by your installation
- (3) Attach cistern bracket to battens

5.

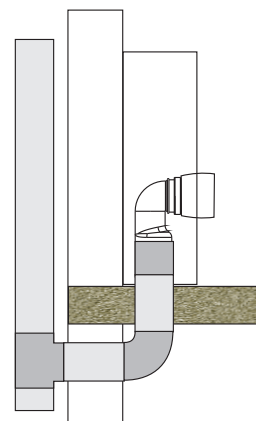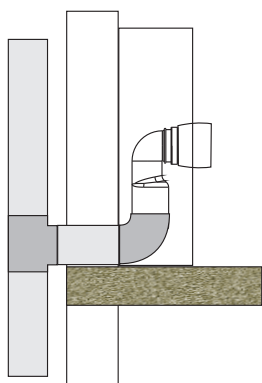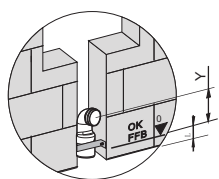





Fit soil pipe as required

6.

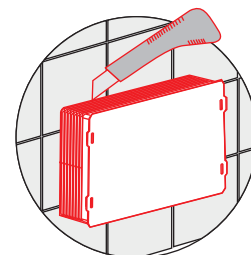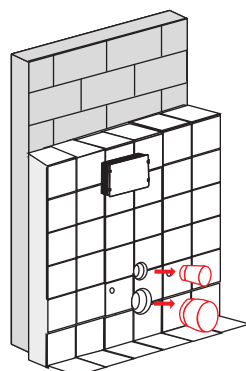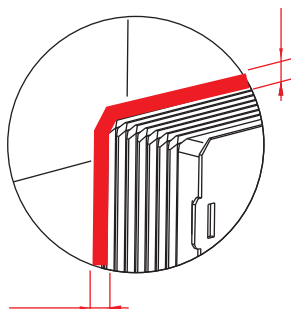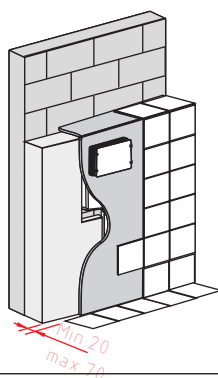

Trim wall spacer.

7. Install flush plate bracket, push rods should screw up to smooth shoulder, trim accordingly and install.
Fit flush plate(supplied separately).

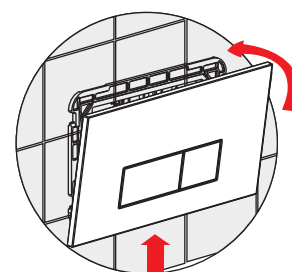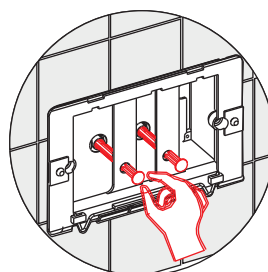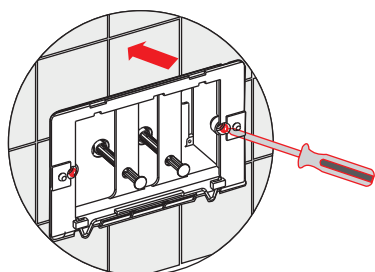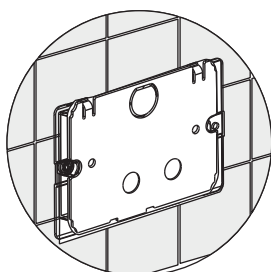

Flush plate not supplied

8. Install WC

