


INSET CUT OUT

UNDERMOUNT CUT OUT

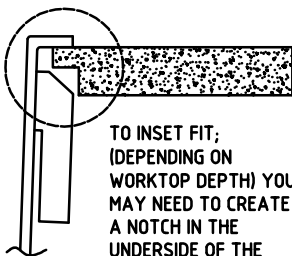

TO INSET FIT;
(DEPENDENT ON
WORKTOP DEPTH) YOU
MAY NEED TO CREATE
A NOTCH IN THE
UNDERSIDE OF THE
WORKTOP TO ALLOW
CLEARANCE FOR THE
OVERFLOW BODY

