


CONCRETE
FLOOR MOUNTING
4 PLACES



3/8-16
HEX NUT




3/8"
SPLIT LOCK WASHER



3/8" X 1 3/4" DIA.
FENDER WASHER



3/8-16 X 3 1/2"
STUD

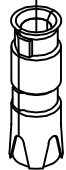

3/8-16
CONCRETE ANCHOR
(REQUIRES A 5/8" DIA. DRILLED
HOLE, APPROX. 2 1/2" DEEP.)

CONCRETE-FLOOR MOUNTING

1. PLACE THE RACK WHERE IT WILL BE PERMANENTLY LOCATED AND DRILL A 5/8" DIA. BY 2 1/2" DEEP HOLE (FROM FLOOR LEVEL) THROUGH EACH OF THE FOUR HOLES IN THE BASE ANGLES.
2. SCREW THE STUDS INTO THE ANCHORS FROM THE TOP UNTIL THEY PROTRUDE APPROX. 1/2" BEYOND THE BOTTOM EDGE.
3. INSERT ANCHOR/STUD COMBINATION INTO EACH OF THE FOUR HOLES.
4. ADD TO EACH STUD: ONE FENDER WASHER, ONE SPLIT LOCK WASHER AND ONE HEX NUT.
5. TIGHTEN DOWN ALL NUTS SECURELY.