
This product should only be fitted by a fully qualified installer.


49.3201A/49.3202A/49.3203A






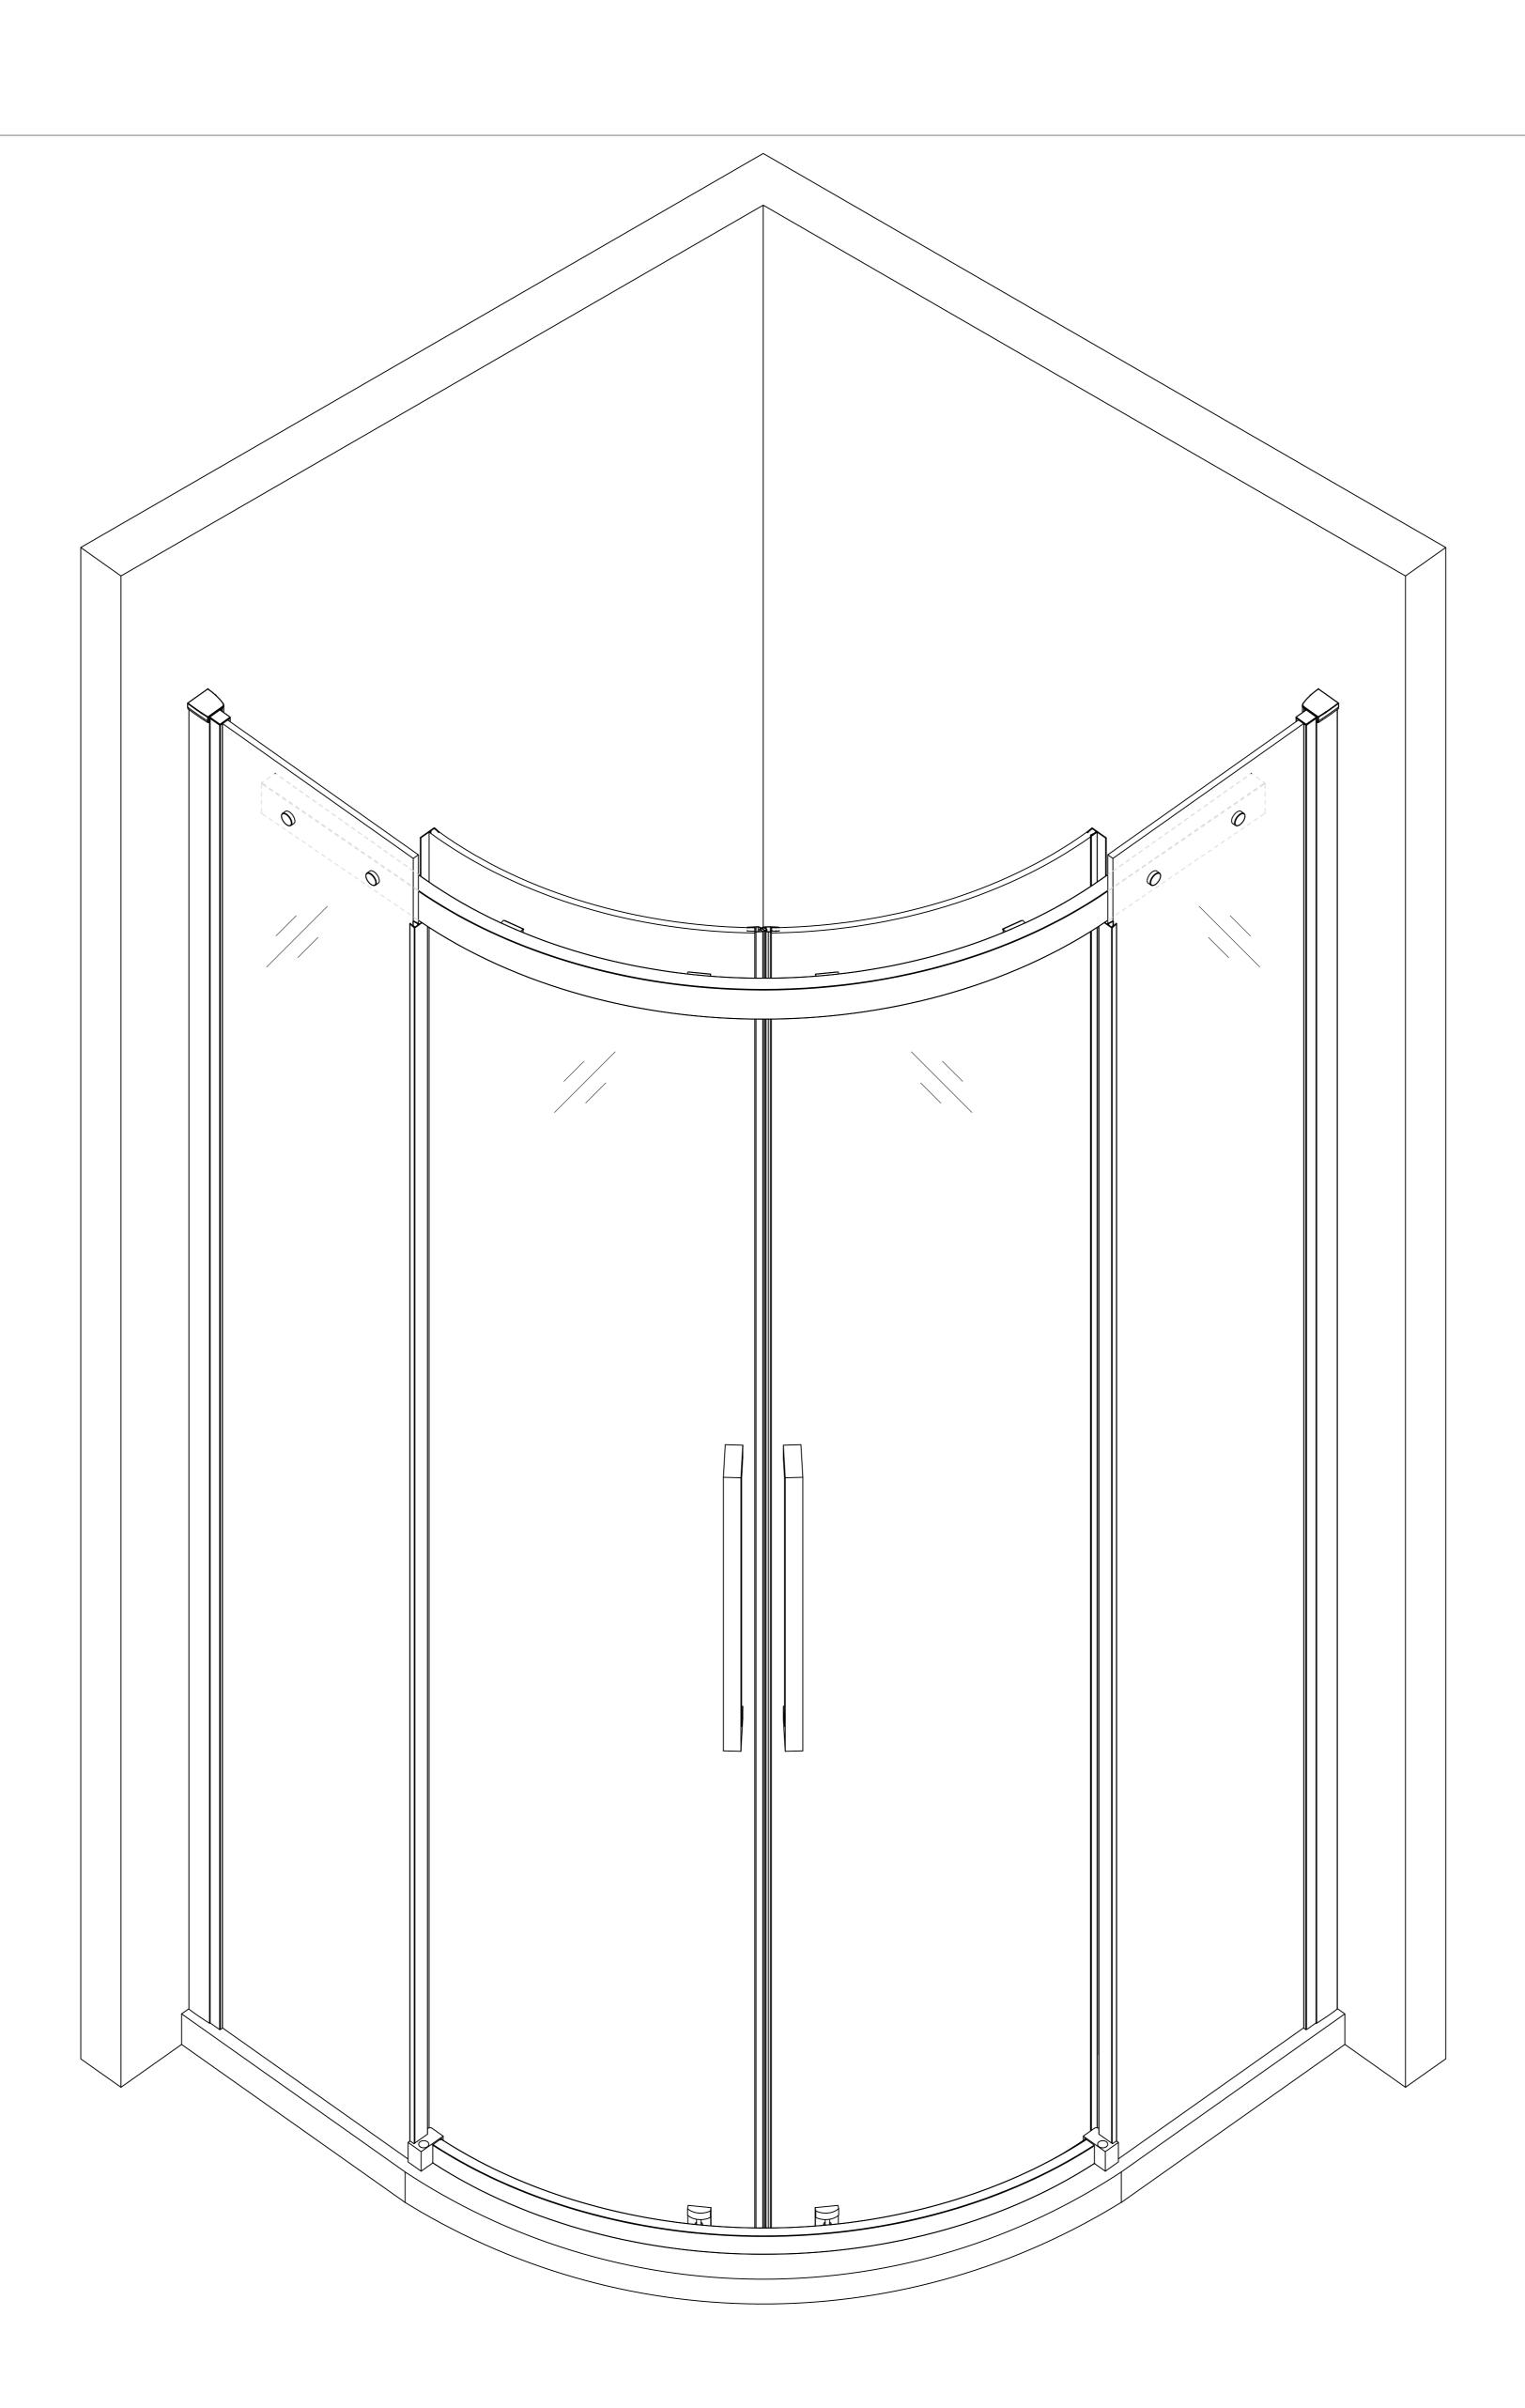



Eastbrook Road, Gloucester GI4 3DB Technical Helpline:01452 317890 email:technical@eastbrookco.com

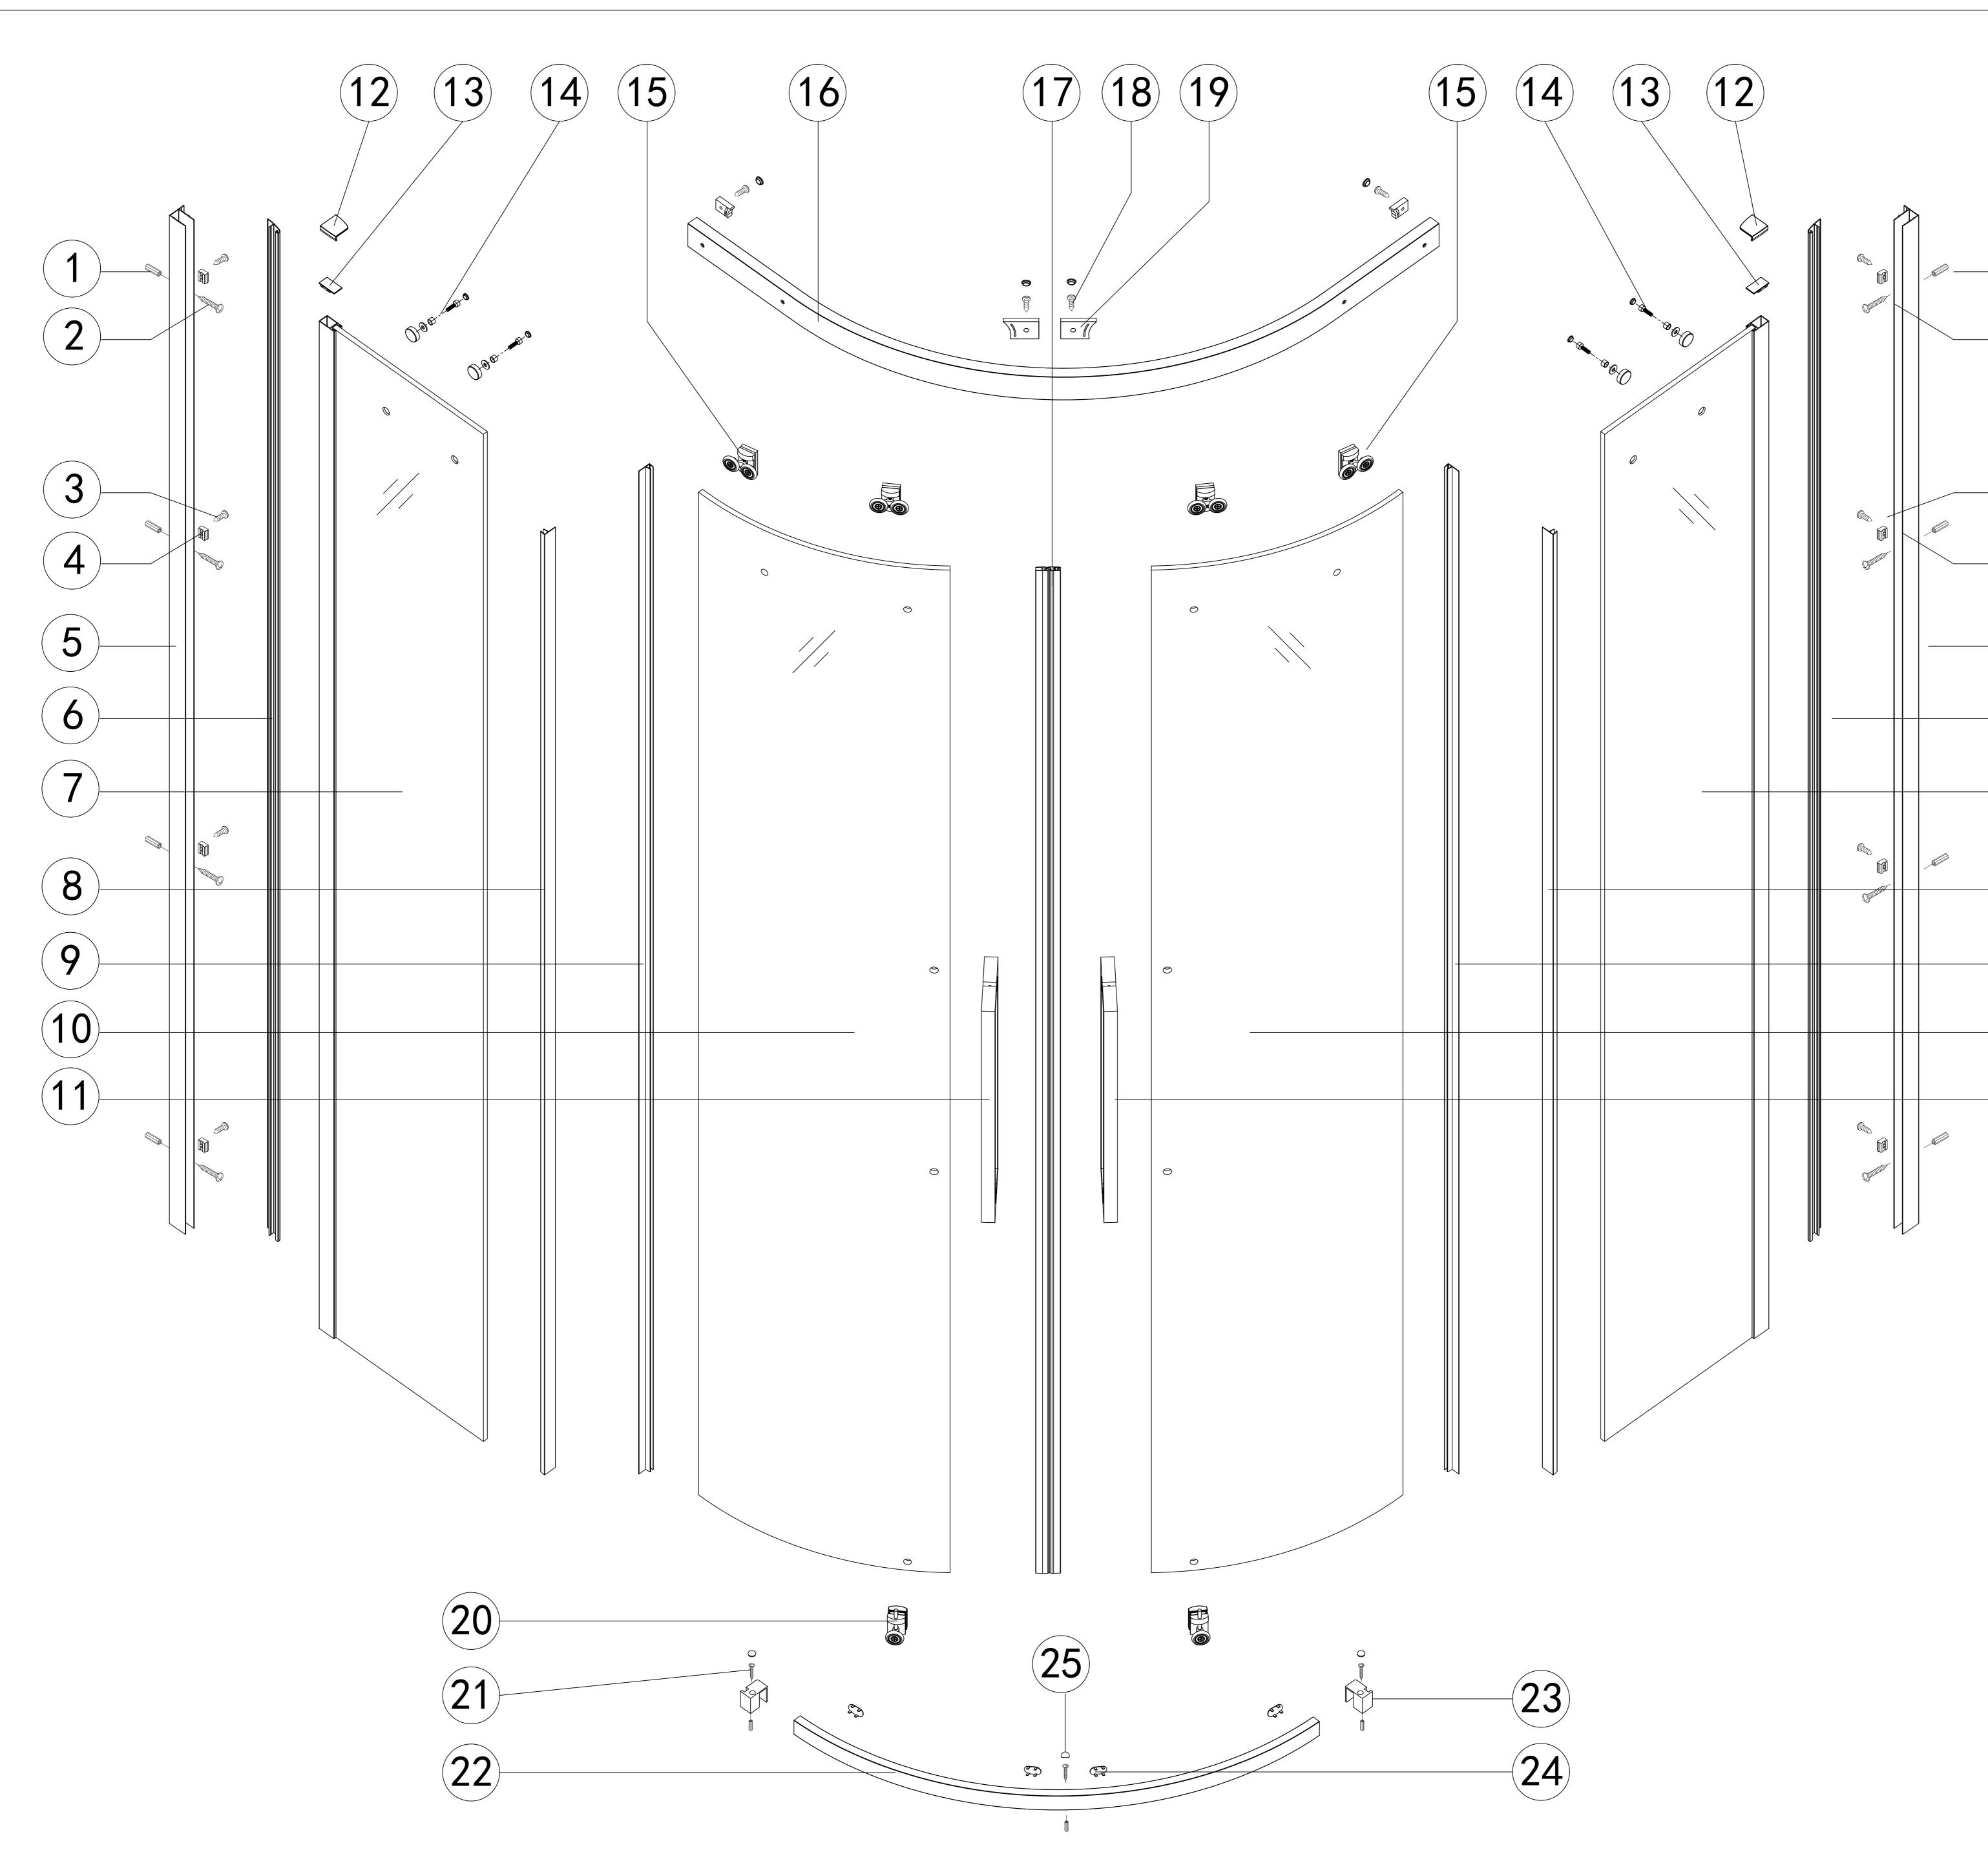





-3 -4 -5 -6 -7 -8 -9 -10 -10-11

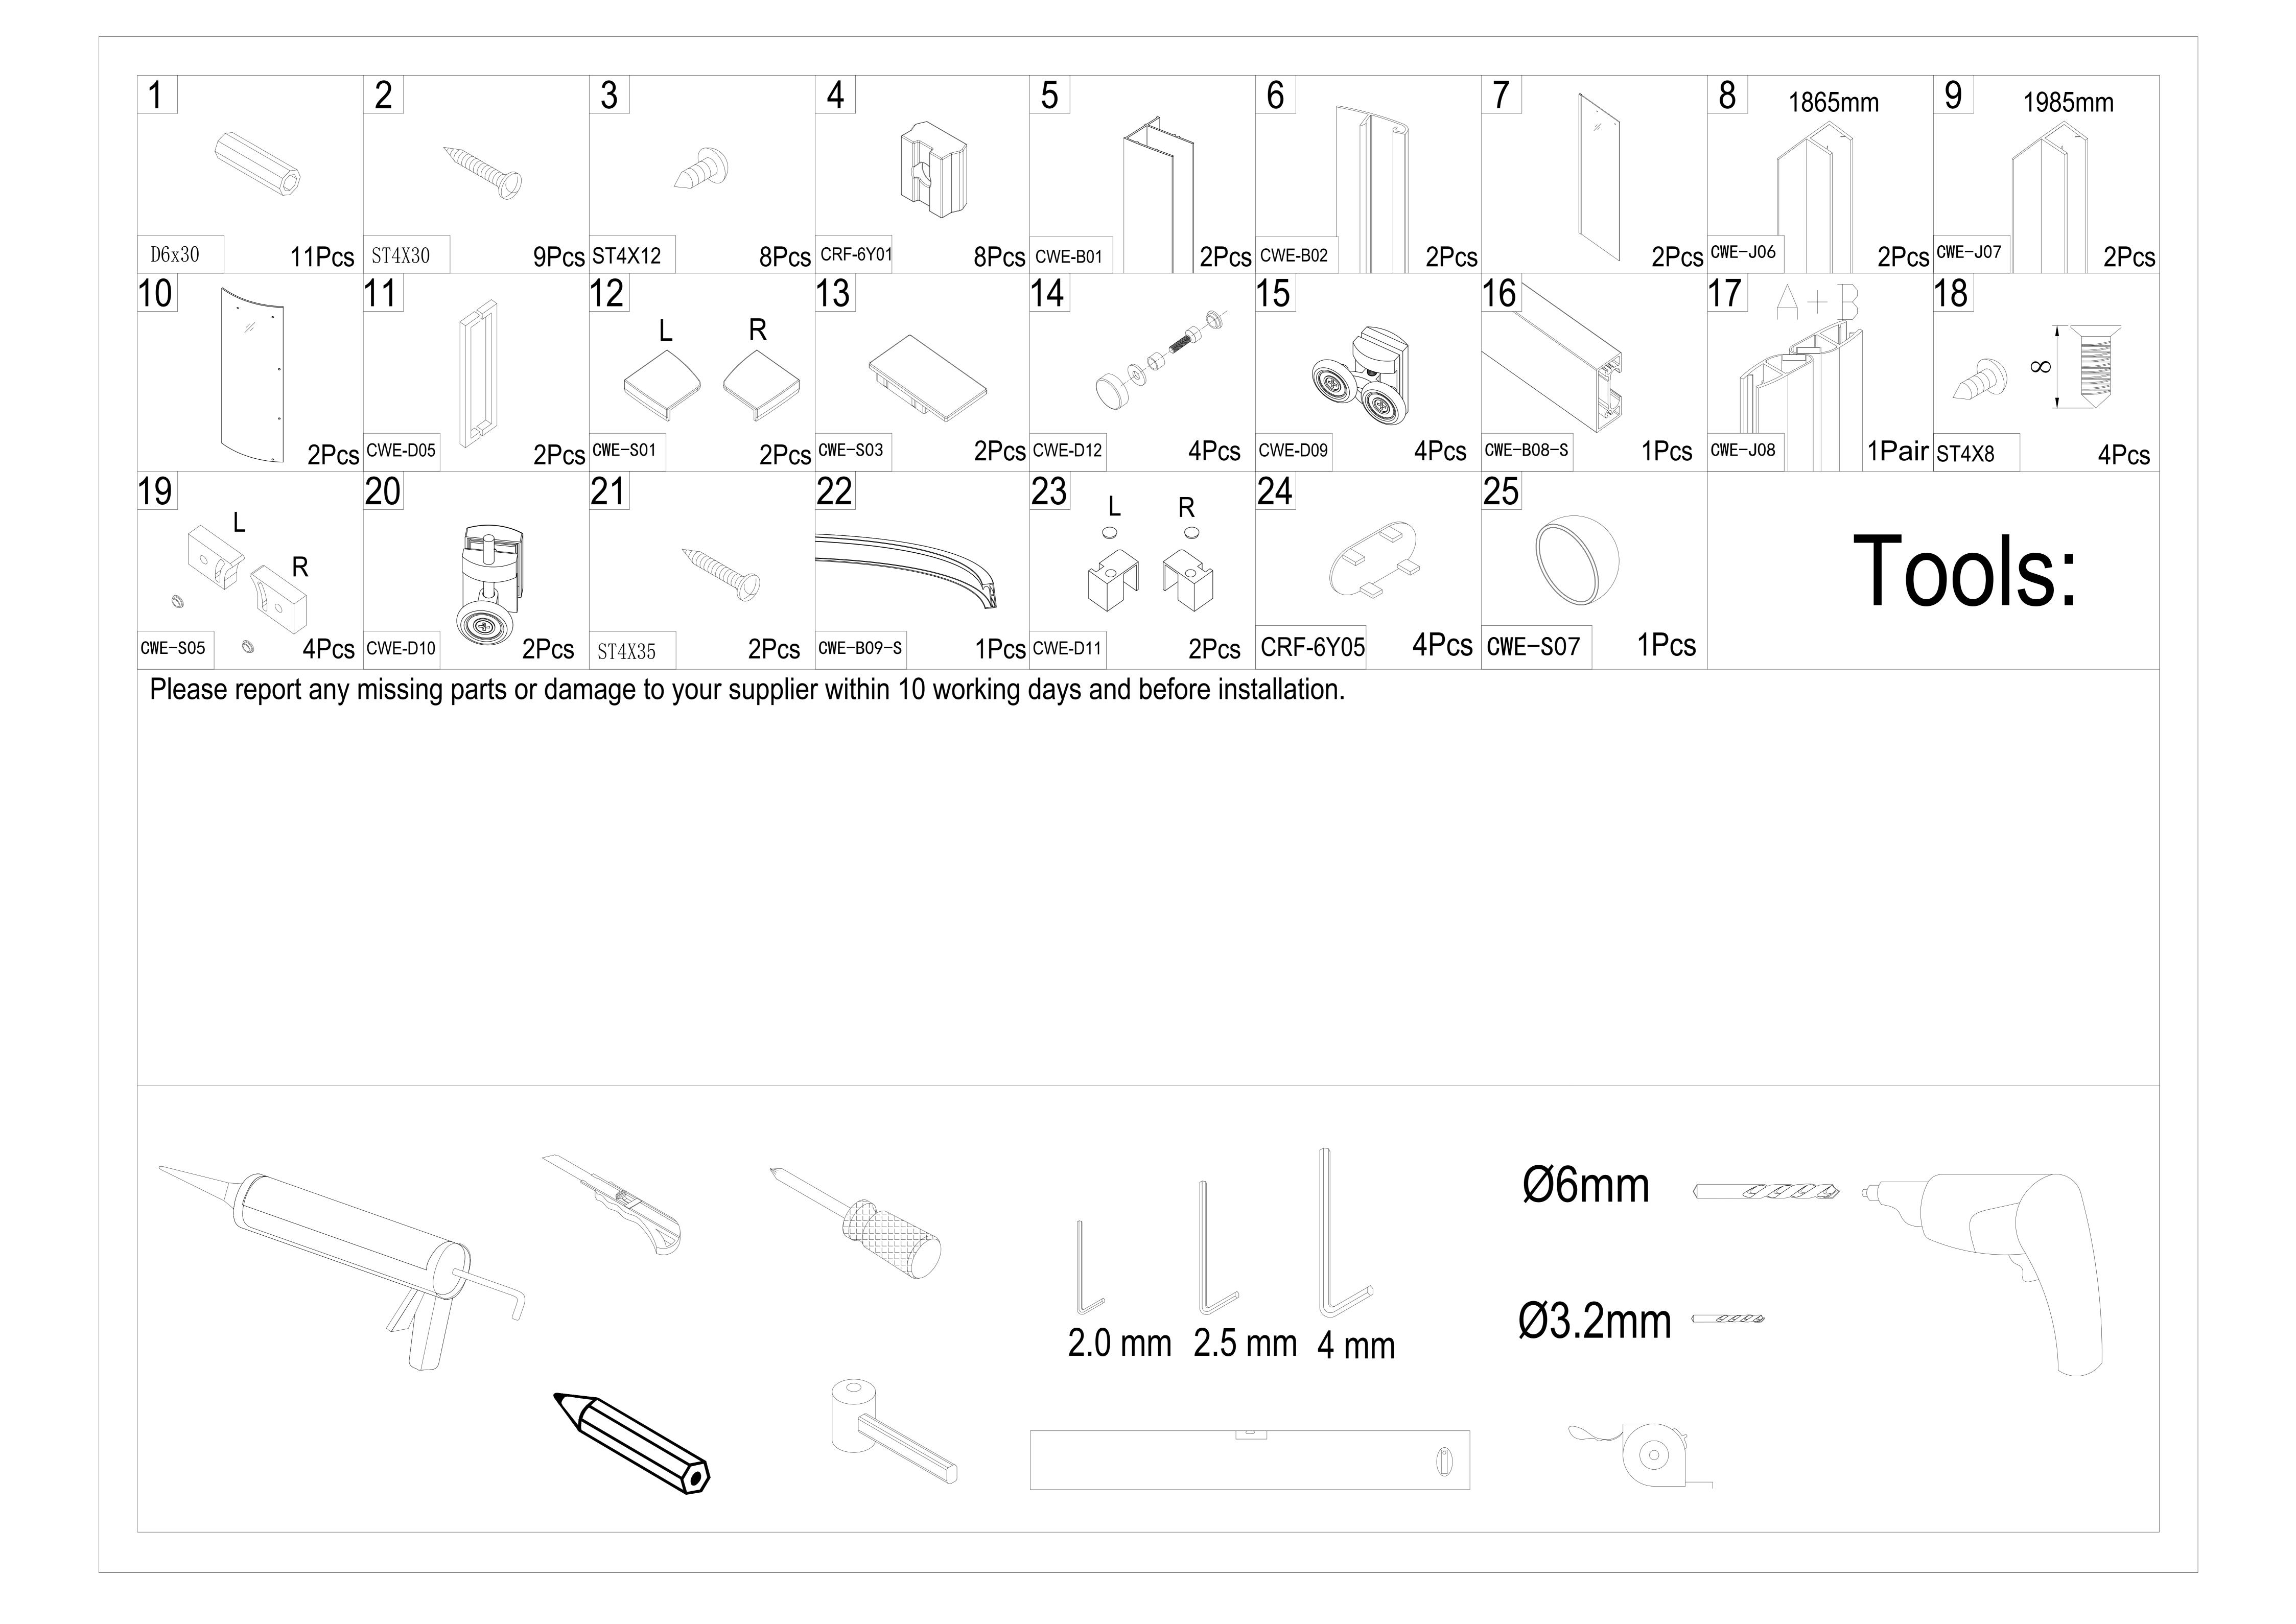


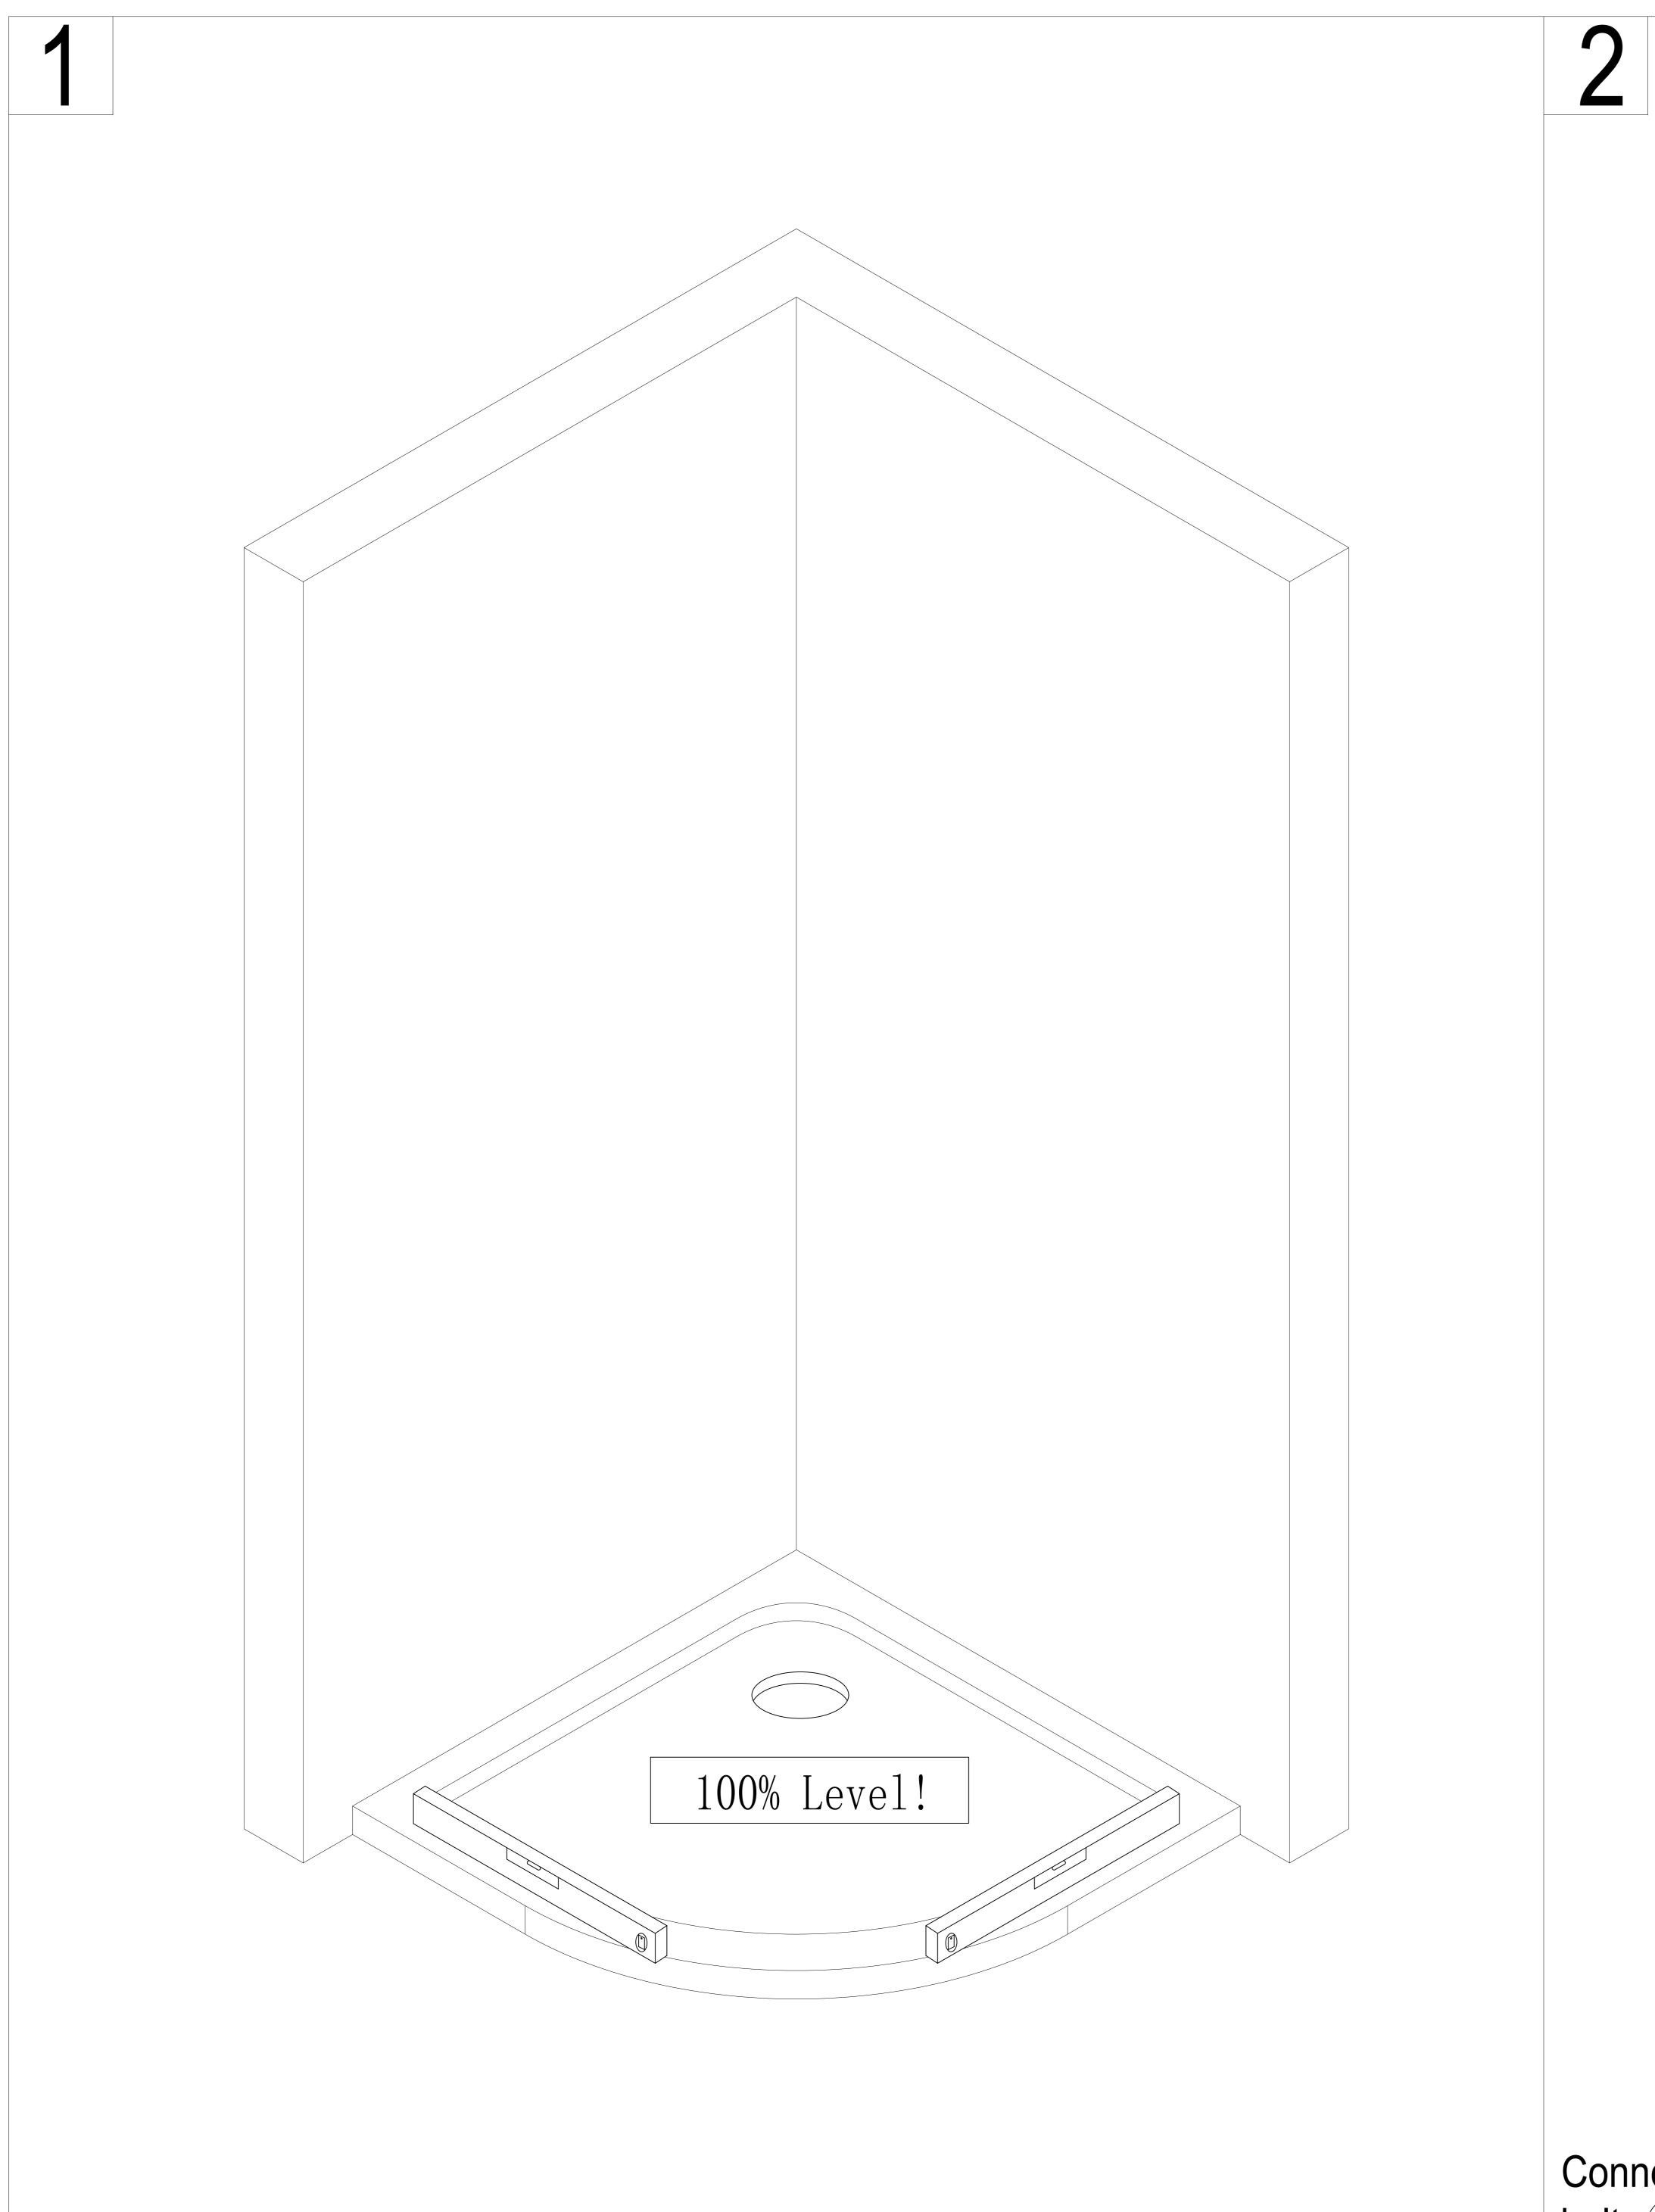


Check tray is level

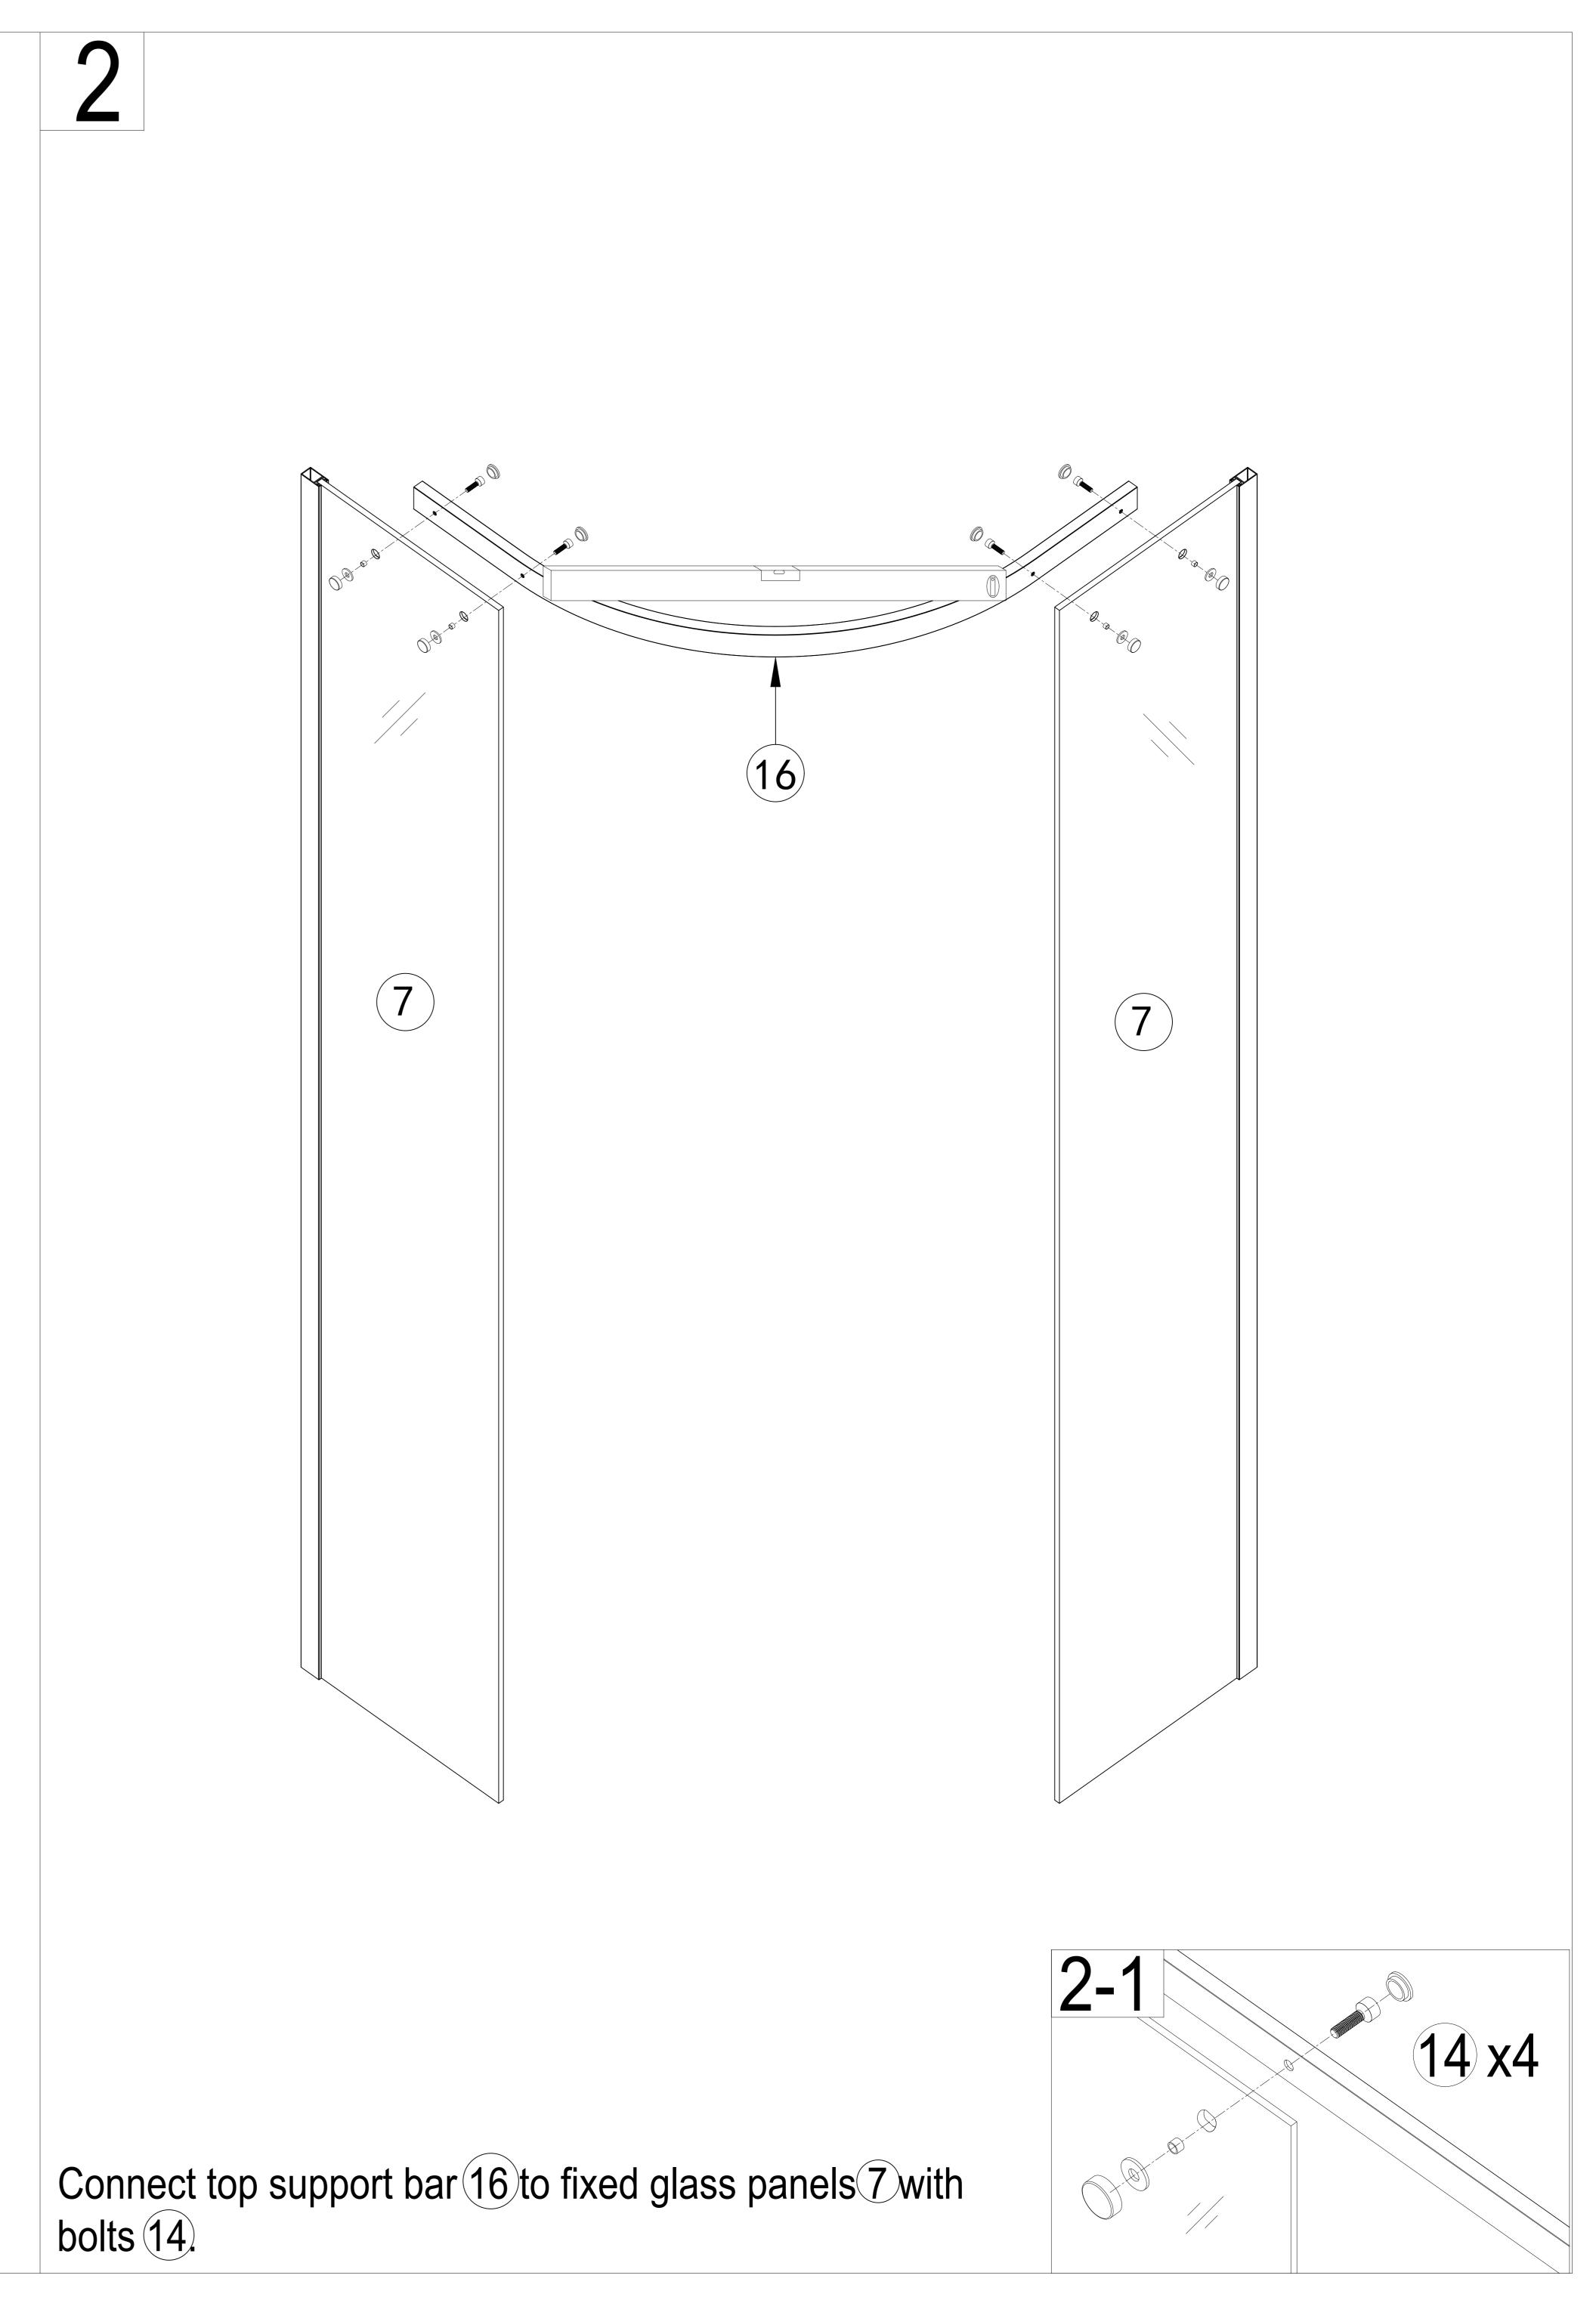


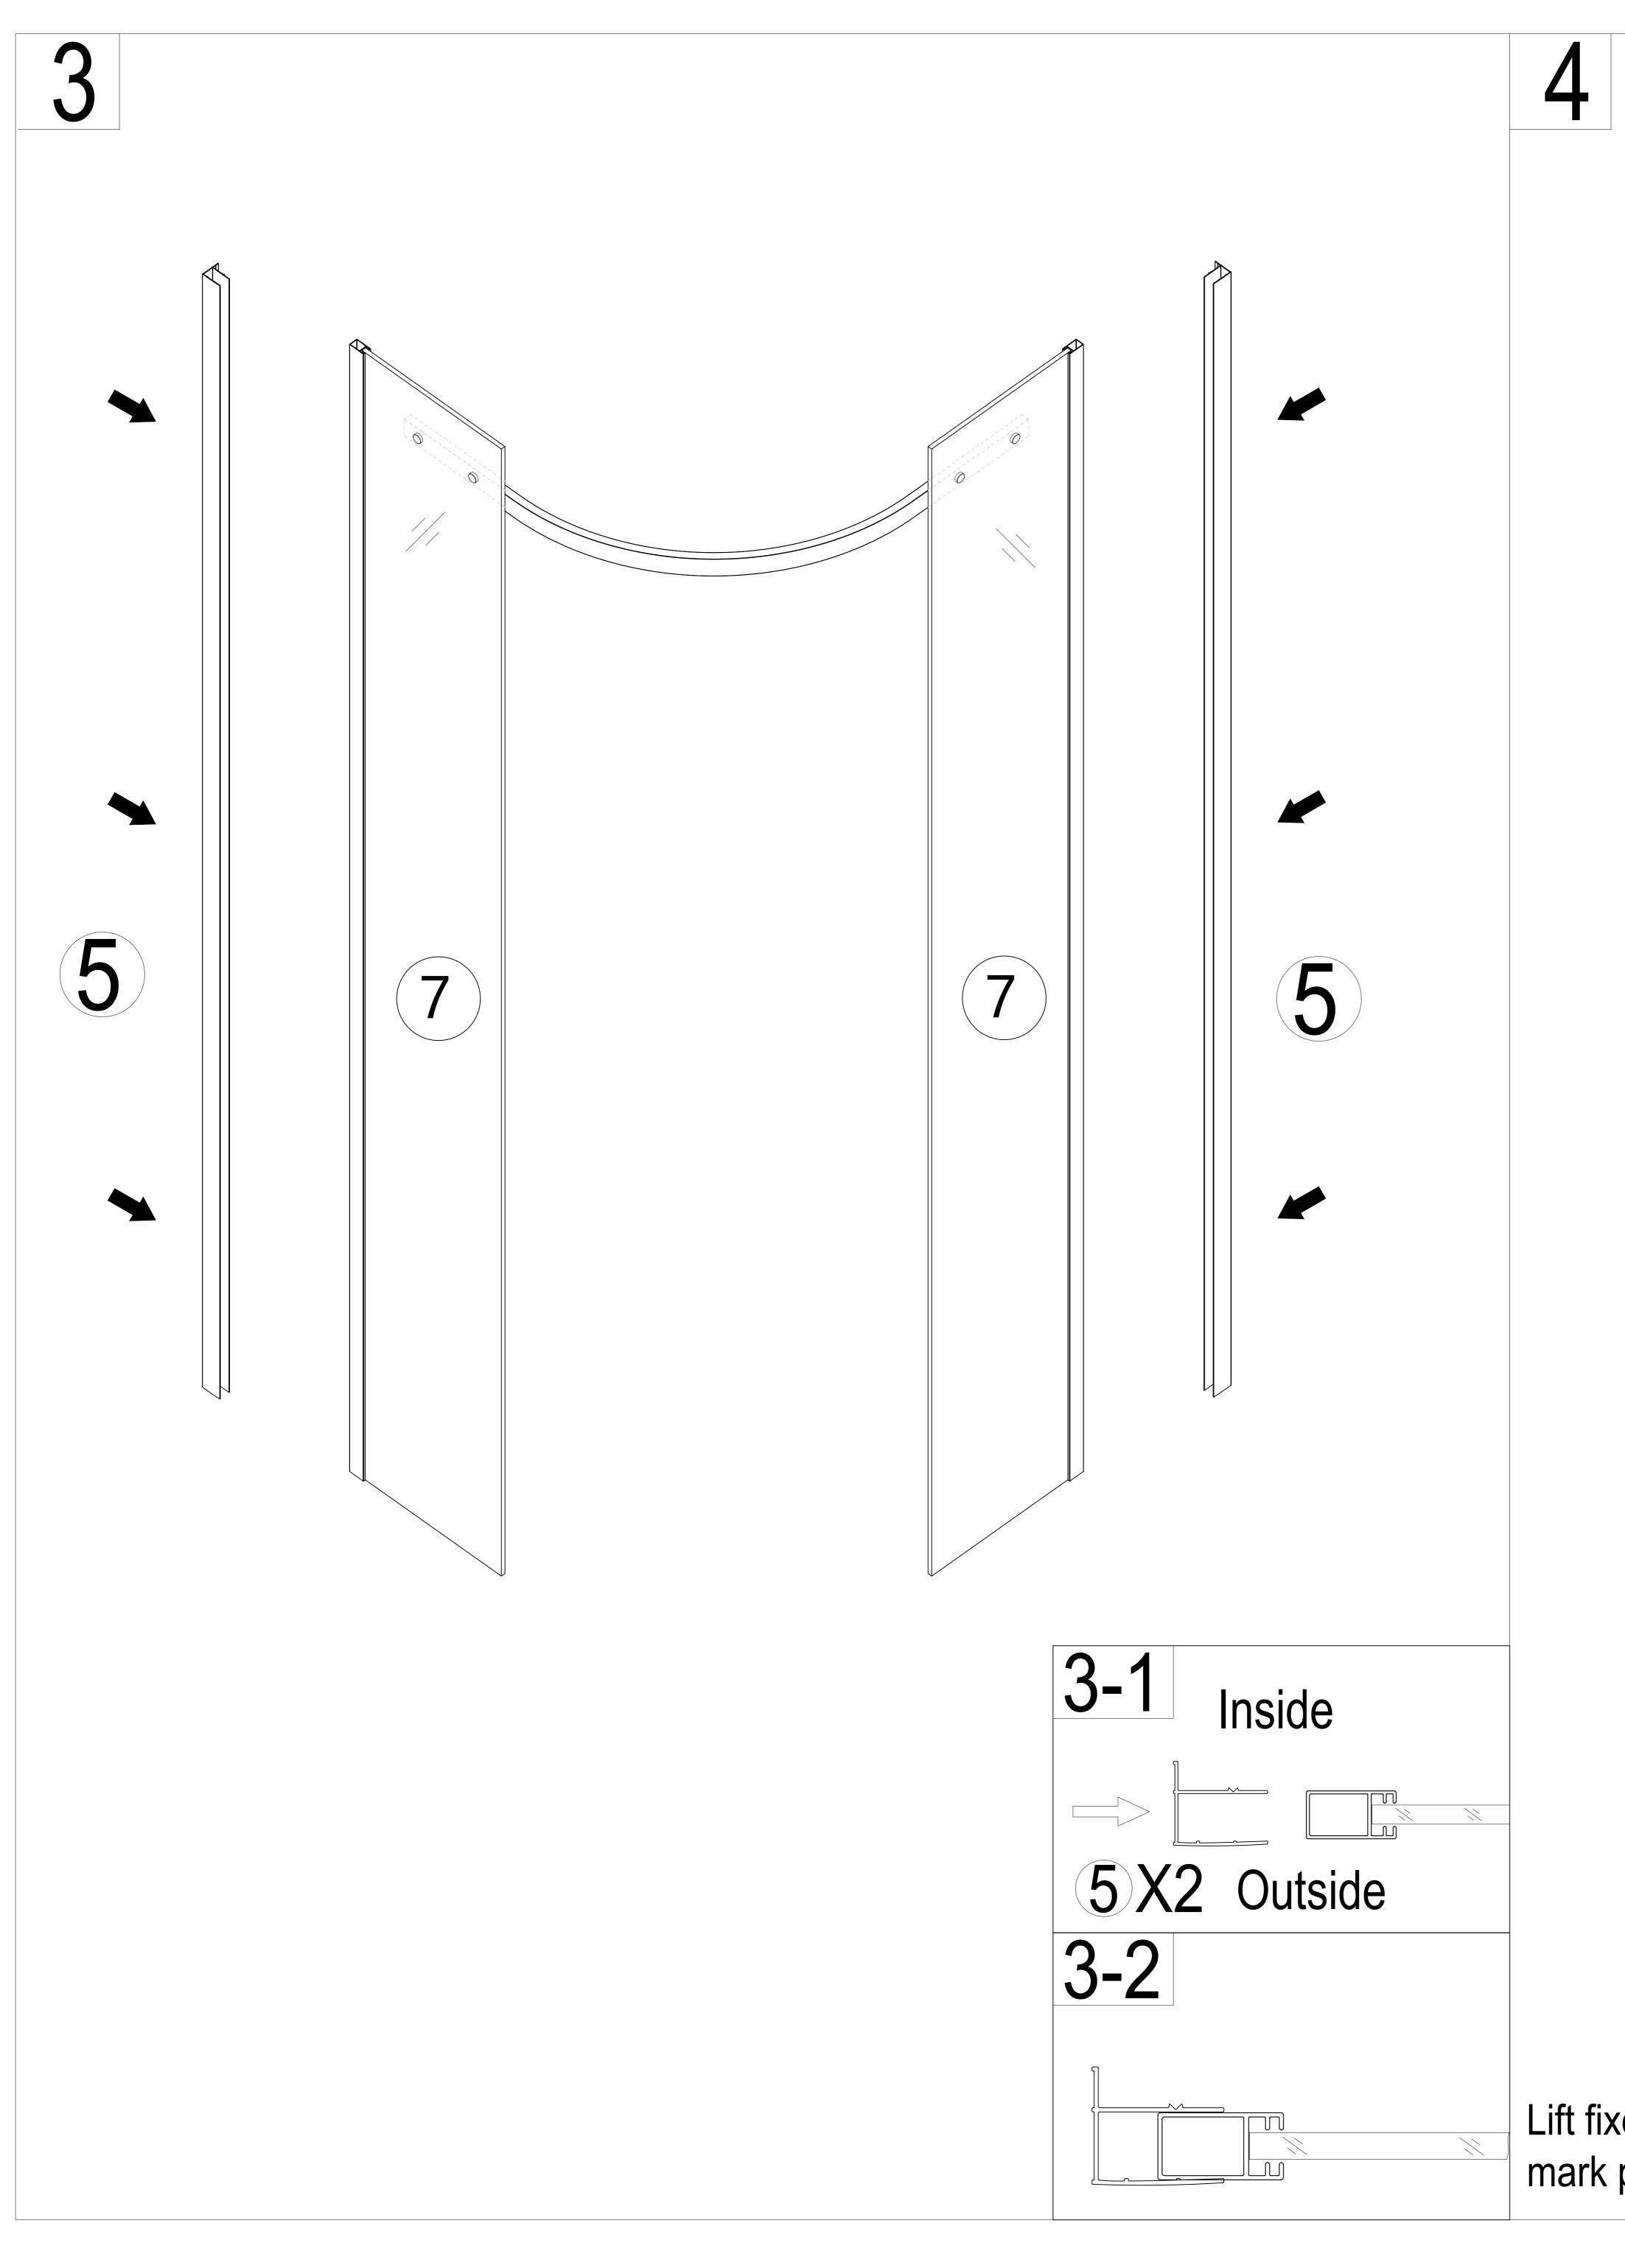


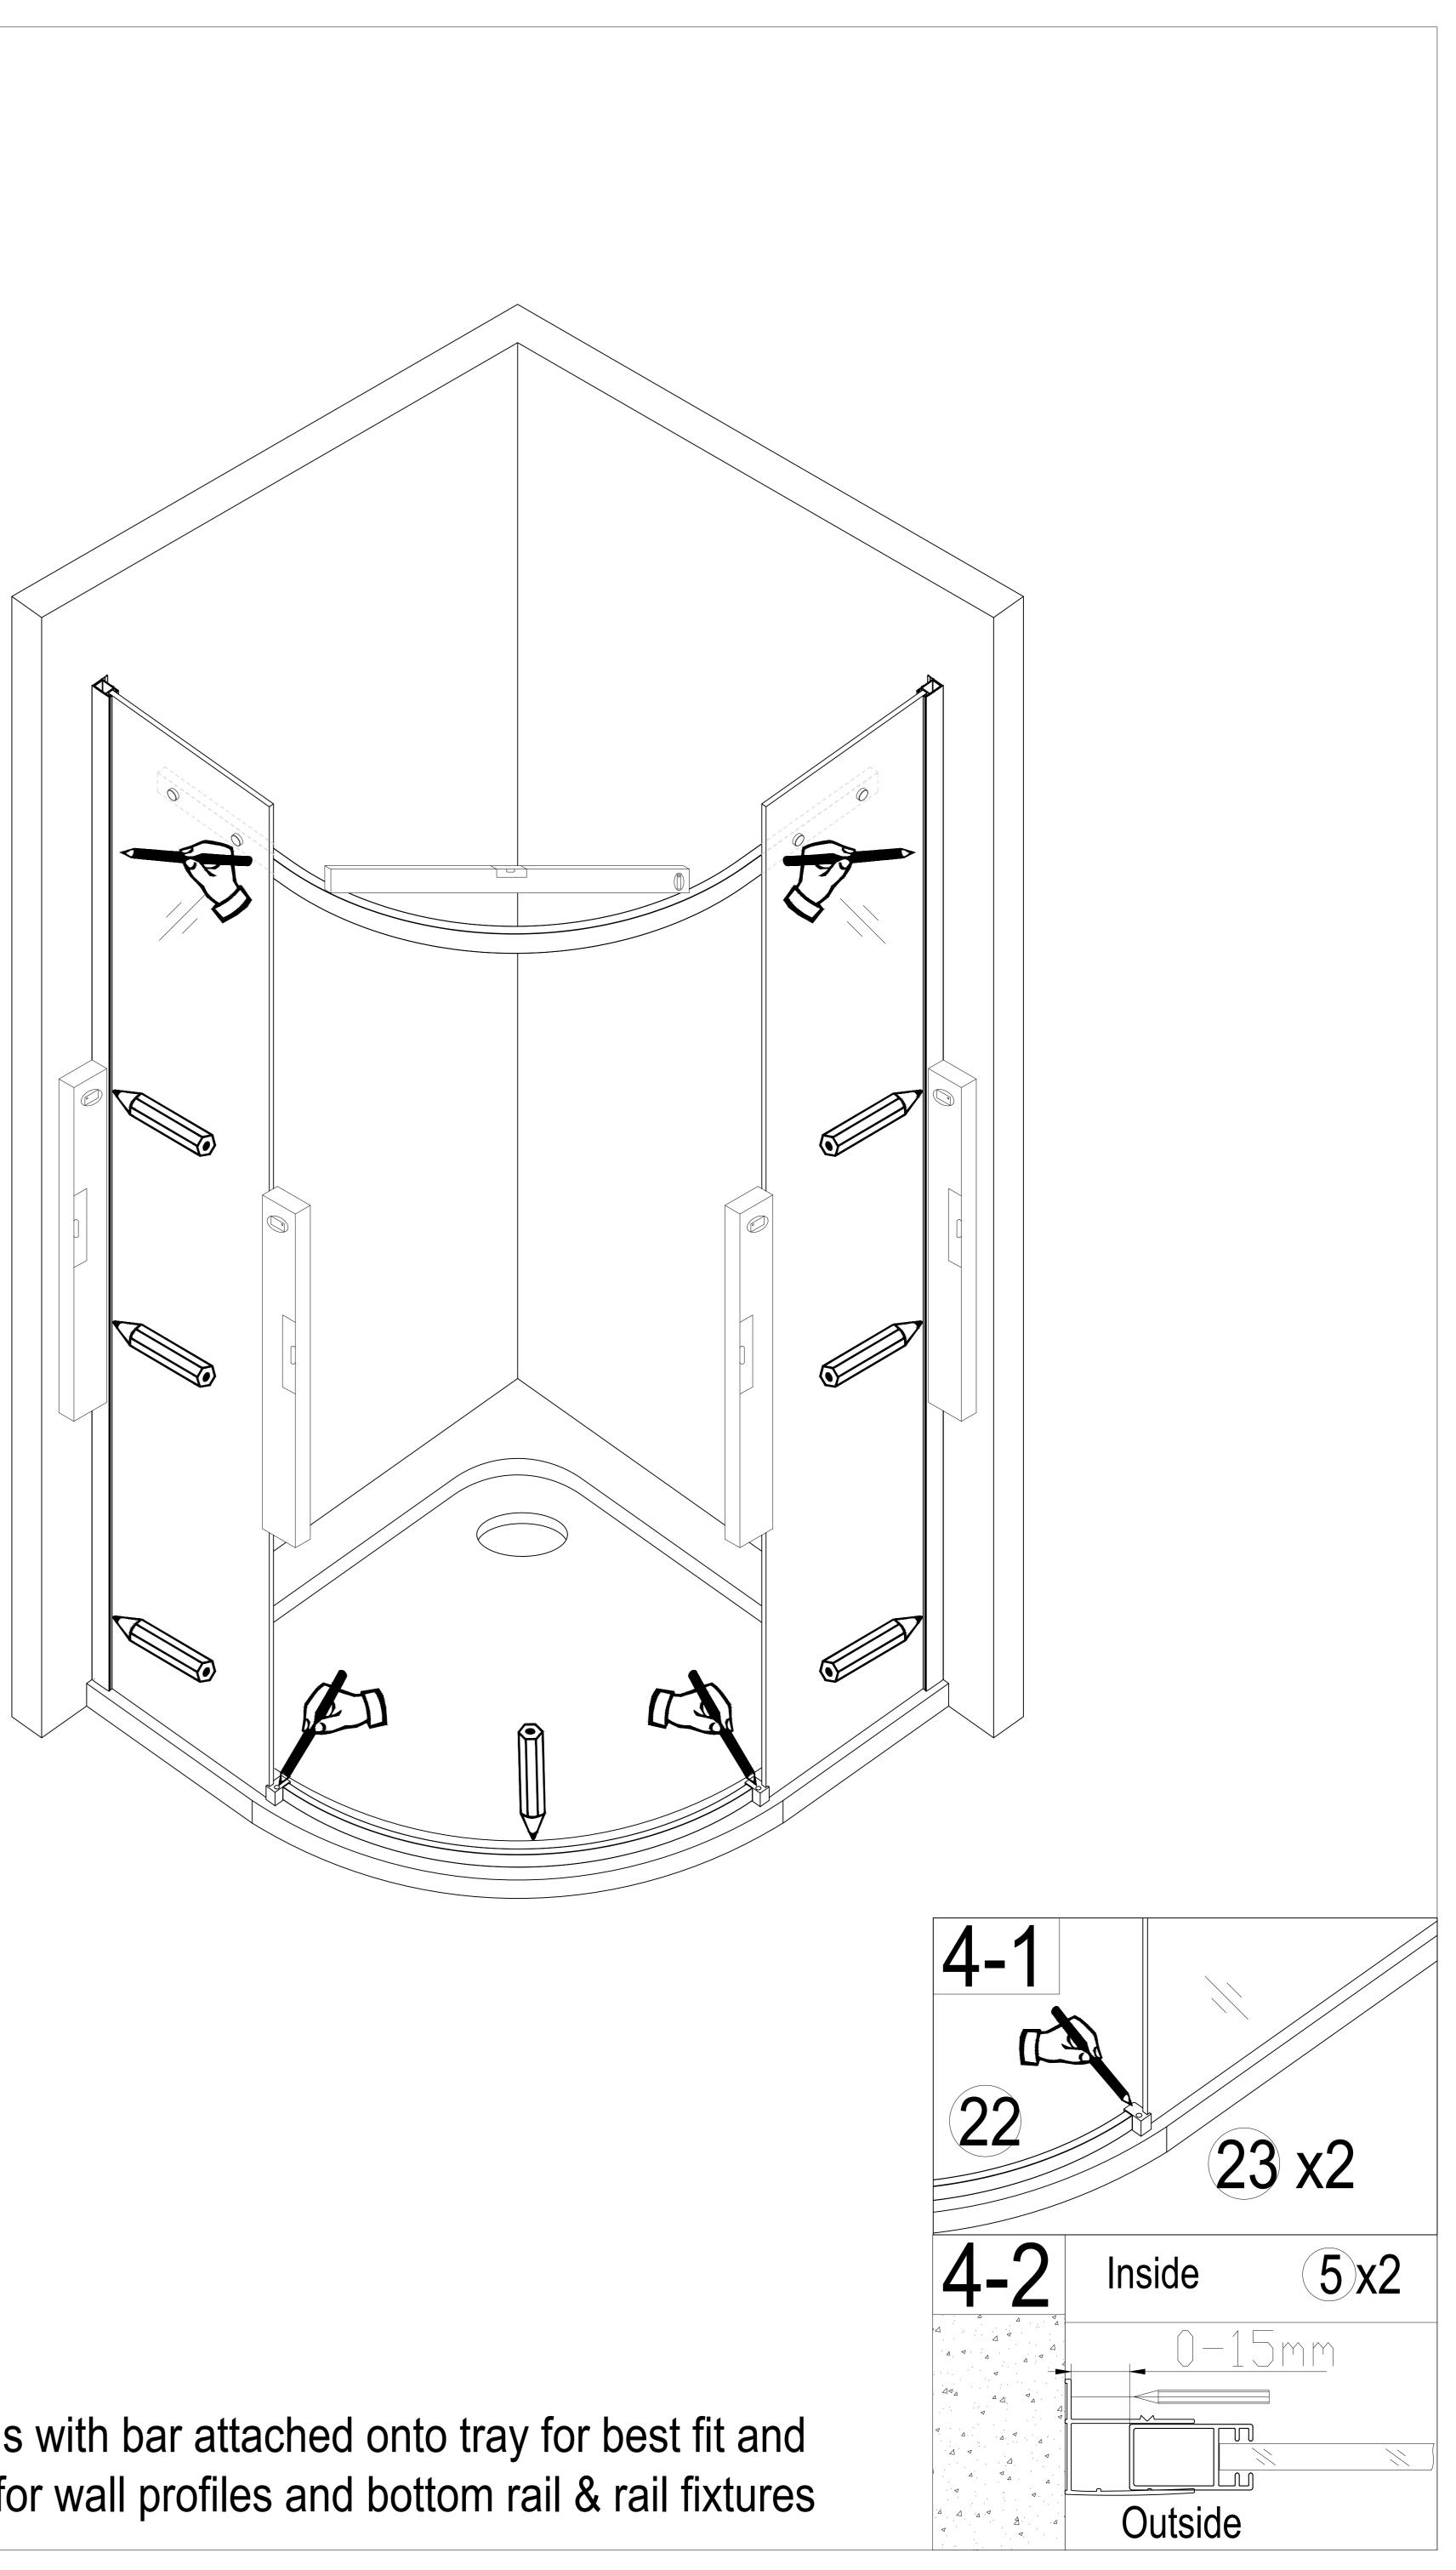

Lift fixed panels with bar attached onto tray for best fit and mark position for wall profiles and bottom rail & rail fixtures

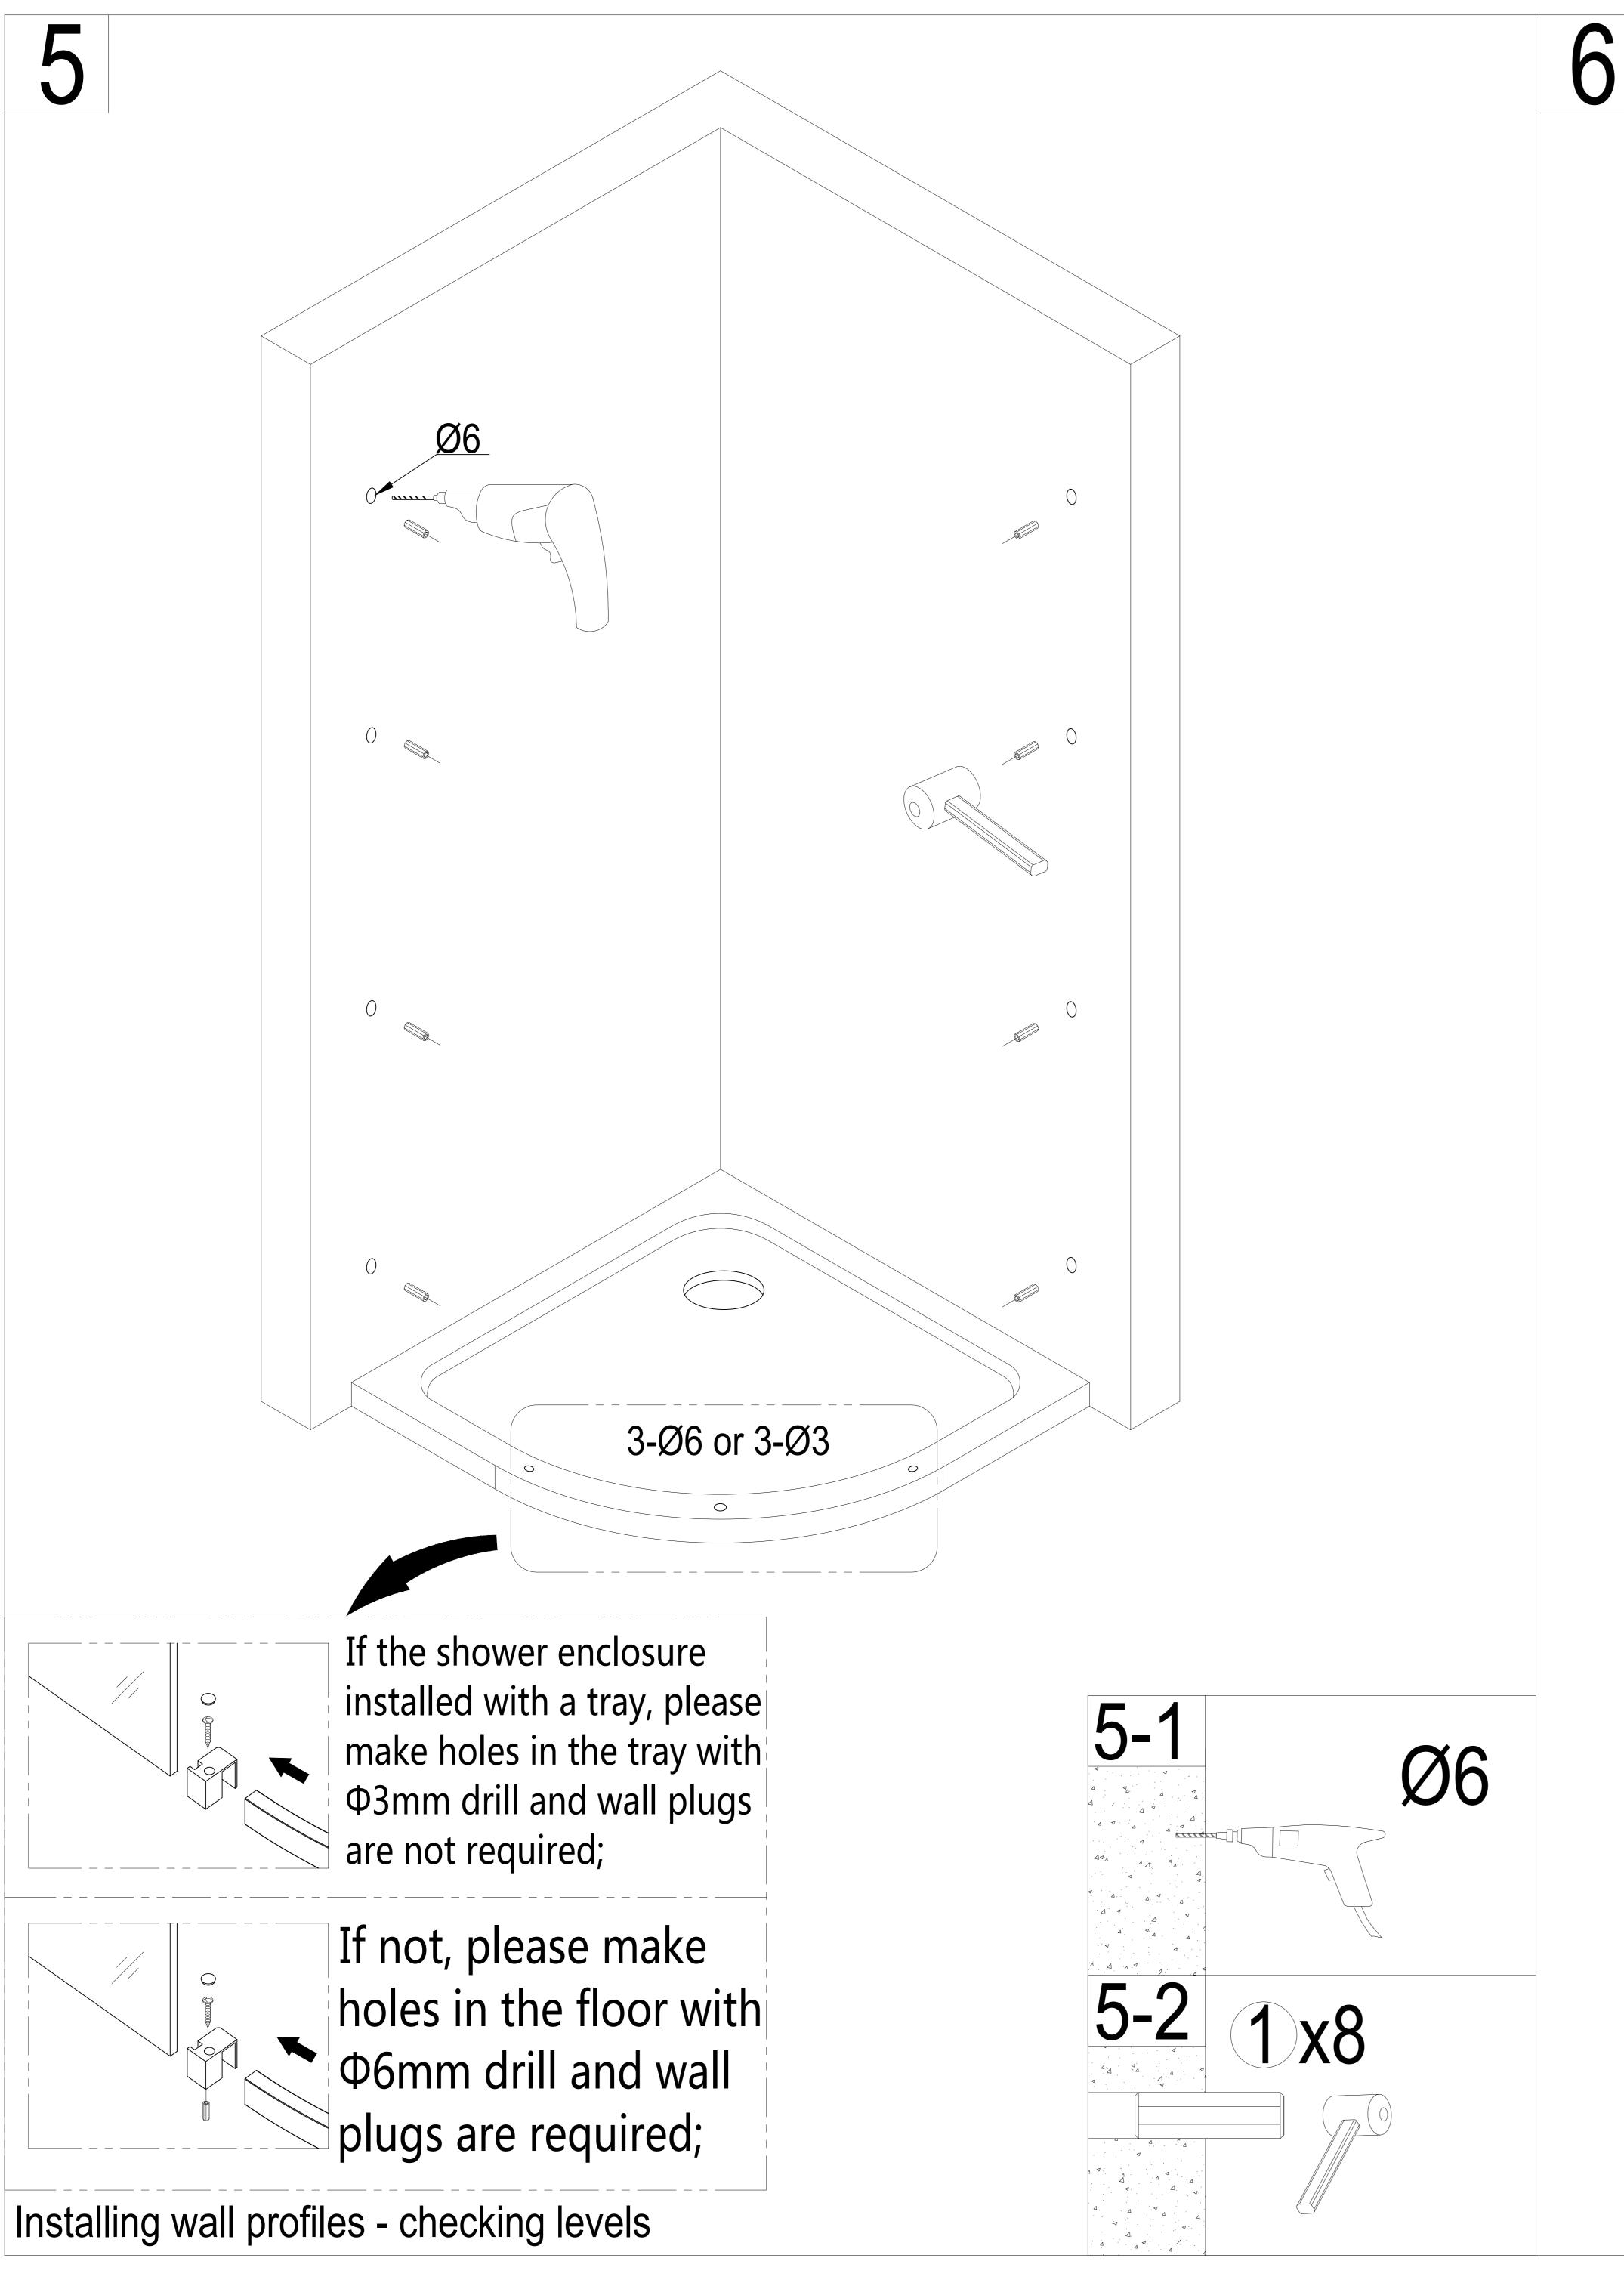

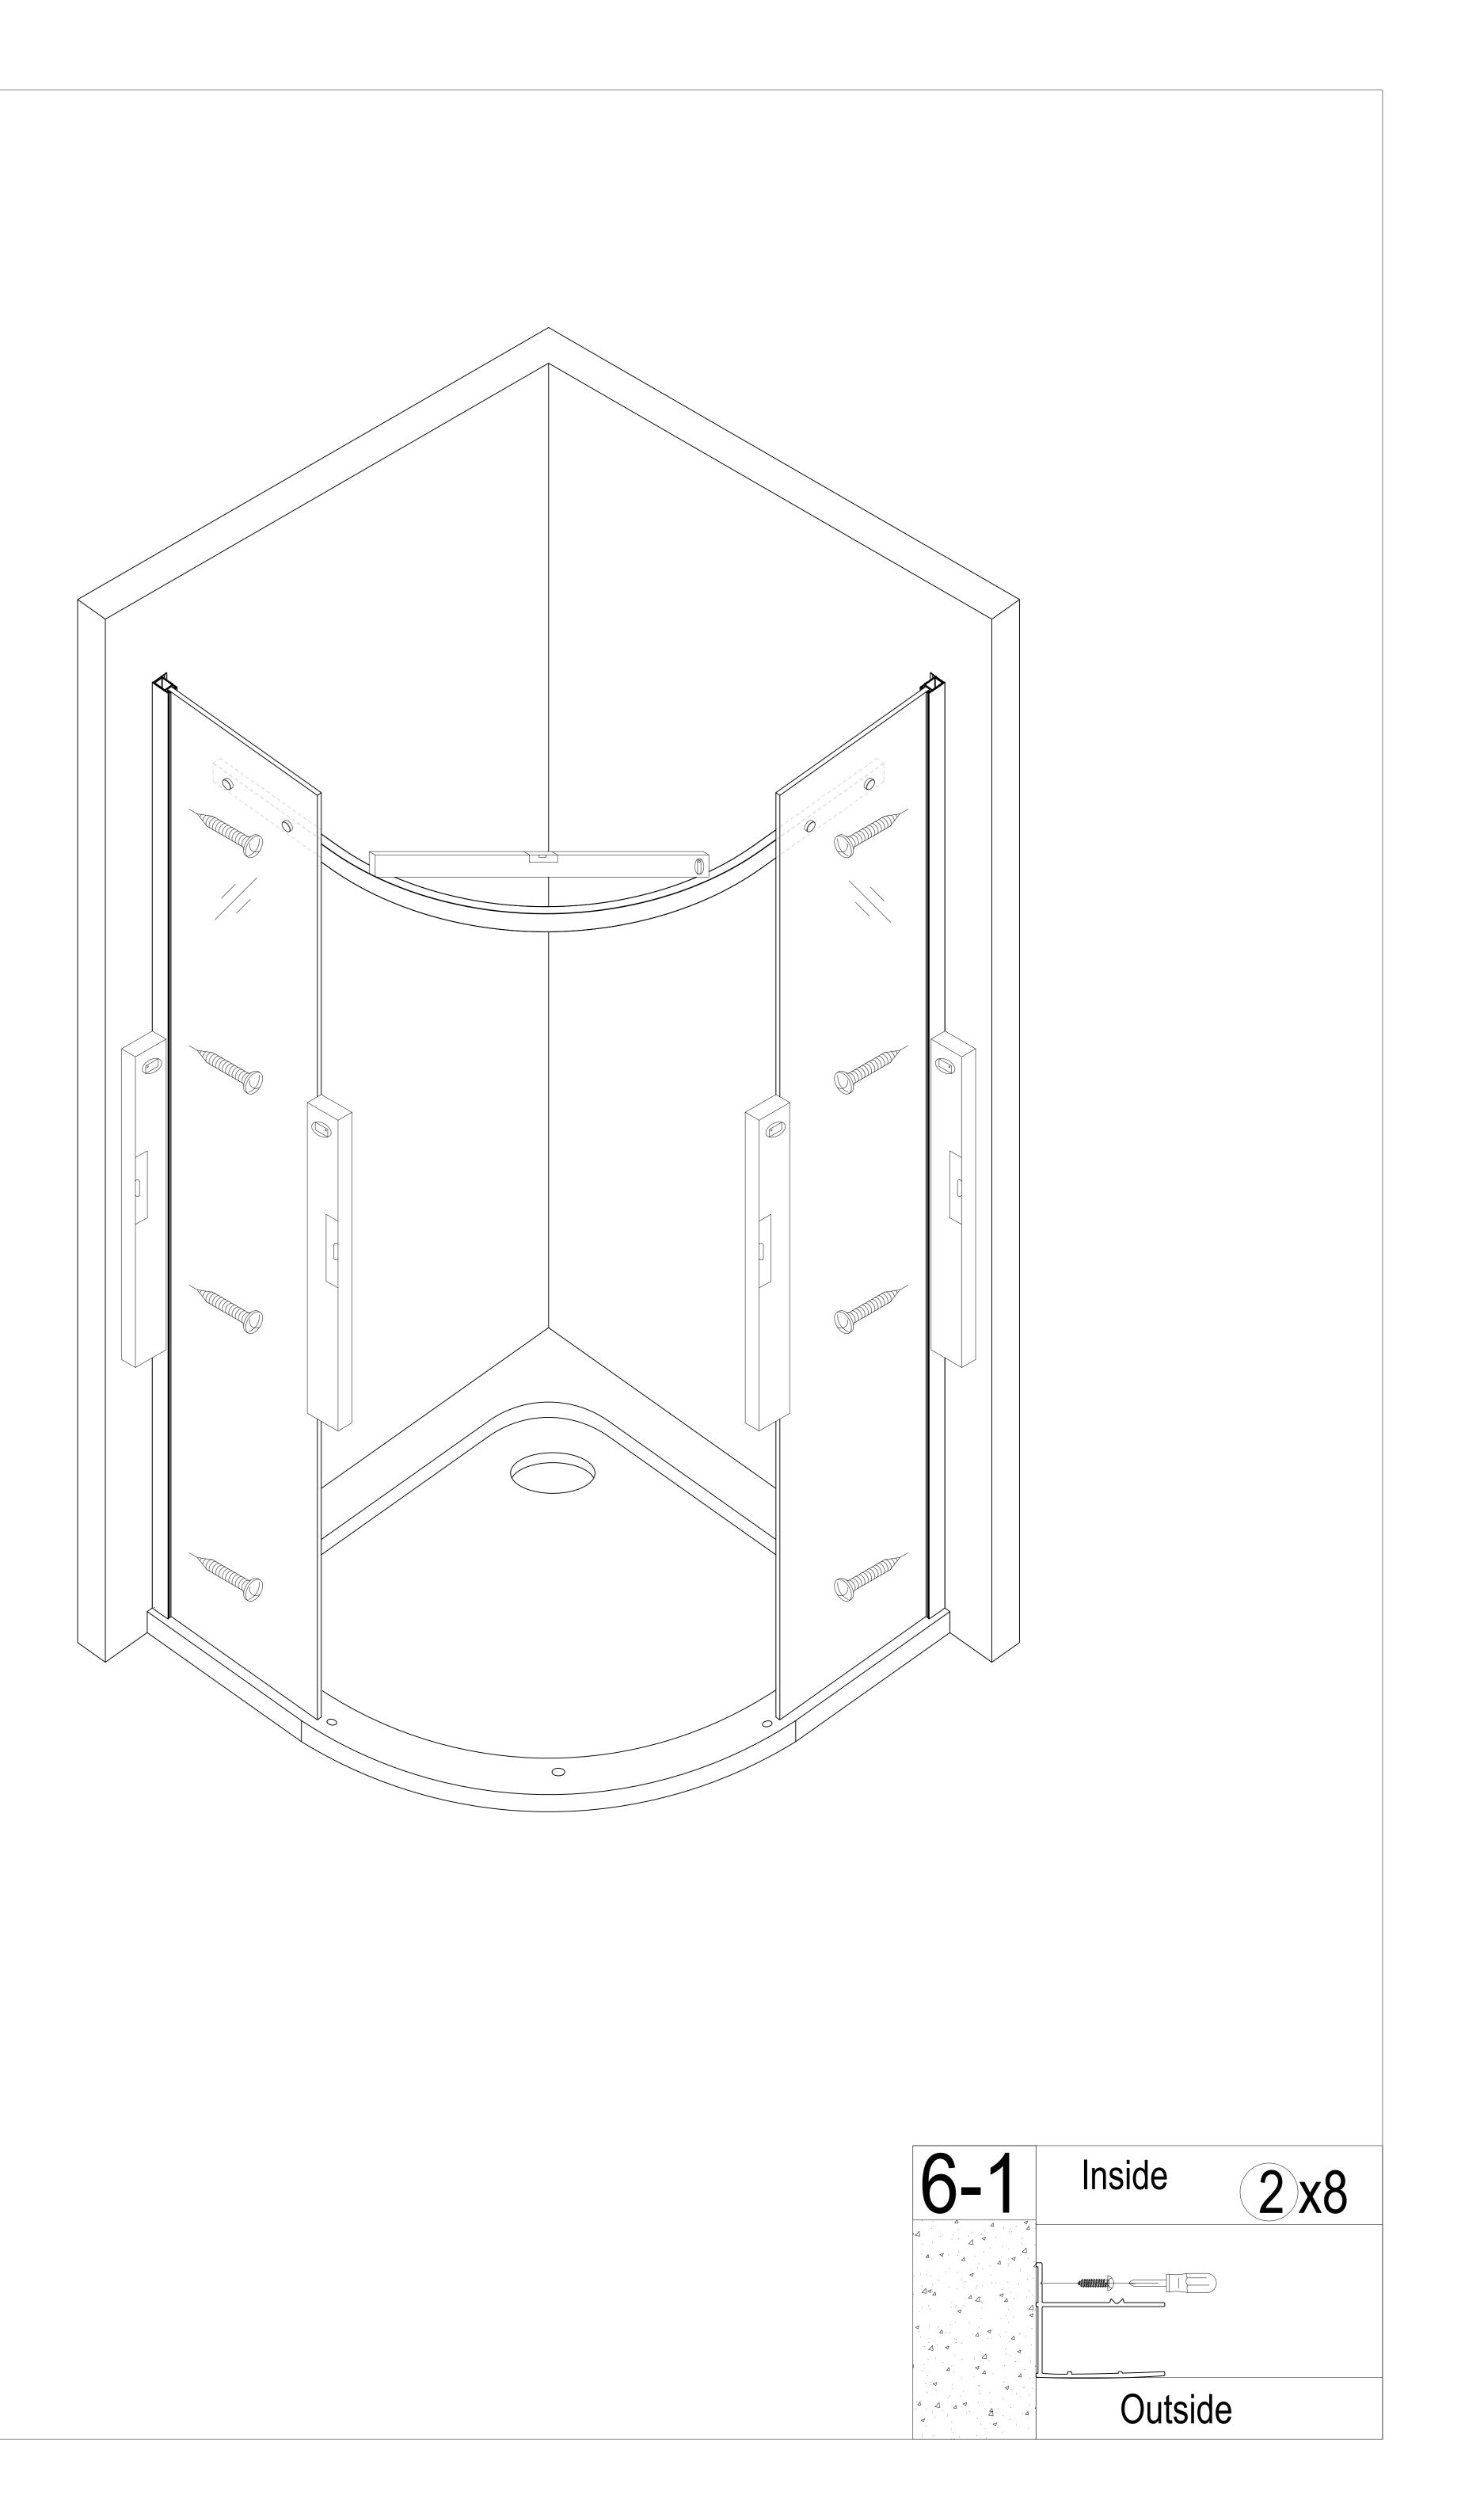


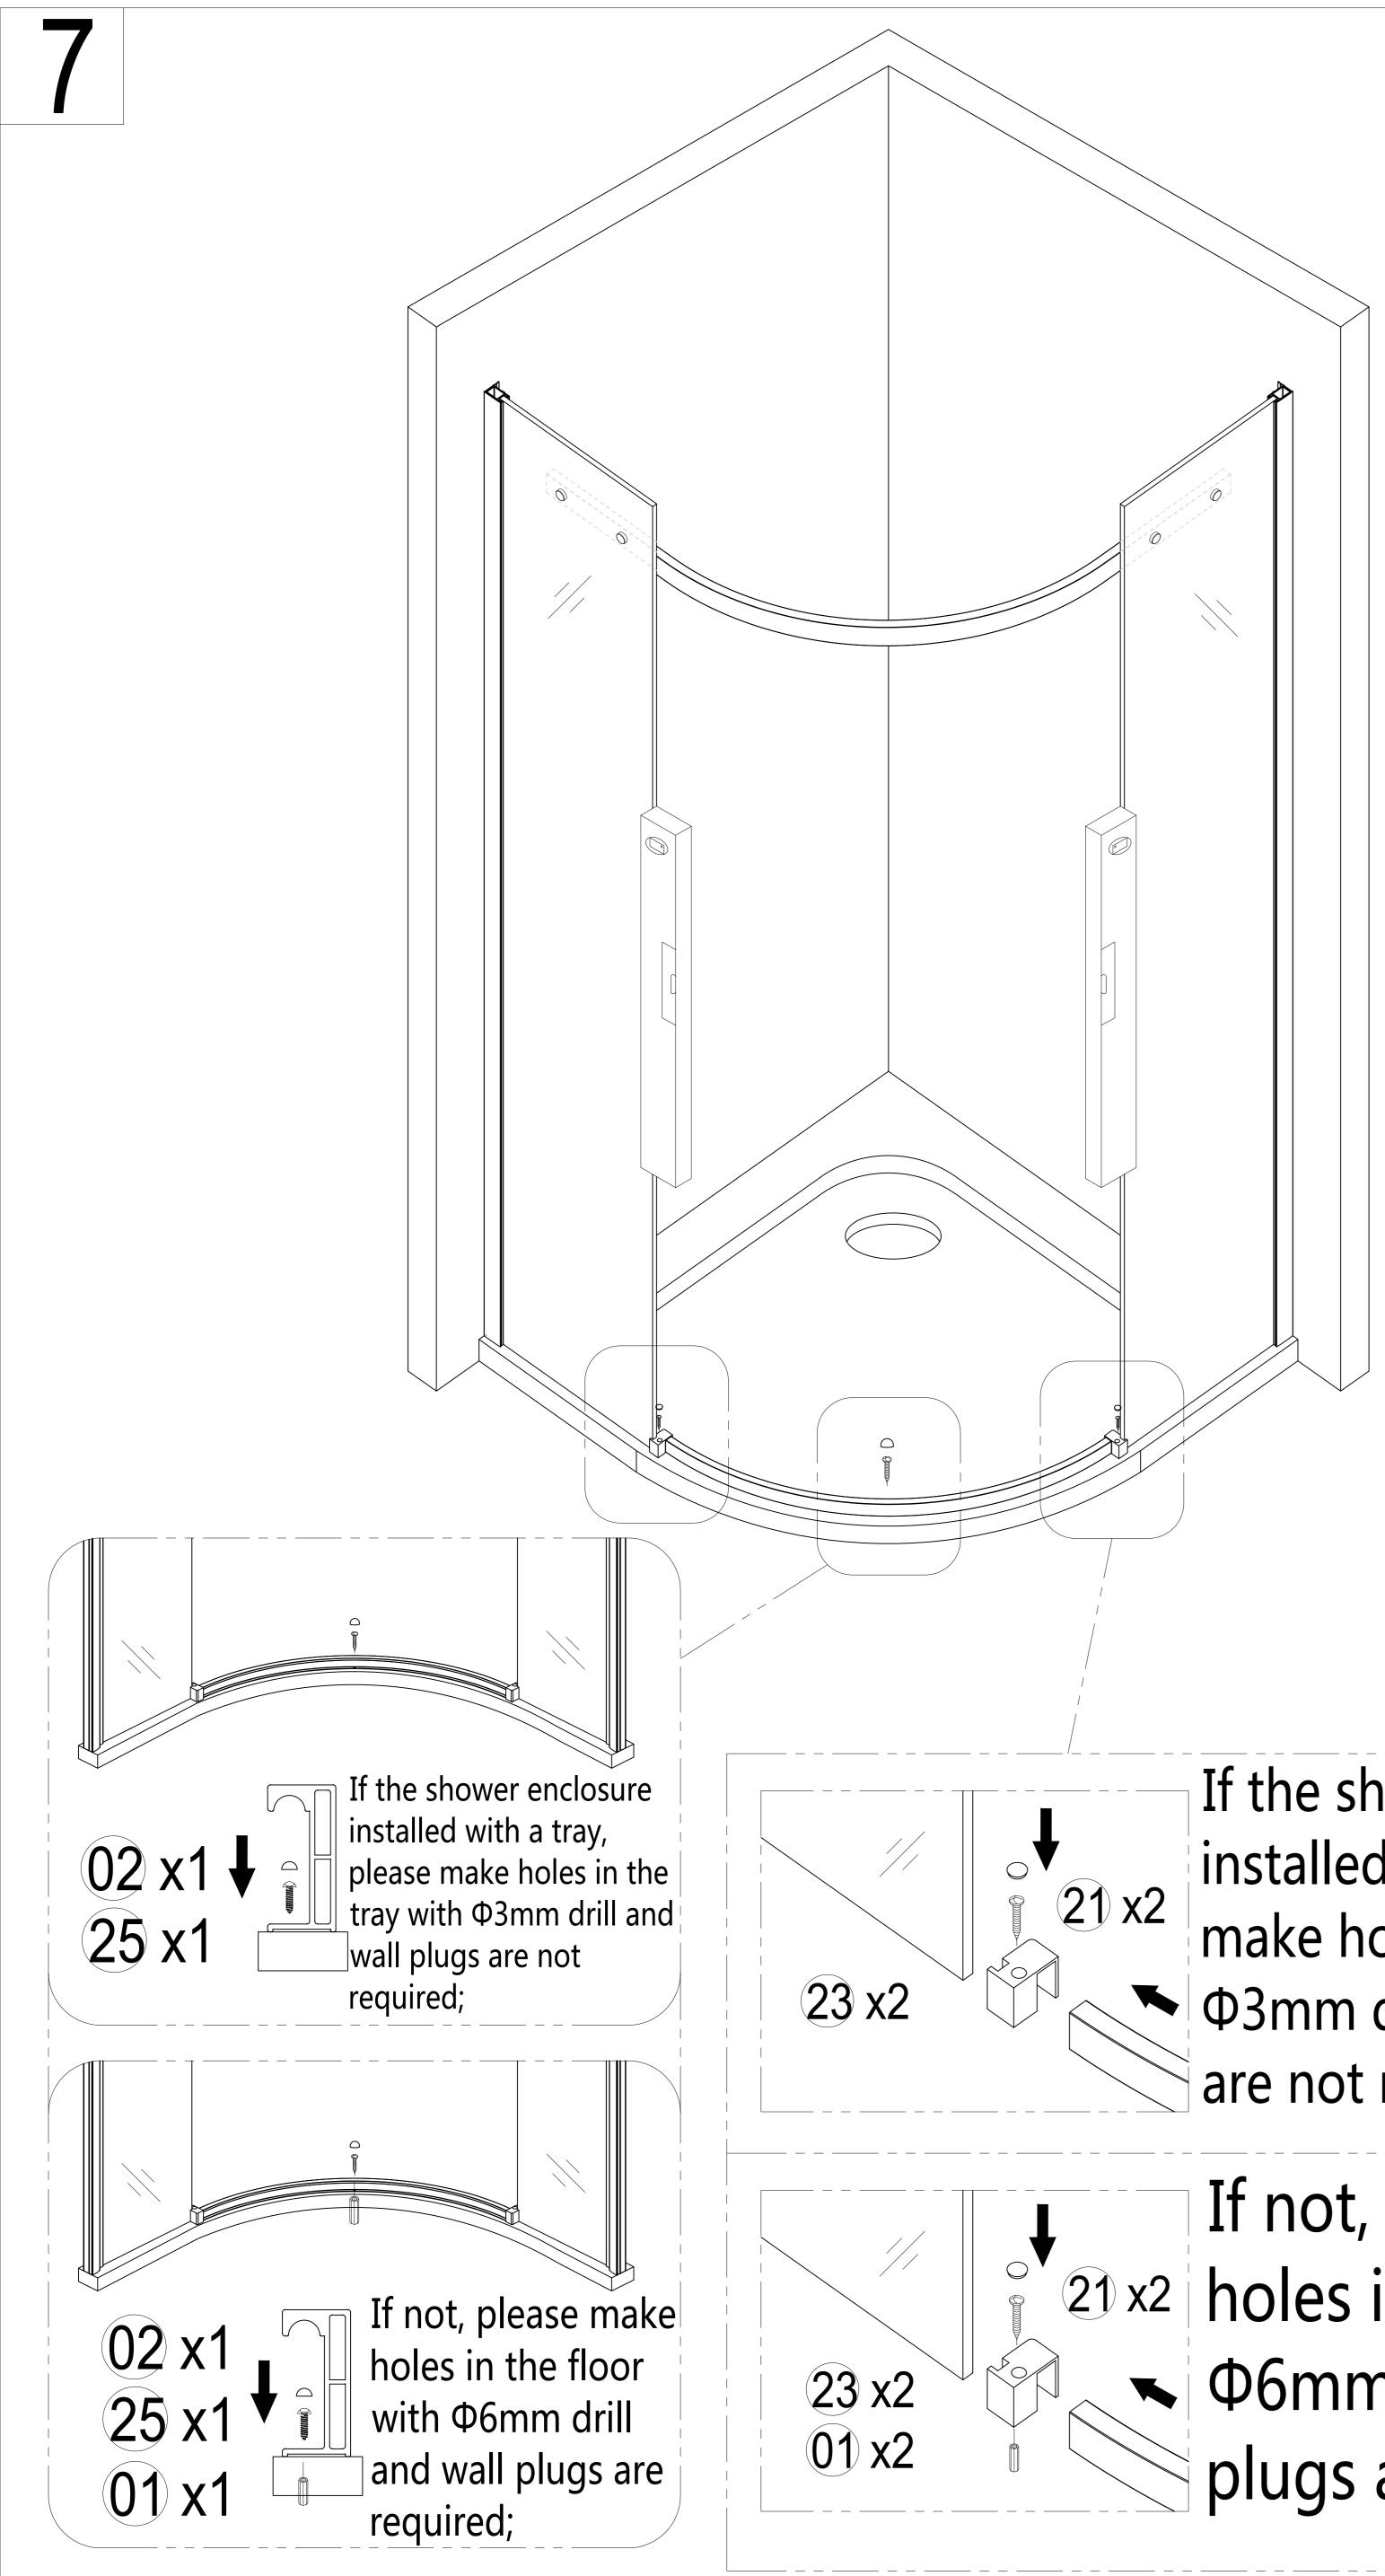



Install panels + frame ensuring fixing for bottom frame are screwed to the tray.


If the shower enclosure installed with a tray, please make holes in the tray with Φ3mm drill and wall plugs are not required;


If not, please make 21 x2 holes in the floor with Φ6mm drill and wall plugs are required;

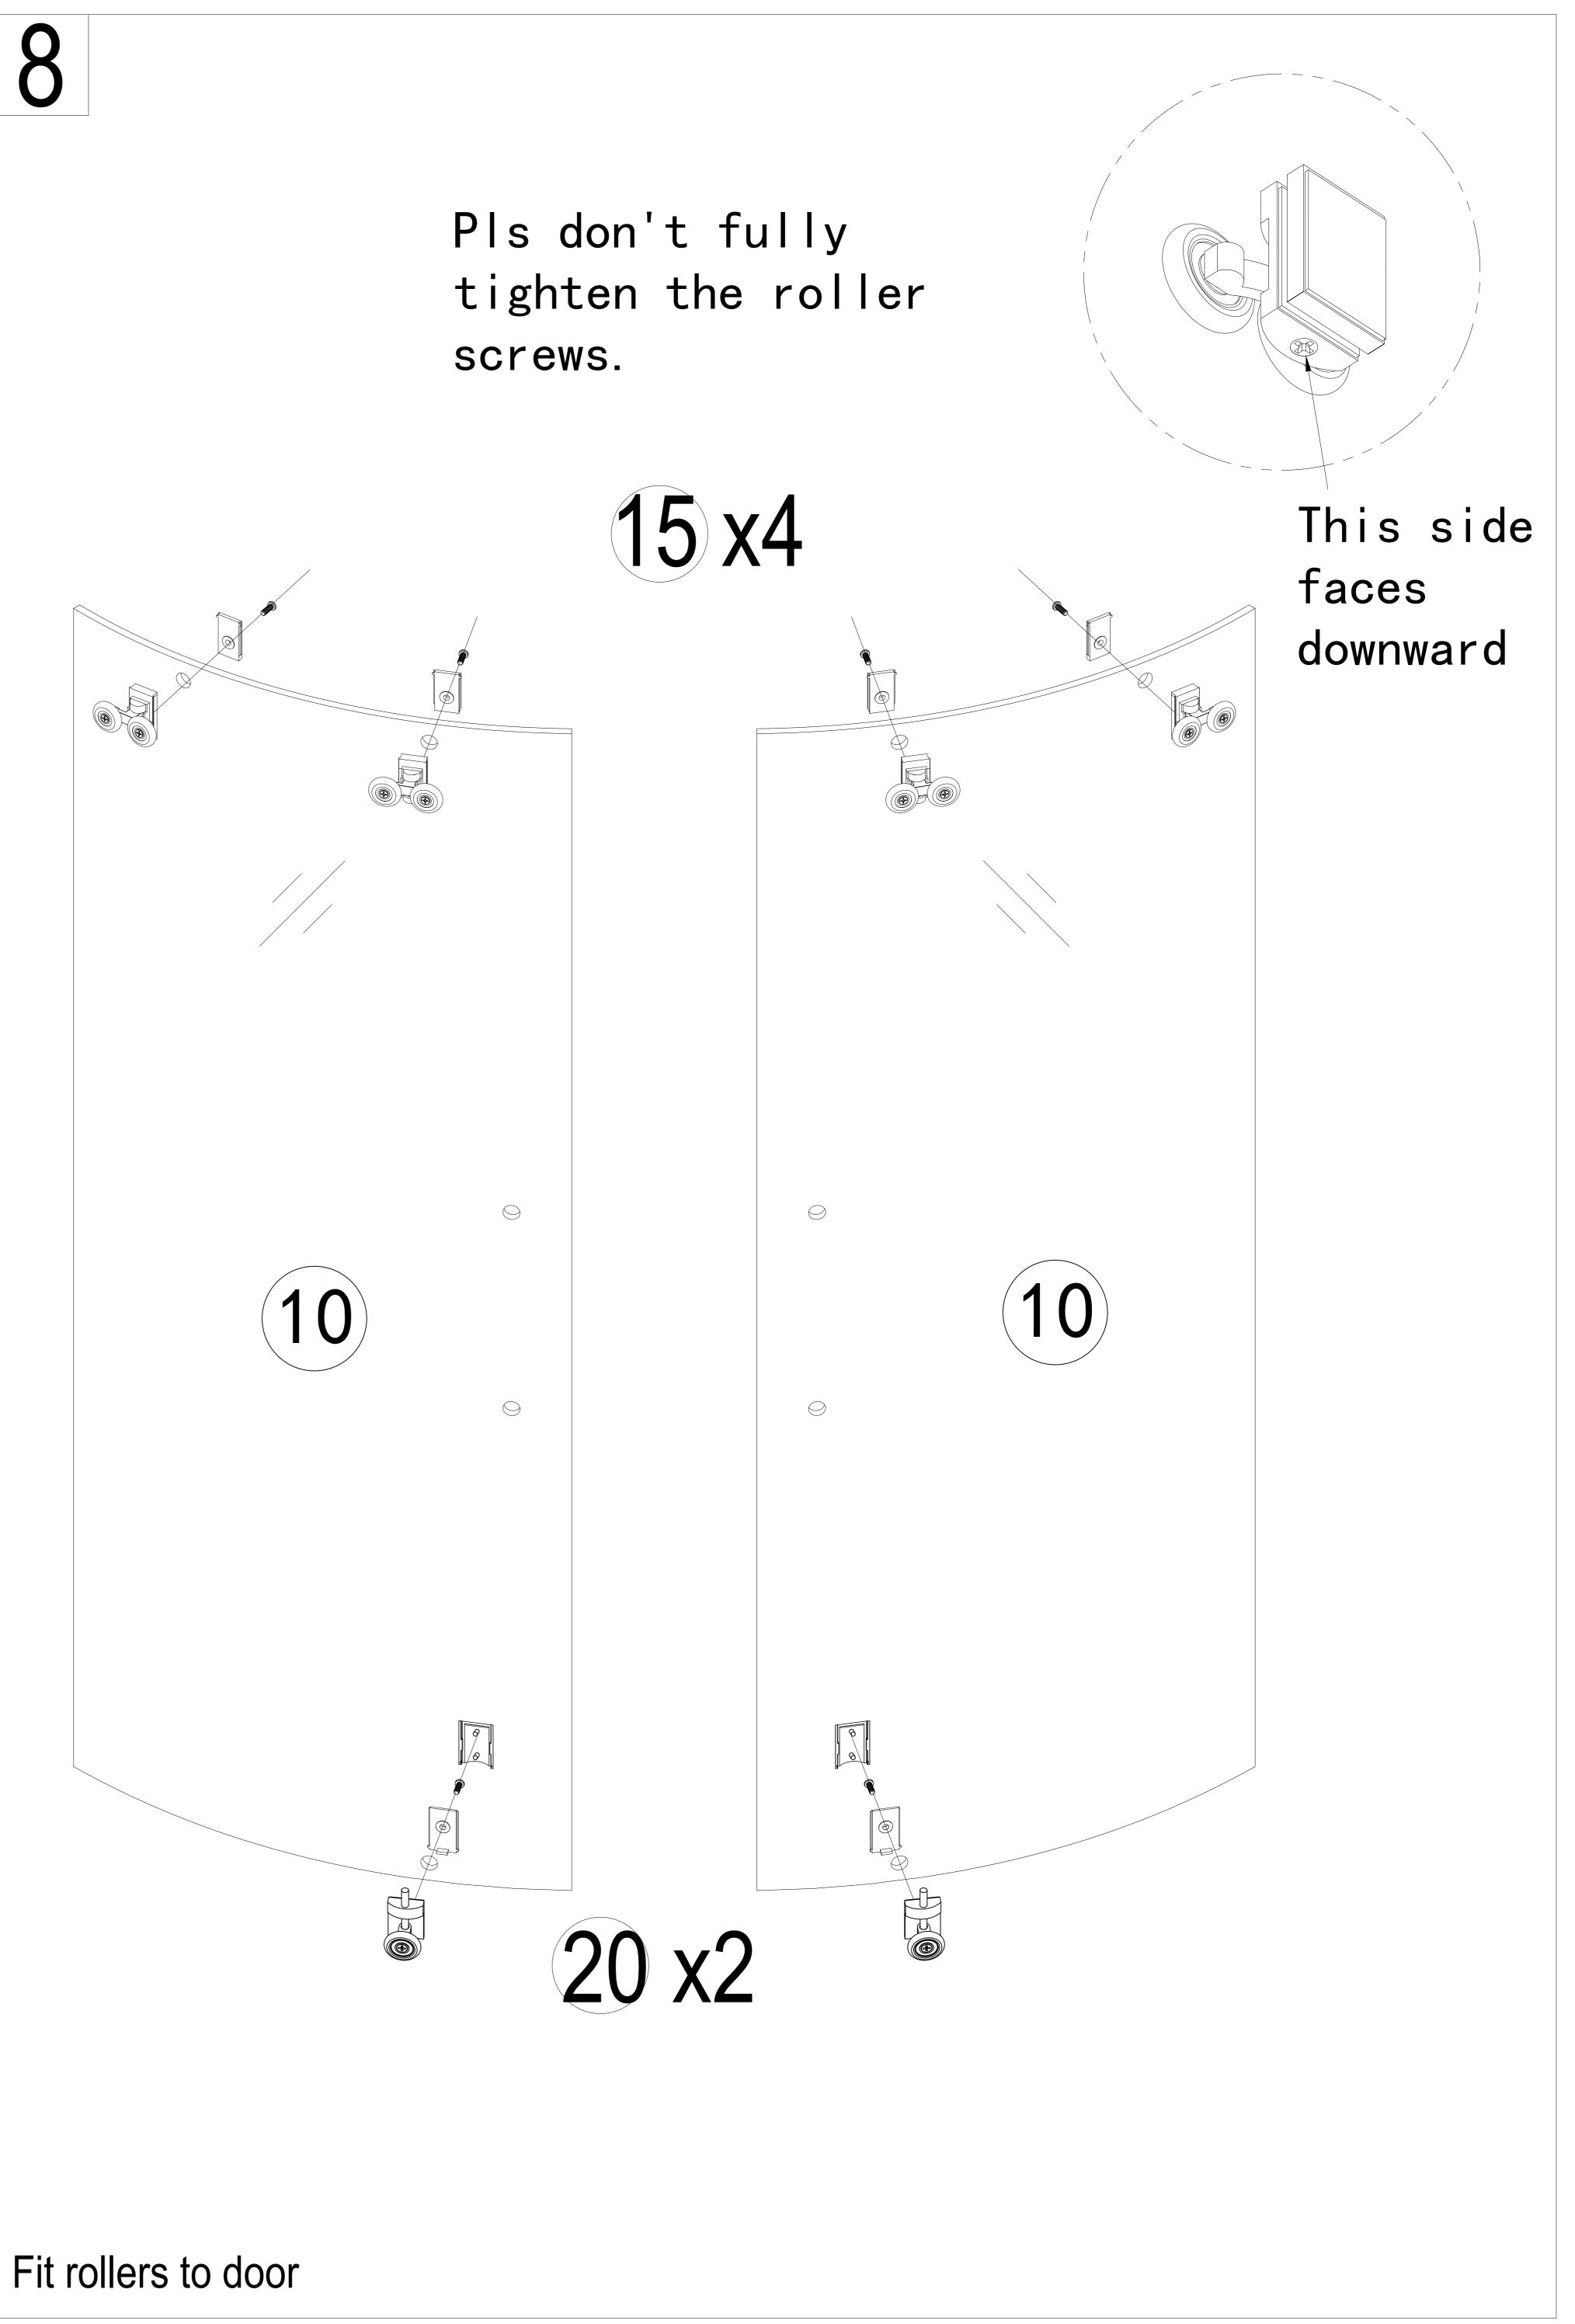


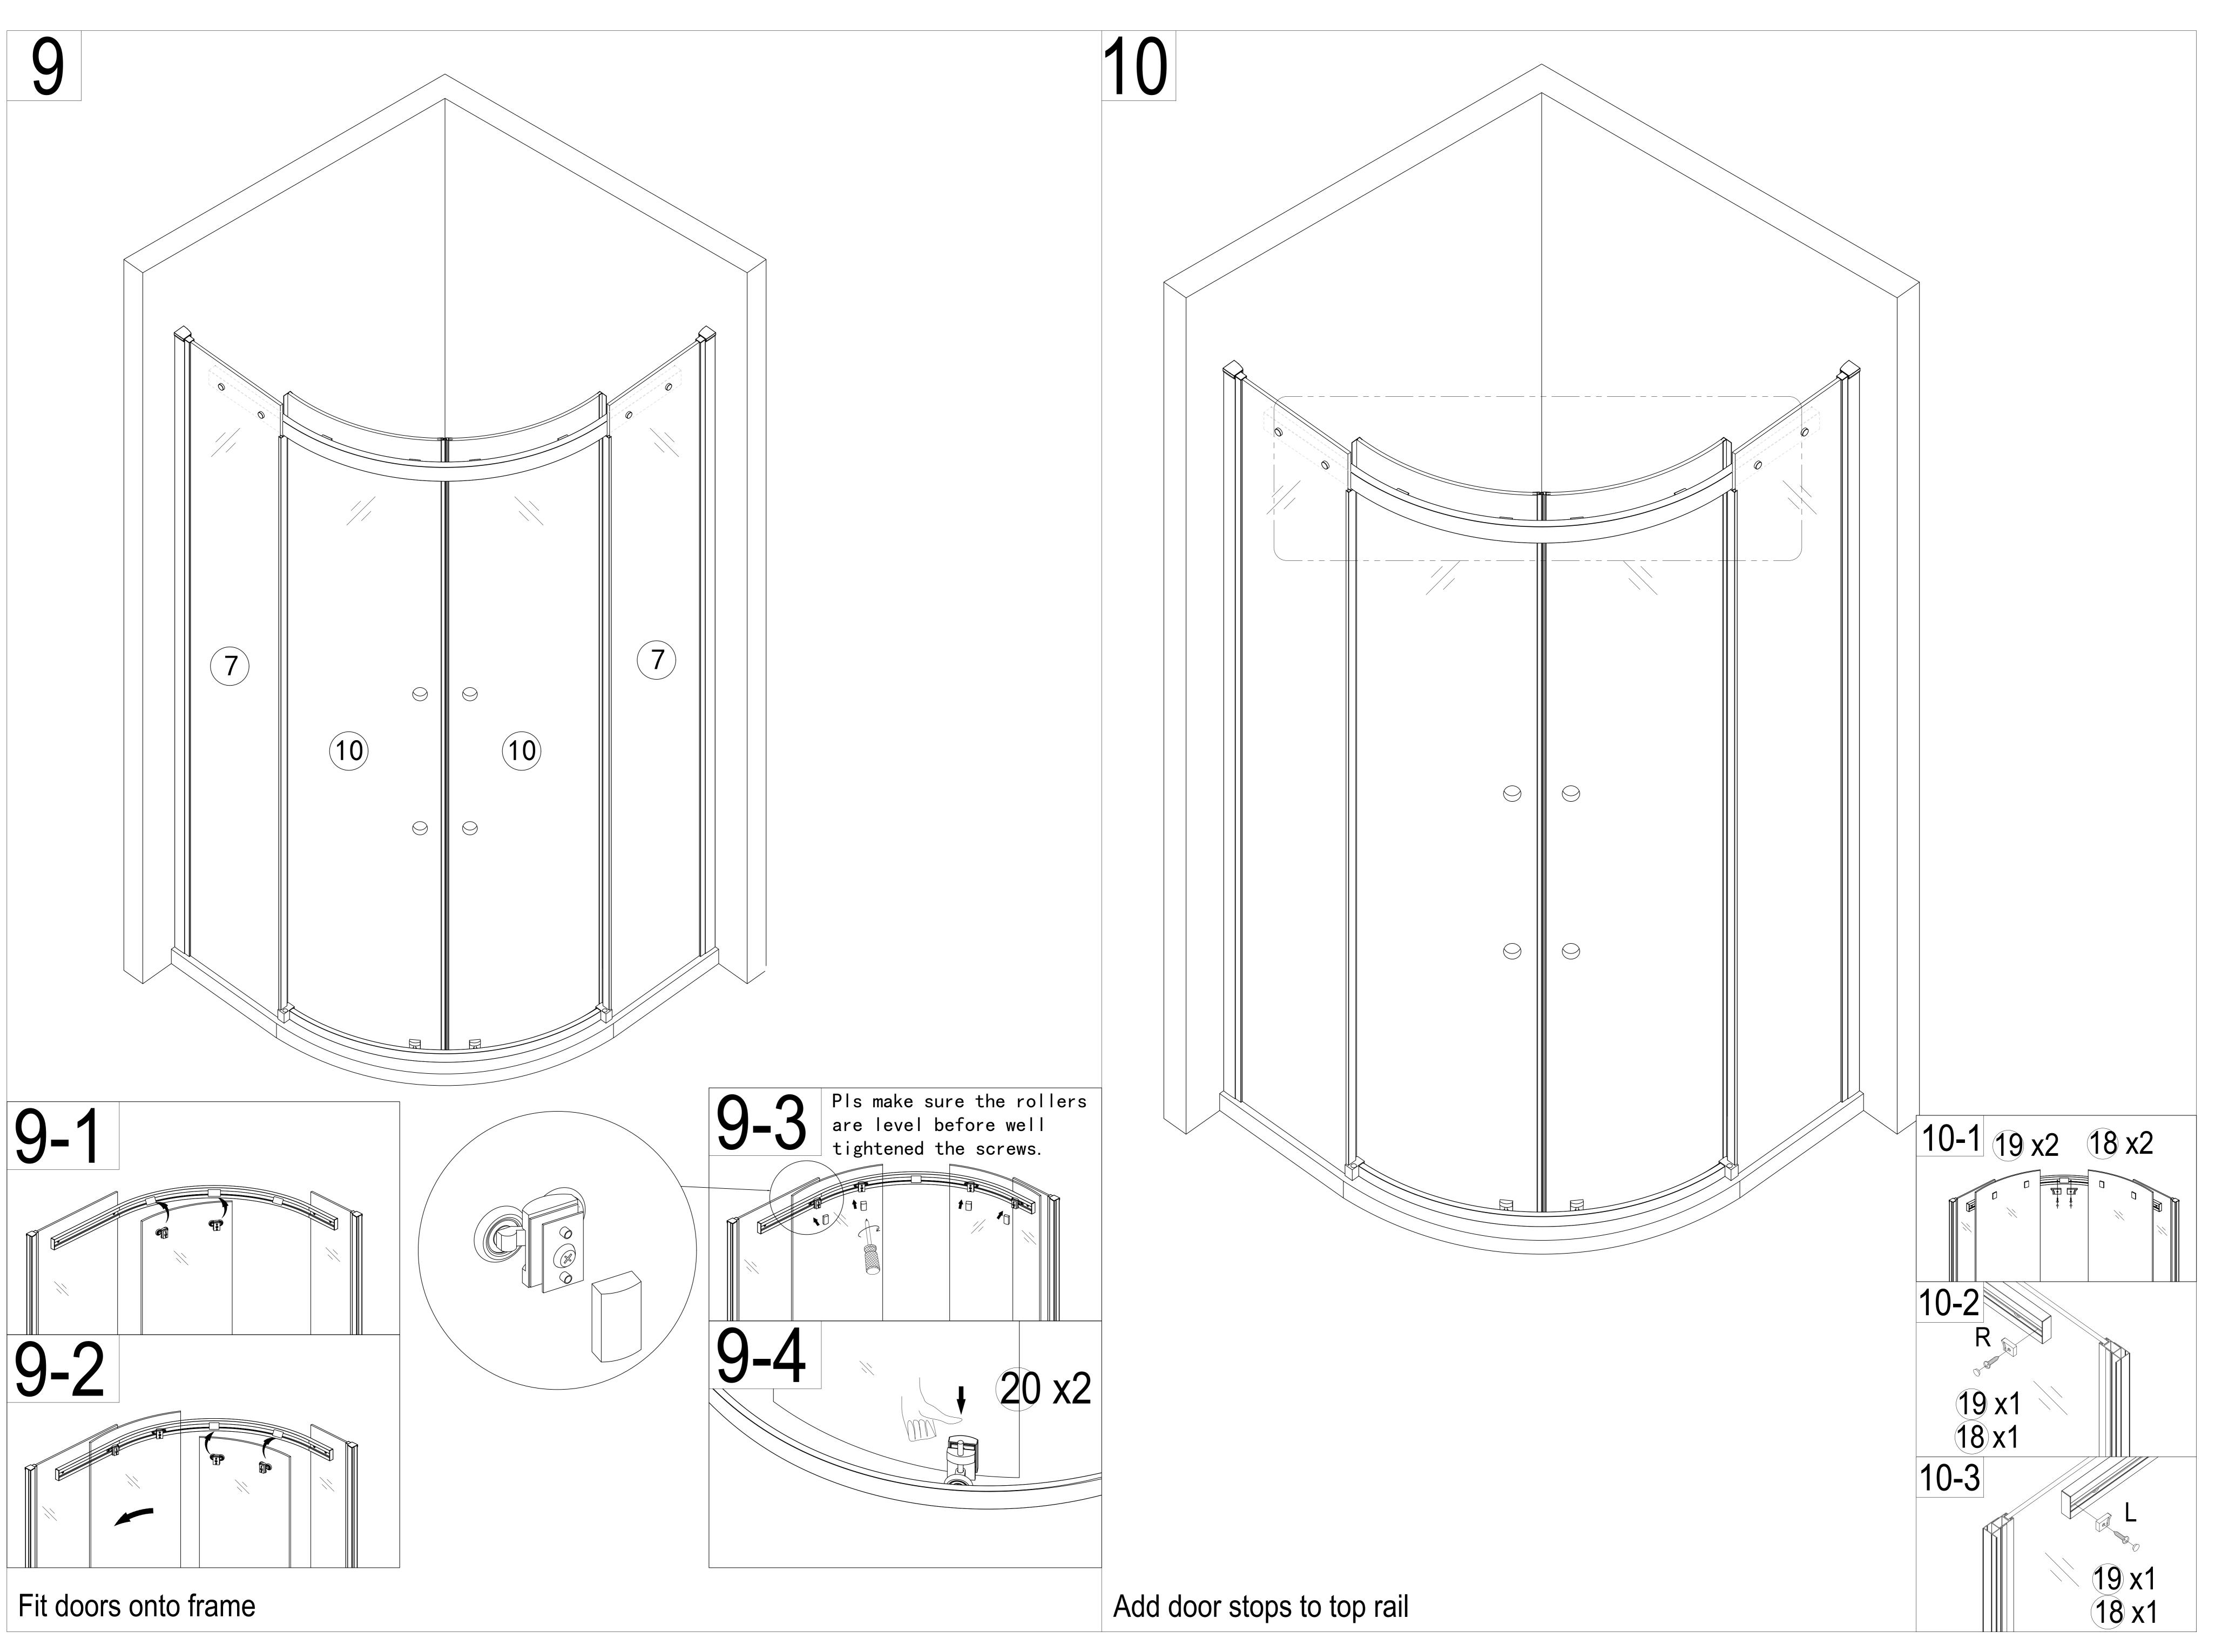

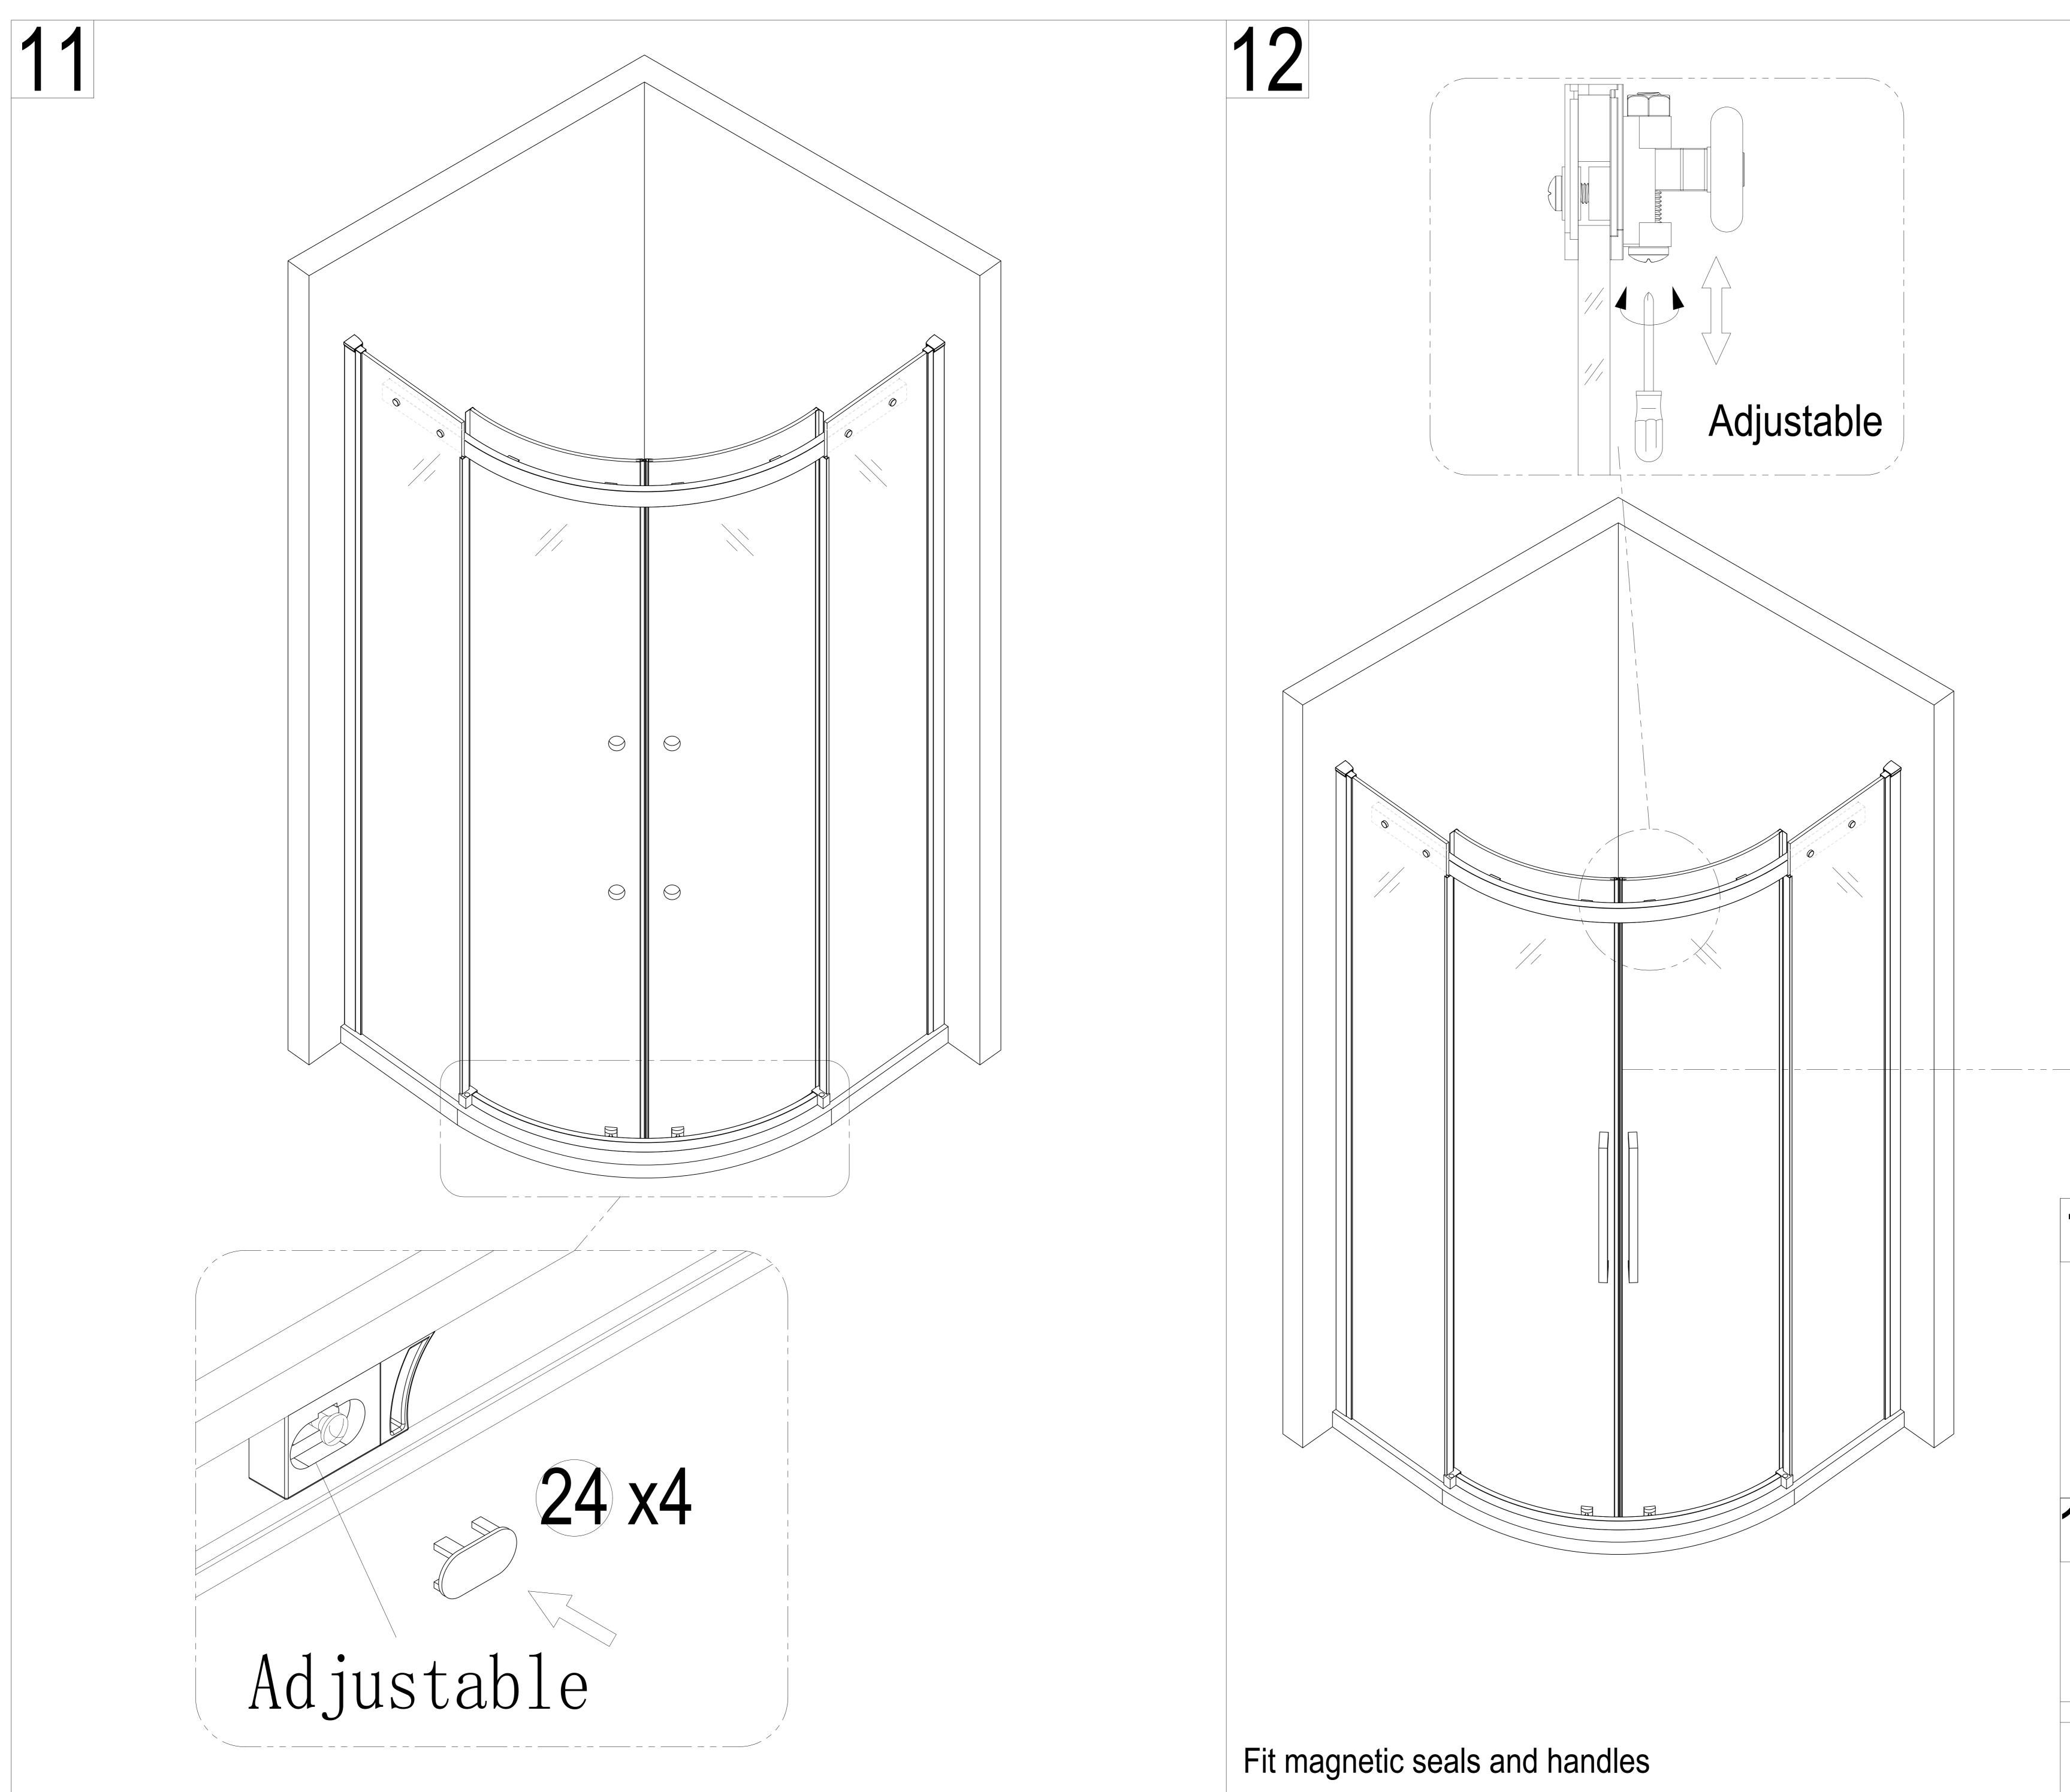


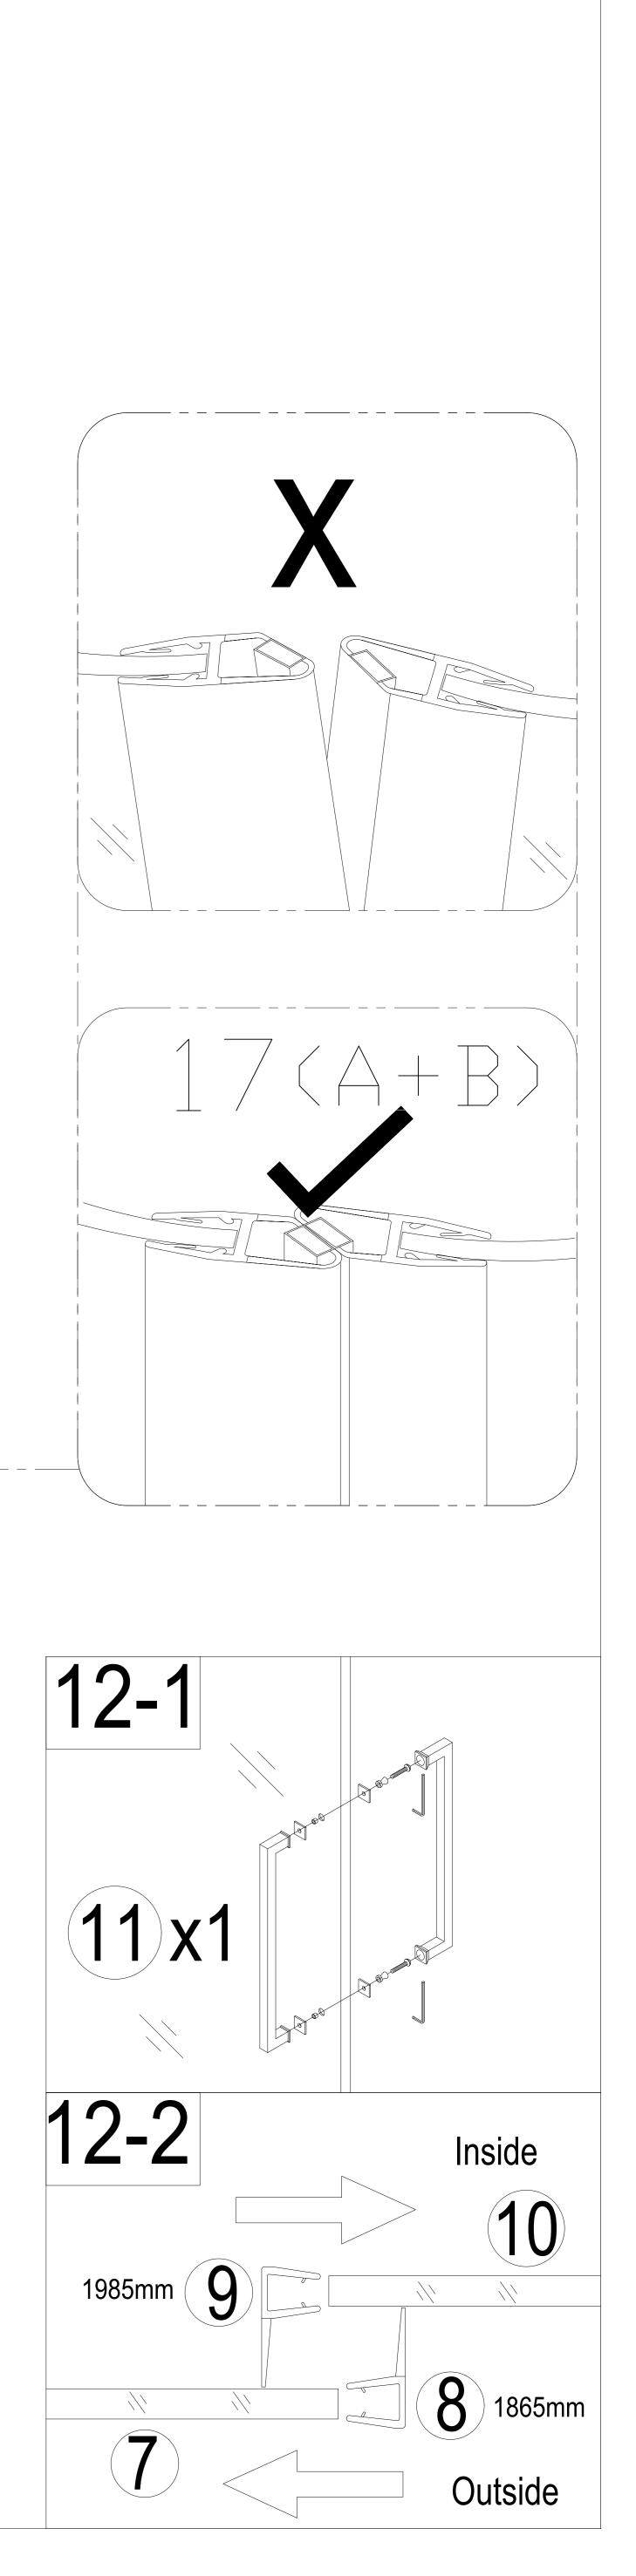

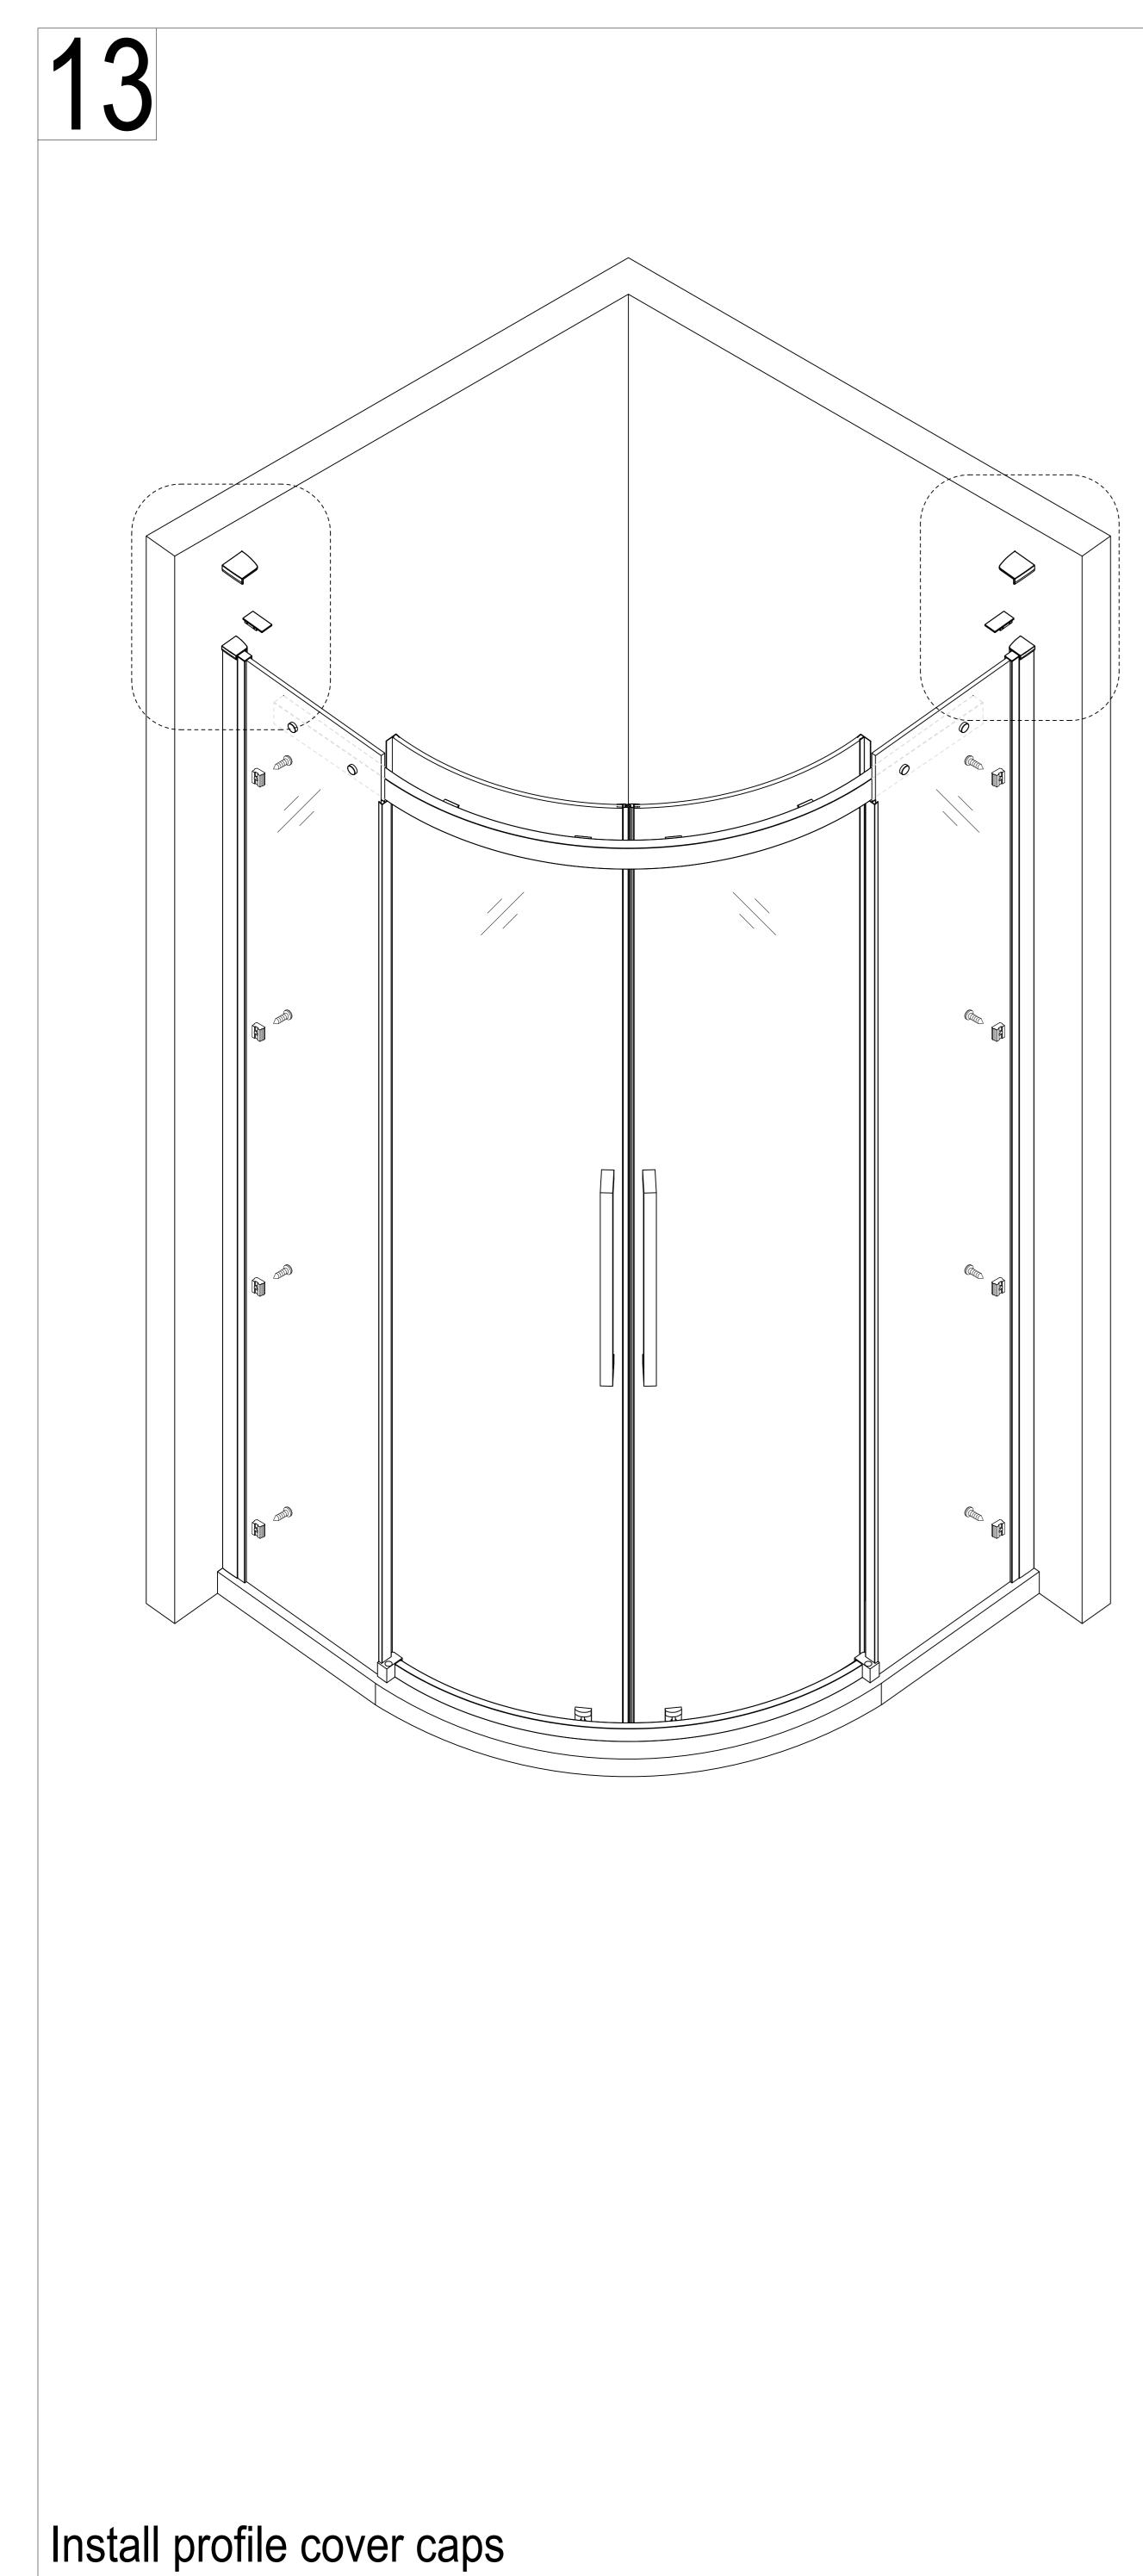

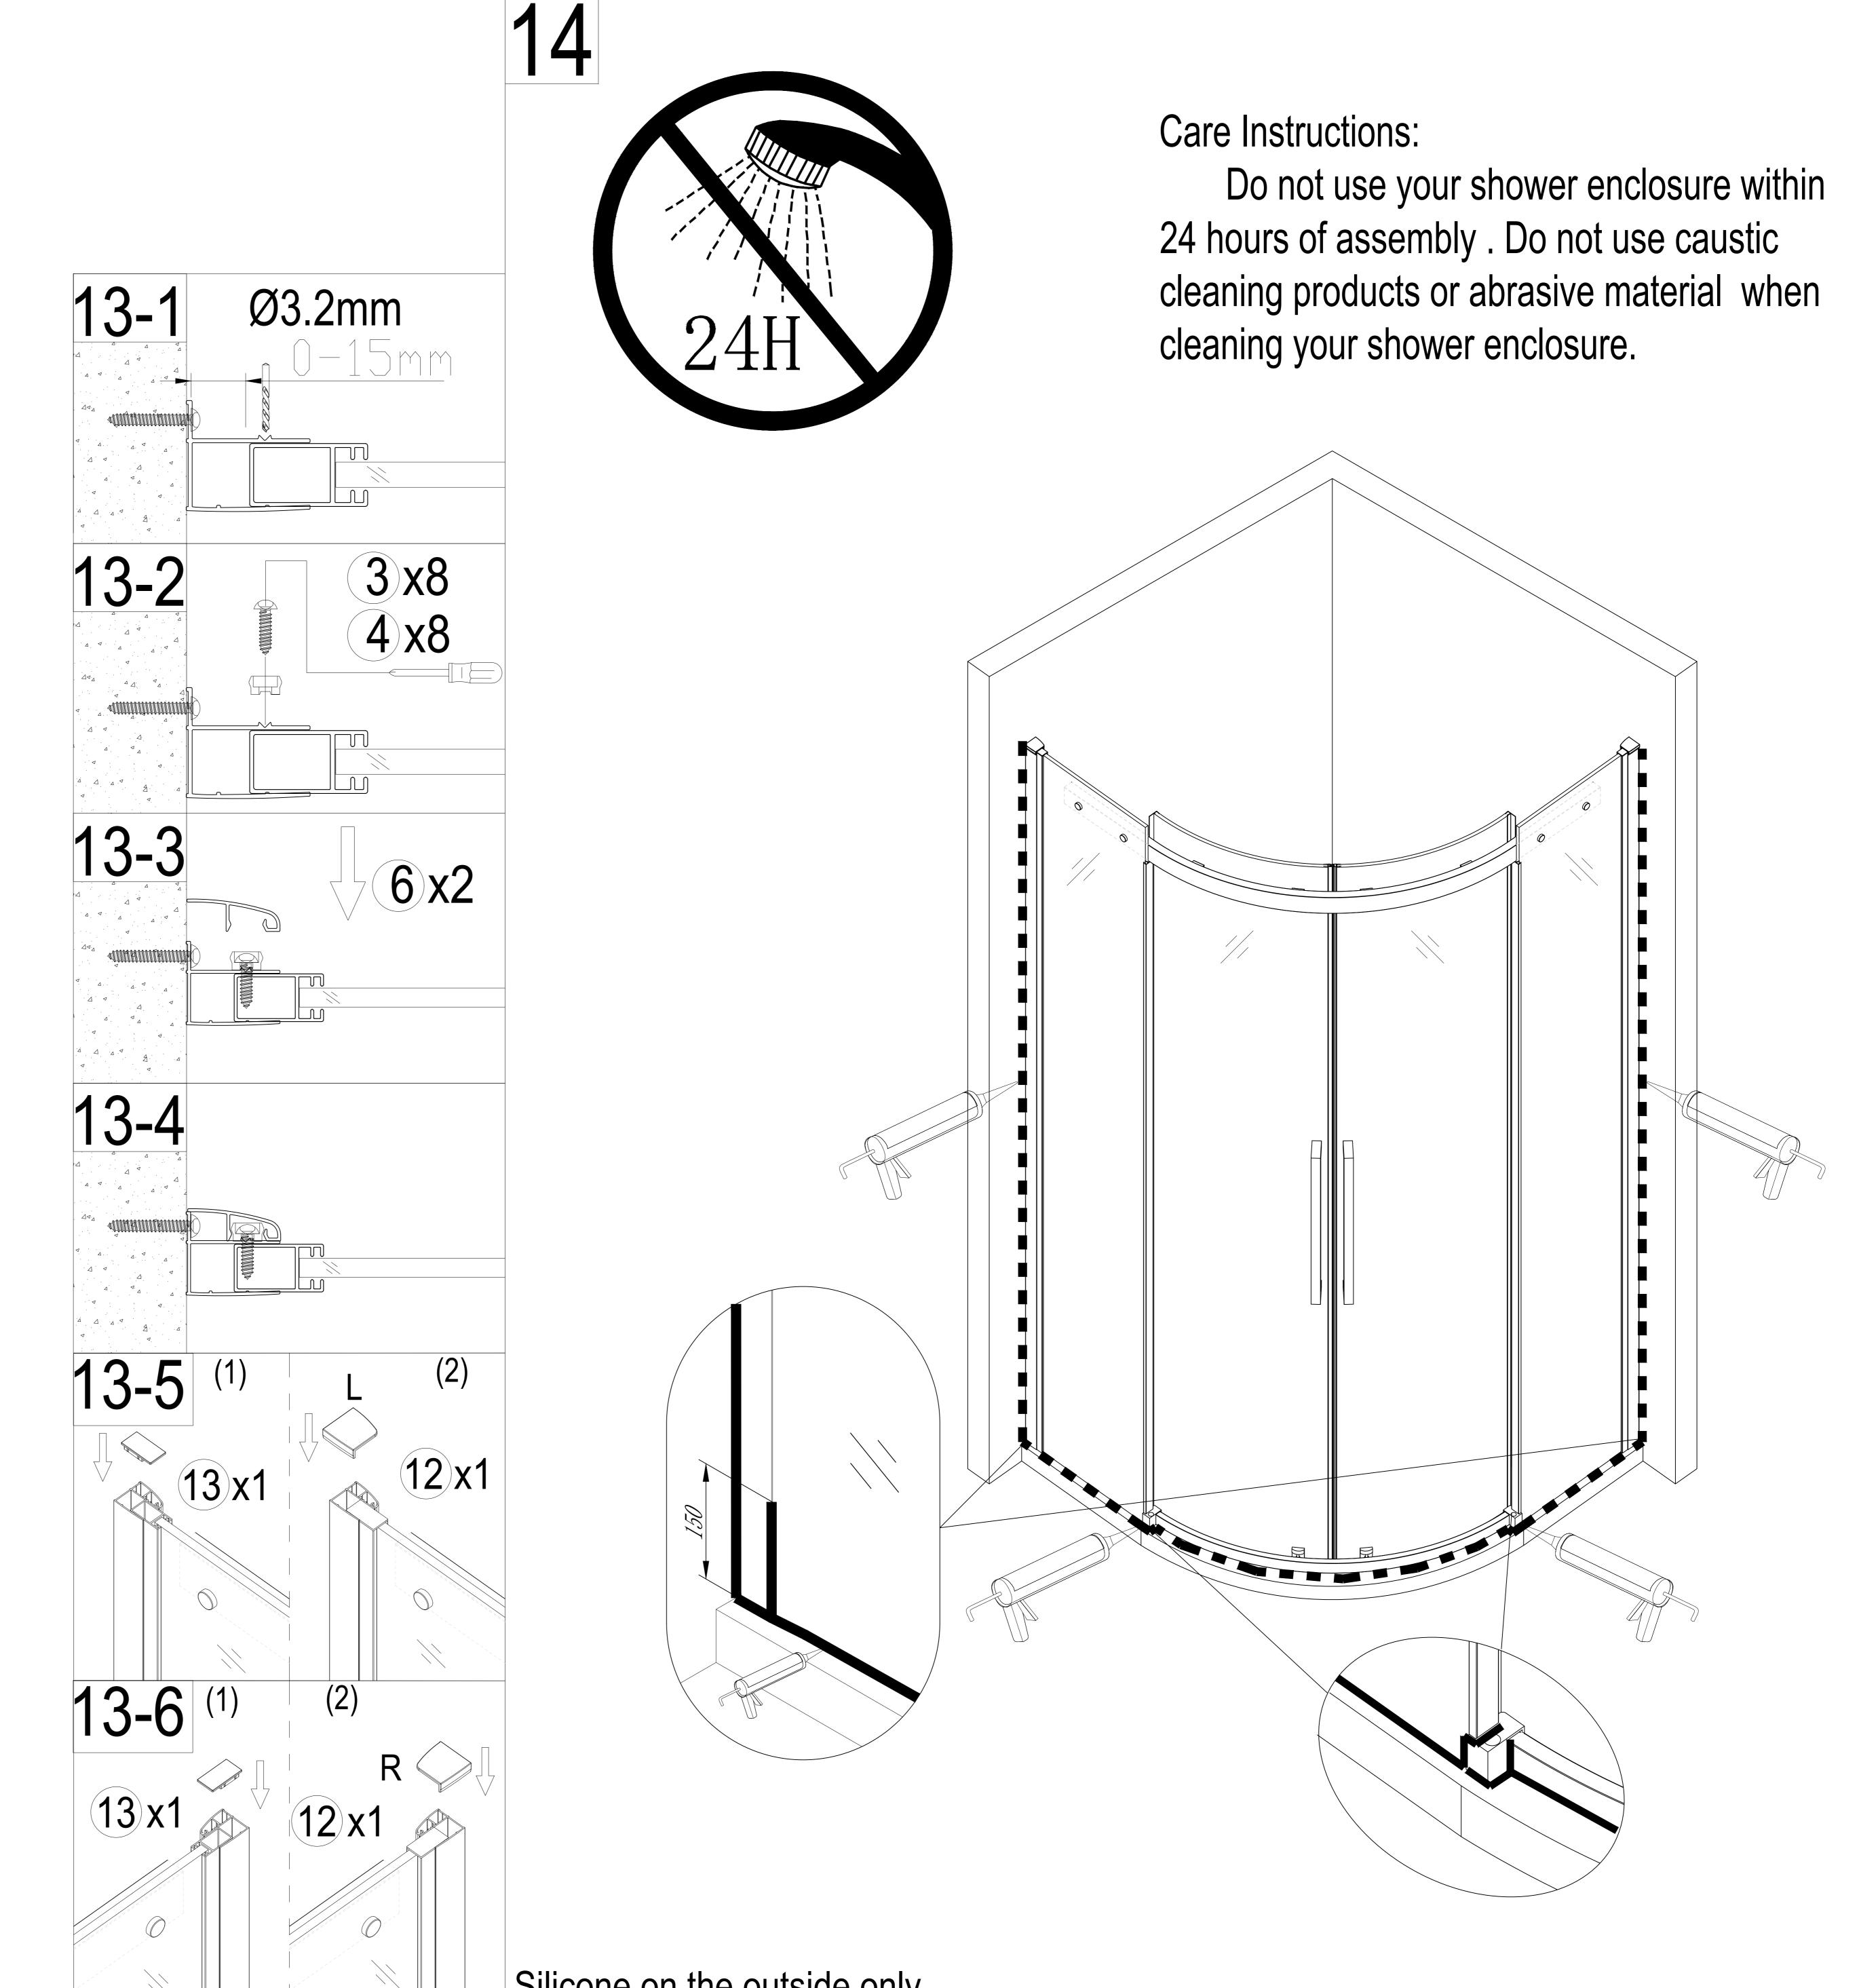

Silicone on the outside only



Eastbrook Eastbrook Road, Gloucester GL4 3DB

Technical Helpline: 01452 317890

Email: technical@eastbrookco.com

Cleaning and Maintenance of Shower Enclosures

Do not clean the shower enclosure with irritant detergents such as alcohol, bleach or other chemical cleaners.

Only clean with mild soapy water or a proprietary cleaner where the label advises it is suitable for the materials the enclosure if constructed from. Test on a small area first.

For treating limescale we would recommend distilled vinegar in a half and half solution with water.

Following installation should you find that there is a notable noise when the glass door moves you may add a small amount of silicon lubricant onto the roller wheels and tracks, hinges or clips.

It is the responsibility of the product owner to maintain the product as recommended above. Also, to check for parts which have broken or become loose to protect against failure of the enclosure.

