Eastbrook

Eastbrook Road Gloucester GL4 3DB

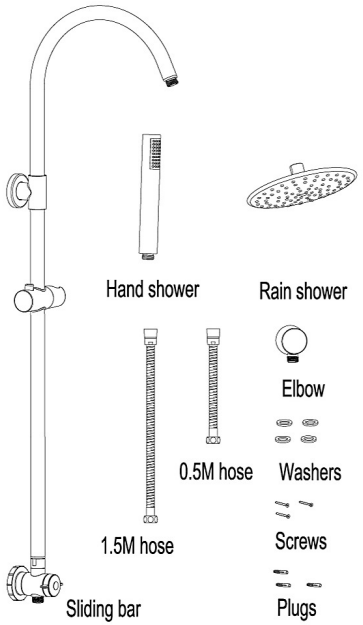

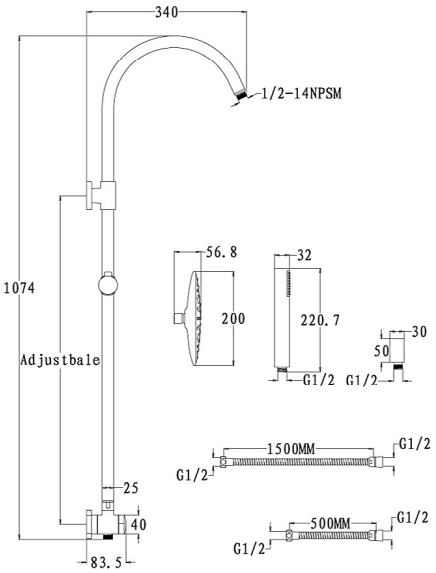

1.Drill 3 holes on the wall and put the plugs into the wall.

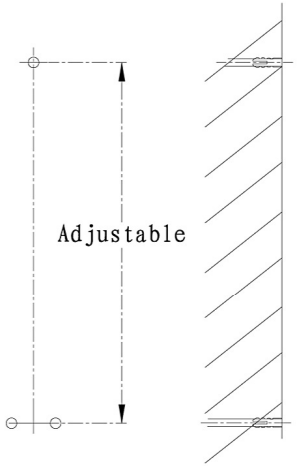

2.Fix the upper and down wall bracket to the wall.

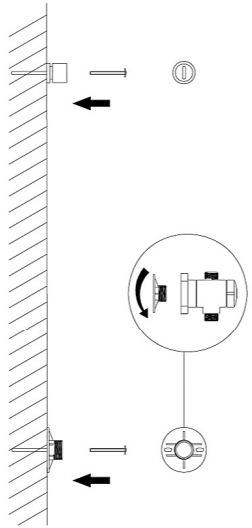

3.Assembly the sliding bar.

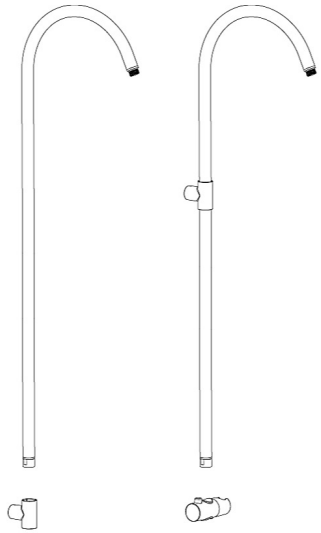

4.Connect the down bracket to the sliding bar.(the brass thresd down ward)

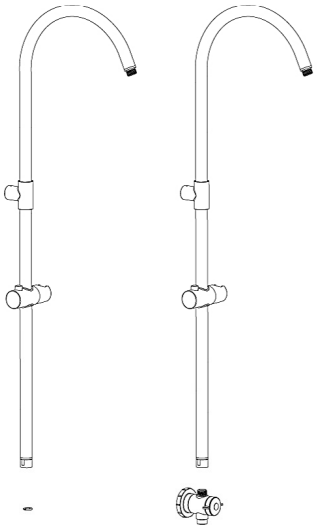

5.Put the flarge into the bracket ①,the pin will be connect the upper wall bracket and the wall bracket ②.

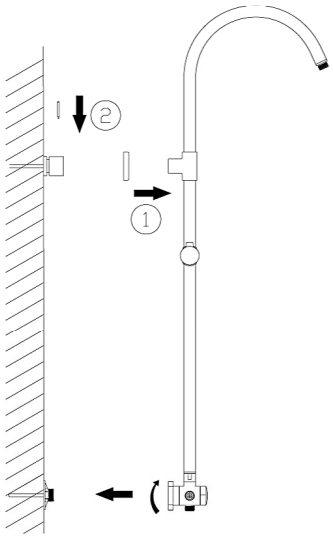

6.Connect the rain shower to the sliding bar ,The 0.5m hose connet the down wall bracket and the fancet.

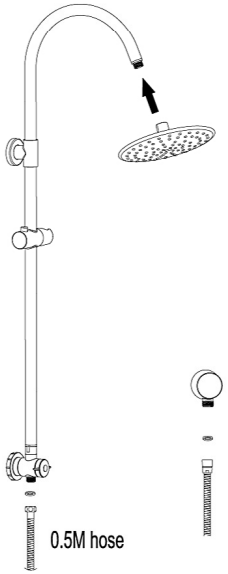

7.Connct the hand shower .

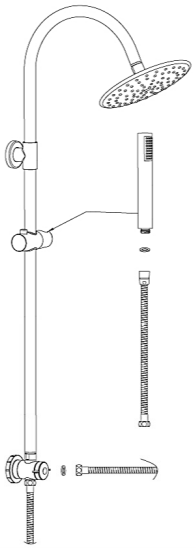
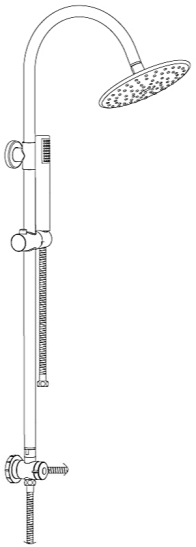
8.Finish.