TAP8319 – Alvo Single Lever Pull Out (Chrome)

Key:	Description:	APX size (mm):	Base material	Colour:	QTY:
A1	Aerator	M16 x F	Plastic	White/Light blue	1
A2	Spray head	22 x 26	Plastic	Matt Black	1
A3	Spout	296 x 238	Brass	Chrome	1
A3	PTFE spacer	3 x 17 OD	Plastic	White	1
A4	Grub screw	5 x 4	Steel	Silver	1
A5	PTFE spacer	5 x 22 OD	Plastic	White	1
A6	O-ring	2 x 22 OD	Rubber	Black	2
A7	PTFE spacer	5 x 22 OD	Plastic	White	1
A8	PTFE spacer	3 x 23 OD	Plastic	Black	1
B1	Body	80 x 65	Brass	Chrome	1
B2	Base plinth	48 x 5.5	Brass	Chrome	1
B3	Upper seal	2 x 42 OD	Rubber	White	1
C1	Cartridge	35mm Single Lever Ceramic	Plastic	Light blue	1
C2	Valve bush	36 x 10	Brass	Brass	1
C3	Decorative cover	38 x 12	Plastic	Chrome	1
C4	Handle	33 x 95 nominal Ø 40 mm	Mazak	Chrome	1
C5	Grub screw	5 x 4	Steel	Silver	1
D1	Fixing stud	M12 x 110	Brass	Brass	1
D2	Triangular stabiliser	88 x 57 x 17	Plastic	White	1
D3	Fixing washer	50 OD	Rubber	Black	1
D4	Metal horseshoe	50.5 x 3	Steel	Silver	1
D5	Fixing nut	16 x 17	Brass	Brass	1
D6	Fibre washer	1.5 x 10	Fibre	Green	1
D7	Fixing nut	18 x 17	Brass	Brass	1
D8	Fibre washer	1.5 x 13	Fibre	Green	1
D9	Shower hose	1.5m x 13mm	Nylon	Grey	1
E1	Hose weight	58 x 50	Mixed	Black	1
E2	Weight screw	M4 x 19	Steel	Silver	2
F1	Hot flexi tail	½" BSP Female x 360mm	Stainless braided hose	Silver/Red	1
F2	Cold flexi tail	½" BSP Female x 360mm	Stainless braided hose	Silver/Blue	1

© Abode Home Products Limited

TAP8319 – Alvo Single Lever Pull Out (Chrome)

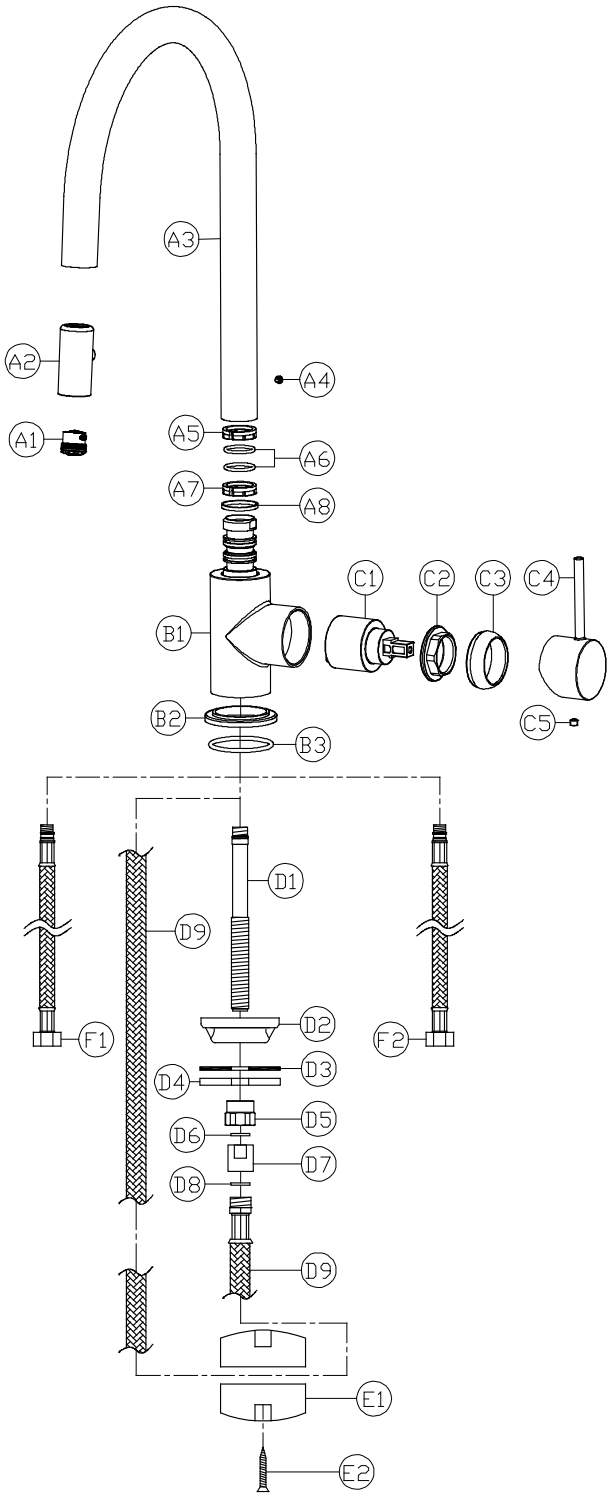

LAMONA
Exclusive to Howdens Joinery Co.

TAP8319 - Alvo Pull Out
service drawing v1

our policy is to continually Improve and develop products, and accordingly we reserve the right to amend specifications without prior notice

© Abode Home Products Limited

TAP8319 – Alvo Single Lever Pull Out (Chrome)

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Loosen grub screw (C5) on the underside of handle (C4) using a 2.5mm A/F Allen key.

2. Pull the handle (C4) horizontally away from the tap body (B1).

3. Unscrew the decorative cover (C3) horizontally away from tap body (B1) by hand.

4. With the tap (B1) fixed to the sink/base unit, using an adjustable spanner unscrew the valve lock nut (C2).

5. Clean the Inside of chamber (B1) with a soft wet cloth.

6. Replace the faulty valve (C1) with the new one and assemble in reverse order.

To replace the spout O-rings:

1. Loosen grub screw (A4) on the back of body (B1) using a 2.5mm A/F Allen key.

2. Pull the spout (A3) vertically away from the tap body (B1).

3. Remove PTFE rings (A5, A7 & A8) and O-rings (A6) using a precision screwdriver and replace with new ones.

4. Reassemble the tap in reverse order.

© Abode Home Products Limited