



**Carron Bathrooms Ltd  
North Carron Works  
Stenhouse Road  
Carron, Falkirk  
FK2 8UW**

**Tel: +44 (0)1324 638 407**

**Fax: +44 (0)1324 611 490**

The elenda logo is set against a grey rectangular background. It features a stylized lowercase "e" with a dot, followed by the word "lenda" in a lowercase, sans-serif font. A registered trademark symbol (®) is positioned at the top right of the "a".

**elenda®**

The lowest profile jet system in the world

**Care & User Guide**

1

### FLUSH CENTRO JET



MID SIZED HYDRO-MASSAGE BODY JET.  
To adjust direction pivot centre eyeball  
(Clenda Systems 1/2/3/4/5/6)

2

### FLUSH MINI JET



SMALL HYDRO-THERAPY JET.  
Used in clusters to target specific areas like the lumbar and feet.  
(Clenda System 2/3/5/6)

3

### FLUSH AIR BUTTON



PNEUMATIC SWITCH THAT TURNS THE PUMP ON AND OFF.  
To Turn On - Press centre button firmly.  
To Turn Off - Press a second time.  
(Clenda Systems 1/2/3)

4

### FLUSH AIR CONTROL



CONTROLS THE FLOW OF AIR TO THE JETS.  
To increase jet intensity, turn clockwise.  
To reduce jet intensity, turn anticlockwise.  
(Clenda Systems 1/2/3/4/5/6)

5

### FLUSH SUCTION



SAFETY GRILL WHERE WATER IS DRAWN FROM THE BATH INTO THE PUMP.  
The built-in safety sensor reduces suction pressure within seconds of being activated, preventing anything being sucked and held against the suction grill.

Ensure the safety grill is not blocked with flannels, toys etc., as this will activate the safety sensor.

**WARNING - DO NOT USE THE BATH IF THE SUCTION COVER IS DAMAGED OR REMOVED.**

(Clenda Systems 1/2/3/4/5/6)

6

### WHIRLPOOL ON / OFF



ELECTRONIC SWITCH THAT TURNS THE PUMP ON AND OFF.

Simply press the control, which illuminates when pushed. To activate your system on full power, press again to turn the system off. The control will only operate if there is enough water in the bath. The system will automatically switch off after approximately 25 minutes, unless turned off manually.

(Clenda System - 4/5/6)


7

### CHROMO-THERAPY ON / OFF



The light can be used independently from other functions. By pressing the button for 1 second, the RGB Spotlight lights up white. By pressing again briefly, you select the other 11 colours and the 5 colour sequences. Turn off the Chromotherapy system by pressing the button again for 1 second. The light turns itself off automatically after approximately 25 minutes.

(Clenda Systems - 3/6)

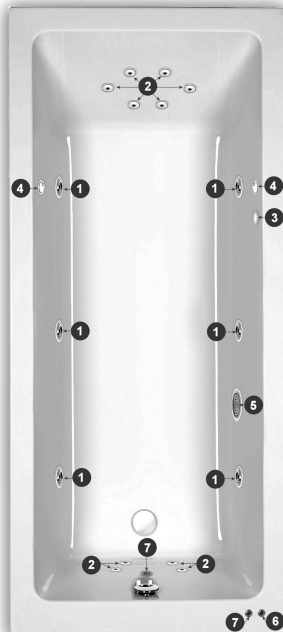

Please note that the bath illustrated shows all switches and jets available for Clenda systems.

The fittings available may vary depending on which system you have ordered.

### CLEANING

To clean the surface of your bath, use a mild, non-abrasive bathroom cleaner and a soft cloth.

We advise using a whirlpool cleaner at least once a month, to remove (body oils, dirt, soaps, shampoos and lotions) from your system.

### BATHING PRODUCTS

We recommend the use of low foaming bubble-bath products only while your system is in operation.

The use of bath salts is not recommended while operating your system.