
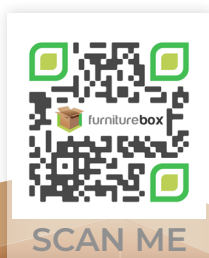


KAFE TV SIDEBOARD

ASSEMBLY GUIDE

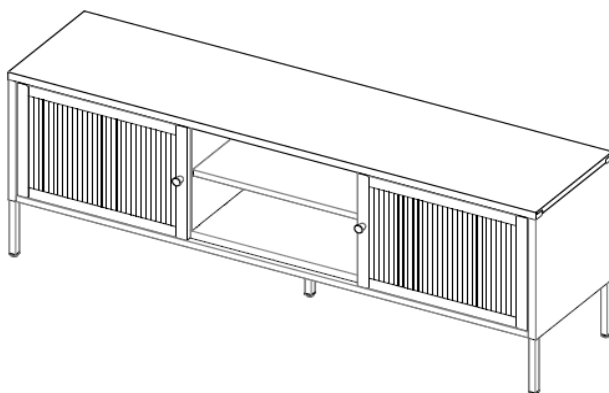

www.furniturebox.co.uk

Scan QR code for more tips,
and advice or visit
furniturebox.co.uk/club/general-club-page

Important - Please read these instructions fully before starting assembly



SAFETY AND CARE ADVICE



NO POWER TOOLS

SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre
- **Warning:** Unfixed furniture may tip over. We strongly advise you use the anti-tipping kit provided to secure your shelves to the wall. Please use appropriate fixings for your wall and get professional advice if unsure.



IMPORTANT INFORMATION



30 MINUTE
BUILD




TWO
PERSON








MAXIMUM
CAPACITY 70Kg

PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

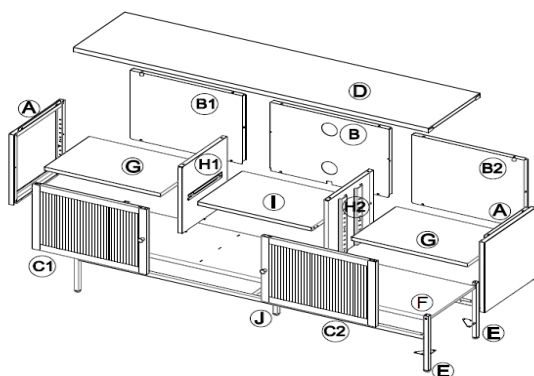

No.	Size	Qty
A	418x350x24mm	2
B	390x550x23mm	1
B1	390x500x23mm	1
B2	390x500x23mm	1
C1	371x515x20mm	1
C2	371x515x20mm	1
D	1601x351.5x38mm	1

No.	Size	Qty
E	320x1597x20mm	2
F	1596x301x25mm	1
G	516x300x20mm	2
H1	378x302x20mm	1
H2	378x302x20mm	1
I	330x300x20mm	1
J	309x193x20mm	1




1 x Screwdriver
(Not provided)

NOTE: The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

STEP 1

Use a clean, flat, soft surface to avoid any bumps or scratches.


Align 1 x central leg [J] into 2 x leg frames [E].

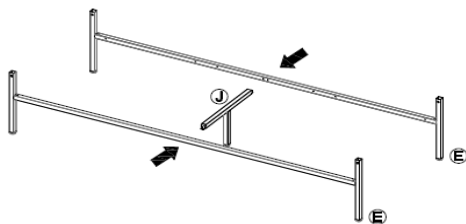

STEP 2

Attach 2 x side panels [A] to 2 x leg frames [E] by slotting [A] onto [E] with the plastic feet on the bottom.

NOTE: Ensure the holes are nearest the outside as this will affect the door assembly.

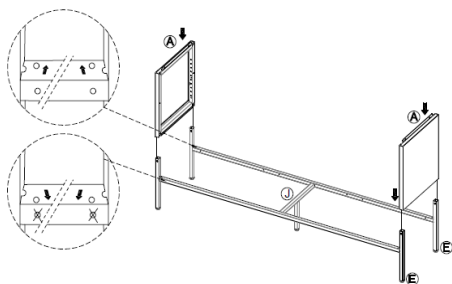


STEP 3


Attach 2 x side panels [A] to 2 x leg frames [E] using 4 x corner brackets [5] + 4 x screws [1] to each bracket - 16 in total.

Attach 1 x central leg [J] using 2 x screw [1].

Tighten with a screwdriver.

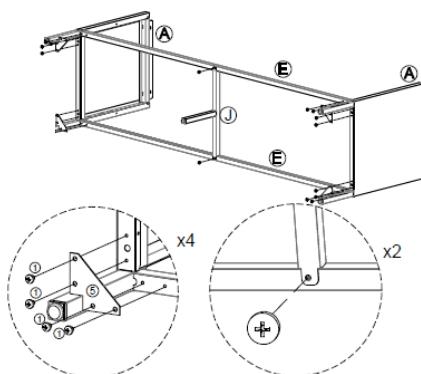


Follow us on Instagram
@furniturebox_uk

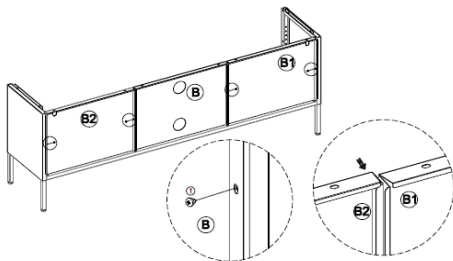

STEP 4

Align 3 x back panels [B, B1 + B2] onto 2 x side panels [A] and attach using 4 x screws [1]
Tighten with a screwdriver.

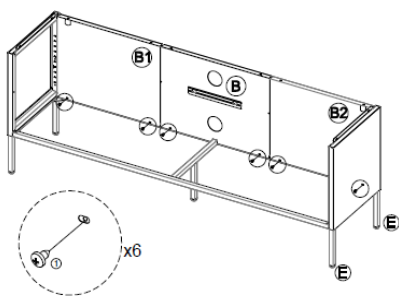


STEP 5

Attach back panels [B, B1 + B2] to leg frame [E] using 6 x screws [1] and tighten with a screwdriver.


STEP 6

Slot 1 x base panel [F] into the bottom of the frame.

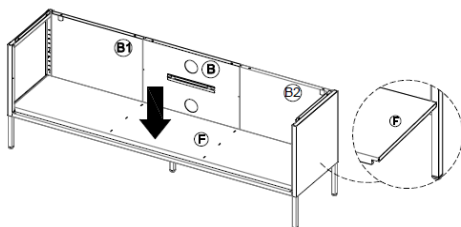



STEP 7

Attach 1 x top panel [D] to 2 x side panels [A] using 4 x screw [1] and tighten with a screwdriver.

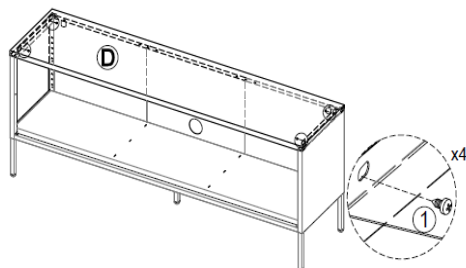

STEP 8


Attach top panel [D] to back panels [B, B1 + B2] using 2 x wall brackets [8] + 2 x screw [1] at each end, plus 4 x screw [1] and tighten with a screwdriver.

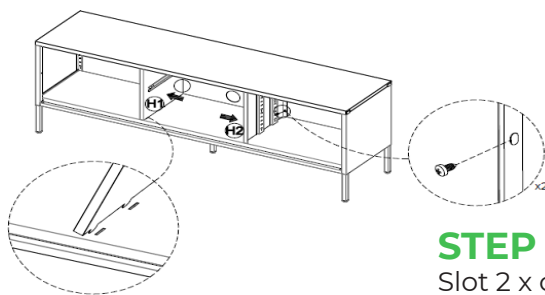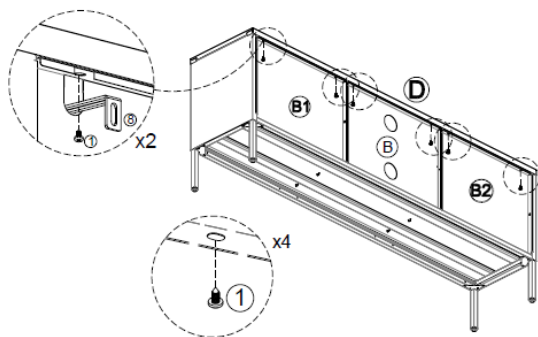

STEP 9

Slot 2 x centre dividers [H1 + H2] into the sideboard frame using the pre-made slots in base panel [F] and secure using 2 x screw [1]. Tighten with a screwdriver.



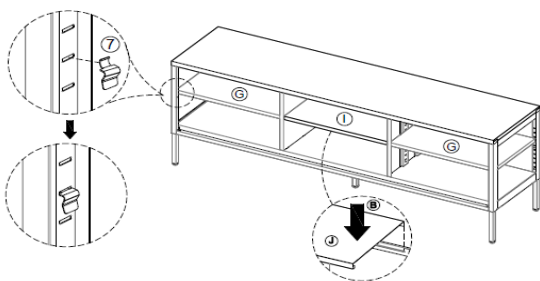

STEP 10

Slot 2 x shelf [C] into the sideboard using 8 x shelf brackets [7].




Slot shelf [I] into the pre-attached slots in the centre section of the sideboard frame.

Ensure the shelves are level.

STEP 11

Insert 2 x dowel pin [2] + 2 x washer [3] into the corners of the cabinet frame as shown.

Ensure to use the outer hole as this will affect door assembly.

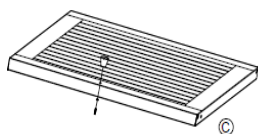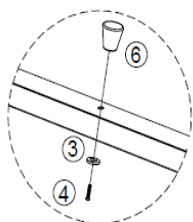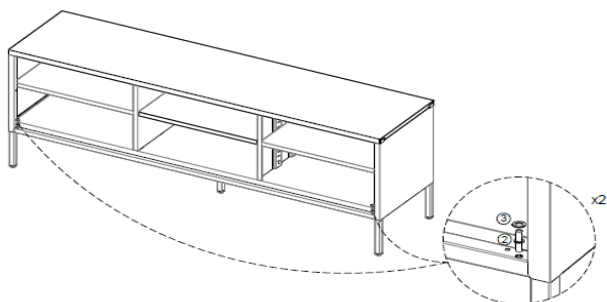




STEP 12

Attach 1 x door handle [6] to 2 x doors [C1 + C2] using 1 x washer [3] + 1 x screw [4] through the pre-drilled holes.

Tighten with a screwdriver.

STEP 13


Attach doors [C1 + C2] to the pre-assembled unit by slotting doors [C1 + C2] onto the pre-inserted dowel pins. Ensure to use the holes nearest the side panel and corner of the door.

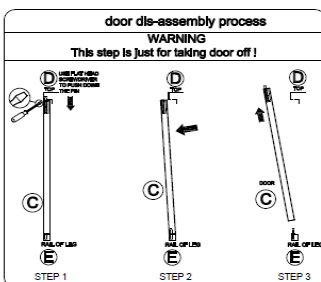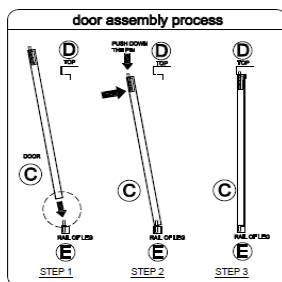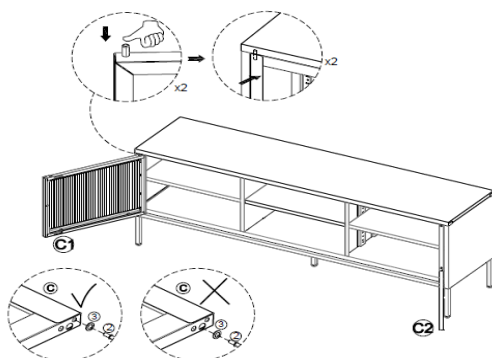

Anti Tipping Kit Assembly

STEP 14

Warning: Unfixed furniture may tip over. We strongly advise you use the anti-tipping kit provided to secure your shelves to the wall. Please use appropriate fixings for your wall and get professional advice if unsure.

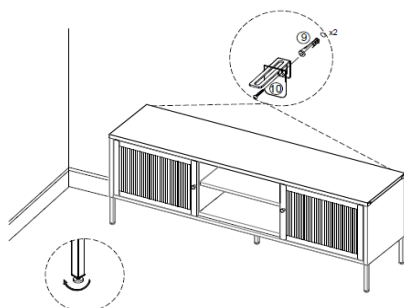

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

Secure the sideboard to the wall with the 2 x pre-attached wall brackets [8]. Attach using 2 x rawl plugs [9] + 2 x screws [10].

Check stability and adjust feet accordingly.

Your sideboard is now ready to use!