Towel Rail Installation

- .This product must be installed by a fully qualified plumber.
- .Read the instruction sheet carefully before installation
- .Check all the parts are enclosed as per the contents list.
- .If there are any missing parts or damage please contact your supplier immediately.




Eastbrook Road, Gloucester GL4 3DB Technical Helpline: 01452 317890 email: technical@eastbrookco.com


Contents List **Tools Required** Description Grub screw 4 PTFE Tape Bolt 4 Large Flat Screwdriver Blanking plug 1 8mm Masonry Bit or 3mm Wood Bit Bleed valve 1 Socket Set Spacer 4 Spanner Clean Cloth Wall fixing screw 4 and plug electric drill Washer 4 Spirit level Wall support 4


Assembly

- 1. Select your desired installation position and ensure that the wall is sufficiently strong enough to hold the weight of the ladder rail. Solid walls are ideal but if positioning on plasterboard wall it must be fixed to timber batons.
- 2. Screw the blanking plug and air vent plug into the top two threads in the upnight channel of ladder rail. Apply PTFE tape use a cloth to prevent scratching when tightening with spanner.

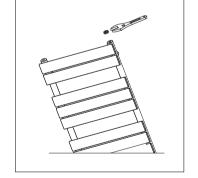


- 3. Mark the wall in the required position for the brackets are drill.
- Screw the wall support to the wall with long screw washer and supplied (use wall plug if fitting to solid wall)

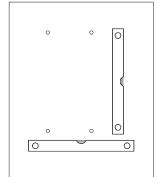

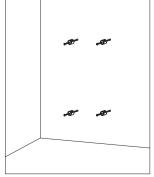

- 5. Fix spacer to pre-positioned tapping or rail with bolt.
- 6. Lift rail into place, slide spacer into wall support and secure with grub screw.

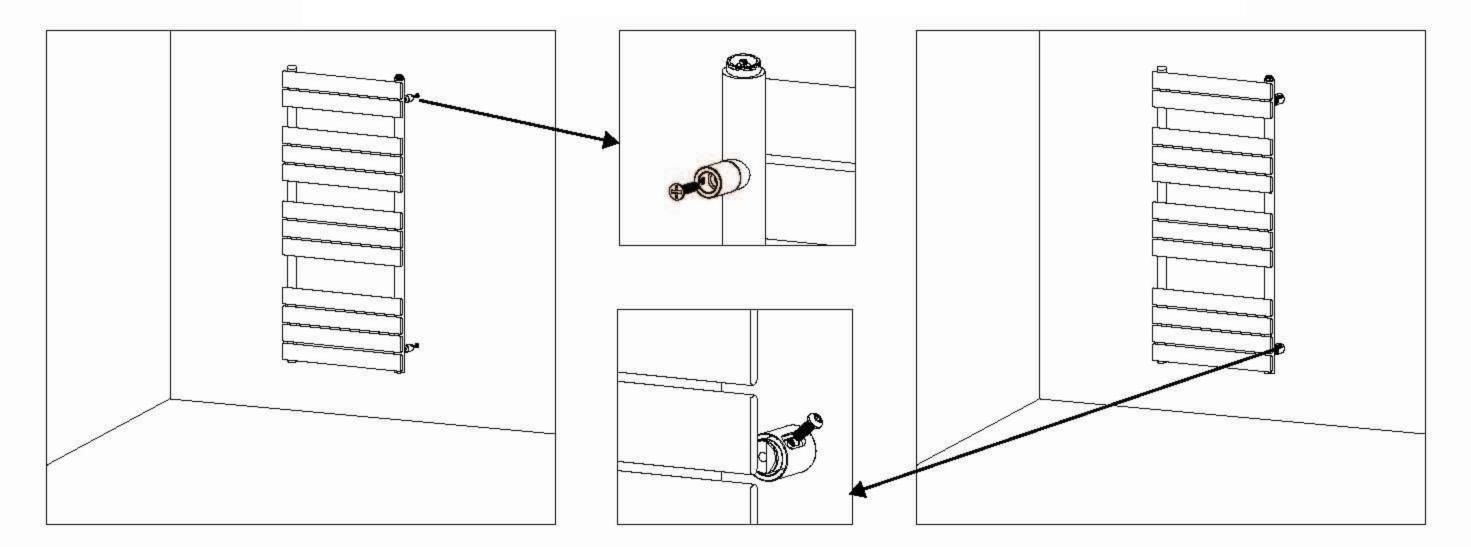

On commissioning, flush the central heating system thoroughly using a proprietary solution to ensure that aggressire substances such as fluxes and manufacturing residue, form which the internal surfaces of your towel rail can sustain irreparable damage, are removed. It is further recommended that an appropriately approved corrosion inhibitor be subsequently added to the heating system in order to protect the heated towel rail and other parts of the central heating system to promote extended operating lifespan.

Maintainence

- .From time to time it is advisable to wash your towel rail with warm soapy water in order to retain its orginal sparkle.Never use any form of abrasive cleaner.
- .Corrosion inhibitor must also be regularly maintained, please consult your engineer for details.

Warranty

Your heated towel rail is fully warranted for five years in respect of defective materials. This is subject to installation being carried out by a qualified engineer in accordance with good practice and corrosion inhibitors being regularly maintained.

Helpline: 01452 317890

Mon-Fri 8.00am - 5.00pm