Disposable mask (Non-medical)

Item Number: FH001

Color: white and blue

Size: 17.0cm*9.5cm

Material: Including three layers, the outside layer is non-woven fabrics, the middle layer is melt-blown cloth, and the inside layer is non-woven fabrics.

Packing: 40 ps / paper box, 2000 pcs / shipping carton

MEAL: 52*40*37.5 CM

Product feature: Disposable surgical Mask, block 95% of spray, bacteria and virus, ideal as a comfortable substitute for earloop face masks.

Protection against bacteria, virus, spray, dust, pollen, ect.

Manufacturer is ISO 9001 certified

BFE ≥ 95%

Company: Beifa Group CO., LTD.

Place of origin: Ningbo, China

DISPOSABLE MASK













Disposal Mask (non-medical)

FH001

Chinese Standard: GB/T 32610-2016

Mask size: 17.5*9.5cmColor box size: 19*9.9*8.5cm

Carton size: 52*40*37.5cm

• Weight: 2.8g

 The product consists of two layers of non-stick non-woven farbric, one layer of melt-blown fabric, nose clip and elastic ear loops

Disposal Mask(non-medical)

Product structure and composition

The product is composed of the mask body, nose clip and mask belt. The mask body is composed of non-woven fabric (outer layer), melt blown fabri (middle layer) and non-woven fabric (inner layer).









-01-


Disposable Mask Disposable Mask

FH001 Lengthened nose bridge, length is ≥10cm (Normal length ≥8cm) Using aluminum ----- strip/double iron wire plus plastic coating Using ultrasonic spot welding technology Firmly resistant to pulling The outer layer uses 2s grade _____ non-woven fabric The inner layer of non-woven fabric is made of high-grade skin-friendly cotton Earloop length is 16cm High elasticity Can withstand more than 10N pulling force Hypoallergenic and improve comfort Three-layer folding, The rebound ratio is less than 1:1.2 enlarged face protection design Large space for more comfortable breathing 17~17.5cm Expanded surface is 17~17.5cm Designed for European and American faces to improve fitness Front Back

- 03 -

- 04 -

THREE LAYERS OF PROTECTION

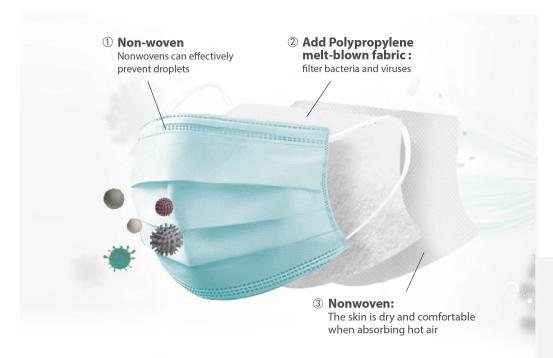

Instructions of use



Hold mask with nosepiece at top of mask with white lining facing you.



Apply mask to your nose and mouth and pinch nosepiece to conform to your nose.



Expand the pleats and place the bottom of the mask under your chin.



Mould nose piece tightly to secure facial fit.



▲ 10PCS/BAG



▲ 7PCS/BOX



▲ 14PCS/BOX



▲ 30PCS/BOX



▲ 50PCS/BOX



▲ 40BOXES/CARTON 2000PCS/CARTON

Certification

