

INSTALLATION MANUAL

1. Mounting.

Wall Hung Cabinet Mounting

Locate the furniture in your bathroom, see figure 1 & 2.

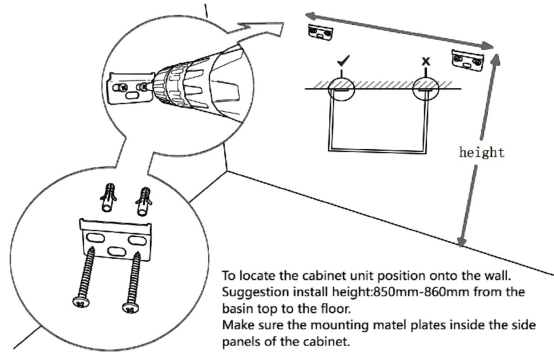


Figure1

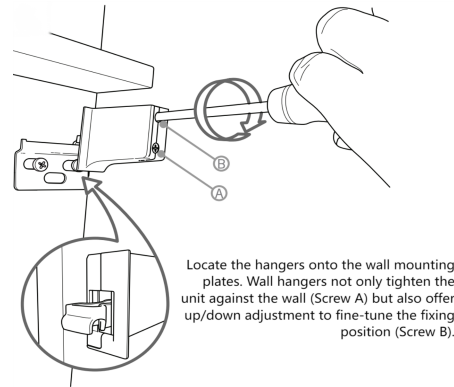


Figure2

To locate the cabinet unit position onto the wall. Suggestion install height:850mm-860mm from the basin top to the floor. Make sure the mounting metal plates inside the side panels of the cabinet.

Locate the hangers onto the wall mounting plates. Wall hangers not only tighten the unit against the wall (Screw A) but also offer up/down adjustment to fine-tune the fixing position (Screw B).

Free Standing Cabinet Mounting

Locate the furniture in your bathroom, see figure 3 & 4.

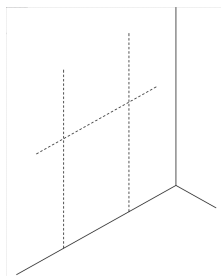


Figure3

<<<

Locate the furniture position in your bathroom.

Set the furniture on the position.

>>>

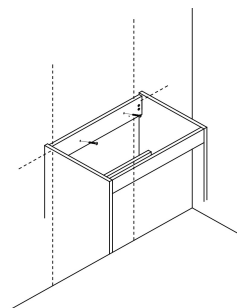


Figure4

2. Drawer Adjustment

Remove the drawer, see figure 5, 6 & 7 .

Open the cover cap by hand and pull it out

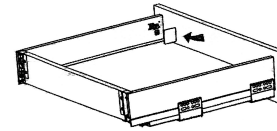


Figure5

Use the screw driver to loose the drawer front panel

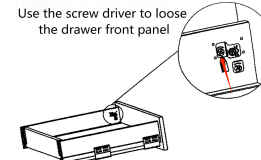


Figure6

Press the trigger, pull out the drawer horizontally

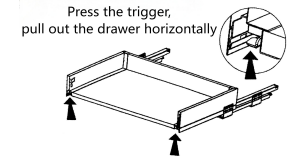


Figure7

Adjust the drawer, see figure 8, 9 & 10.

Front panel left&right adjusting $\pm 1.5\text{mm}$

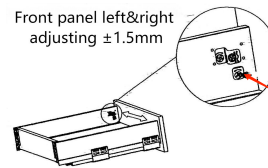


Figure8

Front panel up&down adjusting $\pm 1.5\text{mm}$

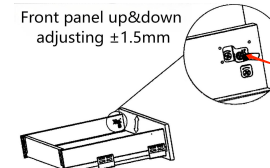


Figure9

Press in cover and slide into the drawer


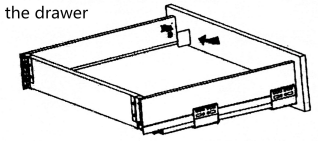


Figure10

3. Basin Fitting

When fitting the basin to this unit, you are required to apply an adequate sealing compound between the basin and unit to prevent potential water damage.

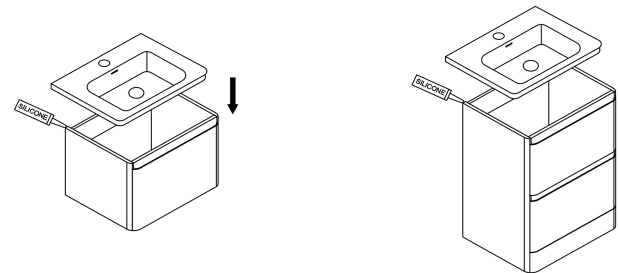

4. Product Maintenance

To maintain the surface finish of your product, please ensure:

- The room is well ventilated.
- Excess water which may sit on the surface is wiped dry.
- Any bathroom products being used which may splash on the surface are wiped clean.
- Any soap residue is wiped clean.
- Use only a clean damp cloth, no abrasive cleaning solutions or material can be used on the product, as this will invalidate your guarantee

Technical Helpline: 01452 317890

Email: technical@eastbrookco.com

Eastbrook Road, Gloucester GL4 3DB

Eastbrook