

CONGRATULATIONS

You are the proud owner of an exclusive Rowsham Radiator which has been specially produced by our craftsmen who would wish you to enjoy many years of satisfaction from it.

INSTALLATION

This product must be installed by a fully qualified engineer.

- Please consider using an Eastbrook Valve Set – this will ensure that your radiator looks its best with matching radiator valves.
- On commissioning, flush the central heating system thoroughly using a proprietary solution to ensure that aggressive substances such as fluxes and manufacturing residue, from which internal surfaces of your radiator can sustain irreparable damage – are removed. An appropriately approved corrosion inhibitor **must** be subsequently added to the heating system in order to protect the radiator and other parts of the central heating system to promote extended operating lifespan.

MAINTENANCE

- From time to time it is advisable to clean your towel rail with a warm damp cloth. Never use any form of abrasive cleaner or chemical.
- Corrosion inhibitor must also be regularly maintained, please consult your engineer for details.


IMPORTANT

Rowsham Radiator are not suitable for use on direct central heating systems. Please consult your engineer or supplier.

WARRANTY

Your Rowsham Radiator is fully warranted for five years in respect of defective materials and workmanship and subject to installation being carried out by a qualified engineer in accordance with good practice and corrosion inhibitors being regularly maintained.

REMEMBER Excellence is worth looking after.



 Maximum working pressure of this radiator is 4 bar. This radiator is to be used on Domestic Central Heating systems only. (Not suitable for use on direct hot water systems) , Please consult your engineer or supplier.

HELPLINE Phone : 01452 317890

HELPLINE email : technical@eastbrookco.com

1. Screw the blank plug and the air vent by winding layers of PTFE tape into the top 2 threads in the top header. Tighten firmly with a 22mm or adjustable spanner. The air vent should ideally be top opposite side of the warm water inlet.
2. Rowsham radiator can only have side entry plumbing because of the pre-fitted flow diverter in the bottom header.
3. Wind a thick layer (at least 6 turns) of PTFE tape, clockwise around the radiator valve tails (not supplied with the radiator) & screw the radiator valve tails into the 2 threads in the bottom collector & tighten with a spanner.
4. The bottom of the lower wall brackets should be at least 100mm above the finished floor level so that the bottom of the radiator is at least 150mm above the finished floor level. Check that the wall is strong enough to hold the weight of the radiator. On plasterboard walls we strongly recommend fixing to the timbers. Mark your preferred bracket positions on the wall and drill holes for the fixings you intend to use. The wall plugs supplied are only suitable for solid walls and you will need alternative fixings for other wall types.
5. Screw the brackets to the wall using the washers & wall screws provided or alternative fixings.
6. Place the rubber bracket buffers into the curved seat in the wall brackets. Lift the radiator into position on the wall brackets.
7. Connect the radiator valves (not supplied with the radiator) and fill the system to check for leaks and fix as necessary.
8. Flush the entire system with a DWTA approved central heating cleanser and then refill using a DWTA approved central heating protector.
9. Run the system up to full temperature and release any trapped air using the air vent plug and the installation is finished.

Ancillary Components	
3	Blank Plug
1	Air Vent Plug
8	Wall Plug (a)
4	Wall Bracket (b)
8	Washer (c)
8	Screw (d)
8	Bracket Buffer (e)

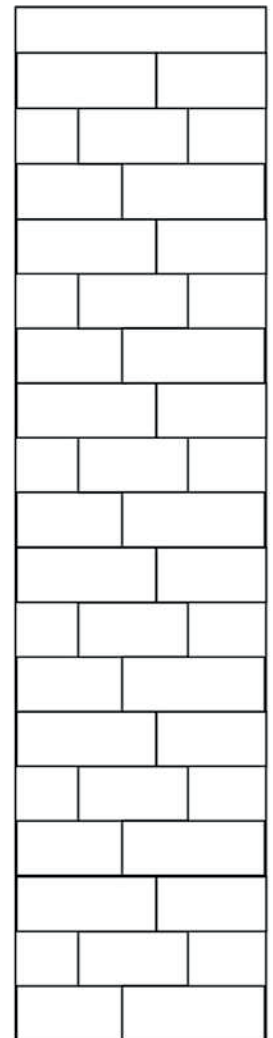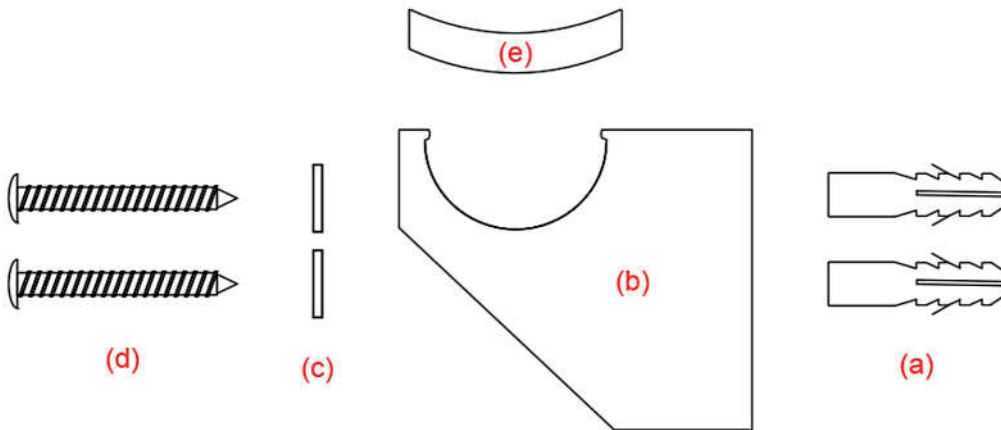

AFTER INSTALATION A SUITABLE INHIBITOR MUST BE ADDED TO THE SYSTEM. PLEASE CONSULT YOUR INSTALLER FOR THE SUITABLE INHIBITOR. FAILURE TO ADD THE INHIBITOR LIKELY REDUCES THE LIFECYCLE & INVALIDATES THE WARRANTY.